



# Press with the best.

## Rosin Presses 2021/22 Product Catalog






PurePressure has been setting the standard for excellence in rosin presses and solventless processing equipment **since 2015**.


**No matter what kind of rosin or solventless concentrate you are looking to make, we have every tool you need.**

# What is rosin?


Rosin is commonly regarded as the best cannabis concentrate on the market, as it is made with only heat and pressure – absolutely no solvents or chemicals enter the extraction process at any time. Premium rosins command the highest price point of any concentrate and are highly sought after by connoisseur consumers across the globe.

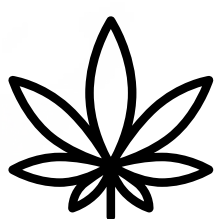

Ice water hash,  
dry sift, or flower

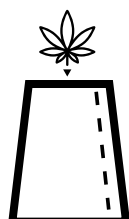

Packed in a bag or  
wrapped in filter  
material

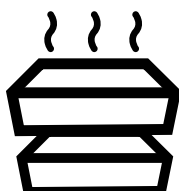

Pressed between  
heated plates in a  
rosin press




Collected from  
parchment



Finished product,  
ready to package  
and sell

**PurePressure rosin presses can be used to make any type of rosin.**

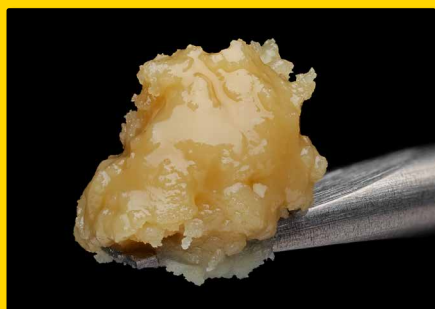

Flower, Sift, and Hash Rosin



Rosin Diamonds and Sauce



Rosin Shatter and Wax

**Endless possibilities**

# Rosin Presses



# Pros Use PurePressure

Our rosin presses set the standard for excellence.

## **Manufactured in Denver, Colorado**

We proudly make all of our rosin presses under strict quality control measures at our factory in Denver.

## **Engineered with purpose**

Purpose built rosin presses that are engineered specifically for rosin extraction and are used by professionals across the globe.

## **Built for precision**

Unparalleled variable control with our touchscreen Pressware™ system, including heat accuracy to under 1°F. Fully automated commercial units available for ultimate efficiency.

## **Premium components**

Made with premium components, each press is built to go the distance and requires virtually no maintenance.

## **Professional end user support**

Unlimited end user support and customer service from real solventless processing experts.

## **Buy with confidence**

2 year warranty included with each purchase and extended 5 year warranty options available for all PurePressure rosin presses.



# The Longs Peak



# Pikes Peak V2

Dual Pressure \$6,995 \*

Automated \$8,995 \*

\* +\$199 shipping

## Perfect for any operation.

### 5 Tons of Force

Pneumatic, oil-less & maintenance-free cylinder.

### Superior 10" x 2.5" Heat Plates

Premium 6061 aluminum heat plate assemblies with independent thermocouples, 0°F - 300°F evenly distributed heat, and temperature accuracy to 1 degree.

### Pressware™ Technology

Features our intuitive Pressware™ technology, which offers a full color LCD touch screen with custom software for unparalleled consistency and control including the ability to save up to 29 pre-set recipes.

**Process up to 3.5 lb of flower per day, or 7 lb of sift or hash per day.**



Automated Pressure Control

# Longs Peak

Dual Pressure \$7,995 \*

Automated \$9,995 \*

\* +\$199 shipping

## The best rosin press on the market, period.

### 8 Tons of Force

Pneumatic, oil-less & maintenance-free cylinder.

### Superior 10" x 3" Heat Plates

Premium 6061 aluminum heat plate assemblies with independent thermocouples, 0°F - 300°F evenly distributed heat, and temperature accuracy to 1 degree.

### Pressware™ Technology

Features our intuitive Pressware™ technology, which offers a full color LCD touch screen with custom software for unparalleled consistency and control including the ability to save up to 29 pre-set recipes.

**Process up to 7 lb of flower per day, or 14 lb of sift or hash per day.**



Automated Pressure Control

# Helix

\$3,195 \*

\* +\$100 shipping

## Manual twist rosin press for home or business applications.



### 3 Tons of Force

Up to 3 tons of force (6,000 lbf) output from our 100% custom engineered lead screw twist press technology.

### Superior 4.5" x 2.5" Heat Plates

Premium 6061 aluminum heat plate assemblies with independent thermocouples, 0°F - 300°F evenly distributed heat, and temperature accuracy to 1 degree.

### Pressware™ Technology

Features our intuitive Pressware™ technology, which offers a full color LCD touch screen with custom software for unparalleled consistency and control including the ability to save up to 29 pre-set recipes.

### Load Cell Force Readout

Ultra accurate force measuring load cell that displays bag pressure in real time.

**Feel your rosin as you press it with truly unparalleled pressure application precision.**



# Helix Pro

\$3,850 \*

\* +\$100 shipping

## Bigger plates and more pressure for higher output.

### 5 Tons of Force

Up to 5 tons of force (10,000 lbf) output from our 100% custom engineered lead screw twist press technology.

### Superior 7" x 2.5" Heat Plates

Premium 6061 aluminum heat plate assemblies with independent thermocouples, 0°F - 300°F evenly distributed heat, and temperature accuracy to 1 degree.

### Pressware™ Technology

Features our intuitive Pressware™ technology, which offers a full color LCD touch screen with custom software for unparalleled consistency and control including the ability to save up to 29 pre-set recipes.

### Load Cell Force Readout

Ultra accurate force measuring load cell that displays bag pressure in real time.



**Trusted by small batch professionals and home users everywhere.**

# Rosin Filtration

## Premium rosin filtration made to eliminate blowouts and increase yields.

All of our rosin filter bags are made locally in **Denver, Colorado**.



### Micron Types and Uses

- |                                     |  |
|-------------------------------------|--|
| <b>5 <math>\mu\text{m}</math></b>   | Ultra fine nylon mesh for terpene separations and cleaning |
| <b>25 <math>\mu\text{m}</math></b>  | Extremely fine filtration for premium hash or sift rosin   |
| <b>36 <math>\mu\text{m}</math></b>  | Very fine filtration for hash or sift rosin                |
| <b>72 <math>\mu\text{m}</math></b>  | Fine filtration for hash or sift rosin                     |
| <b>90 <math>\mu\text{m}</math></b>  | More filtration for flower rosin                           |
| <b>115 <math>\mu\text{m}</math></b> | Best overall filtration for flower rosin                   |
| <b>160 <math>\mu\text{m}</math></b> | Minimal filtration for maximum flower rosin yields         |



## Rosin Filter Bags


### Microns:

25  $\mu\text{m}$ , 36  $\mu\text{m}$ , 72  $\mu\text{m}$ , 90  $\mu\text{m}$ ,  
115  $\mu\text{m}$ , 160  $\mu\text{m}$

### Sizes:

Inside out:

2" x 3"	1.8" x 3.5"
2" x 6"	1.8" x 6.5"
2" x 9"	1.8" x 9.5"
2.5 x 4.5"	2.5" x 5"
2.5 x 9"	2.5" x 9.5"

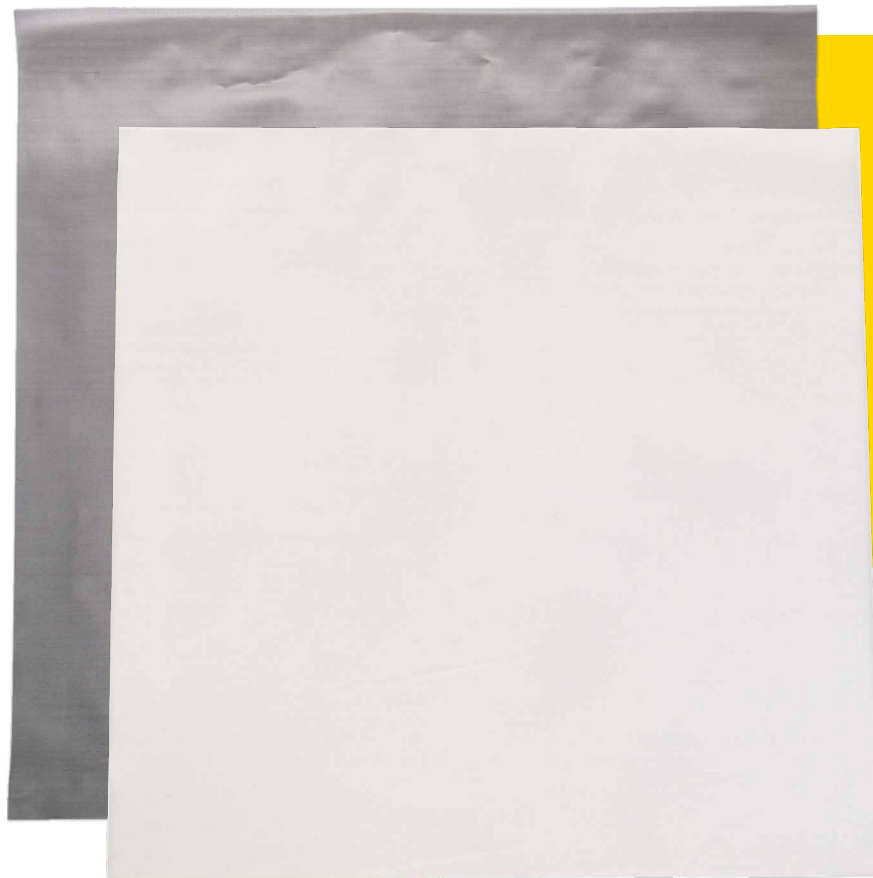

## Nylon Mesh and Stainless Steel Sheets

### Microns:

5  $\mu\text{m}$ , 25  $\mu\text{m}$

### Sizes:

9" x 9"  
12" x 12"  
18" x 18"

**Visit our website  
for capacities and  
more filtration  
information!**

# Processing Tools

PurePressure offers every processing tool you could need to ensure efficient collection and easy pre-packaging.

## Pre-Press Molds

Our magnetized, solid 6061 aircraft grade anodized aluminum pre-press molds help increase yields and prevent blowouts.

### Sizes:

<b>2" x 3"</b>	\$110	<b>2.5" x 4.5"</b>	\$135
<b>2" x 6"</b>	\$140	<b>2.5" x 9"</b>	\$225
<b>2" x 9"</b>	\$200		



**Parchment Paper** Starting at \$54

**PTFE Sheets** Starting at \$23

Available in perfectly sized pre-cut sheets for our rosin presses. Also works perfectly for any other processing lab needs, such as freeze dryer tray inserts, and more.

### Sizes:

**12.25" x 20.25"**  
**9.5" x 20.25"**

### Parchment paper pack sizes:

**250, 500, 750, 1000**

### PTFE sheet pack sizes:

**5, 10, 25, 100**



**Turbo Funnel** \$20

Made with 100% injection molded polypropylene that offers a completely smooth surface, PurePressure's new durable Turbo Funnels are FDA food grade approved.

### Spout width sizes:

**2" and 2.5"**





### Specialized Rosin Scraping Tool \$51

---

Specifically made for collecting rosin quickly with an anodized handle and beveled, rounded corner, stainless steel blades for easy collection and no parchment tears.



### The Quick Flip \$22

---

The Quick Flip is a helpful tool to turn your PurePressure rosin filter bags inside out quickly for maximum seam strength.



### Cold Gold Temperature Flux Plate

---

These solid anodized aluminum blocks help rapidly cool rosin or your heat plates. Cold Gold plates are perfect for preserving terpenes in your rosin and performing mechanical separations quickly.

#### Sizes:

**Small (8" x 9" x 2") \$400**

**Large (10" x 12" x 2") \$465**



### Complete Accessory Kits

---

We have designed kits to compliment each of our presses that include everything you need to pack, press, and collect high volumes of any material.

**Pikes Peak V2 Kit \$710**

**Longs Peak Kit \$820**

**Helix Kit \$310**

**Helix Pro Kit \$380**

With even more tools and accessories available on our website, let our experts help you choose the tools you need.

# Air Compressors

**PurePressure offers a variety of different hand selected air compressors to fit any operation's needs.**

Not sure which one to pick? **Contact our sales team** today for help finding the perfect solution to meet your needs!

**California Air Tools CAT20015HP Ultra Quiet air compressor package**

\$780

Good for one Pikes Peak V2 or Longs Peak



**Quincy QT54 Piston 60 Gallon air compressor package**

\$3,925

Perfect for up to 4 Pikes Peak V2s or Longs Peaks



## Need even more?

PurePressure proudly sells Chicago Pneumatic rotary screw air compressors in a variety of sizes to solve compressed air needs for any lab.

**Contact our sales team for more details.**



# Contact us today to get started with one of our solventless experts.

Email us at [sales@gopurepressure.com](mailto:sales@gopurepressure.com) or call us at **720-446-9565**.

**Factory Hours:** M-F 9am to 4pm (MST)



    | [gopurepressure](https://www.gopurepressure.com)

Shop now at [purepressure.com](https://www.purepressure.com)

Copyright ©2021 PurePressure LLC

# NEED TRAINING?

VISIT [PURECANNALABS.COM](http://PURECANNALABS.COM) TO GET STARTED

---

“ PureCannalabs’s training  
was life changing

- CODY COULSON | OWNER, COULSON CANNABIS | ONTARIO



PureCannalabs

CANNABIS EXTRACTION  
CONSULTING & SOLVENTLESS  
PROCESSING SPECIALISTS

FOLLOW US

