

Mibro Color

mibro

Please read this manual carefully before using the product and keep it properly

Product description

Packing list: Mibro Skin (including strap) X 1, Quick GuideX1, User manual X 1
Magnetic charging X 1.

Product overview



Buttons and touch




Home button

Turning On:
Holding the button for 2 seconds until the screen lights up

Turning Off:
Long press the button for 2 seconds until the screen turn off

Return: Click

Swipe down: Call out the control center

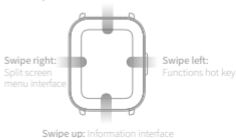

Turn on and Install App

1. For the first use, Please press and hold the home button of the watch for 2 seconds to turn it on;
2. Scan the QR code on the right side with your phone, download the "Mibro Fit" App, or search for the "Mibro Fit" App in the Android App Store/iOS App Store, download and install.



Tips:

1. For better use experience, please update the App to the latest version according to the prompt.
2. The system requires Android 5.0 or iOS 10.0 or above.

Connect the watch

Swipe down the dial interface to swift to the control center, click the QR code, and use the QR code scan function in the App to scan the QR code to connect to the watch to complete the pairing. Or use the connection management function in the App to search for the device, and select "Mibro Skin" and click to complete the pairing.



Android Device Open Permissions

- Enable self-starting permission
- Backstage power consumption protection
- Clean up backstage protection
- Turn on message notification

Tips:

1. Do not pair directly through Bluetooth in the phone settings.
2. After connecting with the App in Apple's iOS system for the first time, it will prompt a Bluetooth pairing request. Click "Pairing" to connect, and the watch can synchronously receive notifications such as incoming calls and text messages from iOS.
3. After the Android device is connected to the App for the first time, it will prompt the application permission activation prompt. Please follow the prompts to activate the permission, otherwise there will be a small probability of unstable connection.

Operating Instructions

1. Key definition

- 1). Press and hold for 2 seconds to turn on and off;
- 2). On the dial page, short press to enter the menu and return to the dial;
- 3). When the screen is off, press briefly to light up the screen;
- 4). Other pages short press to return to dial page.








2. Dial page touch gesture








- 1). Split screen application: the dial page appears on the right side, click the physical button or click the left side to return;
- 2). Intelligent components: slide left on the dial page to enter the intelligent components. The system preset 3 components. Click "Add component" at the right end to add up to 5 components. Long press the component to enter the "Delete component" page;
- 3). Dial switch: press the screen in the dial page length to select the dial. Select the corresponding dial and return to the main dial page. Note: Six dials are preset in the system, and the last dial is "Custom dial page". The thumbnail will be displayed only after the custom dial is set in the "Mibro Fit" App, so that it can be selected as the main dial;
- 4). Shortcut menu: slide down on the dial page to return;
- 5). Message notification: slide on the dial page, slide or right slide back;
- 6). When a message is sent to the watch, the information details will pop up. Right slide or press the physical key to return to the dial.

3. Function page operation

Function page: in the menu page, click each application icon to enter the corresponding function, right slide back, and press the physical key to return to the main dial page.


Features

 Data	Record the daily exercise data, including the number of steps, distance, calories, activity time, activity times.
 Sleep	Intelligent monitoring of your sleep quality, scientific analysis of sleep time, record 7 days of sleep data.
 Heart rate	Detect heart rate anytime and anywhere, make scientific chart analysis, and record the latest 7 heart rate data.
 Blood oxygen	Blood oxygen was detected anytime and anywhere, and scientific chart analysis was made to record the blood oxygen data of the last 7 times.
 Sports	Treadmill, Outdoor running, Walking, Football, Badminton, Tennis, Basketball, Cycling, Elliptical machine, On foot, Yoga, Strength Training, Trekking, Free training.
 Breath training	Different frequency and time can be set for respiratory adjustment training.
 Music control	After connecting the mobile phone, you can control the music playing of the mobile phone.

 Weather	After connecting the mobile phone, you can synchronize the weather in the App.
 Stopwatch	Start the stopwatch function.
 Timer	Watch quick timer.
 Mett	Record the change of your exercise intensity and effective value in a week.
 Pressure	Monitor the change of your stress value in a day and form an analysis icon.
 Calculator	Watch mini calculator.
 Setting	Brightness, Screen off time, Wrist up screen on, Do not disturb, Vibration, Language, Connection to phone, About watch, Restore factory, Restart, Off and other settings.
 Do not disturb	Smart do not disturb and timed do not disturbing function of the watch, all reminders will be turned off after opening.
 Alarm clock	Alarm reminder.
 Sedentary reminder	Sitting for a certain period of time, the watch will remind you to stand up.

Charging

Please align the metal port surface of the magnetic charging cable and be close to the charging contacts of the watch. The magnetic charging cable will automatically be attached to the charging contacts of the watch to start charging, and the charging instructions will be displayed on the watch screen.

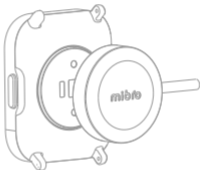

Note:

1. Do not charge in a humid environment;
2. Make sure that the metal port surface on the watch body and the magnetic charging cable are not dirty or corroded;
3. Please clean the metal port surface on the back of the watch and the magnetic charging cable with a clean flannel regularly. Make sure that the contacts of the watch and the magnetic charging cable are in full contact to ensure normal charging;
4. This product is not equipped with a power adapter. In order to ensure the safety of your family and property, you can use a computer USB port or choose a power adapter with an output not exceeding 5V $\overline{\text{---}}$ 1A when charging. Please purchase power adapters through formal channels, and avoid using low-quality, fake power adapters to avoid bursting or fire.

Bluetooth data transmission

When connected to a mobile phone, the watch will synchronize some data to the mobile phone via Bluetooth, including weather, notification messages, sports health data, etc. After disconnected or Bluetooth is turned off, the data will not be synchronized.

Precautions

1. The measurement results of this product are for reference only, not for any medical purpose or basis. Please follow the doctor's instructions and never make self-diagnosis and treatment based on the measurement results.
2. The waterproof grade of this product is 5ATM, and it cannot be used for deep diving and long-term soaking in water. In addition, this product is not resistant to hot water, because water vapor will affect the smart watch.
3. The company reserves the right to modify the contents of this manual without any notice. Some functions are different in the corresponding software version, which is normal.

Basic parameters

Name: Mibro Skin

Input: 5V $\overline{\text{DC}}$ 1A Max.

Model: XPAW002

Size: 43×35×10.2mm

Nominal voltage: 3.7V

Battery capacity: 270mAh

Charging cut-off voltage: 4.2V

FCC ID: 2AXCI-XPAW002

Equipment requirements: Android 5.0 or iOS 10.0 and above



RoHS



Client: Zhenshi Information Technology (Shanghai) Co., Ltd.

Address: Room 4015, Building 2, No. 588, Zixing Road, Minhang District, Shanghai

Manufacturer: Shenzhen Wake Up Technology Co., Ltd.

Address: 1501, Block E, Phase II, Galaxy WORLD, Minle Community, Minzhi Street, Longhua District, Shenzhen

