

droabber™

boost™

BLACK EDITION

User Manual

TABLE OF CONTENTS

| | |
|-----------------------------------|-----|
| Important Safety Information | 5. |
| What's In The Kit? | 7. |
| Warranty Information | 9. |
| Learning About Your Boost | 11. |
| Boost Anatomy | 13. |
| How To Use Your Boost | 15. |
| Cleaning Your Glass | 17. |
| Swapping Out Your Nail | 19. |
| Swapping Out Your Ceramic Element | 21. |
| Charging Your Boost | 23. |



IMPORTANT SAFETY INFORMATION

Use sensibly. Dr. Dabber products are intended for use by persons of legal smoking age. These products are not suitable for children, women who are pregnant or breastfeeding, or persons with heart disease, high blood pressure, hypertension or diabetes. These products should not be using in conjunction with medication for depression or asthma. Discontinue use and consult a physician immediately if you experience symptoms such as nausea, vomiting, dizziness, diarrhea, weakness, rapid heartbeat or hypertension.

CONTENTS



BOOST BLACK EDITION

WHAT'S IN THE KIT?

Boost Black Edition eRig

Glass Water Attachment

XL Domeless Titanium Nail (Threaded)

XL Ceramic Nail (Threaded)

XL Quartz Nail (Threaded)

Magnetic Carb Cap

Magnetic Loading Tool

Medical Grade Silicon Storage Container x2

Micro USB Charging Cable

Limited Edition Dr. Dabber Keychain



DR. DABBER
WARRANTY
INFORMATION

Register your Dr. Dabber product today to activate your warranty and receive helpful tips. This unit is under a one year 'No Questions Asked' Warranty on electronic components & battery.

Visit DrDabber.com/Register to get started!

LEARNING ABOUT YOUR BOOST

1. Use with caution. Must be 21 years of age or older to operate.
2. The nail becomes extremely hot. Do not touch once powered on.
3. Do not expose the device to direct sunlight.
4. Do not attempt to use the device without the glass attachment in place.
5. Do not attempt to place the device down on a surface without the base. The base is included to ensure proper weight distribution and to avoid damage to the glass attachment.
6. When the battery is low, indicator light will flash.
7. The light on the power button will flash 3 times to indicate a connection issue.
8. Charging: Charge device fully before use. The power button shows a purple light when the device is being charged.
9. Titanium Nail: Press the power button 3 times to heat titanium nail. The unit will begin with white light and change to


BOOST BLACK EDITION

- blue light after 25 seconds indicating it is ready to use (nail will continue heating for 20 seconds before cutoff)
- Temperature reaches 515°F after 25 seconds
 - Temperature reaches 610°F after 45 seconds
10. Ceramic/Quartz Nail: Press the power button 5 times to heat ceramic/quartz nail. The unit will begin with blue light and change to white light after 40 seconds indicating it is ready to use (nail will continue heating for 20 seconds before cutoff)
 - Temperature reaches 520°F after 40 seconds
 - Temperature reaches 600°F after 60 seconds
 11. Do not heat the device more than 3 cycles continuously to avoid bodily harm or injury.
 12. Do not use or charge in a motor vehicle.

CONTENTS

boost™

ANATOMY

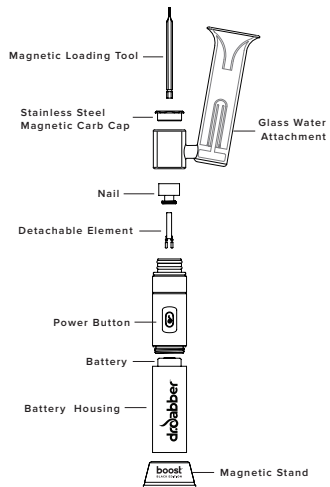

HOW TO USE YOUR BOOST

1. Remove glass from unit and load from the top with water.



2. Click button to turn device on
* 3 times for titanium nail
* 5 times for ceramic/quartz nail



3. Load product
on tip of tool



4. Once light changes color
(Approx 30 seconds), touch
tip of the tool to nail and
begin to inhale through glass
mouthpiece.



5. Once all product has melted
off of tool, flip tool around and
place carb cap on top of the
nail to increase vapor density.
(Generally 3-4 seconds)



SIT BACK AND ENJOY!



CLEANING YOUR GLASS ATTACHMENT

To clean glass attachment, *first remove the glass attachment from the eRig*, then slowly pour 99% isopropyl alcohol into the mouthpiece until the unit is about 1/4 full. Shake the attachment gently until clean. To rinse out the alcohol, pour water into the top (mouthpiece) until all alcohol is flushed out of the bottom of the attachment. To remove all water from device, blow through mouthpiece and shake gently.

SWAPPING OUT YOUR NAIL

WARNING: DO NOT ATTEMPT TO REMOVE NAIL WHEN HOT. REMOVE NAIL CAREFULLY WITHOUT BENDING OR TWISTING THE CERAMIC ELEMENT.



Turn nail clockwise to secure nail.



Turn nail counter clockwise to remove nail.

SWAPPING OUT YOUR CERAMIC ELEMENT

WARNING: DO NOT ATTEMPT TO REMOVE CERAMIC ELEMENT WHEN HOT.



Pull up vertically on ceramic element to remove.



Push down on ceramic element to secure gold pins in place.



CHARGING YOUR DR. DABBER BOOST



USB Port

Connects to universal USB outlets.

Connecting Adapter

Charge device fully before use. The power button shows a purple light when the device is being charged. Light will turn off when fully charged. Due to the size of the battery, it is recommended to charge 6-8 hours or use an AC adapter (Not Included) to speed up charging time.



For Helpful Tips and Videos on How to Use and Care

For Your Dr. Dabber Boost

Please Visit: drdabber.com/doctors-office



@*drdabber*



droabber™

boost™

BLACK EDITION

User Manual