


Bamboo / Black Mobile Book Stand

Instruction Manual



SKU: CART-BK01B

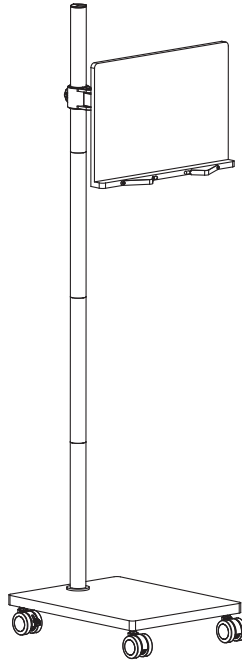

Scan the QR code with your mobile device or follow the link for helpful videos and specifications related to this product.

<https://vivo-us.com/products/cart-bk01b>

GET IN TOUCH | Monday-Friday from 7:00am-7:00pm CST



help@vivo-us.com



www.vivo-us.com
Chat live with an agent!



309-278-5303

WARNING!

If you do not understand these directions, or if you have any doubts about the safety of the installation, please contact our product support team at 309-278-5303 or help@vivo-us.com for further assistance. Check carefully to make sure there are no missing or defective parts. Improper installation may cause damage or serious injury. Do not use this product for any purpose that is not explicitly specified in this manual. Do not exceed weight capacity. We cannot be liable for damage or injury caused by improper mounting, incorrect assembly or inappropriate use.

WARNING: CHOKING HAZARD

SMALL PARTS - NOT FOR CHILDREN UNDER 3 YEARS. ADULT SUPERVISION IS REQUIRED.

PACKAGE CONTENTS



A (x1)
Base



B (x2)
Locking Caster



C (x2)
Caster



D (x1)
Bottom Pole




E (x2)
Middle Pole




F (x1)
Top Pole



G (x1)
Support Plate



H (x1)
Arm



I (x1)
Tray



J (x2)
Page Clip



K (x2)
Rubber Caps



S-A (x3)
M6x50mm
Screw



S-B (x6)
ST3.5x10mm
Screw



T-A (x1)
5mm Allen Wrench



T-B (x1)
Wrench

TOOLS NEEDED




DO NOT EXCEED WEIGHT CAPACITY.
Failure to do so may result in serious injury.






ASSEMBLY STEPS

STEP 1

Inspect the four pole sections and locate Bottom Pole (**D**), which has three screw holes on one end and is threaded on the other. Connect Bottom Pole (**D**) and Support Plate (**G**) to Base (**A**) using M6x50mm Screws (**S-A**) and 5mm Allen Wrench (**T-A**).

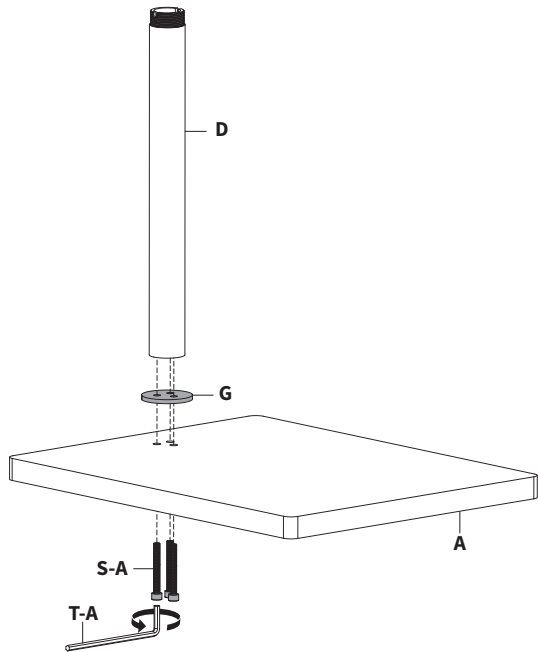

Fasten Locking Casters (**B**) to the back side of base, near Bottom Pole (**D**), and Casters (**C**) to the front of Base using Wrench (**T-B**).

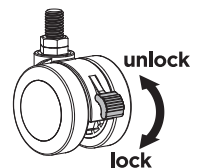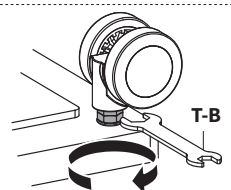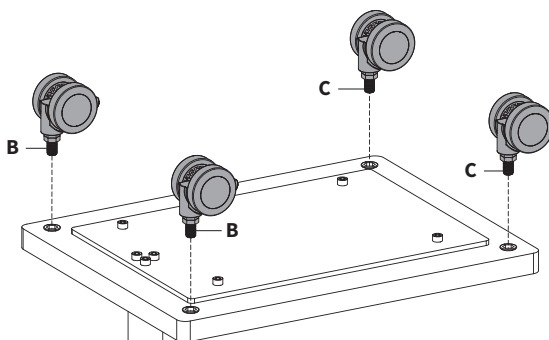


Press lever on Locking Casters (**B**) to lock into place.

STEP 2


Inspect remaining three poles and identify Middle Poles (**E**), which have external threading on one end. Twist and secure one Middle Pole onto Bottom Pole (**D**) over the external threading of Bottom Pole, then twist and secure remaining Middle Pole.

Twist and secure Top Pole (**F**) onto the external threaded end of Middle Pole (**E**).

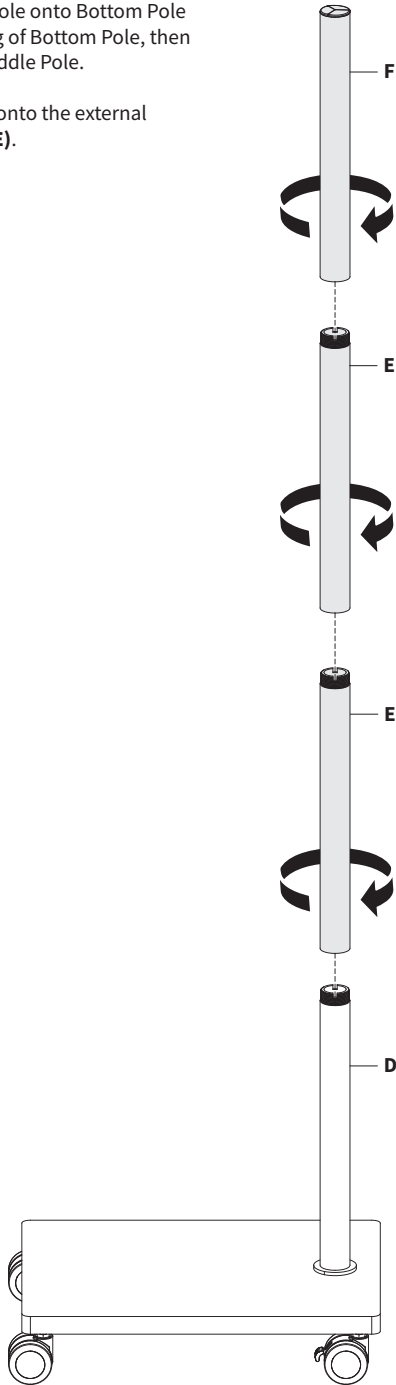


STEP 3

Slide Arm (**H**) onto assembled pole to your desired height and tighten using the 5mm Allen Wrench (**T-A**). Turn nut clockwise to tighten and counterclockwise to loosen as needed.

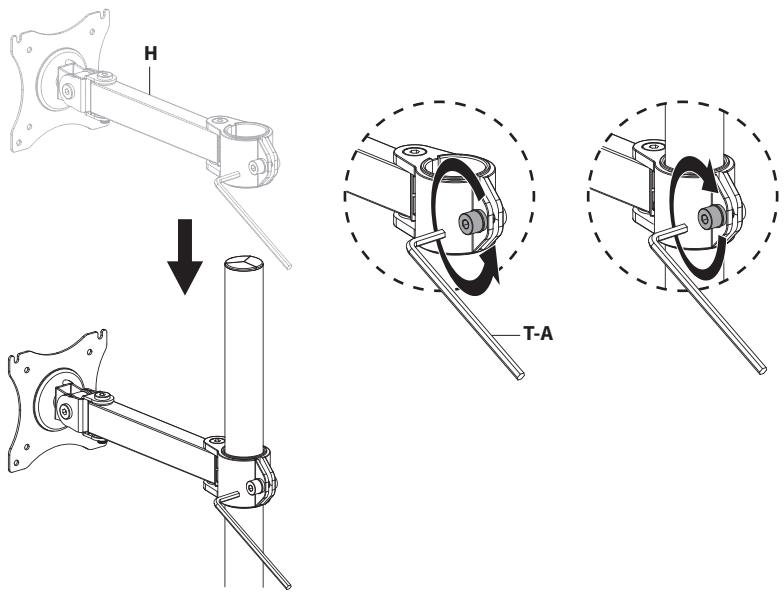

STEP 4


Slide the Rubber Caps (**K**) onto the end of the Page Clips (**J**).

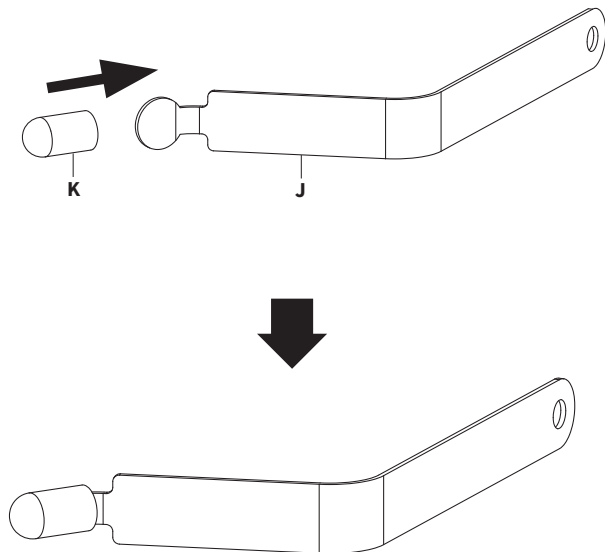

STEP 5


Attach assembled Page Clips (**J**) to front edge of Tray (**I**) using the ST3.5x10mm Screws (**S-B**) and a Phillips screwdriver.

NOTE: Do not overtighten to assure smooth rotation and to prevent the holes from stripping out.

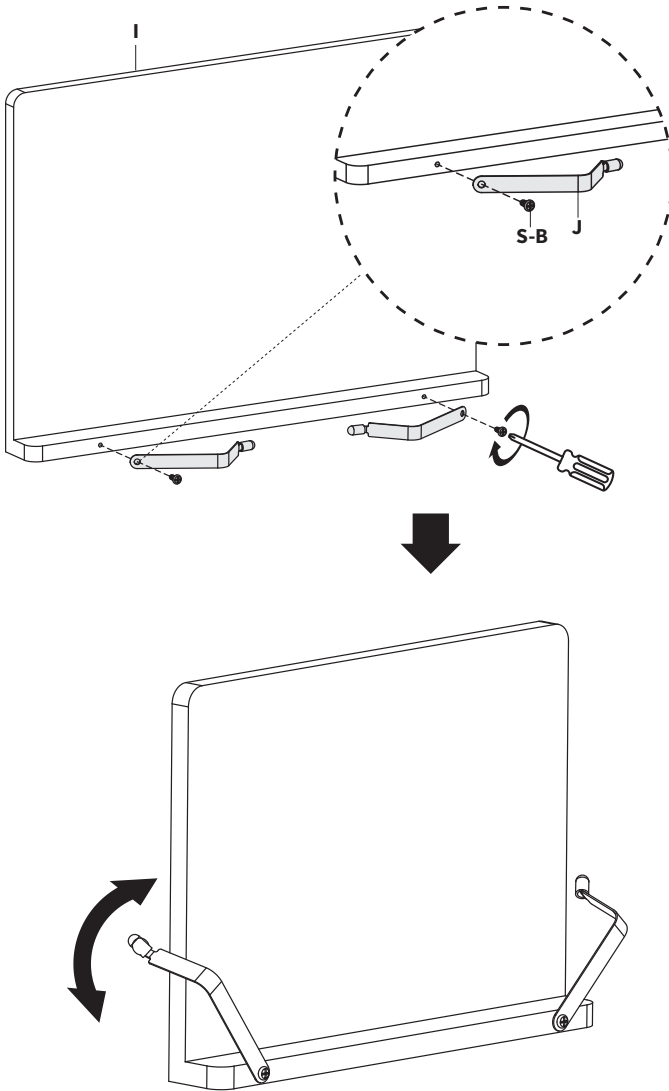

STEP 6

Fasten Tray (**I**) to Mounting Plate (**H1**) on Arm (**H**) using the ST3.5x10mm Screws (**S-B**) and a Phillips screwdriver. Adjust the angle of Tray (**I**) by loosening and tightening the tilt joint of Arm (**H**) using 5mm Allen Wrench (**T-A**).

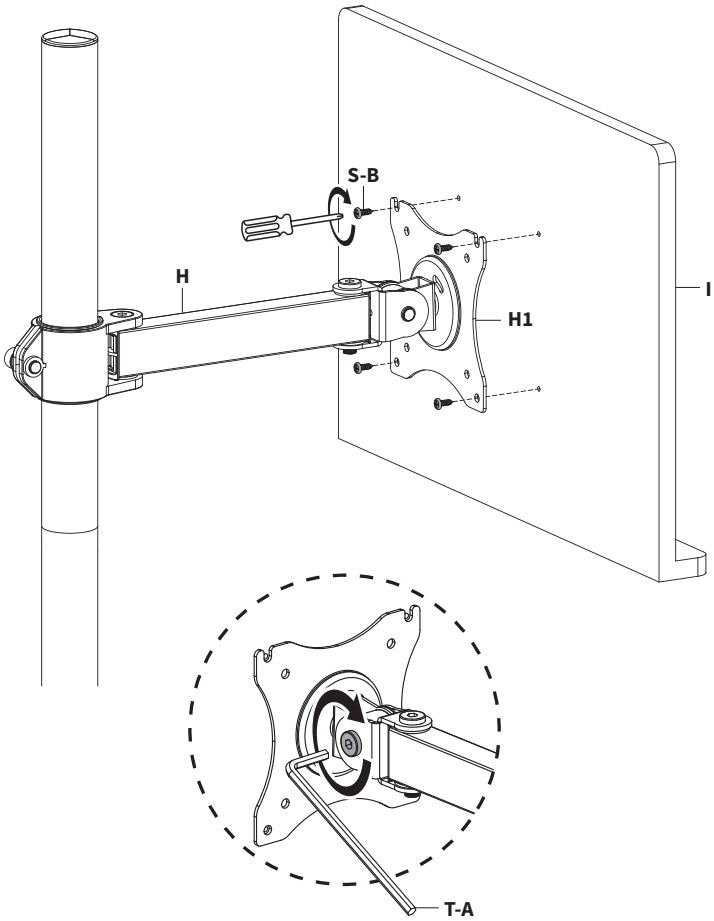



Love your new VIVO setup and want to share?
Tag us in your photo! **@vivo_us**

LAST UPDATED: 11/10/2023
REV1.1



Open **Monday - Friday 7:00am - 7:00pm** CST,
our dedicated support team can offer immediate assistance with rapid response times. If any parts are received damaged or defective, please contact us. We are happy to replace parts to ensure you have a fully functioning product.



309-278-5303

AVG. RESOLUTION TIME (*within office hrs*): **5M 4S**



www.vivo-us.com
Chat live with an agent!

AVG. RESOLUTION TIME (*within office hrs*): **< 15 M**



help@vivo-us.com

AVG. RESPONSE TIME (*within office hrs*): **1HR 8M**

- 23% within < 15m
- 38% within < 30m
- 61% within < 1hr
- 83% within < 2hr
- 92% within < 3hr

FOR MORE VIVO PRODUCTS, CHECK OUT OUR WEBSITE AT: www.vivo-us.com