


Triple Monitor Desk Stand

Instruction Manual



SKU: STAND-V003FG

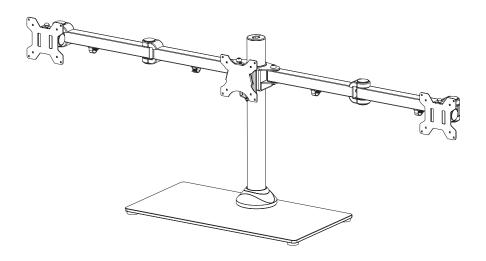

Scan the QR code with your mobile device or follow the link for helpful videos and specifications related to this product.

https://vivo-us.com/products/stand-v003fg

GET IN TOUCH | Monday-Friday from 7:00am-7:00pm CST









If you do not understand these directions, or if you have any doubts about the safety of the installation, please call a qualified technician. Check carefully to make sure there are no missing or defective parts. Improper installation may cause damage or serious injury. Do not use this product for any purpose that is not explicitly specified in this manual. Do not exceed weight capacity. We cannot be liable for damage or injury caused by improper mounting, incorrect assembly or inappropriate use.



TIPOVER WARNING

SERIOUS OR FATAL CRUSHING INJURIES CAN OCCUR FROM TIPOVER. TO HELP PREVENT TIPOVER:


- TO PREVENT TIPPING, PLEASE BE CAREFUL NOT TO EXTEND THE ARMS TOO FAR FORWARD OR BACKWARD.
- NEVER ALLOW CHILDREN TO CLIMB, STAND, HANG, OR PLAY ON ANY PART OF MONITOR OR STAND.
- USE TIPOVER RESTRAINT OR ANCHOR STAND TO WALL

USE OF TIPOVER RESTRAINTS MAY ONLY REDUCE, BUT NOT ELIMINATE RISK OF TIPOVER.



WARNING: CHOKING HAZARD

SMALL PARTS - NOT FOR CHILDREN UNDER 3 YEARS. ADULT SUPERVISION IS REQUIRED.

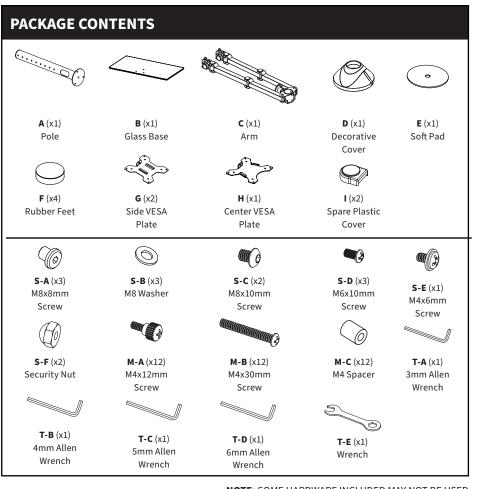







ASSEMBLY STEPS


STEP 1

Attach Rubber Feet **(F)** to the underside of the Glass Base **(B)**. Attach Soft Pad **(E)** to the Pole **(A)**. Use a screwdriver to poke holes for screws through the Pad.

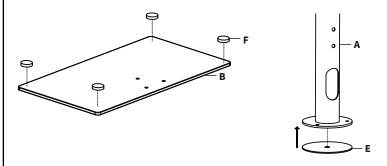

Install Pole (A) to Glass Base (B) using M6x10mm Screws (S-D), M8x8mm Screws (S-A), M8 Washers (S-B), 4mm Allen Wrench (T-B), and a Phillips screwdriver. Slide Decorative Cover (D) over the Pole.

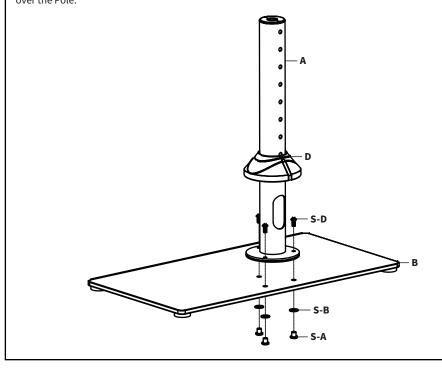

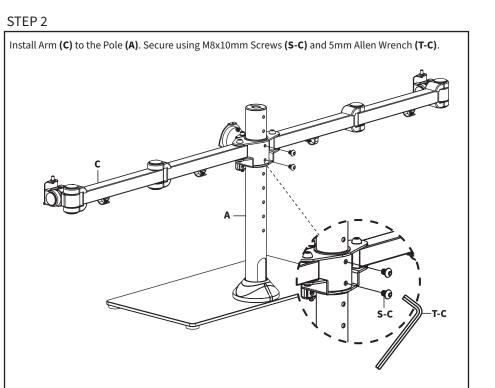


STEP 3a - Flat Back Monitors


OPTION A: Flat Back Monitor

Attach the Center VESA Plates **(K)** to the monitors you intend to mount in the center of the mount. Attach Side VESA Plates **(J)** to remaining monitors. Secure using M4x12mm Screws **(M-A)**.

NOTE: Hand tighten screws to avoid stripping the plastic screw heads.

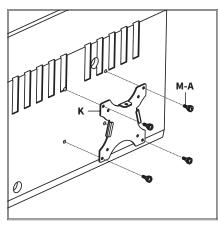


Center VESA Plate (K) Installation

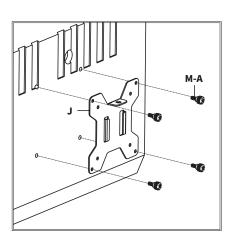


Side VESA Plate (J) Installation


STEP 3b - Curved/Recessed Back Monitors

Attach the Center VESA Plates (**K**) to the monitors you intend to mount in the center of the mount. Attach Side VESA Plates (**J**) to remaining monitors. Secure using M4 Spacers (**M-C**), M4x30mm Screws (**M-B**) and a Phillips screwdriver.

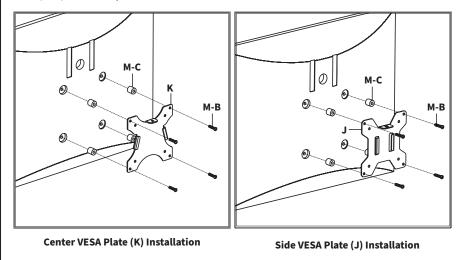


STEP 4

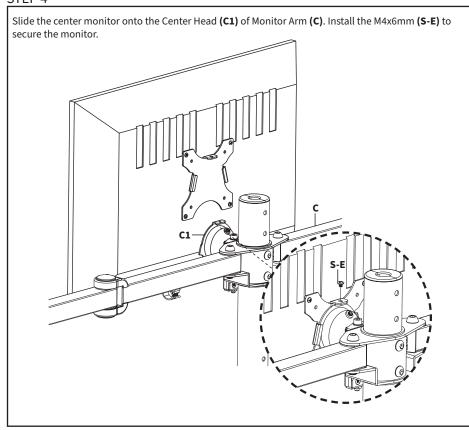

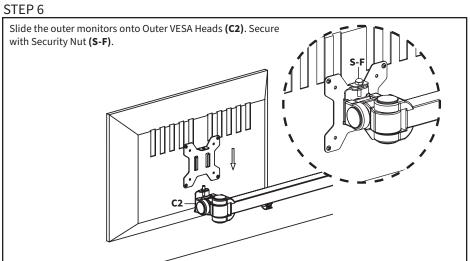


Adjust Monitor Tilt

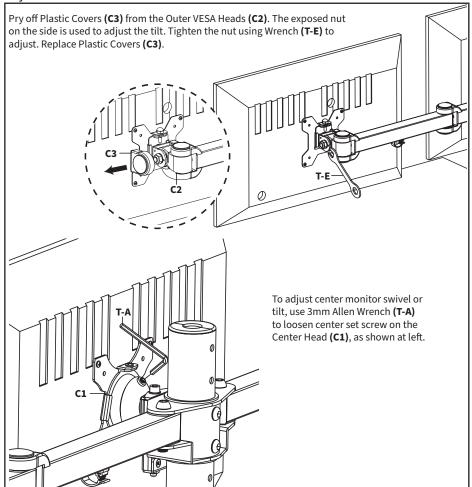


Adjust Monitor Height


To adjust center monitor height, turn the screw behind Center Head **(C1)** and Mount Bracket **(D)** using the 5mm Allen Wrench **(T-B)**. To level the side monitors, remove the Cap Nut **(S-F)** and turn the inner bolt with the 3mm Allen Wrench **(T-A)** to raise or lower the monitor. Replace Nut after the adjustment.

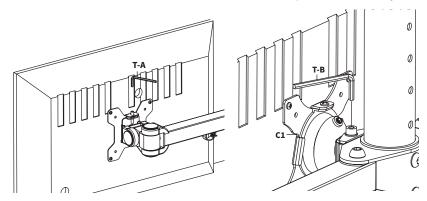

To adjust swivel joint tension, remove the Monitor Arm Cover and turn the bolt underneath with the 6mm Allen Wrench (T-D).

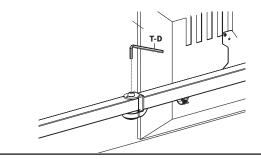

Cable Management

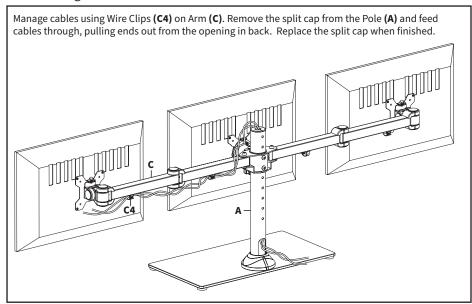



Open Monday - Friday 7:00am - 7:00pm CST,

our dedicated support team can offer immediate assistance with rapid response times. If any parts are received damaged or defective, please contact us. We are happy to replace parts to ensure you have a fully functioning product.



309-278-5303

AVG. RESOLUTION TIME (within office hrs): 5M 4S



www.vivo-us.com
Chat live with an agent!

AVG. RESOLUTION TIME (within office hrs): < 15 M



help@vivo-us.com

AVG. RESPONSE TIME (within office hrs): 1HR 8M

- 23% within < 15m
- 38% within < 30m
- 61% within < 1hr
- 83% within < 2hr
- 92% within < 3hr