TFAB-1

TFAB-1 20ft displays have unique stylistic features and shapes, are portable and easy to assemble. The aluminum tube frame features snap-buttons and/ or spigot connection and zipper pillowcase fabric graphics. All displays come in portable, wheeled transit cases. Simply pull the pillowcase fabric graphic(s) over the frame and zip.



features and benefits:

- Premium aluminum tube frames with snap button / spigot assembly
- Easy to store and ship
- Quick to set up
- Weighted feet for added stability

- Three zipper pillowcase fabric graphics
- Kit includes: two monitor kiosks featuring two medium monitor mounts, can hold 32-55" monitor / max weight 40lbs
- Lifetime limited hardware warranty against manufacturer defects

dimensions:


dimensions:	
Hardware	Graphic
Assembled unit: 234.18" w x 98.18" h x 36.3" d 5948mm(w) x 2494mm(h) x 922mm(d) Approximate weight with cases: 298 lbs / 135.2 kgs	Refer to related graphic template for more information. Visit: www.exhibitors-handbook.com/ graphic-templates
Shipping	-
Packing case(s): 4 OCE Cases	
Shipping dimensions: OCE: Expandable case length (I) may vary 40" - 66"l x 18"w x 18"h 1016mm-1677mm(I) x 458mm(w) x 458mm(h)	
Approximate total shipping weight (includes cases & graphics): 325 lbs / 147.4 kgs	
	additional information:
	Graphic material: dye-sublimation zipper pillowcase fabric

We are continually improving and modifying our product range and reserve the right to vary the specifications without prior notice. All dimensions and weights quoted are approximate and we accept no responsibility for variance. E&OE. See Graphic Templates for graphic bleed specifications.


Included In Your Kit




Included In Your Kit

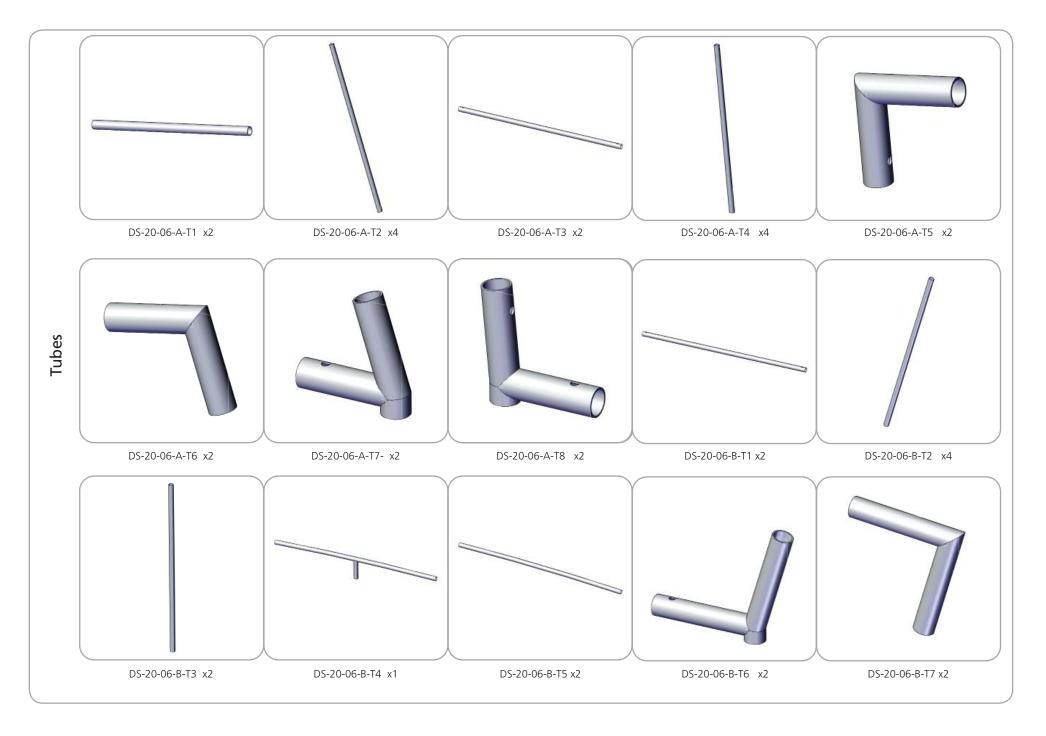


Exploded View

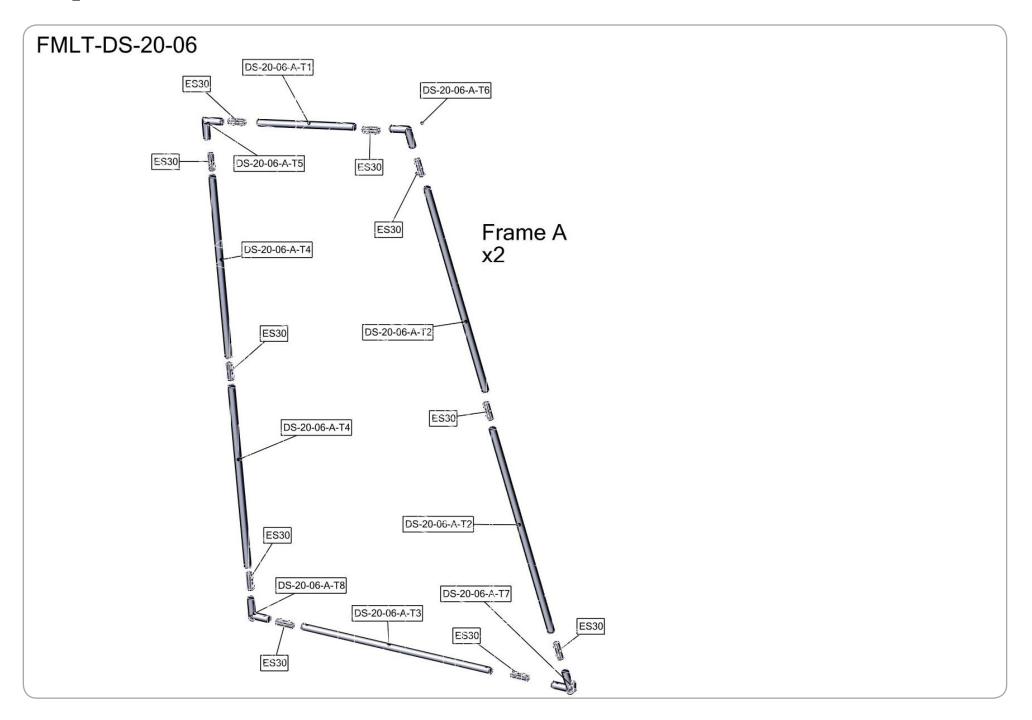

Exploded View

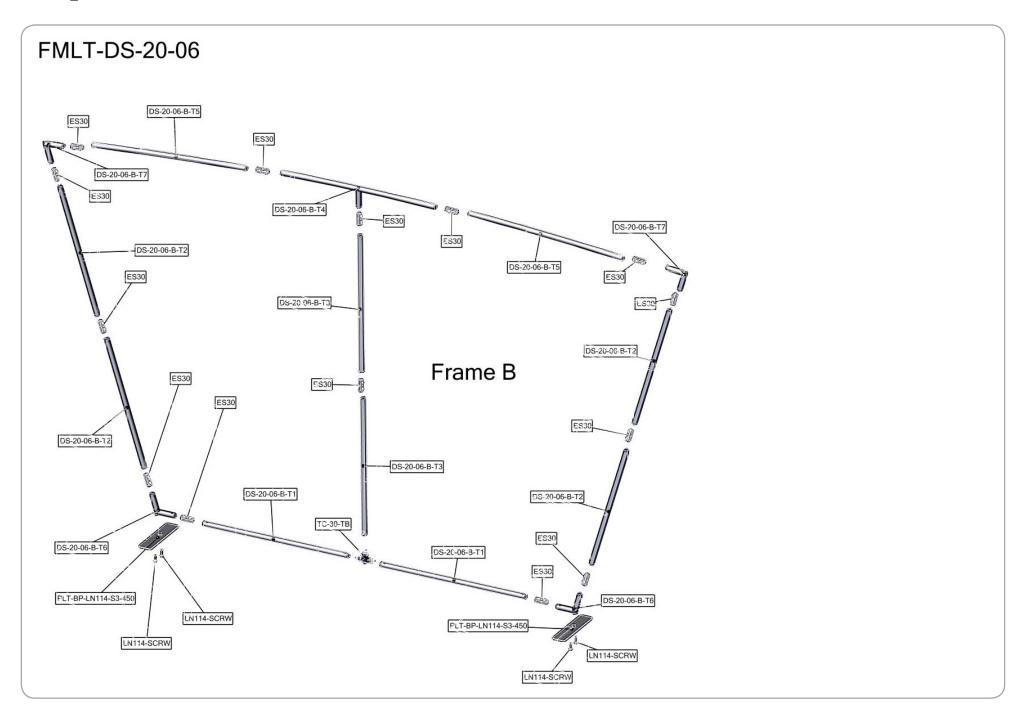

Labeling Diagram

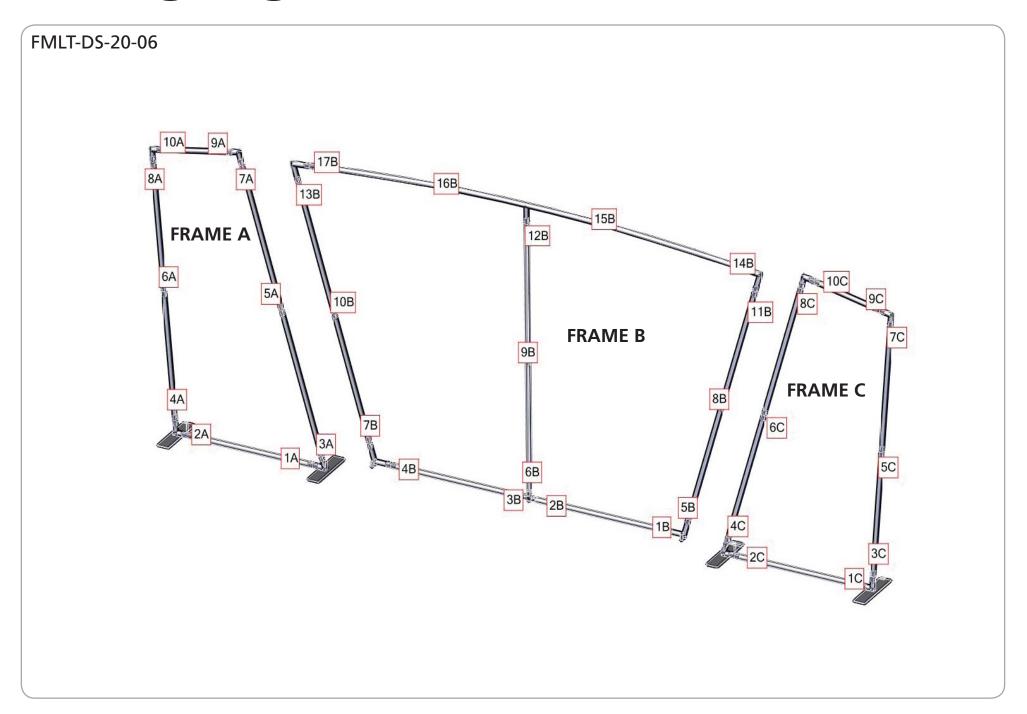

Connection Methods


FormulateTM structures use a number of different yet simple connection methods. Your kit will include one or more of the connection methods shown below. Steps within the Kit Assembly will reference a specific method for each connection point.

Connection Method 1: ES30 / ES50 / ES75



Compress the unlocked connector and slide one tube onto each end. Lock both screws carefully using your allen key tool. Be sure to lock securely, but do not overtighten.

Connection Method 2: Snap Buttons & Swage

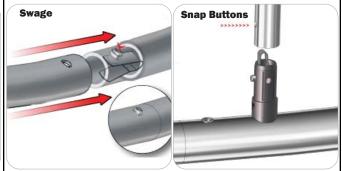

Locate the snap button on the connector or swage tube. Locate the hole on the corresponding tube. Press the snap button with your thumb and slide the tube and connector together so that the snap button snaps fully into the lock hole. To disassemble, press the snap button and pull apart.

Connection Method 3: ES30-90B / ES30-I / ES30-C



Compress one unlocked end of the connector and slide it through one tube end. Compress the other end of the connector and slide the second tube on. Lock both screws carefully using your allen key tool. Be sure to lock securely, but do not overtighten.

Connection Method 4: Tube Clamps



Be sure to fully assemble all frames before using clamps. With the clamp unlocked, place one tube of the first frame into the mouth of the clamp. Place the second tube (if applicable) into the second mouth of the clamp. With both frame's tubes in the clamp, be sure to lock securely, but do not overtighten.


Step by Step

Step 1.

Gather the components necessary to assemble Frame A. Assemble your frame following the order specified in the Labeling Diagram

Please reference Connection Method 1 for more details.



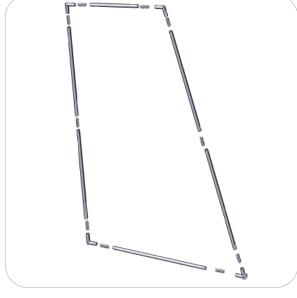

Step 2.

Gather the components necessary to build Frame B. Assemble your frame following the order specified in the Labeling Diagram

Please reference Connection Methods 1 and 2 for more details.






Step 3.

Gather the components necessary to assemble Frame C. Assemble your frame following the order specified in the Labeling Diagram

Please reference Connection Method 1 for more details.



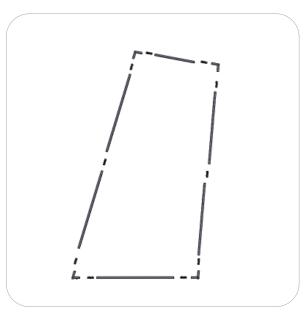


Step 4.

Locate the graphics for Frame A. With the Frame flat on the floor, pull the cover over the top of the frame. Zip the graphics to enclose the frame.

Zipper located on bottom of Graphic A.



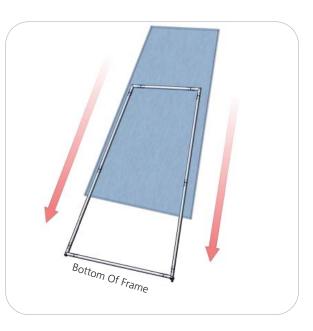


Step by Step

Step 5.

Locate the graphics for Frame B. With the frame flat on the floor, pull the cover up from the bottom of the frame. Zip the graphics to enclose the frame.

Zipper located to the top of Graphic B



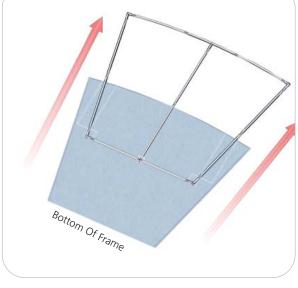

Step 6.

Locate the graphics for Frame C. With the frame flat on the floor, pull the graphics over the top of the frame. Zip them to enclose the frame.


Zipper located to the bottom of Graphic C.





Step 7.


Gather the LN114-S2-450 assembly, and one LN114 screws. Attach the foot to the left side of Frame A and the right side of Frame C, in order shown in the image to the right.

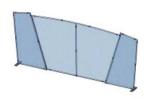




Step 8.

Gather the LN114-S3 assembly, and two LN114 screws. Start by setting the hub on the foot into the base tubes. Next screw the foot into Frames A and B, then B and C in the order shown on the right. Tighten the screw to lock in place.

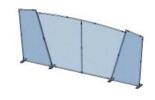

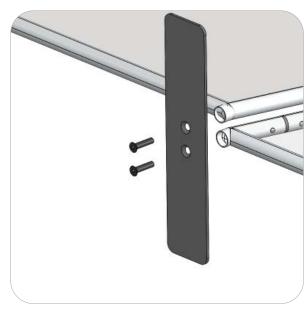

Step by Step

Step 9.

Connect Frame A and B, then B and C by clamping them together with a pair of TCH-30-B2B clamps.





Monitor Kiosk

Kiosk displays are portable and easy to assemble. The aluminum extrusion frame features cam locks, tension glide connections and medium or large monitor mounts. This kiosk comes in a expandable shipping case.



We are continually improving and modifying our product range and reserve the right to vary the specifications without prior notice. All dimensions and weights quoted are approximate and we accept no responsibility for variance. E&OE.

features and benefits:

- Premium aluminum extrusion frames with cam lock and tension glide assembly
- Easy to store and ship
- Quick to set up
- Weighted feet for added stability

- Kiosk Kit includes a medium or large monitor mount
- Lifetime limited hardware warranty against manufacturer defects


dimensions:

Hardware	Shipping
Assembled unit:	Packing case(s):
Medium or Large	Medium or Large
mediam of Edige	1 OCE Case
25.59"w x 70.87"h x 25.59"d	1 oct case
650mm(w) x 1800mm(h) x 650mm(d)	Shipping dimensions:
osomm(w) x rocomm(n) x osomm(a)	OCE: Expandable case length (I) may vary
Approximate weight:	40" - 66" x 18" w x 18" h
11	
(excludes cases & monitor mount)	1016mm-1677mm(l) x 458mm(w) x 458mm(h
Medium or Large	
	Approximate total shipping weight:
40 lbs / 19 kgs	(includes cases & monitor mount)
	Medium
	83 lbs / 38 kgs
	Large
	85 lbs / 39 kgs

additional information:

- -Medium monitor mount can hold 32-55" monitor/ max weight 40lbs
- -Large monitor mount can hold 40"-65" monitor/ max weight 40lbs
- -Monitor not included
- -If shipping with backwall kit cases may vary

Included In Your Monitor Kiosk

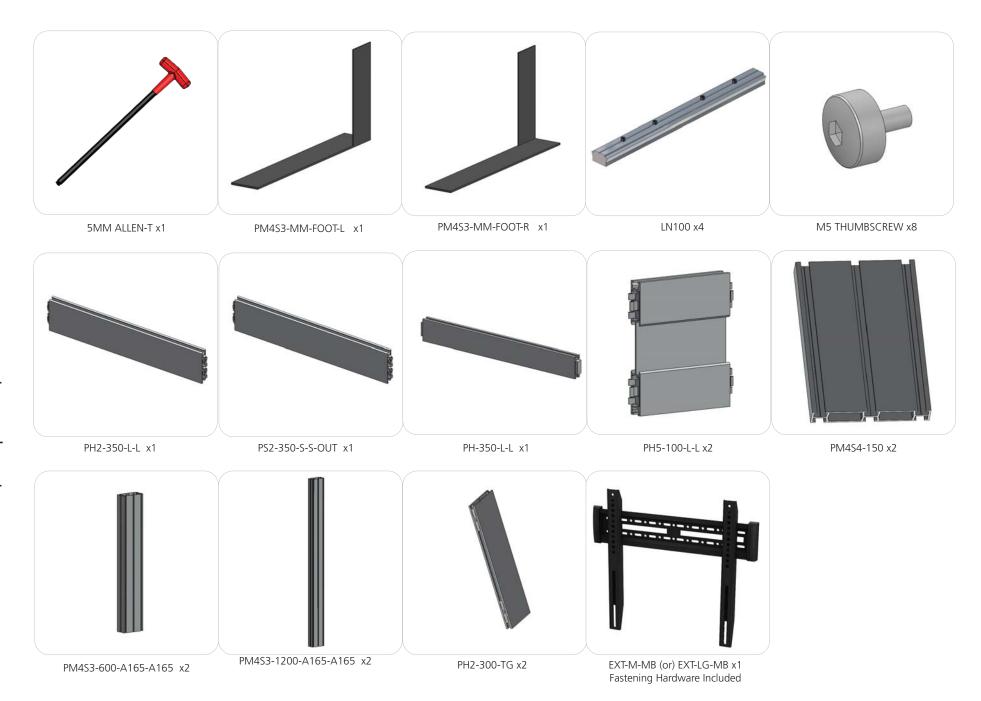


Tools, Components, Connectors & Extrusions

Exploded View

Please note:

This is the the kiosk frame build for either medium or large kit.

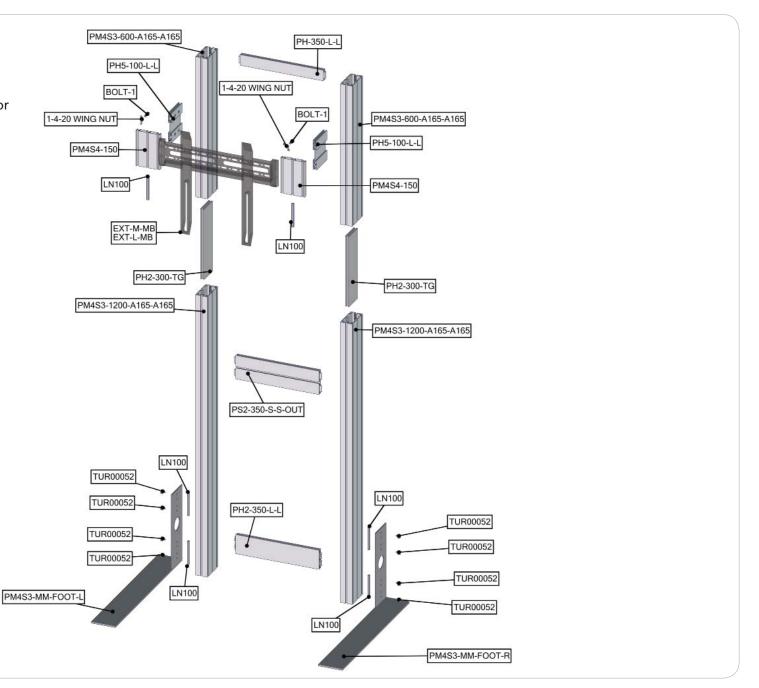


Step by Step

Step 1.

Reference the image to the right. Locate the coded extrusions. Slide the PH2-300-TG connector into one end of the PM4S3-1200-A165-A165 so that it goes as deep as the internal pins. Connect the PM4S3-600-A165-A165 by sliding it over the PH2-300-TG. Repeat for this step for the second vertical.



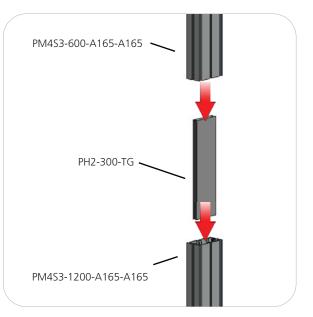

Step 2.

Collect your extrusions and handtool. Using the provided handtool, lock the extrusions into the back channel of the three channel PM4S3 faces as shown in the image below.

Be sure the locks face toward the back of the assembly and do not over tighten.






Step 3.

Locate the M5 thumbscrews, LN100s, and the PM4S3-MM stabilizing bases. Slide the LN100s into the middle channel of the PM4S3. Hand screw the M5 thumbscrews through the base holes and into the LN100 holes. Use the handtool to securely fasten the M5 Thumbscrews. Do not over tighten.




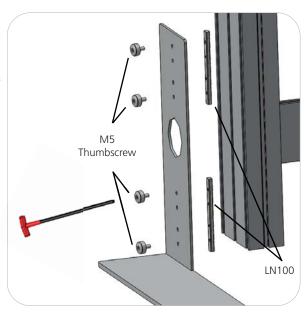

Step 4.

Measure from the ground to the center of the hole in your main kit's graphic. Lock the center of your PH5-100-L-L into the PM4S3 stacks at the dimension height of the graphic hole. Do not over tighten.



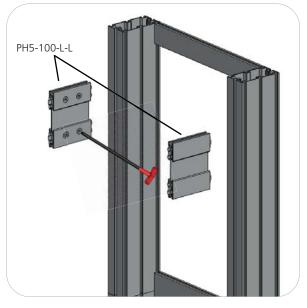


Step by Step

Step 5.

NOTE: Your main backwall assembly must be completed with graphics before completing this step of the monitor kit.


Lock your PM4S4-150 to the ends of the PH5-100-L-L. Do not over tighten.



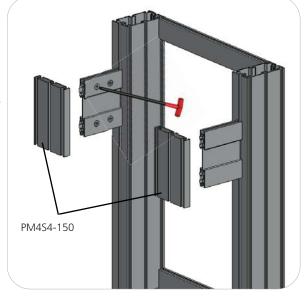

Step 6.

Set your monitor stand so that the extrusion arms fit through the graphic hole. Use the provided fastening hardware to complete your monitor stand. Slide the LN100 into the bottom center channel of the PM4S4-150. Next, slide the Square Head Bolt into the top center channel of the PM4S4-150. Apply the monitor bracket and spacer washer before fastening with the wingnut. Monitor mount may vary depending on size. Monitor not included.

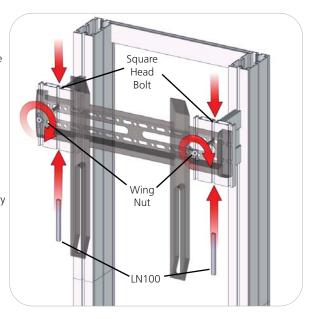

Step 7.

Setup is complete.



Monitor Bracket Instructions

Extrusion Channel Applications



EXT-SM-MB
Sizes: 17" - 37"
Max weight varies per application



Sizes: 32" - 55"

Max weight varies per application



Sizes: 40" - 65"

Max weight varies per application

x2

Included hardware:

