


Assembly Instructions

Parts







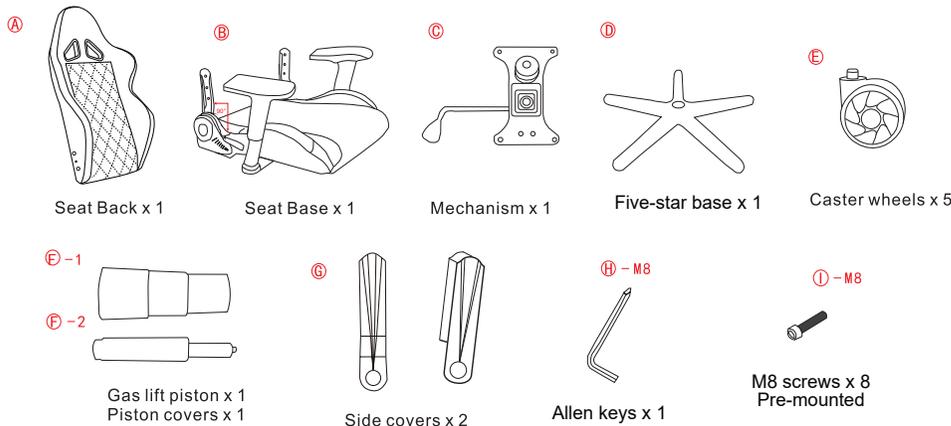


Pre Assembly Instructions

ATTENTION

M8 screws can be found pre-mounted on the seat back and base. Refer to steps 1 and 4 for unmounting screws.

Place cardboard or drop cloth under chair to prevent damage to floor during assembly. Make sure the seat back adjuster on the seat base is set at 90 degrees (as shown in step 1)

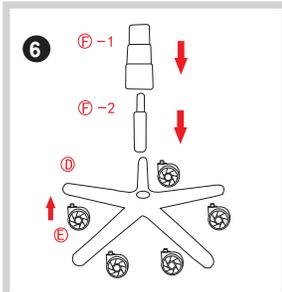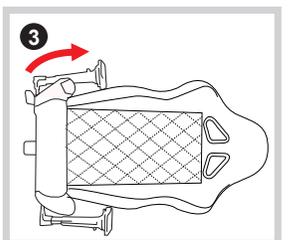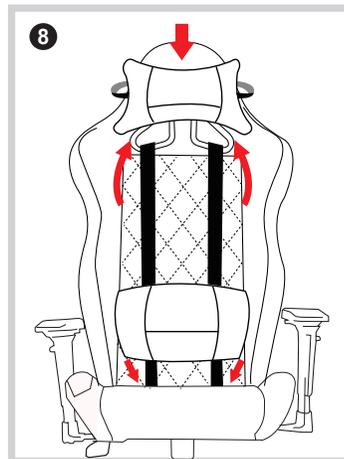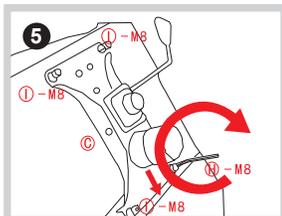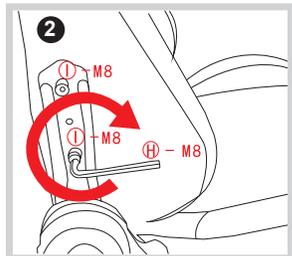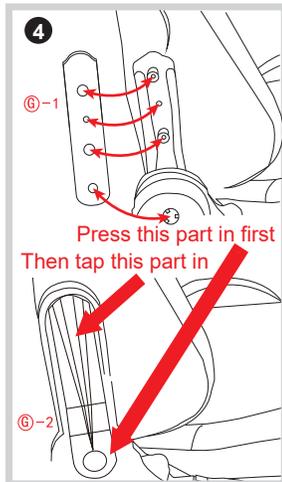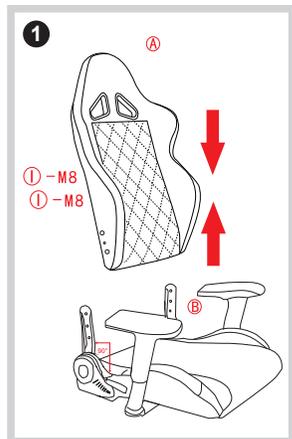

1 Remove the the four M8 screws from the sides of the seat back. Align Metal Brackets found on Seat Base at 90 degrees, place the Seat Back onto the seat base.

2 Insert and tighten the four M8 screws.

3 Place the chair on its side.

4 Add Side Covers and snap into place. Be sure that the plastic clip fully lines up with the bracket, as shown in figure 4G-1. The pegs on the clip must lineup with the holes in the bracket. Press the bottom round part of the cover into the hinge area, and then tapping the top firmly with your palm, as shown in figure 4G-2.

CAUTION, TO AVOID BREAKING COVER: Do not attempt to tap the top area of the cover in before the bottom is in place. Also, only tap after ensuring the clip is lined up with the bracket, and the bracket holes are aligned with the bracket pegs.

5 Remove the four M8 screws from the Seat Base. Mount the Mechanism on the Seat Base (Make sure arrow is pointed to the front of the chair and the handle is on the right side) and attach it using the four M8 screws.

6 Insert the Caster Wheels into the 5 Point-Star Base. Stand on the base. Use one foot to hold down the base, and press the caster into the slot with two hands. Then, insert the Gas Lift Piston into the base and add the Piston Cover.

7 Next, lower the assembled Seat onto the Base - you may need assistance if you are unable to lift the seat by yourself.

8 Loop the bottom straps of the lumbar support cushion through the area in between the seat and the chair back. Loop the top straps through the eyeholes on the chair back. and clip the two sides together. Adjust the cushion vertically to your comfort. loop the top of the headrest pillow over the top of the chair back.



Visit www.RapidX.io to view the unboxing and assembly video. Scan the QR code with your phone to be taken to the video landing page.

For additional help, please email Support@RapidX.io

FERRINO by **RAPIDX** www.RapidX.io

Assembly Instructions

1 Adjust Seat Back




Be sure the rocking mechanism is in the locked position before using the reclining feature.

To adjust the seat back: lift up on the handle and adjust to the most comfortable angle.

Reset to the upright position: lift up on the handle, gently lean against the seat back and it automatically returns to the upright position.

Use the Tilt tension dial to increase or decrease the rocking tension.

2 Seat Height and Rocking Mechanism Adjustments

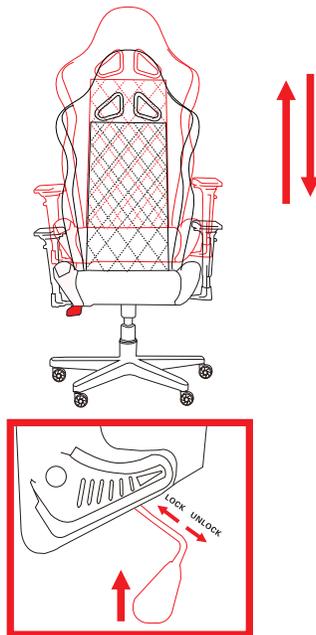

Lower the seat: Sit down and lift the handle, the seat automatically lowers.


Raise the seat: Stand up and lift the handle, the seat automatically rises up.

Unlock Rocking Mechanism: pull handle to the right.*

Lock Rocking Mechanism: push handle to the left.*

* Seat cannot be leaning back while performing lock procedure


3 Adjust Armrests

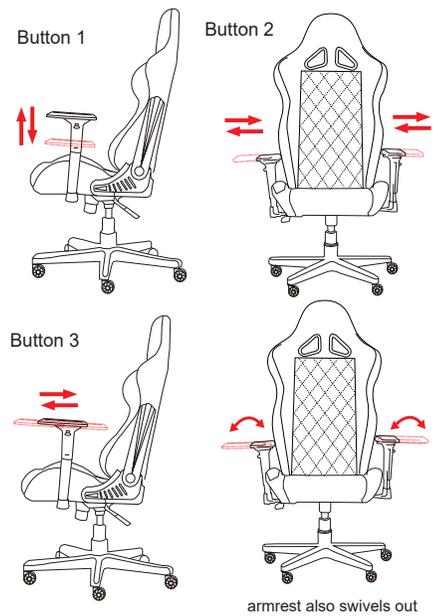


Button 1 moves the armrest up and down.
Button 2 slides the armrest side to side.
Button 3 the armrest forward and back.
Armrests also swivel in both directions.

Warnings

1. Do not use this chair for purposes other than sitting, do not stand on the seat
2. Do not use chair as a ladder or step stool
3. Only use chair on flat surfaces to prevent turning over
4. This chair is design for single person use, maximum weight 265lbs.
5. Do not use chair to move heavy items
6. Do not use chair near flammable materials
7. Keep out of direct sunlight
8. Do not use chair near fire or in damp environments
9. Do not dismantle gas piston
10. Do not use the recline feature while rocking mechanism is engaged.

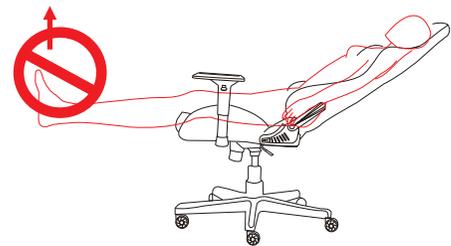

Do not lift feet off the ground when the seat back is completely lowered

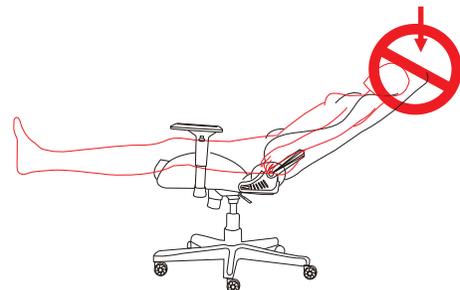

Do not push down on the headrest when the seat back is completely lowered
Be sure to LOCK the Rocking Mechanism before using the reclining feature

Care

Wipe with a soft dry cloth to clean the chair

To remove stain use a small amount of mild detergent diluted with hot water, wipe until stain is removed, then dry the chair to remove excess water and detergent