



# GermAwayUV E26, 5" & 6" UVC Round Recessed Downlight



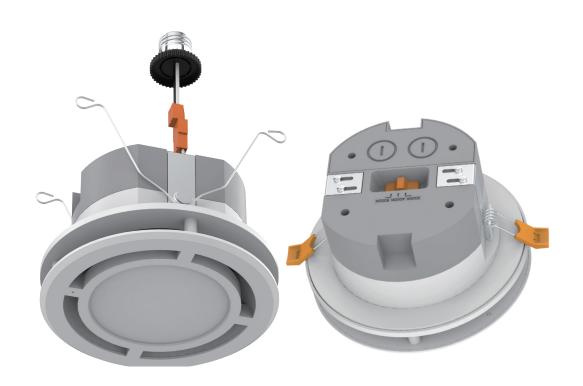


# **Purification principle**

Through the centrifugal fan inside the device, the indoor air convection effect will be quickly formed. Then the bacteria and viruses floating in the air will be sucked into the ultraviolet lamps cavity to get killed by UV light.

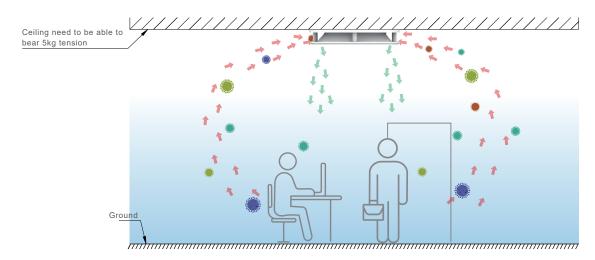

# **Product parameters**


The parameters of the whole lamp					
Model No.	511084-01	511084-02			
Product power	18W±2W	18W±2W			
Input voltage	100-277V AC	100-277V AC			
Circulating air volume	8.1CFM (13.8m³/h)	8.1CFM (13.8m³/h)			
Noise (Distance at 1m)	31.2dB	31.2dB			
Applicable volume	15.6m³	15.6m³			
Applicable area	6m²	6m²			
Working temperature	-10°C~+40°C	-10°C~+40°C			
Storage temperature	-20°C~+70°C	-20°C~+70°C			
Hole size	5"/ 6" J-BOX	5"/ 6"			
Product size	Ø167mm*96mm	Ø167mm*96mm			
Installation method	Replacement	New Recessed			
Warranty	2 Years	2 Years			
UVC system parameter					
UVC system power	8W(UVC LED+Fan)	8W(UVC LED+Fan)			
UVC source type	0.6W UVC-LED 3939	0.6W UVC-LED 3939			
Led chip QTY	8Pcs	8Pcs			
LED lifespan	10000 hours UVC retention rate≥70%	10000 hours UVC retention rate≥70%			
UVC wavelength	275nm	275nm			
UVC radiant power	160mw	160mw			
UVC light angle	30°	30°			
LED white lighting parameter					
LED white light power	10W	10W			
LED white chip type	2835	2835			
Luminous flux	850Lm±10%	850Lm±10%			
Adjustable CCT	3000K/4000K/5000K	3000K/4000K/5000K			
CRI	≥80Ra	≥80Ra			
PF	≥0.88	≥0.88			

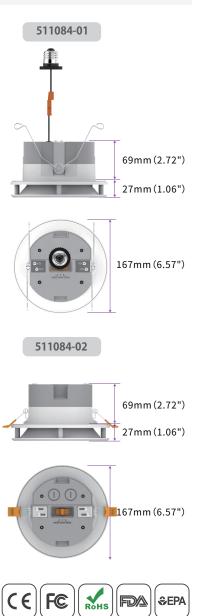

## **Product features**

### 01 No UV leakage, it is totally safe for the occupied space:

The built-in ultraviolet light effectively removed viruses and bacteria. When the air disinfection downlight is turned on, the ultraviolet light is completely enclosed inside the product (in compliance with the IEC62471 RG0 standard), realizing the coexistence of human and machine.

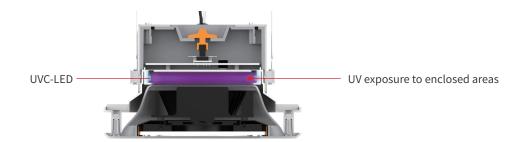

### O2 Centrifugal fan design to improve disinfection efficiency:

High-quality industrial centrifugal fans with a lifespan of 70,000 hours are selected. Through the fan's active air convection, side air inlet and down air outlet, speed up the air circulation and improved the disinfection efficiency for per unit.

#### Based on 10m<sup>3</sup> lab testing:

Bacteria		Spatial scope	Killing time	Killing rate	
	staphylococcus albus	10m³	3h	>99.9%	

Note: This data comes from a third-party laboratory, the data is for reference only.


#### Recommended application, purification volume & time:

Category	Spatial scope	Recommended purification time	
Applicable volume	15.6m³	>3h	
Applicable area	6m²	>3h	

Note: Based on embedded installation in enclosed space, for detailed specs, please refer to the exact application; It is recommend to keep this device on always to purify the air.

## 03 Newest UV LED applicated, longer lifespan:


Built-in 8 long-life UV LED chips on 2 sides, 10,000 hours of UV maintenance rate ≥ 70%, not easy to break, environmentally friendly and mercury-free.

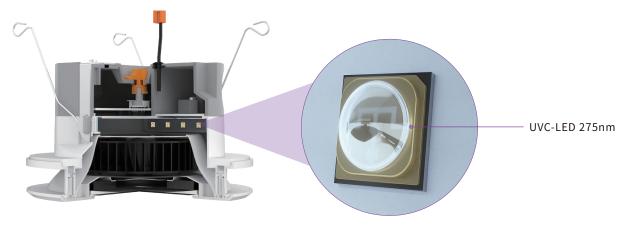

## **Product features**

## 04 LED lighting + UV disinfection mode switchable:


Equipped with LED lighting system, disinfection lighting can be operated at the same time. After powering on, enter mode 1, turn off the power and turn on the light within 1 second to enter mode 2, turn off the power again and turn on the light within 1 second to enter mode 3, restart after power off for 4 seconds, and re-enter mode 1.

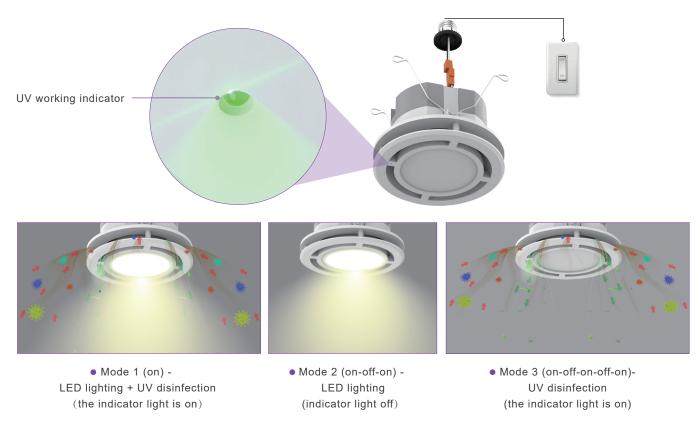


Note: The indicator light works simultaneously with the UV function, and the indicator light is also turned off when the UV function is turned off.


## 05 CCT change

You can choose the color temperature according to your own interest or the environment.

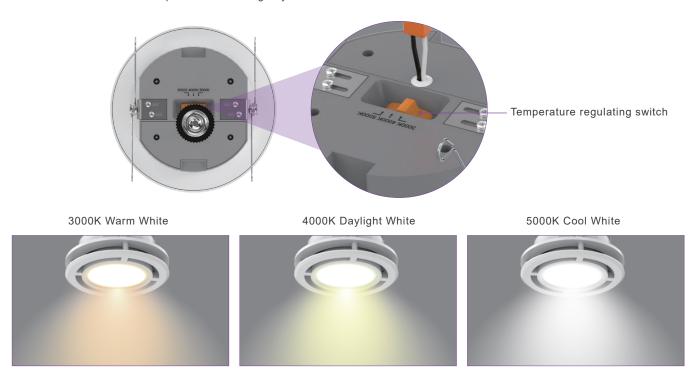

# **Installation method**

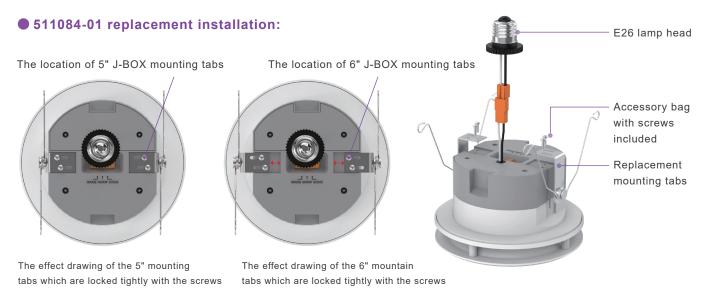

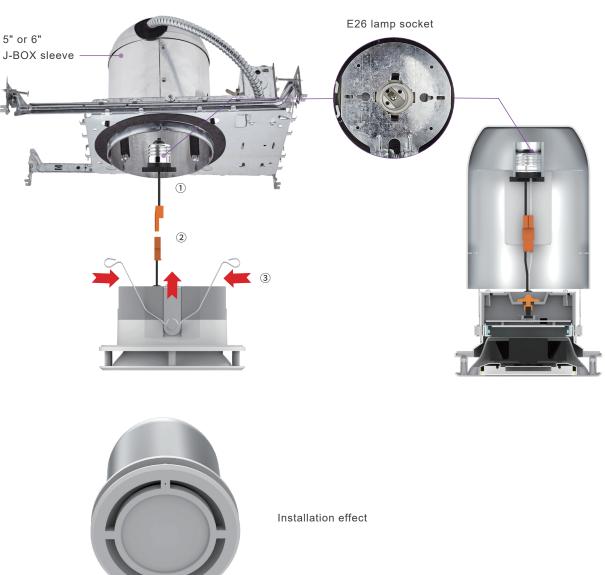

Installation steps: ① Screw the E26 lamp holder of the accessory package into the corresponding socket;

- ② Connect the terminal block on the E26 lamp holder with the terminal block on the main frame;
- ③ Clip the spring in the main frame into the J-BOX installation point and push it upward.

# **Installation method**

#### ● 511084-02 Embedded Installation:


The size of the ceiling hole demand				
The type of the ceiling hole	The size of the ceiling Hole	The thickness of ceiling material		
5"	135mm~145mm	9mm~18mm		
6"	150mm~155mm	12mm~18mm		



The effect drawing of the 5" mounting tabs which are locked tightly with the screws

The effect drawing of the 6" mountain tabs which are locked tightly with the screws

Installation step①: Use a tool to fix the embedded mounting tabs in the accessory bag on the main frame, and adjust the distance between the two mounting tabs according to the 5-inch or 6-inch hole in the ceiling.

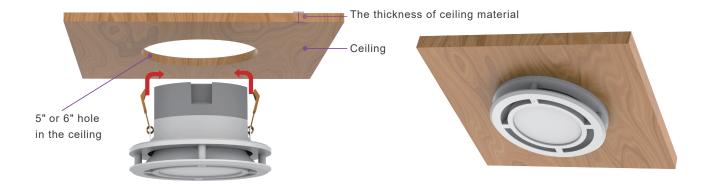

Installation step: ②Press the two sides of the shrapnel with your hands, press the middle to align the installation hole, and push it into the ceiling. The lamp is positioned on the ceiling by the elastic force of the installation shrapnel.

# **Applications**






Application: Most indoor places like Office, Food shop, Hotel, Hospital, School, Bank, Toilet, etc.

## **Packing**

Model No.	N.W per lamp (lbs=kgx2.2)	G.W per lamp (lbs=kgx2.2)	G.W per carton (lbs=kgx2.2)	Inner box size (x0.0393=inch)	Outer box size (x0.0393=inch)	Quantity per carton
511084-01	0.6kg	0.84kg	8.3kg	193*193*140mm	400*400*300mm	8pcs/Carton
511084-02	0.6kg	0.84kg	8.3kg	193*193*140mm	400*400*300mm	8pcs/Carton
			_			

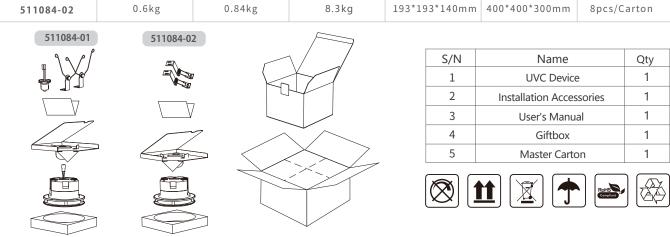



#### Disclaimer:

- 1. The ultraviolet rays of this product cannot be used for lighting purposes and in applications or activities which may cause and or lead to death, personal or animals injury and/or damage to the environment.
- 2. UV-C luminaires systems must only be sold and installed and replaced by professionals according to our stringent safety and legal requirements.
- 3. When using this UVC product for indoor disinfection, please close the doors and windows, keep the room clean and dry, and reduce dust and moisture
- 4. We do not promise or warrant that the use of the Products will protect any user from or prevent infection and/or contamination with any viruses, bacteria, protozoa, fungi, illness or disease.
- 5.There is high efficiency UVC generating device inside. No disassemble and open it except the professionals, as it may cause injury when ultraviolet rays are directly exposed to eyes or skin. Maintenance personnel need to wear professional uv protection goggles and skin protection before repair.
- 6.The UVC Products are not intended for and must not be used for medical purposes.
  7.In addition to and without limitation of any exclusions or limitations of liability of us as set forth in any agreement for the sale, distribution or otherwise making available of the UV-C lamp/fixture/devices, we shall have no responsibility or liability whatsoever for any claim or damage that may arise from or relate to any use of the UV-C lamp/fixture/devices outside of their intended use or contrary to their installation and operation instructions, each as described in this document, the user manuals and/or the mounting instructions.
- 8. The product must be designated by the manufacturer's professional and technical personnel, other personnel are not allowed to dismantle or replace without authorization.