

# Quick Assembly Guide

## BESV TRB1




# Contents

1.	What's in the Box.....	2
1.1	Main Box Contents .....	2
1.2	Accessory Box Contents .....	2
2.	Assembly Procedures .....	3
2.1	Stem and Handlebar .....	3
2.2	Front Wheel .....	4
2.3	Pedal.....	5
2.4	Seat Post.....	6
3.	Checklist.....	7

## 1. What's in the Box

### 1.1 Main Box Contents

1. Main Bike Assembly
2. Accessory Box
3. Front wheel

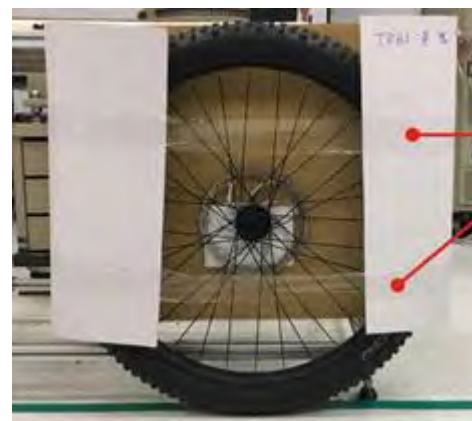

### 1.2 Accessory Box Contents

- 1-9. User Manual
10. Pedal
11. Wheel reflectors
12. Brose HMI
13. Battery keys
14. Charger
15. Front lamp (Germany only)
16. Rear lamp/reflector (Germany only)
17. Bell (Germany only)
18. Front reflector (Germany only)



## 2. Assembly Procedures

### 2.1 Stem and Handlebar

2.1.1 Engage the stem clamp and make it just hold the handlebar slightly. The cable arrangement as below picture.



2.1.2 Adjust handlebar to center of the stem and rotate to proper angle.



2.1.3 Tighten stem screw

Tighten stem screw with torque 6-8 N-m

**Note :** Tighten upper and lower screw by turns, to make the gap uniform.

Finish stem and handlebar assembly.





## 2.2 Front Wheel

2.2.1 Assemble the front wheel to the fork.



2.2.2 Install the front wheel axel from **right side**.

a. QR type –

Tighten QR to and close the lever. The lever should parallel to the fork.



b. Non-QR type –

Tighten axel with torque 9 – 13.5 N-m



2.2.3 Rotate front wheel, the rotor should not touch the brake caliper.



Finish front wheel assembly.

## 2.3 Pedal

### 2.3.1 Set up the right pedal.

Assemble the pedal with marking “R” onto the right crank clockwise and tighten it.



### 2.3.2 Set up the left pedal

Assemble the other one with marking “L” onto the left crank counterclockwise and tighten it.



Finish pedal assembly.

## 2.4 Seat Post

### 2.4.1 Adjust seat height

Open seat clamp and adjust to a proper seat height

**Note 1:** When adjusting the seat height, need to pull out the cable accordingly, in case the seat height switch is triggered all the time.

**Note 2:** After the adjustment, make sure the cable **NOT** to touch the rear wheel.

**Note 3:** **DO NOT** over the minimum insert line on seat post.



2.4.2 Adjust the saddle face forward, then closure seat clamp.

Finish seat post and saddle set assembly.



### 3. Checklist

- 3.1 Check the tire pressure is normal.
- 3.2 Check the function of the brakes, derailleur, chain and seat post.
- 3.3 Check the function of the electric module and the battery power. Please refer to TRB1 user manual.

Finish BESV TRB1 Quick Assembly.

