


verilux[®]
The Healthy Lighting Company[®] Est. 1956

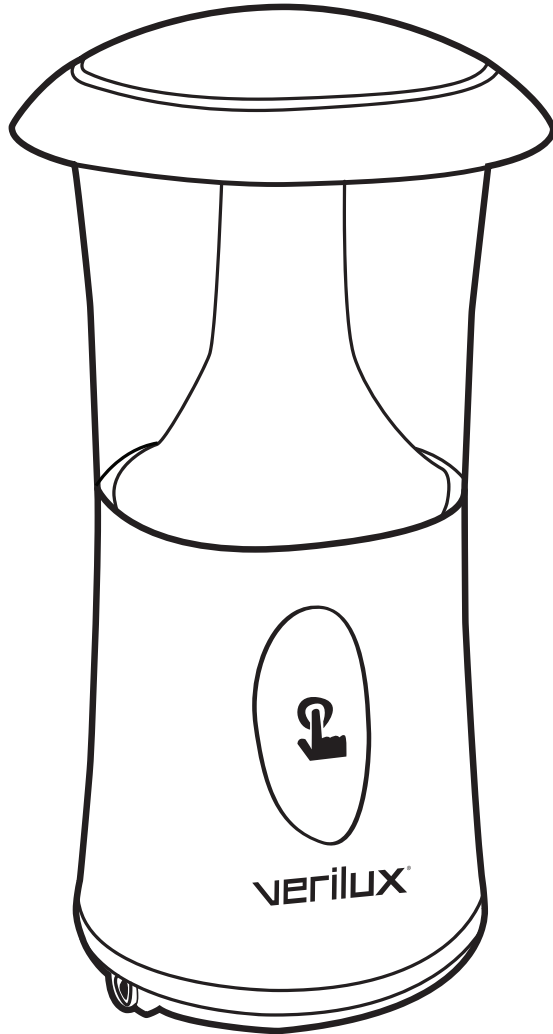

ReadyLight[™]

Rechargeable LED Lantern

Model: VB05



Dear Customer,

Thank you for purchasing the Verilux ReadyLight™ Rechargeable LED Lantern. You have received an innovative and quality manufactured product, backed by a 90-day limited warranty.

Many other healthy lighting products are available through our catalog and online. Visit us on the web at www.verilux.com to request a free catalog and learn more about all our quality Verilux products, or call us toll-free at 1-800-454-4408.

As a Verilux customer, your satisfaction means everything to us. We look forward to serving you now and in the future.

Have a bright day!

Nicholas Harmon
President, Verilux, Inc.

Important Safety Instructions


- Please read these instructions before using this lamp.
- Use only the recommended wall adapter (120 VAC) for recharging if not using another USB energy source (e.g. computer).
- Risk of Injury-do not perform recharging near a water source.
- Recharge the lantern in a well-ventilated area.
- If using the wall adapter, always attach the recharging cord to the lantern first, insert the USB connector to the wall adapter, then plug the adapter into the outlet.
- This product contains a SEALED LEAD BATTERY, BATTERY MUST BE RECYCLED. The battery is not replaceable. Check with your local recycling center for more information.
- To remove the battery for recycling, remove the screws from the base of the lantern. If the battery appears to have residue on the surface, it is recommended that you then put on rubber or neoprene gloves before cutting the two wires to the battery. Remove the battery and place it into a sealable, heavy duty plastic container or glass container for recycling.
- Wash hands after handling.
- Keep the battery away from children.

SAVE THESE INSTRUCTIONS

Features and Operation

Main Parts and Controls

- A. LED Bulbs
- B. Power/Dimmer Touch Sensors (Dome and Button)
- C. DC Socket
- D. DC Jack
- E. USB Connector
- F. USB Cable

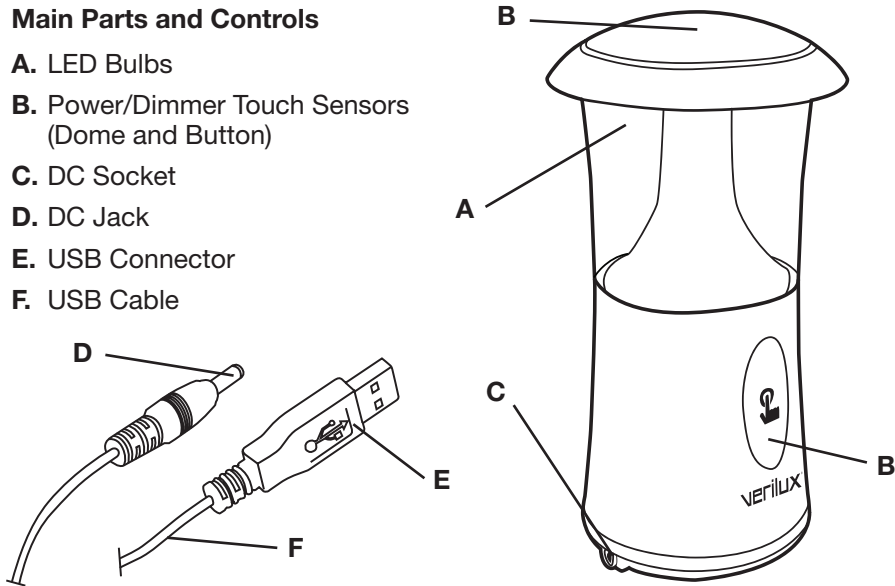

Lantern Operation

1. The lantern may be operated either by the internal rechargeable battery or by using the USB cable plugged into a USB power source, e.g., a computer.
2. Before first operation, the lantern should be charged for 6 hours to fully charge the battery. This will allow up to 4 hours of operation.
3. To charge the lantern, plug the DC jack into the DC socket of the lantern and plug the USB connector into a computer (computer must be on).
4. The lantern can be operated by touching the power/dimmer touch sensor to turn on or off.
5. To dim the lantern, touch and hold either touch sensor. Release when the lantern is dimmed to desired level.

NOTE: The ReadyLight™ is dimmable to help preserve battery power or reduce light for recreational uses.

NOTE: An optional USB adapter can be purchased for the unit to allow charging in a 120 VAC wall outlet. For ordering information, go to www.verilux.com/parts-and-accessories or return the order form on page 5 of this manual.

NOTE: Due to electrical current limitations of USB (500mA), a USB powered light may not seem as bright as a battery powered light.

Component Order Form

Order Online at www.verilux.com/parts-and-accessories.

Mail or Fax your order by using this form to:

Verilux, Inc., 340 Mad River Park, Waitsfield, VT 05673

Fax: 802-496-3105

Quantity	Price	Part Number	Product
	\$12.95	VEX-035	USB Adapter
	\$6.95	Shipping & Handling	
		Subtotal	
		CT & VT Residents ONLY add 6% Sales Tax	
		Total Payment Enclosed	

Cut Along Dashed Line

Payment Method:

VISA
 MASTERCARD
 DISCOVER
 AMERICAN EXPRESS
 CHECK

Name as it Appears on Card

Credit Card Number _____

Expiration Date _____

Security Code _____

Authorized Signature (credit card purchasers ONLY)

Ship to Address _____

Phone Number _____

Email Address _____

Warranty Registration

Thank you for purchasing one of the finest vision, therapy or sanitizing products on the market. This Warranty Registration **MUST** be completed and mailed in a timely manner in order for your warranty to be effective. You may also register this product online at www.verilux.com/warranty.

Name _____

Address _____

Phone Number _____

Email Address: _____

Model # _____

Date of Purchase (Month/Day/Year) _____

**Receive 20% off your next order when you complete
your warranty registration online at www.verilux.com/warranty.
Some restrictions apply.**

Please cut out form and send to:

**VERILUX INC
PO BOX 451006
OMAHA NE 68145-5006**

Or register online at www.verilux.com/warranty

Cut Along Dashed Line

90-Day Limited Warranty

ATTENTION! ONCE OPENED, PLEASE **DO NOT** RETURN THIS PRODUCT TO THE STORE WHERE IT WAS PURCHASED FOR REPAIR OR REPLACEMENT!

Many questions may be answered by visiting www.verilux.com, or you may call our Customer Service Department at 800-786-6850 during normal business hours.

This limited warranty is provided by: Verilux, Inc., 340 Mad River Park, Waitsfield, VT 05673

Verilux warrants this product to be free from defects in material and workmanship for a period of 90 days from the date of the original retail purchase from Verilux or an authorized Verilux distributor. **Proof of purchase is required for all warranty claims.** During the limited warranty period, Verilux, Inc. will, at its option, repair or replace defective parts of this product, at no charge to the customer, subject to the following limitations: This limited warranty does not include any postage, freight, handling, insurance or delivery fees. This warranty does not cover damage, defect or failure caused by or resulting from accident, external destruction, alteration, modification, abuse, misuse or misapplication of this product.

This warranty does not cover damage to the product resulting from return shipping or handling. The use of shipping insurance is recommended to help protect your product.

Return Authorization is required for all returns. To obtain a Return Authorization, please contact the Verilux Customer Service Department at 800-786-6850.

If, during the first 90 days of ownership, this product fails to operate properly, it should be returned as specified at www.verilux.com/warrantyreplacement or as instructed by a Verilux customer service representative at 800-786-6850.

Note: *Verilux recommends using a quality surge suppressor on all electronics equipment. Voltage variations and spikes can damage electronic components in any system. A quality suppressor can eliminate the vast majority of failures attributed to surges and may be purchased at electronics stores.*

Due to ongoing improvements, actual product may have slight variations from the product described in this manual.

Please visit our web site at: www.verilux.com or call

1-800-786-6850

Representatives are available Monday – Friday, 9am – 5pm EST

verilux®

340 Mad River Park, Waitsfield, VT 05673