


verilux[®]
The Healthy Lighting Company[®] Est. 1956

**Don't Brush with
Germs!™**

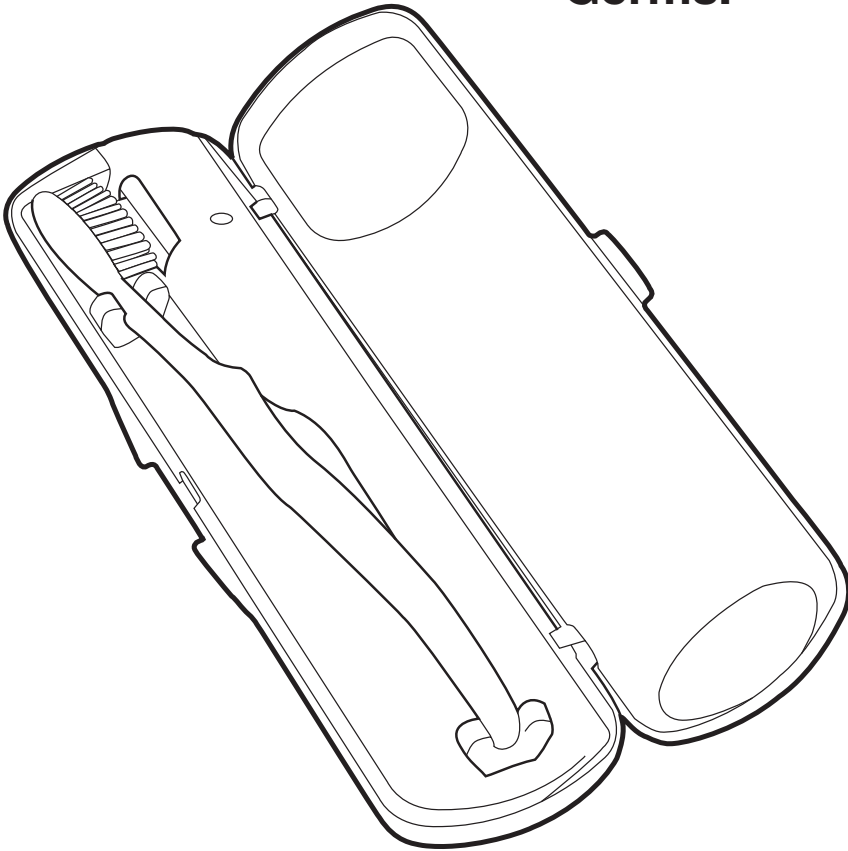

CleanWave  [®]
Portable Toothbrush Sanitizer

Model: VH17



Dear Customer,

Thank you for purchasing the Verilux CleanWave® Portable Toothbrush Sanitizer. You have received an innovative and quality manufactured product, backed by a one-year limited warranty.

Many other healthy lighting products are available through our catalog and online. Visit us on the web at www.verilux.com to request a free catalog and learn more about all our quality Verilux products, or call us toll-free at 1-800-454-4408.

As a Verilux customer, your satisfaction means everything to us. We look forward to serving you now and in the future.

Have a bright day!

Nicholas Harmon
President, Verilux, Inc.

READ ALL INSTRUCTIONS BEFORE USING

Important Safeguards

▲ DANGER:

- The bulb emits UV-C light. If the bulb remains lit when the lid is open, do not look directly into the bulb. Direct prolonged exposure of eyes or skin to the UV-C light bulb can cause serious skin burn and eye inflammation from short wave ultraviolet radiation. Remove batteries and contact customer service.

▲ WARNING:

- The bulb in this product contains a trace amount of mercury, a chemical known to the state of California to cause birth defects or other reproductive harm. This substance may also cause injury if inhaled or ingested.
- Keep out of reach of children under 6 years old.

▲ CAUTION:

- Do not mix old and new batteries.
- Do not immerse in water or liquid of any kind.
- Unit is equipped with a safety mechanism that should not allow it to go on when the lid is open.
- Dispose of bulbs per local regulations. For more information on clean-up and disposal, see www.lamprecycle.org.
- Care should be taken to prevent bulb breakage.

SAVE THESE INSTRUCTIONS

Features

- Germ-eliminating UV technology sanitizes your toothbrush in 6 minutes.
- Kills germs without chemicals.
- Sturdy case guards against airborne contaminants.
- Built-in timer provides automatic 6-minute sanitizing cycle from two AAA batteries (not included).
- Perfect for home, office, gym or vacation.

Operation

Operating your Verilux® CleanWave® Portable Toothbrush Sanitizer:

1. Turn Sanitizer over and remove the cover on the battery compartment.
2. Insert 2-AAA alkaline batteries (not included), making sure they are each inserted in the proper direction.
3. Replace the battery compartment cover.
4. Open the lid of the Sanitizer and insert your toothbrush with the neck in the clip (make sure the bristles are facing the light at the back of the compartment).
5. Close the lid, and you will notice the light has illuminated (the lid will protect your eyes from the UV-C light).
6. The built-in timer will provide a complete 6-minute sanitizing cycle before automatically turning the Sanitizer off.
7. Although the unit has air circulation holes, it is recommended that you shake off all excess water prior to placing your toothbrush in the Sanitizer.
8. Once the sanitizing cycle is complete, there is no need to wait before using the toothbrush again.

Technical Specifications

Environment

Operating Temperature: 15°C to 35°C (59°F to 95°F)

Storage Temperature: 0°C to 40°C (32°F to 104°F)

Relative Humidity: 5% to 95% non-condensing

UV-C Bulb

0.6 Watt UV-C bulb; non-replaceable

Battery

2-AAA alkaline batteries (not included)

One Year Limited Warranty

ATTENTION! ONCE OPENED, PLEASE **DO NOT** RETURN THIS PRODUCT TO THE STORE WHERE IT WAS PURCHASED FOR REPAIR OR REPLACEMENT!

Many questions may be answered by visiting www.verilux.com, or you may call our Customer Service Department at 800-786-6850 during normal business hours.

This limited warranty is provided by: Verilux, Inc., 340 Mad River Park, Waitsfield, VT 05673

Verilux warrants this product to be free from defects in material and workmanship for a period of one year from the date of the original retail purchase from Verilux or an authorized Verilux distributor. **Proof of purchase is required for all warranty claims.** During the limited warranty period, Verilux, Inc. will, at its option, repair or replace defective parts of this product, at no charge to the customer, subject to the following limitations: This limited warranty does not include any postage, freight, handling, insurance or delivery fees. This warranty does not cover damage, defect or failure caused by or resulting from accident, external destruction, alteration, modification, abuse, misuse or misapplication of this product.

This warranty does not cover damage to the product resulting from return shipping or handling. The use of shipping insurance is recommended to help protect your product.

Return Authorization is required for all returns. To obtain a Return Authorization, please contact the Verilux Customer Service Department at 800-786-6850.

If, during the first year of ownership, this product fails to operate properly, it should be returned as specified at www.verilux.com/warrantyreplacement or as instructed by a Verilux customer service representative at 800-786-6850.

Note: *Verilux recommends using a quality surge suppressor on all electronics equipment. Voltage variations and spikes can damage electronic components in any system. A quality suppressor can eliminate the vast majority of failures attributed to surges and may be purchased at electronics stores.*

Due to ongoing improvements, actual product may have slight variations from the product described in this manual.

Please visit our website at www.verilux.com or call our Customer Service Department at

1-800-786-6850

Representatives are available Monday — Friday, 9am — 5pm EST

verilux[®]

340 Mad River Park, Waitsfield, VT 05673