


verilux[®]
The Healthy Lighting Company[®] Est. 1956

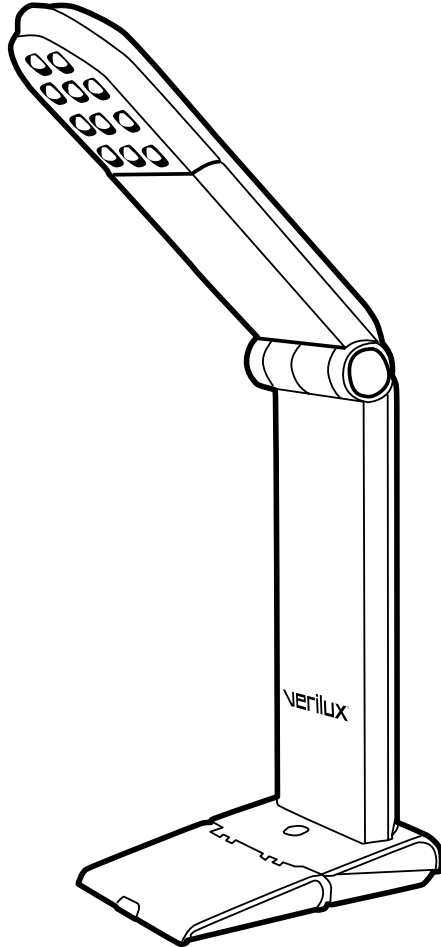

Travel Lamp

Natural Spectrum[®] Rechargeable Task Lamp

VP04



Dear Customer,

Thank you for purchasing the Verilux Travel Lamp Natural Spectrum® Rechargeable Task Lamp. You have received a quality product, backed by a one-year limited warranty.

Many other healthy lighting products are available through our catalog and online. Visit us on the web at www.verilux.com to request a free catalog and learn more about all our quality Verilux products, or call our toll-free number 1-800-454-4408.

As a Verilux customer, your satisfaction means everything to us. We look forward to serving you now and in the future.

Have a Bright Day!

A handwritten signature in black ink that reads "Nicholas Harmon". The script is fluid and cursive, with a prominent flourish at the end of the name.

Nicholas Harmon
President, Verilux, Inc.

Features

You'll be amazed at the brightness of this rechargeable and portable reading/task lamp. Perfect for home, office or travel, the Travel Lamp uses 11 super-bright LED bulbs to deliver Natural Spectrum® Daylight illumination for reading, computer use or to see details of any important task. Includes AC Adapter/Charger and batteries. Folds for easy storage in RV, boat or luggage.

- 11 powerful LED lamps with exclusive Natural Spectrum daylight illumination
- Lamp head extends to provide bright light for reading, computer or task work
- Lamp folds flat for storage and transport
- Includes AC Adapter/Charger and batteries
- Lights your projects for more than 4 hours on a single charge
- Perfect for use in your RV, boat or as a bedside lamp
- 1-year limited warranty



**Adjusts from full
open to closure for
transport**


Operation

Before operating for the first time, insert AC adapter (included) into the back of the Travel Lamp and plug into an appropriate electrical outlet. This charges the batteries (included).

Light at base will be red when lamp is charging. When the light turns green, unit is fully charged and can be removed from the electrical outlet.

A dimming of light output indicates that the lamp's batteries need to be recharged. The lamp may be used with the AC Adapter connected, and will not hurt the batteries.

Besides folding open and closed, the Travel Lamp also features an extendable head and folding base for greater stability.

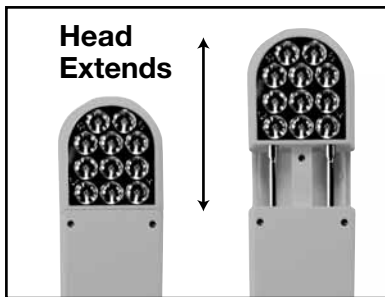

Base unfolds for greater stability.



Battery Replacement

When replacing batteries, please ensure that you use only 3 AA rechargeable batteries.

Using a Philips head screwdriver, loosen screws fastening battery compartment panel on the inside of the Travel Lamp. Remove battery compartment panel (Fig. 1). Take out any dead batteries and dispose of in a proper manner.

Following the indications on the inside of the battery compartment, insert 3 AA rechargeable batteries into place. Please make sure that the “+” and “-” are facing in the right direction, otherwise the lamp will fail to operate.

Once batteries are inserted, replace battery compartment panel, and tighten the screws with the screwdriver.



One Year Limited Warranty

ATTENTION! ONCE OPENED, PLEASE **DO NOT** RETURN THIS PRODUCT TO THE STORE WHERE IT WAS PURCHASED FOR REPAIR OR REPLACEMENT!

Many questions may be answered by visiting www.verilux.com, or you may call our Customer Service Department at 800-786-6850 during normal business hours.

This limited warranty is provided by: Verilux, Inc., 340 Mad River Park, Waitsfield, VT 05673

Verilux warrants this product to be free from defects in material and workmanship for a period of one year from the date of the original retail purchase from Verilux or an authorized Verilux distributor. **Proof of purchase is required for all warranty claims.** During the limited warranty period, Verilux, Inc. will, at its option, repair or replace defective parts of this product, at no charge to the customer, subject to the following limitations: This limited warranty does not include any postage, freight, handling, insurance or delivery fees. This warranty does not cover damage, defect or failure caused by or resulting from accident, external destruction, alteration, modification, abuse, misuse or misapplication of this product.

This warranty does not cover damage to the product resulting from return shipping or handling. The use of shipping insurance is recommended to help protect your product.

Return Authorization is required for all returns. To obtain a Return Authorization, please contact the Verilux Customer Service Department at 800-786-6850.

If, during the first year of ownership, this product fails to operate properly, it should be returned as specified at www.verilux.com/warrantyreplacement or as instructed by a Verilux customer service representative at 800-786-6850.

Note: *Verilux recommends using a quality surge suppressor on all electronics equipment. Voltage variations and spikes can damage electronic components in any system. A quality suppressor can eliminate the vast majority of failures attributed to surges and may be purchased at electronics stores.*

Due to ongoing improvements, actual product may have slight variations from the product described in this manual.

Please visit our website at www.verilux.com or call our Customer Service Department at

1-800-786-6850

Representatives are available Monday – Friday, 9am – 5pm EST

verilux®

340 Mad River Park, Waitsfield, VT 05673

