

TCR 291N TOP CASE INSTALLATION MANUAL

INCLUDED IN THE BOX

1. BASE PLATFORM

2. CLAMP WASHER

3. M6 BOLT

4. SCREW

5. COVER PLATE

6. FITTING RACK CLAMP

7. BOLT WASHER

8. NYLOC NUT

9. RUBBER MAT

10. KEY AND KEY CHAIN

11. BACKREST WITH SCREWS

BACKREST

SCREWS (4 NOS)

PRODUCT HIGHLIGHTS:









ů





CLAMP WASHER (4 NOS)



BASE PLATFORM



NYLOC NUT (4 NOS)



FITTING RACK CLAMP(4 NOS)





TCR 291N TOP CASE INSTALLATION

SMK

MANUAL

STEP -1 Take the fitting rack which comes as an accessory, customized according to type of bikes and fit it properly on your bike.





STEP -2 Fit the base platform on the fitting rack which comes along with the Top case as shown in the below picture.





STEP -3 Now, put the fitting rack clamp washer one by one into the square slots provided on the base platform.







STEP -4 Put bolt over the fitting rack clamp washer as shown in the picture below.





Insert fitting rack clamp from underneath of base platform on bolt STEP -5 threaded shank and then insert washer.





Tighten it firmly with Nyloc anti rotation nuts. Do it for all four nuts to fit STEP -6 it properly. Now the base platform perfectly fits on the fitting rack.





TCR 291N TOP CASE NSTALLATION

SMK

MANUAL


STEP -7 Put the base platform cover on the base platform, insert the side locks to fix it properly and tighten it with 2 screws as shown in the picture below.





STEP -8 First, engage the top case from the back with two grooves of base platform.



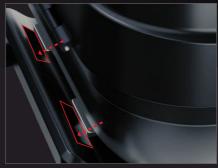

STEP -9 Push the top case from front side, so that it fits perfectly on base platform.






TCR 291N TOP CASE NSTALLATION

SMK.

MANUAL

STEP -10 Push the top case from top so that it automatically fits into the front base groove as shown in the picture below.



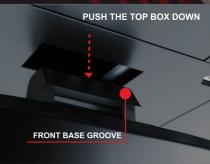

STEP -11 Take the key out. Top case is now ready for use.





STEP -12 Insert the key and rotate it towards the left and the lid will open from the top. You can put your items inside.





TCR 291N TOP CASE INSTALLATION

SMK

STEP -13 Push the lid to close it. Now, rotate the key to center and take it out.





To detach the top case from the base. Rotate the key towards right as shown in the picture below and pull the lever and it will detach from the front base groove. Take out the key after rotating back to its initial position.





STEP -15 Hold the handle as shown in picture below to take the top case with you.





TCR 291N TOP CASE INSTALLATION MANUAL



STEP -16 Drag the top case using the handle.





HOW TO INSTALL BACKREST?

For the convenience of the pillion rider, the top case comes with a backrest as well, placement for the same should be as per the pictures below. Open the lid of the top case, you will find four screw holes marking on the inside back of the top flap of the top case. Place all four screws on those marks, use a drilling machine (Dia. 4mm) for making holes there.





After placing the backrest, tighten the screw from inside the top case. Now the backrest is ready for use. Make the pillion rider's journey comfortable and enjoyable.



