
FITUEYES°

CAMERA SYNC STRIP LIGHT


P14I 1651B / P14I 1851B

SSUED: H

What's in the box

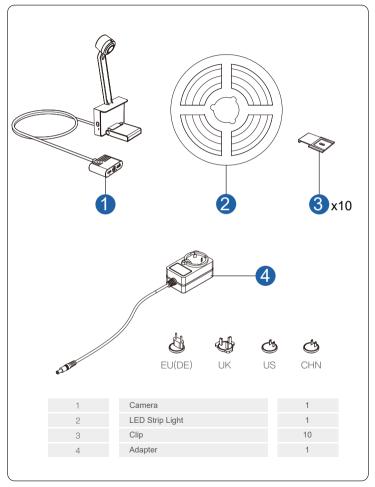


Control connection

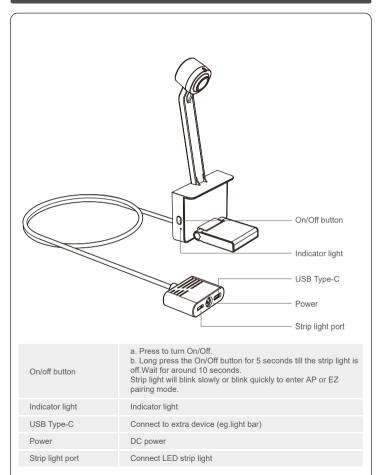


Easy to install

- 1 Preparation Before Installing:
 - a. Unbox the strip light check all items listed in the packing list.
 - b. Power on the strip light and check whether it lights up.
- 2 Installing Steps:
 - a. Wipe the installation surface (normally back of TV/PC) to ensure it is dry and clean.

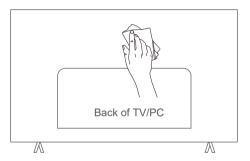


b. Stick the strip light to the back of the TV. Press them firmly and then reinforce them with the provided clips. Please follow the arrow direction of the LED strip light.

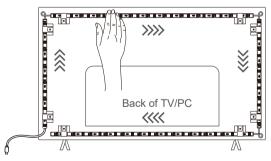


Note: You can also stick the strip light from any corner of the TV clockwise or anticlockwise. But please configure likewise in app later.

Easy to install

c. Position the camera to the top-center of the TV horizontally.

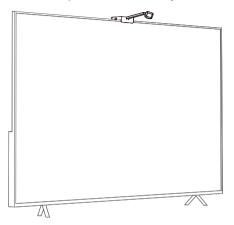


d. Insert the cable of the strip light and the power into the device.

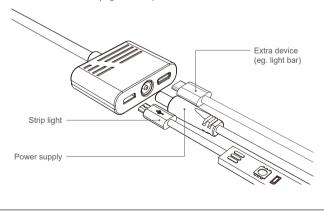

Easy to install

e. Power on the strip light, tear off the protective film and try connecting them with the FITUEYES app.



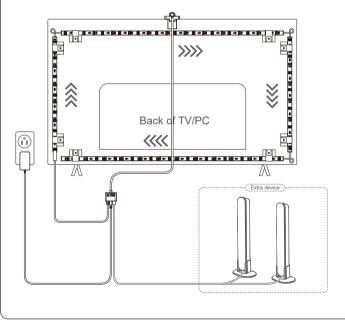

What you need:

- A Wi-Fi router supporting the 2.4GHz and 802.11 b/g/n bands. 5GHz is not supported.
- Download the FITUEYES app from the App Store (iOS devices) or Google Play (Android devices).







- Register an account.
- 3 Connect to the 2.4GHz Wi-Fi.






1 Download the FITUEYES app. Register and 2 Click "+" or "Add Device". log in.

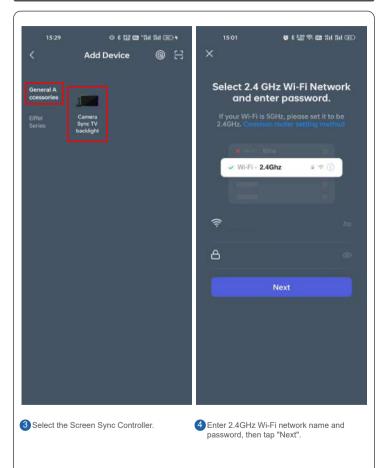

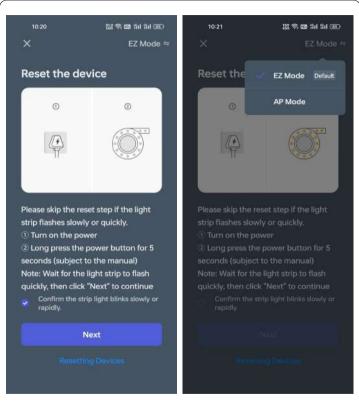



- When the light strip flashes quickly, click "Confirm the strip light blinks slowly or rapidly", and then click "Next".
 Go to step: 10
- 6 If the light strip is flashing slowly, please click "EZ Mode" in the upper right corner and select "AP Mode".

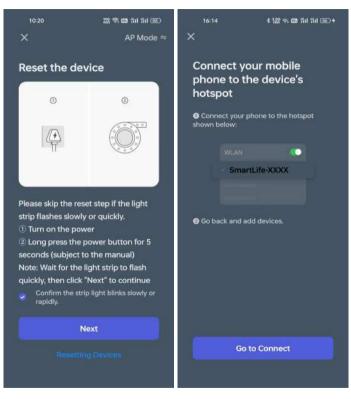

- When the light strip shows slow flashing status, select "AP Mode", then click "Confirm the strip light blinks slowly or rapidly", and then click "Next".

 Go to steps: 8/9/10
- 8 Click "Go to Connect" to go to the hotspot connection.

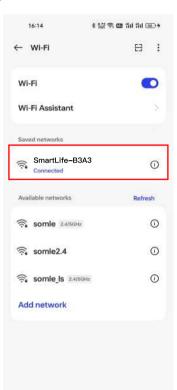

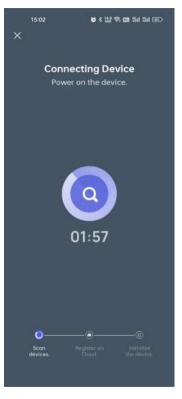

wait until the status is connected, and click "Back".

