



**DIAMONDBACK**

DiamondBackCovers.com / 800 935 4002

# DIAMONDBACK REPAIR KIT

## USE GUIDE

DP-3

**10 minutes**  
Normal install time

Keep an eye out for these icons:

**IMPORTANT!**  
Important installation information

**Helpful Hints**  
Tips to assist installation

### PARTS INCLUDED:

### TOOLS REQUIRED:

#### Spot Repair



#### Mixing Nozzle

(In foil package with spot repair tube)



#### Plunger



#### Finishing Spatula



#### Lint-Free Cloth



#### Rubbing Alcohol




## INSTRUCTIONS

**1** Clean the area thoroughly with a lint-free cloth. Use rubbing alcohol directly on the damaged area. To prevent cover discoloration, be careful to only use cleaner on the damaged portion. Allow to dry.

It is very important that the damaged area be both dry and free of dirt, oil, or any other contaminants prior to application of spot repair.




**2** Before removing cap, attach the plunger to the back of the spot repair tube. Ensure that the chamfered tips are fully engaged.

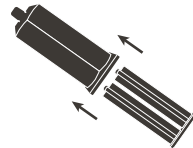


**3** Unscrew cap and insert mixing nozzle.

Once cured, mixing nozzles cannot be reused.


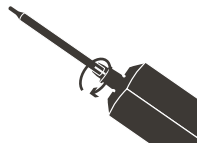


There are extra mixing nozzles (and finishing spatulas) included for additional applications.

**4** Slowly apply even pressure to plunger to fill the mixing nozzle. Discard a pea sized amount of material.

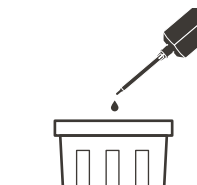

**5** Begin dispensing material onto damaged area. Use a finishing spatula to spread material and cover the damaged area evenly. The repair material begins to set within **15 seconds**. NOTE: Additional mixing is **NOT** required.

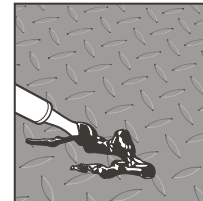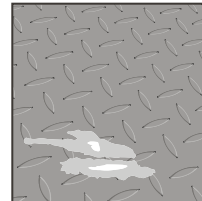

If desired, to preserve any left over material for additional use, immediately remove and discard mixing nozzle. Recap spot repair tube.

**6** Let material cure for 5 minutes. If additional blending is needed, apply light back and forth pressure with the finishing spatula to even out surface and define texture.

**24 hours**  
Cure time

For even better blending and UV protection, it is recommended to also apply **ToughCoat Renew** (sold separately). Wait for full cure time before applying.

**60-100 °F**  
Storage temperature