

# Installation Instruction for Shadow SH 2000 Quick Mount Removable Transducer

## Content:

Transducer  
integrated volume and tone control  
output socket  
cable  
mounting adhesive

1. Locate the best position on the instrument for optimum sound quality and output. See suggested locations in fig. 1.
2. Apply an even amount of included adhesive to the bottom of the pickup.
3. Press pickup firmly onto the instrument.
4. Position the included output cable in a convenient location.
5. Connect to an appropriate amplifier with included instrument cable.

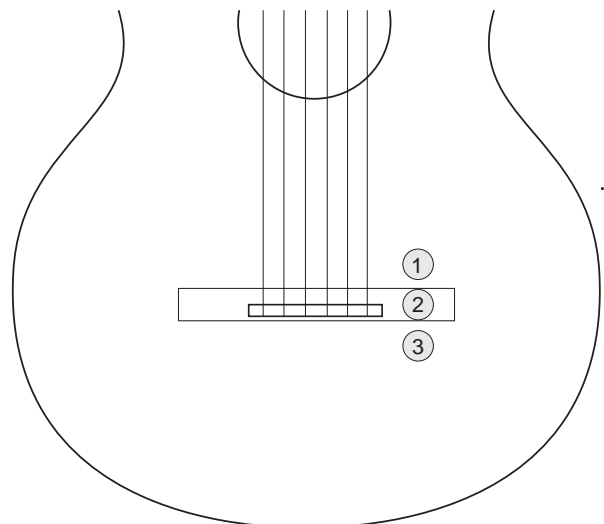


Fig. 1

## Note:

Piezo pickups and transducers have a very high output impedance. In order to get the optimum sound output we recommend an amplifier with low impedance input.