


Coarse sanding with the TRI0

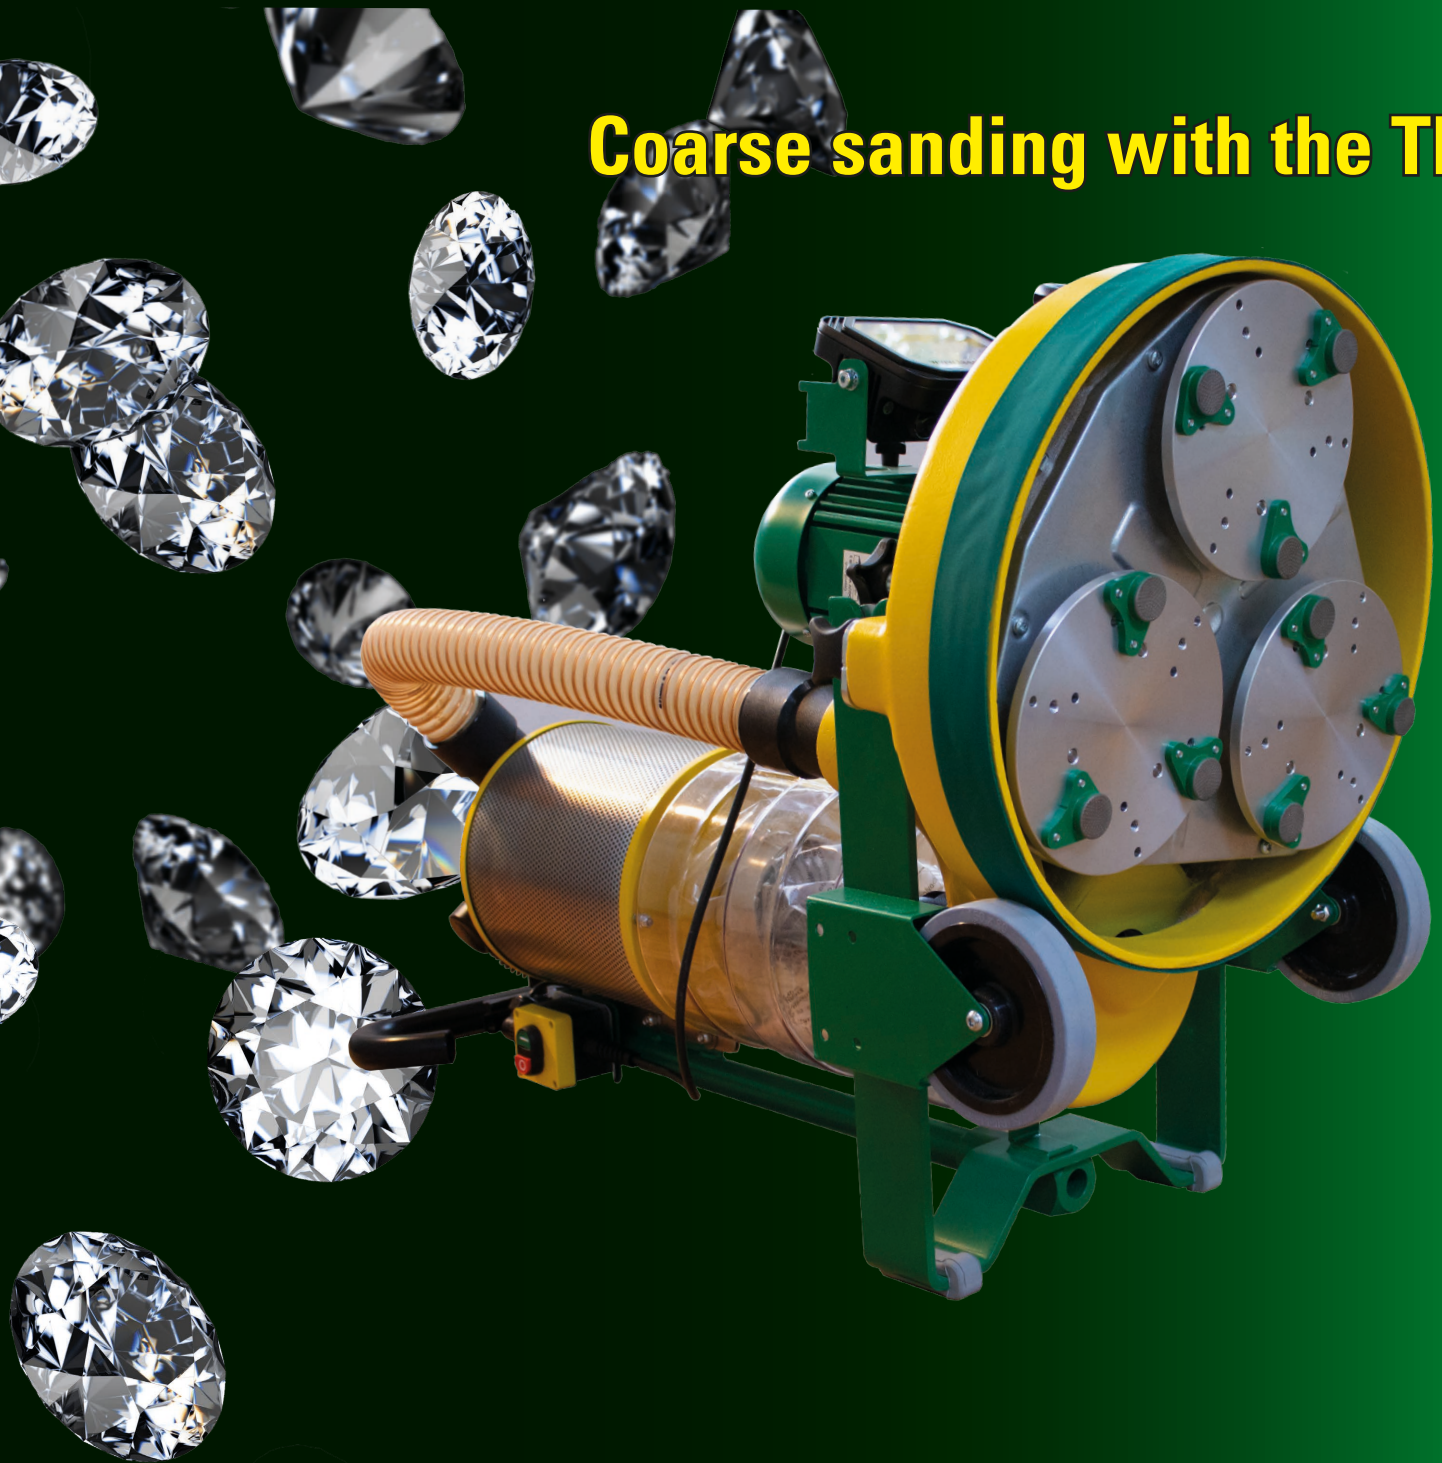

With the new **diamond sanding discs** specially developed for the **TRI0**, you can now also remove stubborn varnish and old layers of paint, adhesive, and carpet backing from **wooden floors**.

**Close to the edge and direction-free
Refurbishing and levelling wooden floors**

TRIO Diamond sanding discs

Your advantages

- ✓ **Time saving thanks to sanding close to the edge**
Faster in the edge area. The need for subsequent edge sanding is significantly reduced.
- ✓ **Direction-free coarse sanding**
Sanding entirely independent of the laying direction.
- ✓ **Low physical strain during coarse sanding**
The ergonomic design of the TRIO makes it extremely easy to handle.
- ✓ **Coarse sanding and levelling without the use of sanding discs or belts**
Cost savings due to reduced use and change of abrasives.
- ✓ **A single machine for coarse and fine sanding**
Depending on local conditions, no additional machine may be required.
- ✓ **Extremely long service life of the diamond segments**
Rapid amortisation of the purchase after acquisition.



TRIO Diamond sanding discs

Technical data

Diamond sanding disc set

Description: 3 TRIO diamond sanding discs with case

Item number: 900.99.11.100




Diamond sanding disc

Description: aluminium plate Ø 200mm, fitted with diamond segments

Equipment: 3 diamond segments per sanding plate (scope of delivery)

Item number: 900.02.90.100

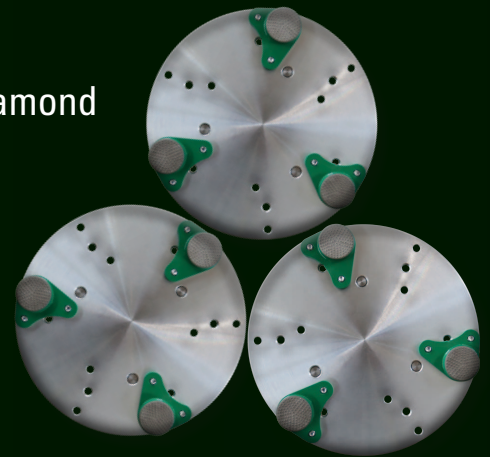

Diamond segments

Description: base plate with round diamond sanding element (Ø 30mm)

Grit size: 40/50

Item number: 900.02.91.100



Further questions? Our team will be delighted to be of assistance!


TRIO Diamond sanding discs

Areas of application

- ✓ Removal of hard lacquer coatings (e.g. industrial, PU, UV lacquers)
- ✓ Removal of old paint and oil layers, adhesive and carpet backing residues
- ✓ Levelling of wooden floors

Instructions for use – IMPORTANT!

- ✓ Can be used with or without additional weight, depending on the desired aggressiveness.
- ✓ Metal in the surface to be treated must be removed in advance (e.g. countersink nails).
- ✓ Use only on wooden surfaces.
- ✓ After using the diamond sanding discs, it is recommended to continue sanding with the TRIO, fitted with 60 grit Velcro sanding discs.

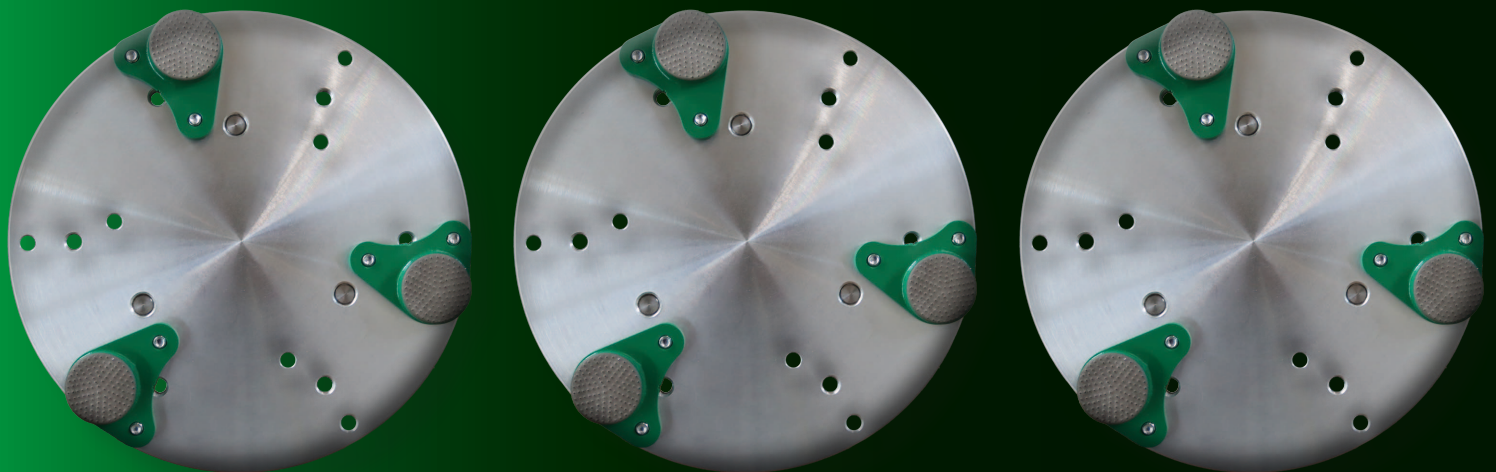

00.000.52.155 13.12.2023

