


Thank you for purchasing the Pulsar® APX Vape! In order to ensure safe use, please read all instructions and safety warnings before operating. Failure to follow instructions may result in injury and may void your warranty.

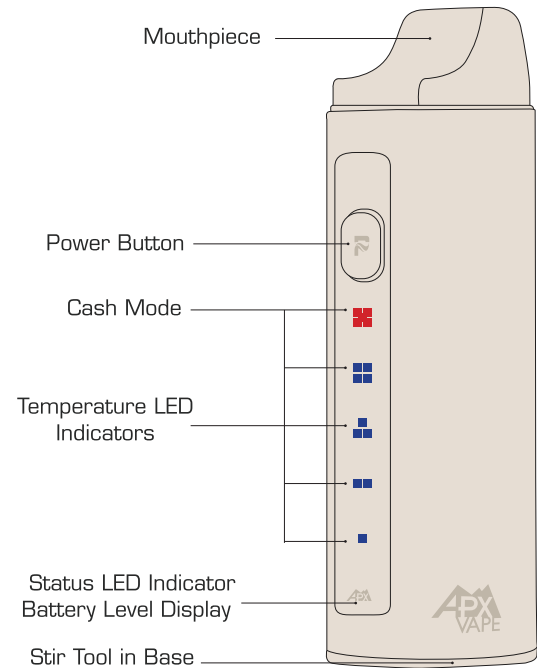

**WAKE
VAPE
HUSTLE
REPEAT**

FEATURES

- Isolated Airpath
- Built-in Stir Tool
- Larger Ceramic Chamber
- 5 Preset Temperatures
- Haptic Feedback
- Cash Mode
- Auto-Shut Off

TECH SPECS

Size: 31mm x 23mm x 101mm
Input: DC.5V,1.5A

Battery Capacity:1600mAh Class A Lithium Battery

GRAPHIC DISPLAY	TEMPERATURE RANGE SETTINGS
■ ■ ■ ■	446° F
■ ■ ■	428° F
■ ■ ■	410° F
■ ■	392° F
■	374° F

Battery Recharge Cycle Count: 300

PULSAR
ENJOY HIGHER CULTURE



PulsarVaporizers.com

PU-0003-19

PULSAR
**APX
VAPE**




CHARGING THE DEVICE

- **IMPORTANT:** You will need to fully charge your Pulsar® APX Vape prior to use. Allow approximately 3 hours for the first full charge. NEVER charge the device for more than 24 hours. Allow approximately 1.5 hours for additional recharges.
- A 5V/1.5 Amp USB AC wall adapter is required for charging the device. Using the included USB charge cord, set the Pulsar APX Vape on its side while charging. Do not let the unit dangle from the cord. This puts pressure on the charger plug which can result in the unit not charging fully. It is also recommended to NEVER charge the device from an automobile power source. Failure to follow warnings contained within this manual can result in property damage or personal injury and may void the warranty.
- The APX Logo LED will show a charging connection is made by slowly flashing red until fully charged. The indicator will change to solid green when completely charged.
- The device will deliver approximately 1.5 hours of continuous power, depending on use.
- Battery level display:
 - **Green APX Logo = 100-60% Power Level**
 - **Orange APX Logo = 60-20% Power Level**
 - **Red APX Logo = 20-0% Power Level**
- Low Battery: APX Logo LED will flash alternating red & green 3 times and the device will not power on.


HOW TO LOAD & OPERATE



2. For best results, fill the chamber with ground material halfway to three-quarters full. Use the built-in stir tool with the tamping end to lightly and neatly pack the chamber. Do not pack too tightly. This allows for even heat distribution and makes it easier to stir throughout the vape session.

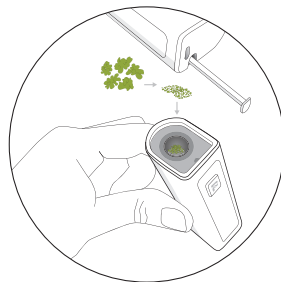

1. With the Pulsar APX Vape upright and the button facing you, lightly pull on the mouthpiece towards you until it is released.

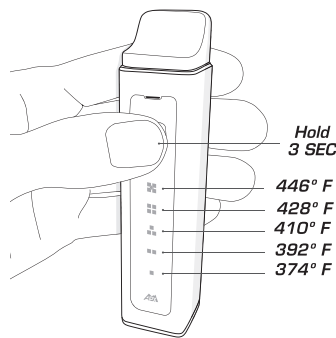

Hold
3 SEC

446° F
428° F
410° F
392° F
374° F

3. Once loaded, replace the mouthpiece and turn the unit on by pressing the power button rapidly 5 times (5 Clicks for ON/OFF).
4. The Pulsar APX Vape returns to the last set temperature when powered on. To change the temperature, press and hold the power button for 3 seconds. The LED indicators will begin to cycle through the temperature settings until you release the button.

5. The device will begin heating immediately once the temperature setting is selected. The LED will begin pulsing to indicate heating is in progress. The LED will turn solid, and the Haptic Feedback feature will alert you that the Pulsar APX Vape has reached the desired temperature.
6. Allow the device to continue heating for approximately 5 seconds longer before inhaling. This ensures the herbs in the chamber are evenly heated, maximizing efficiency.
7. To adjust the temperature during a session, press & hold the power button for 3 seconds to cycle through the settings again. Release the button on the desired setting and allow the Pulsar APX Vape to adjust to the new temperature. The LED will begin pulsing, and wait for the Haptic Feedback before continuing the session.
8. CASH MODE - The Pulsar APX Vape is equipped with a specially tuned temperature setting that allows the user to quickly clear or "cash" a chamber. The fifth and highest setting, also designated with a red LED, heats at a higher temperature, and has a shorter auto-shutoff time. Perfect for making sure that what you have loaded in your chamber is spent, or for those times when you need to be in a hurry!

PRO TIPS

- Occasionally stir herbs and allow the chamber to reheat for 5 seconds between each inhale.
- To maximize efficiency, whenever possible, allow the unit to cool completely.
- Be sure to turn the unit off when you are done to preserve the material.
- Your Pulsar APX Vape is equipped with a 5-minute auto-shut off timer to further prevent waste and overheating. The Cash Mode is equipped with a 2.5 minute auto-shut off.

HOW TO CLEAN

1. Remove the mouthpiece.
 2. Tap out the material from the chamber or use the built-in stir tool to remove.
 3. Use the included cleaning brush to sweep the remaining residue from the chamber.
 4. A cotton swab and isopropyl alcohol can be used to clean stubborn residue. Do not pour alcohol directly into the chamber. Allow the chamber to fully air dry before use.
 5. Put the mouthpiece back onto the body and the device is now ready for storage or use.
- Do not use cleaning solutions, solvents, or other chemicals when cleaning the device. Doing so will result in undesirable tastes or smells and can cause potential health hazards.
 - It is a good idea to clean the unit after each use to avoid excessive build-up, which will interfere with the taste and function of the device and may affect warranty status.
 - The silicone screen assembly in the mouthpiece helps provide a smoother vaping experience. Be sure to clean it periodically. A cotton swab and isopropyl alcohol works here too. Allow to air dry completely before reassembly.

IMPORTANT SAFETY WARNINGS

- Do not expose to extreme temperatures or direct sunlight.
- Do not drop the device or accessories.
- Do not drop or submerge in any liquid.
- Do not modify the electronics in any way.
- This device is intended for adults only. Do not sell or provide to minors. Keep all parts, concentrates, herbs, and liquids away from children and pets. This is not a medical device and is not intended to diagnose, treat, mitigate, cure, or prevent any ailment, disease, or other conditions. Consult a physician before use, especially if you suffer from heart disease or any other medical condition, or if you are pregnant or breastfeeding. Failure to follow any of these instructions could result in product damage, property damage, personal injury, and may void warranty.