

PULSAR®

510 DL 2.0 PRO



PULSAR®
ENJOY HIGHER CULTURE™

Manufactured by Pulsar®
Asheville, NC 28806

Designed in USA, Made in China

PulsarShop.com

PULSAR 510 DL 2.0 PRO AUTO-DRAW VARIABLE VOLTAGE VAPE BAR | MANUAL

SPECS:

Size: 1.64 x 3.51 x 0.79 inches
(41.7 x 89.2 x 20.07 mm)
Maximum Cartridge Size: 0.57 inches diameter,
2.36 inches length (14.5mm x 60mm)
Battery Capacity: 1000mAh
Voltage: 2.4V / 2.6V / 2.8V / 3.4V / 3.8V (1.8v Pre-heat)
Charging: USB-C
Resistance: ≥0.8Ω

KIT INCLUDES:

1 x Pulsar 510 DL 2.0 PRO Battery
1 x Bottom Magnetic Connector

POWER ON/OFF:

The device doesn't turn off. It enters a standby mode after 10 seconds. To wake the device up, press the button on the bottom 1 time and the screen will turn on and the led will flash the current voltage. You can also pull from the mouthpiece and the device will be ready to vape. The screen displays the battery life in %.

PRE-HEATING:

Quickly pull from mouthpiece twice to activate the pre-heat function. You can also press the button on the bottom 2 times to activate pre-heat function.

CHANGE VOLTAGE SETTING:

You change the setting by pressing the button on the bottom 1 time. The screen also indicates the voltage setting in bars.

2.4 - Yellow
2.6 - Purple
2.8 - Green
3.4 - Blue
3.8 - Red

CHARGING:

Charging: Red light, lightning icon flashes on screen when charging.
Fully charged: Green light
Low Battery: Red light will flash 10 times to alert user, and will then enter standby mode. Charge before continuing use.

PROTECTION FEATURES:

Battery life/cartridge protection: After 10 continuous seconds of use, the red light will flash 4 times, and the automatic vape time cutoff will activate, turning off the heat (but not the power).
Over-voltage/short-circuit protection: red light will flash 3 times, and device will fully turn off.

QUICK START INSTRUCTIONS

1. Connect your device to a power source and charge until the light turns green.
2. Insert the 510-threaded cartridge of your choice.
3. Press the button on the bottom of the device 1 time to wake it up.
4. Press the button on the bottom 1 time to change the voltage, repeat until you are at your desired setting.
5. Quickly pull twice to start pre-heating or press power button 2 times.
6. Pull from mouthpiece and enjoy.


INSTRUCTIONS:

1. Make sure that the bottom magnetic connector is properly connected to the bottom of the unit. The battery will not charge if the bottom connector is not attached.
2. Plug in the provided USB-C cable and connect to a power source. You will see the light flash once when the battery is connected.
3. Allow the battery to fully charge before first use. The light will turn green. Disconnect the device from the power source before use.
4. Remove the bottom magnetic connector and firmly screw in the 510-threaded cartridge of your choice.
5. Insert the cartridge into the device and ensure that the bottom magnetic connector is properly reconnected. You will feel haptic feedback to let you know there is a good connection.
6. Press power button 1 time to adjust the voltage.
7. Activate the pre-heat function to prime the cartridge by giving the unit 2 quick pulls or press the power button 2 times. This will activate the unit at 1.8V for 15 seconds. After 15 seconds, the unit will switch to your previously selected voltage.
8. Simply pull from mouthpiece to activate the cartridge vapor and enjoy your session!
9. To reset puff counter, press the button 3 times quickly, on the third press hold the button down until the puff counter resets.

CLEANING INSTRUCTIONS:

1. Remove the bottom magnetic connector from the battery.
2. Wipe the outside and inside of the bottom magnetic connector with an isopropyl alcohol pad. Use an alcohol swab to wipe any excess oil out of the 510 screw-in connector.
3. Clean the inside air pathway with an alcohol swab. Using a circular motion, work your way up and down the air pathway until you do not see any more oil.
4. Do not submerge any part of the device in cleaning solution. Allow all parts to air dry prior to resuming use.

! The mouthpiece is NOT removable. Attempting to remove it could impair or permanently disable the breath control functionality.

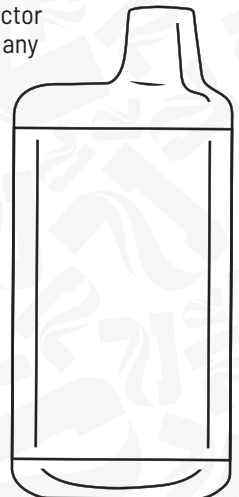

IMPORTANT SAFETY WARNINGS

- Do not expose to extreme temperatures or direct sunlight.
- Do not drop the device or accessories.
- Do not drop or submerge in any liquid.
- Do not modify the electronics in any way.

• This device is intended for adults only. Do not sell or provide to minors. Keep all parts, concentrates, herbs, and liquids away from children and pets. This is not a medical device and is not intended to diagnose, treat, mitigate, cure, or prevent any ailment, disease, or other conditions. Consult a physician before use, especially if you suffer from heart disease or any other medical condition, or if you are pregnant or breastfeeding. Failure to follow any of these instructions could result in product damage, property damage, personal injury, and may void warranty.