


Tie/Belt/Scarf Rack Mounting Instruction

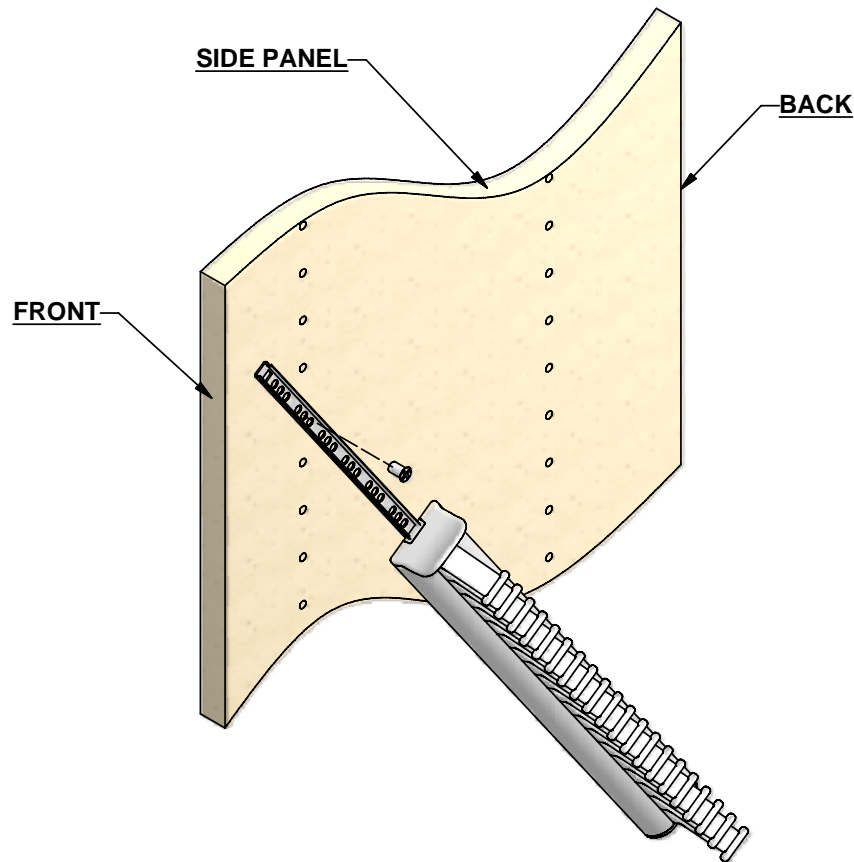

STEP 1. Extend slide forward past Finger Pill. Attach front end of slide to the side panel with Euro screw.
(For best results, use small head (7mm) 5mm dia. Euro Screws.)

NOTE: Front Screw must be installed first.

STEP 2. Pull rack forward and set level.

STEP 3. Attach rear end of slide with Euro Screw.
(For best results use small head (7mm) 5mm dia. Screws)

STEP 4. Snap Slide Stop into place on Finger Pull.

