



Pure Blue

Single Stage Drinking Water Filtration System

This is for the Pure Blue Single Stage Drinking Water Filtration System. It is recommended that these filters be changed out every six months to a year to ensure the highest quality filtration.

Single Stage Filter Change Instructions


Preparation

**Place either towels or paper towels directly underneath the system to catch any remaining water.

**Remove the Yellow cap from the new filters before you begin.


1) Shut off the water

- a. Locate the shutoff valve for the **FEED** and turn it **OFF**.

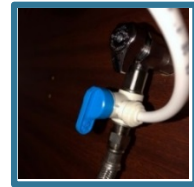

2) Release the pressure in the system

- a. Open the spigot until it stops dripping.
- b. Close spigot when the drip stops.

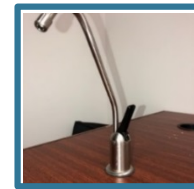

3) Remove the Old Filter

- a. **REMOVE** the filter by turning it **CLOCKWISE** until the filter is clear of the manifold.

4) Install the New Filter

- a. **INSTALL** the new filter by placing it in the slot and tightening **COUNTER-CLOCKWISE** until hand tight.
- b. After the filter is installed properly, **OPEN** the spigot (see image on step 2), then **OPEN** the feed (see image on step 1).

5) Begin the flushing procedure

- a. With the spigot **ON**, and the filter installed, turn the **FEED** back **ON**.
- b. Once proper flow has been confirmed, turn the spigot back **OFF**.
- c. Let the system pressure up for 10 minutes, checking thoroughly for any leaks.
- d. If no leaks have been detected after 10 minutes under pressure, **OPEN** the spigot, and complete the final flushing procedure.

6) Final Flush

- a. Let the system run open for 10 minutes, in order to flush out the new filter. After 10 minutes, close the spigot, and check the cabinet again for any excess moisture.
- b. Your Pure Blue Single Stage Drinking water system is ready to be used again!

***Following a filter change, the water from your spigot may appear slightly cloudy due to air remaining in the system. This water is completely safe to drink and will return to normal clarity within a few days. For any issues regarding filter changes, please reach out to our Technical Support department at (877) 534-5837 ext. 7*



dupure.com | (877) 534-5837

Austin | Dallas | Fort Worth | Houston | San Antonio | Las Vegas | Los Angeles | Phoenix