

**ENCE<sup>®</sup>**

PV1 USER MANUAL

---

# **DURABILITY THAT RIPS™**

Join the conversation, post and tag about your experience with the Eyce PV1.

 EYCEMOLDS



---

# TABLE OF CONTENTS

- 04 WHAT'S INCLUDED
- 05 ADDING MATERIAL
- 06 POWERING ON/OFF
- 07 USING THE PV1
- 08 LIGHT BRIGHTNESS
- 09 BATTERY & CHARGING
- 10 CLEANING THE PV1
- 11 WARRANTY & WARNINGS

---

# WHAT'S INCLUDED

1x PV1 Vaporizer

1x 3-Ft USB Type-C Charging Cable


1x User Manual



---

## ADDING MATERIAL

1. Open the PV1's silicone bottom lid to reveal the glass lined ceramic oven.
2. Grind and densely pack material to better optimize heat transfer.
3. Close the bottom lid to allow silicone compactor to firmly pack the herb.

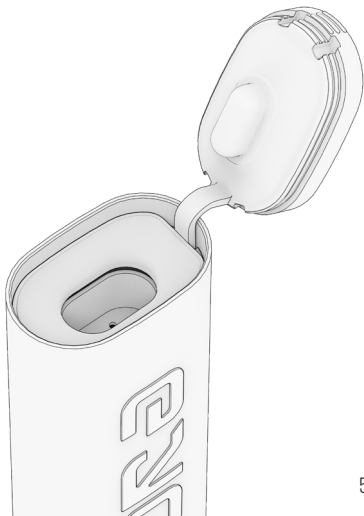

# POWER ON/OFF



Click button 5x quickly to turn the device ON and OFF.



Click button 3x quickly to change temperature of AutoFlow™ session.



Start Temp 410°F/210°C  
End Temp 430°F/221°C



Start Temp 390°F/199°C  
End Temp 410°F/210°C



Start Temp 370°F/188°C  
End Temp 390°F/199°C



Start Temp 350°F/176°C  
End Temp 370°F/188°C



---

## USING THE PV1

1. The PV1 automatically starts heating when powered on. The light around the button will show the corresponding AutoFlow™ session temperature.
2. The PV1's mouthpiece can be rotated for different ergonomic preferences.
3. The PV1 will vibrate when the set temperature has been reached. The number of vibrations corresponds to the set temperature (i.e. 2 vibrations for GREEN LIGHT temperature setting).
4. The PV1 will turn off automatically after a 5 minute session.



# LIGHT BRIGHTNESS



Press and hold the button to begin cycling the brightness of the LEDs. Release the button at the desired brightness level.






# BATTERY & CHARGING

The PV1 can be used while charging, but the time to fully charge will be longer.

When charging, the light will flash in the color corresponding to the current charge level. The light will change to a steady white light when fully charged.

To check the battery charge level, click the button 1x.

When only 10% battery remains, the PV1 will vibrate.

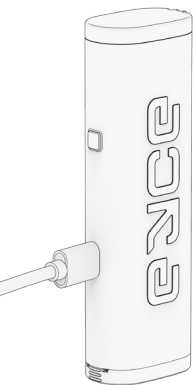

To check the battery life click the Control Button 1x.

Red Light: 25% Battery

Blue Light: 50% Battery

Green Light: 75% Battery

White Light: 100% Battery

The PV1 will vibrate when 10% remains.

---

# CLEANING THE PV1

To keep your PV1 working optimally, we recommend that all parts that encounter vapor are cleaned regularly. Soak the mouthpiece in 70%+ isopropyl alcohol as needed and finish with a rinse of water. For non-removable parts use a cotton swab dipped in 70%+isopropyl alcohol to clean.

Do not submerge the device in liquid. Do not use abrasive materials to clean the device, oven or vapor path as damage will occur. After cleaning, ensure all parts are completely dry before use.



# WARRANTY



1 Year Limited Warranty

For full warranty details please visit:

[eycemolds.com/pages/warranty-policy-and-claims](http://eycemolds.com/pages/warranty-policy-and-claims)

# WARNINGS

## HOT COMPONENTS

- Could cause significant battery damage or fire hazard
- Do not open or touch internal parts when powered on, when hot, or in use. Allow device to cool before cleaning, stirring, opening or any direct interactions with internal heating components.

## Factory Reset

While the device is turned off, press and hold the control button for 10 seconds to perform a factory reset.

## Disclaimer

User assumes all responsibility, Eyce is not responsible for users who do not act according to the law. By purchasing this product, user agrees to assume all risk, including health risks associated with smoking.



Multiple Language

Scan QR code to access the PV1

User Manual in multiple languages.



