

Brookstone® BK-650

Installation Manual

Brookstone®



Hello.


Congratulations on purchasing your new Brookstone BK-650.

At Brookstone, we understand every body is different and have carefully designed our massage chair with that in mind. But enough about us, this is about you. Learning how to use your new chair is simple (we designed it that way).

So let's get started.

BK-650 Assembly Instructions

- 1 BK-650 arrives in 2 boxes.

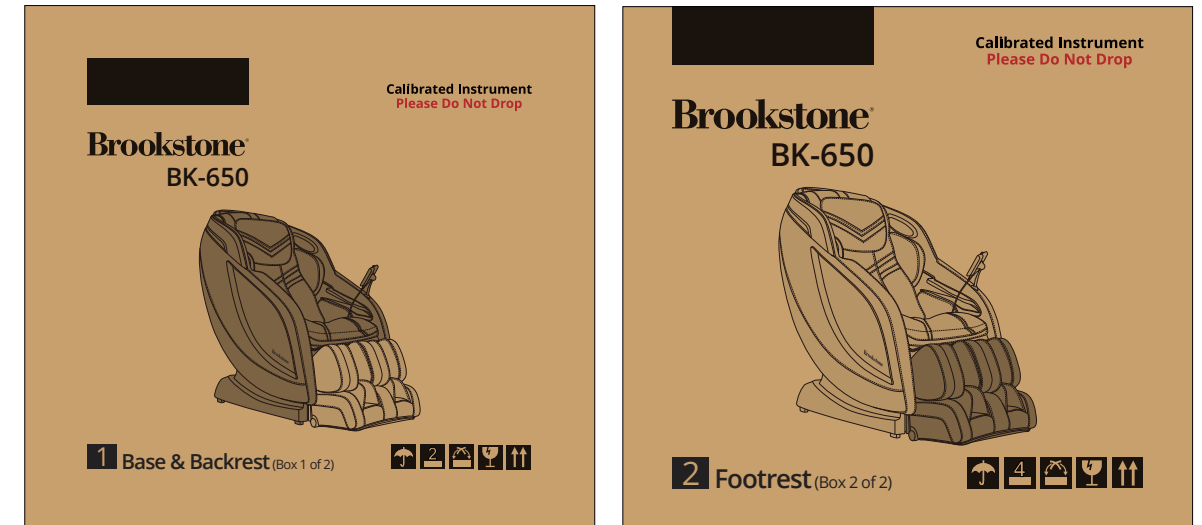

- 2 **Open box 1 and remove all contents.** Remove the packing materials. Take the chair out of box. Collect all the accessories and put them aside.



- 3 Locate the two clips on the support lugs of the chair base. Take them off and put aside the chair base.



- 4 Locate the bolt and cotter pin on the footrest link rod. Take them off and put aside the chair base.



- 5 Open box 2. Take out footrest and remove the cable tie from the link rod.



- 6 **Connect footrest to base.** Move the footrest close to the chair. Engage the link rod with the footrest joint, then insert the bolt and lock with the cotter pin.



- 7 **Connect wires in footrest.** Connect footrest wire connectors and screw the caps tight. Then connect the air hose.

Caution: Match the connectors and align the white points before you connect them.



- 8** Fully connect the footrest to the base. Hang the footrest on the support lugs of the chair base and lock with the two clips.



- 9** Zip the zippers between seat pad and footrest cushion. Get rid of the zipper puller after the zipper been zip up.



- 10** Place the remote control into the holder.



- 11** Turn on the chair. Connect the chair to a power supply and turn on the power switch. The chair will now be ready to start.

