



OG7500™



INSTALLATION MANUAL | OG7500

# Hello.

Congratulations on purchasing your new Ogawa OG7500.

At Ogawa, we understand every body is different and have carefully designed our massage chair with that in mind. But enough about us, this is about you. Learning how to use your new chair is simple (we designed it that way).

So let's get started.

## Assembly Instructions


- 1 The OG7500 Massage chair arrives in 2 boxes.



- 2 **Open box 1 and remove all contents.** Remove the packing materials. Take the chair out of the box. Collect all the accessories and put them aside.



**3** **Locate the two catch pins.** Take off the catch pins and put them aside.

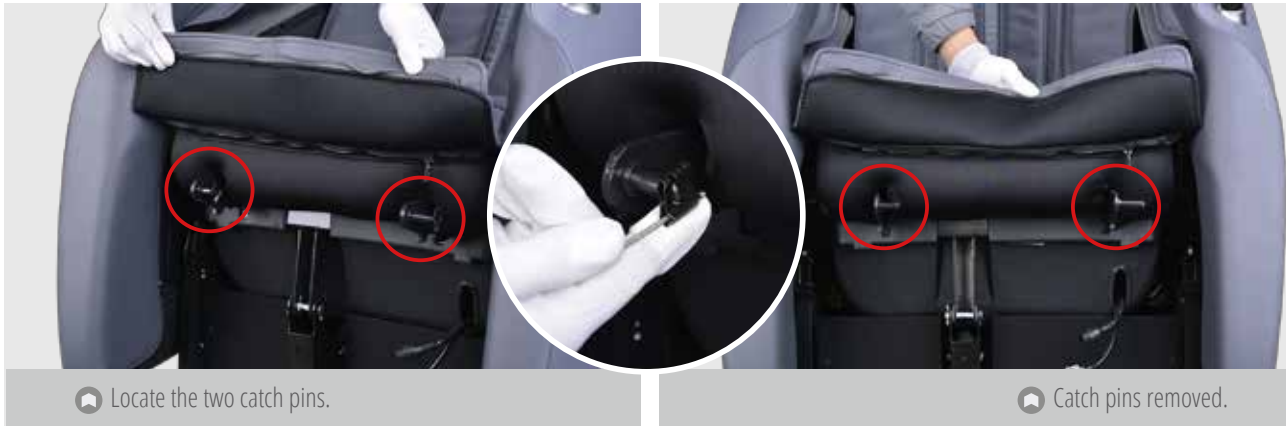

**4** **Open box 2.** Take the footrest out of the box and move it close to the chair.



**5** **Connect wire connector and air hose connector.**  
**Attention:** Align the white points of the two connectors first, then connect them together and screw with the screw cap.



**6** **Hang the footrest on bolts of the base and lock with the two catch pins.**



**7** **Attach the footrest fabric and seat pad.** Zip the zipper between the seat pad and the footrest cushion. According to the requirements of the UL standard for safety (UL1647), the zipper pull must be removed and discarded.



8

**Turn on the chair.** Place the remote control into the holder. Connect the chair to a power supply and turn on the power switch. Now your massage chair is ready to go!

