DLX BALLOON SAND CART

Model # 22-7044




PARTS LIST	
Qty	Name
1	DLX Cart Long Axle Frame
2	Tie Down Strap Set
2	12" Balloon Wheel
2	Quick Release Pin
1	Air Pump

Holds up to 200 LBS



Assembly

- 1. Inflate Balloon Wheels with supplied air pump, (approximately 35 pumps). When inflated, wheel has a diameter of 12" to 13". It will feel soft, that is why it works well in sand.
 - **Caution!** Do not use an electric air pump. It is easy to inflate a wheel beyond 3-4 psi and rupture it. Suspenz will not warranty a wheel that ruptures due to over inflation.



- 3. Slide wheels onto frame and replace Quick Release Pins downwards into hole next to wheels and flip the locking ring over the end of axle to secure the pin.
- 4. Attach straps to cart by threading the end of each strap through loop on other end of strap and pull tight around tubing of cart. Place both long straps on one side of cart and short cam lock straps on opposite side.









Scan* to see Video Instructions for Assembly & Use

Or Visit Suspenz.com

"Video & Manual" page

*QR code reader app required

FOR TECHNICAL ASSISTANCE OR REPLACEMENT PARTS: CALL 866.787.7369

Rev. 11/17



CUSTOMER SERVICE:770-518-0045 FAX: 770-518-8507 WEBSITE: WWW.SUSPENZ.COM

Use

- 1. Position the cart next to the center of the boat with the kickstand facing the direction the boat will be pulled.
- 2. Lift one end of the boat and pivot, setting it down on the rubber pads on the cart. It may be necessary to adjust the pads so that your boat rests directly on them. Using a small amount of liquid soap between aluminum tubing and rubber padding makes adjustments easier.
- Loop each set of straps around boat making sure the non-marring buckle protection fabric is under the buckle before pulling tight.
- 4. Lift one end of the boat, kick the kickstand up and away you go!

Note: If wheels are "plowing sand" instead of riding over the sand, inflate wheels an additional 3-5 pumps.




Care

Rinse cart after each use to clean off sand, salt and mud.

Caution

This cart is designed for hand towing only. It is not intended to be pulled behind a bicycle or motorized vehicle.

Visit www.Suspenz.com for additional transportation and storage solutions.

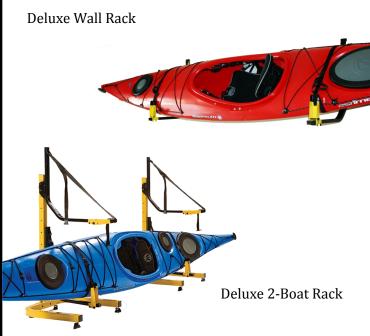

FOR TECHNICAL ASSISTANCE OR REPLACEMENT PARTS: CALL 866.787.7369

OUR PLEDGE TO YOU

Suspenz® products are warrantied for life against defects in material or workmanship to the original owner. Product must be used for its intended purpose under normal conditions. Please visit www.Suspenz.com for complete warranty information.

SUSPENZ®, INC. 8725 ROSWELL ROAD #0-220 ATLANTA GA 30350



CUSTOMER SERVICE:770-518-0045 Fax: 770-518-8507 WEBSITE: WWW.SUSPENZ.COM