




PSOR SHEET 1 OF 2




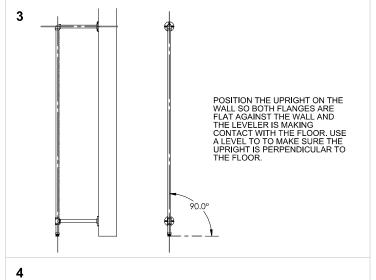

IF WALL ANCHORS ARE REQUIRED, TRACE THE FLANGE AND THE SCREW HOLE POSITIONS ON BOTH FLANGES. WITH MARKS MADE, REMOVE THE UPRIGHT ASSEMBLY AND INSTALL ANCHORS WHERE THEY ARE NEEDED. NOTE: IF THE WALL STRUCTURE DOESN'T REQUIRE ANCHORS, OR BLOCKING IS BEING USED, TRACING THE FLANGE IS NOT REQUIRED.

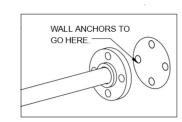




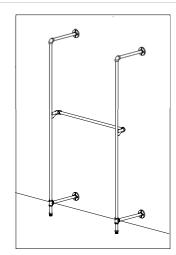

5

POSITION THE SECOND UPRIGHT
ASSEMBLY AT EITHER 30" OR 48" O.C.
ANY OF THE WELDED ACCESSORIES
(ITEM# PSORHB48/30 OR ITEM#
PSORFO48/30) CAN BE USED TO TEST
THE DISTANCE BETWEEN THE
UPRIGHTS AS SHOWN. WITH ONE
PERSON SUPPORTING THE
UNSECURED UPRIGHT. IF IT IS
DIFFICULT TO INISTALL OR REMOVE,
THE ON CENTER DISTANCE NEEDS TO
BE ADJUSTED. IF THE ACCESSORY IS
CROOKED, THE UPRIGHT LEVELER
NEEDS TO BE ADJUSTED.
NOTE: IF ACCESSORIES ARE NOT
AVAILABLE, USE A TAPE MEASURE TO
CHECK THE ON CENTER DISTANCE
AND A 48" LEVEL TO CHECK THE
SLOTS ARE AT EQUAL HEIGHTS.

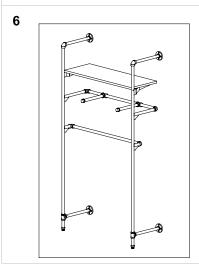

REPEAT STEPS 1-4 FOR THE THE REMAINING UPRIGHT ASSEMBLY.

PSOR SHEET 2 OF 2