



*Multi-function*  
UV/LED STERILISER  
& DRYER

3-in-1 Sterilise, Dry & Store



Welcome to the Milkbar  
family, Mama



You've got this

**Before using the device, please read all of the instructions  
in this manual carefully and store it safely as it contains  
important information.**

**IMPORTANT:**

**Never put liquid inside your steriliser.  
All items must be cleaned and excess water shaken off  
before placing inside for sterilisation and drying.**

# Safety INSTRUCTIONS




When using any electric appliance, always take precautions to reduce the risk of fire, electric shock, or injury to persons including:

- Do not Immerse in or fill with water or other liquid. Ensure air vent stays dry to reduce the risk of short circuiting.
- Check that the voltage indicated on the appliance corresponds to the local main voltage before you connect the appliance (see rating label on the bottom of the appliance).
- Do not use if the plug, power cord or the appliance itself is damaged.
- If the power cord or other components are damaged, please contact Milkbar New Zealand to repair or replace.
- Unplug from the outlet after each use.
- Unplug from the outlet before installing, removing, or replacing components.
- Unplug from the outlet and allow to cool before cleaning.
- Do not leave this appliance unattended when in use.
- Do not place the appliance on or near an operating or hot stove or cooker.
- Always use the appliance on a stable, level surface.
- Always keep the air vent uncovered.
- Intended for household use only.

# Part DESCRIPTION



- |                    |                      |
|--------------------|----------------------|
| 01. Air vent cover | 06. Air vent         |
| 02. Display panel  | 07. Accessory shelf  |
| 03. Push button    | 08. LED light        |
| 04. Top cover      | 09. Sterilizing area |
| 05. Main housing   | 10. Air inlet        |

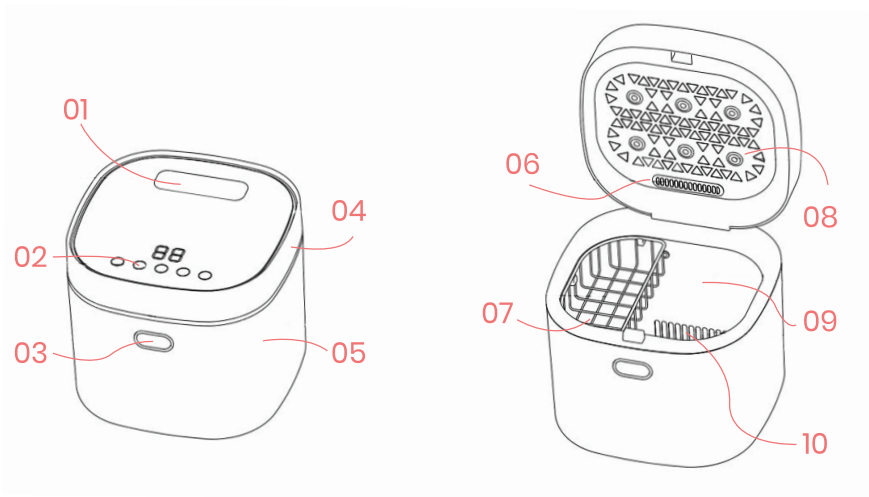

## TECHNICAL SPECIFICATIONS


- |  |   |
|--|---|
| • <b>Rated voltage:</b><br>220-240V/50HZ | • <b>Storage size:</b> 8L<br>(Max. for 9 feeding bottles) |
| • <b>Drying power:</b> 135W              | • <b>Weight:</b> 2.8kg                                    |

# Using YOUR STERILIZER



## CAUTION - BEFORE USE

- Ensure the power supply is grounded.
- Check the air vent is exposed .
- Be sure any items to be dried are temperature resistant to 85°C .
- Wash items and shake off excess water before placing into the unit.
- Always place the items inside the steriliser openside up. Place teats or smaller items in the basket as shown below.
- If placing washed items into unit for sterilisation, use AUTO mode.

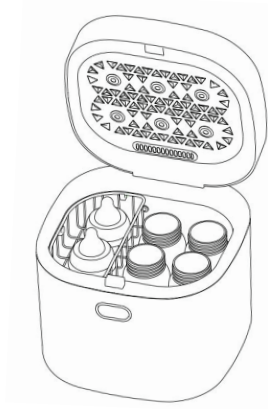

## CHILD-SAFE DESIGN

- If the cover is opened during operation, the UV Lights will turn off immediately to protect against UV Exposure.

# How to operate YOUR STERILIZER



Auto



Dry



Sterilize




Storage





On/Off

## USING YOUR STERILIZER

- Plug the unit into power and your unit will begin in standby mode. Press  to turn lights on. Press the button of your desired cycle to start. If no cycle is chosen, the unit will go into standby mode after 10 seconds.

*Note: To stop a cycle, simply press & hold the icon for one second. This will terminate the operation & turn off your device.*




## **AUTO: DRY + STERILIZE**

- Press , then press  to start a Drying and Sterilising cycle. The AUTO Light will begin to flash, the screen will show the cycle time of 52 minutes and begin to count-down. When the AUTO cycle is over, the unit will beep for 5 seconds before it switches into standby mode.

*Note: An Auto cycle is 40mins Drying, 5 Mins Ventilation & 7mins Sterilising. Please ensure that items to be dried are resistant to temperature of 85°C.*

**DO NOT DRY ANY ELECTRONIC DEVICES.**




## DRYING

- Press , then press  to start a Drying cycle. The Fan Light will begin to flash. There are 2 cycle options to choose from (45mins & 60mins). Press  once for 45mins or press twice for 60mins. The screen will show the selected cycle time and begin to count-down. When the Dry cycle is over, the unit will beep for 5 seconds before it switches into standby mode.



Note: Please ensure that items to be dried are resistant to temperature of 85°C.

DO NOT DRY ANY ELECTRONIC DEVICES.

## STERILIZING

- Press , then press  to start a sterilising cycle. The Light will begin to flash. There are 2 cycle options to choose from (7mins & 15mins). Press  once for 7mins or press twice for 15mins. The screen will show the selected cycle time and begin to count-down. When the sterilising cycle is over, the unit will beep for 5 seconds before it switches into standby mode.

## STORAGE

- Press , then press  to start a Storage cycle. The Light will begin to flash. The screen will show the storage time of 72 hours and begin to count-down. When the storage cycle is over, the unit will beep for 5 seconds before it switches into standby mode.

Note: Please keep your unit plugged into power for the duration of the 72 hours as it will automatically run a 7 min sterilize cycle every 6 hours


# *How to replace* THE HEPA FILTER



The HEPA filter can effectively intercept dust & germs to provide clean air when drying your items. We suggest replacing the HEPA filter when it becomes dark or yellow. You can purchase replacement filters from [milkbarnewzealand.com](http://milkbarnewzealand.com)

## HOW TO REPLACE

- Take off the filter cover
- Remove the HEPA filter
- Replace with new HEPA filter
- Fix the filter cover

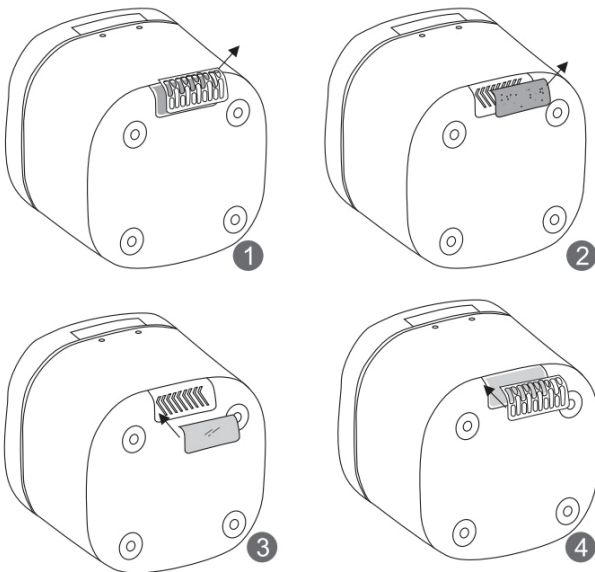



# *Product* DISPOSAL



Remember to dispose of this appliance responsibly.

Do not mix with your general household waste. For the correct collection and treatment of these products, take them to the collection points designated by your local authority.



# Warranty INFORMATION



- 12 month warranty from date of purchase is included.
- The accessories are not covered under warranty.
- Please keep your receipt of purchase.
- Damage caused by inappropriate installation, disassembly or the useage will not be covered under warranty.

**Note: This product is subject to change without notice during continuous improvement.**

If you need any assistance,  
you can reach us at:



[info@milkbarnewzealand.com](mailto:info@milkbarnewzealand.com)

[@milkbarnewzealand](https://www.instagram.com/milkbarnewzealand)



# **Milkbar Maternity and Breastfeeding New Zealand**

Raglan, New Zealand

**[milkbarnewzealand.com](http://milkbarnewzealand.com)**



**@milkbarnewzealand**

Find us on social media! Follow us, comment and tag us in your pictures. We love seeing them!

**info@milkbarnewzealand.com**

Questions, worries or concerns? Send us an email and we'll get back to you as soon as we can.