



INSTRUCTIONS

**PREMIUM 360° SWIVEL SMART CASE
FOR 9.7" IPAD 5,6,AIR1,AIR2,PRO**




CONTENTS

Product introduction	2
Load/unload the ipad	3
Wireless connection	4
Keyboard function introduction	5
Product parameter	6
Product feature	6
Charging	7
Keyboard battery disposal	8

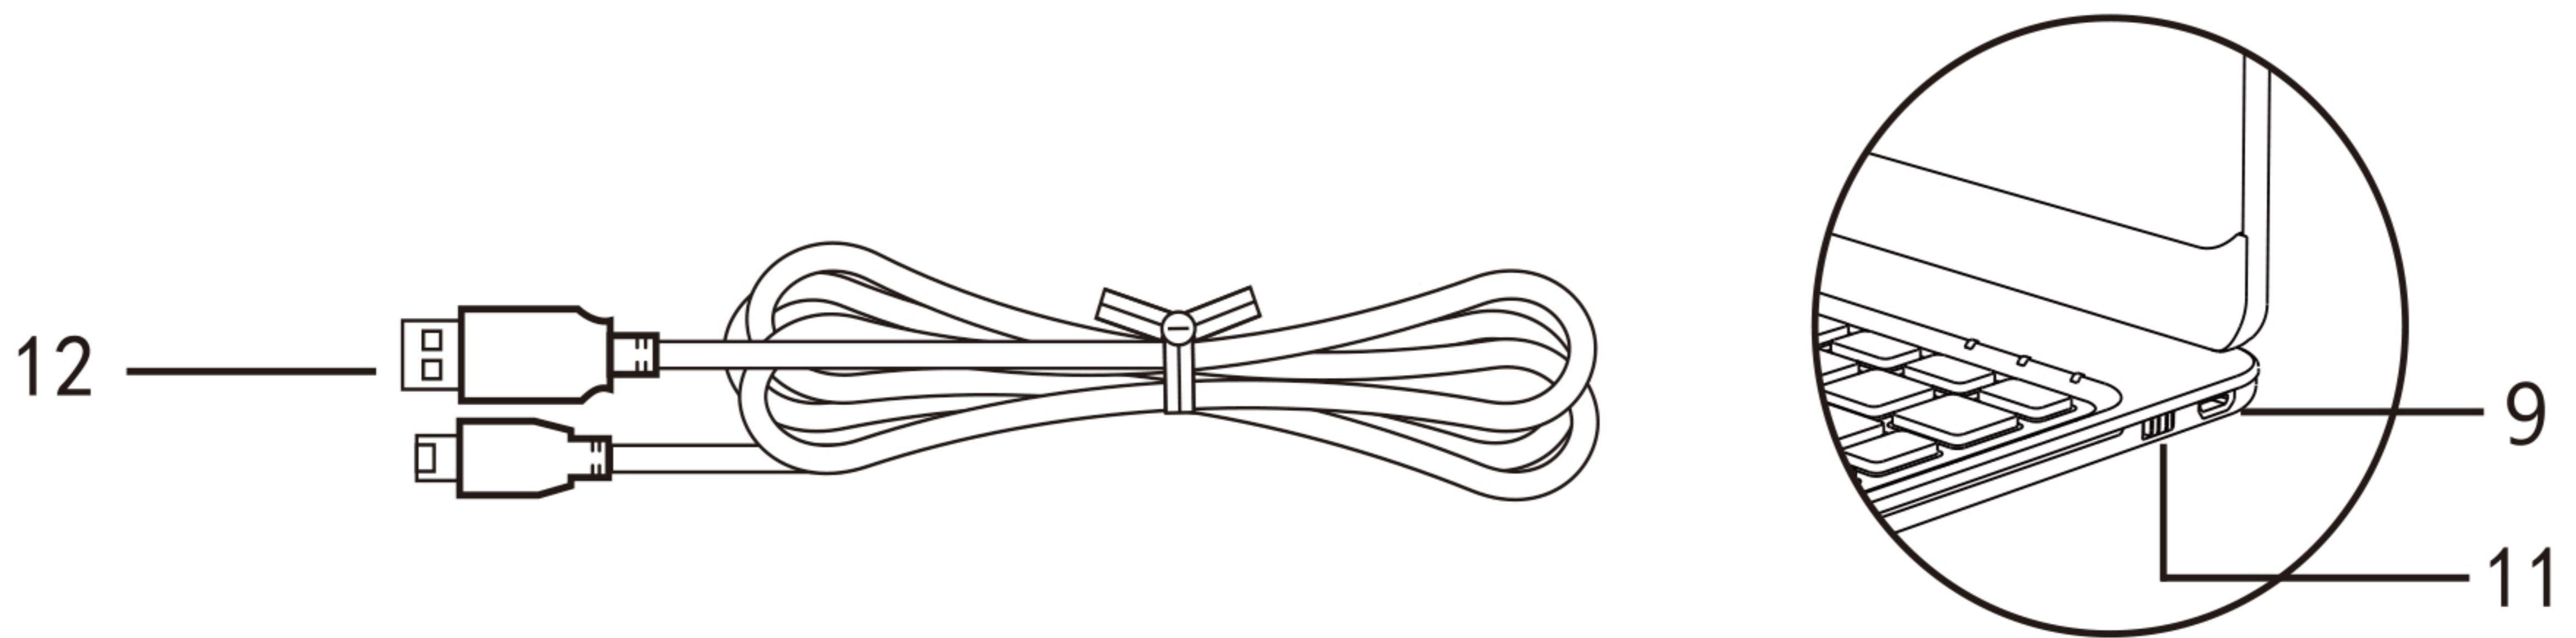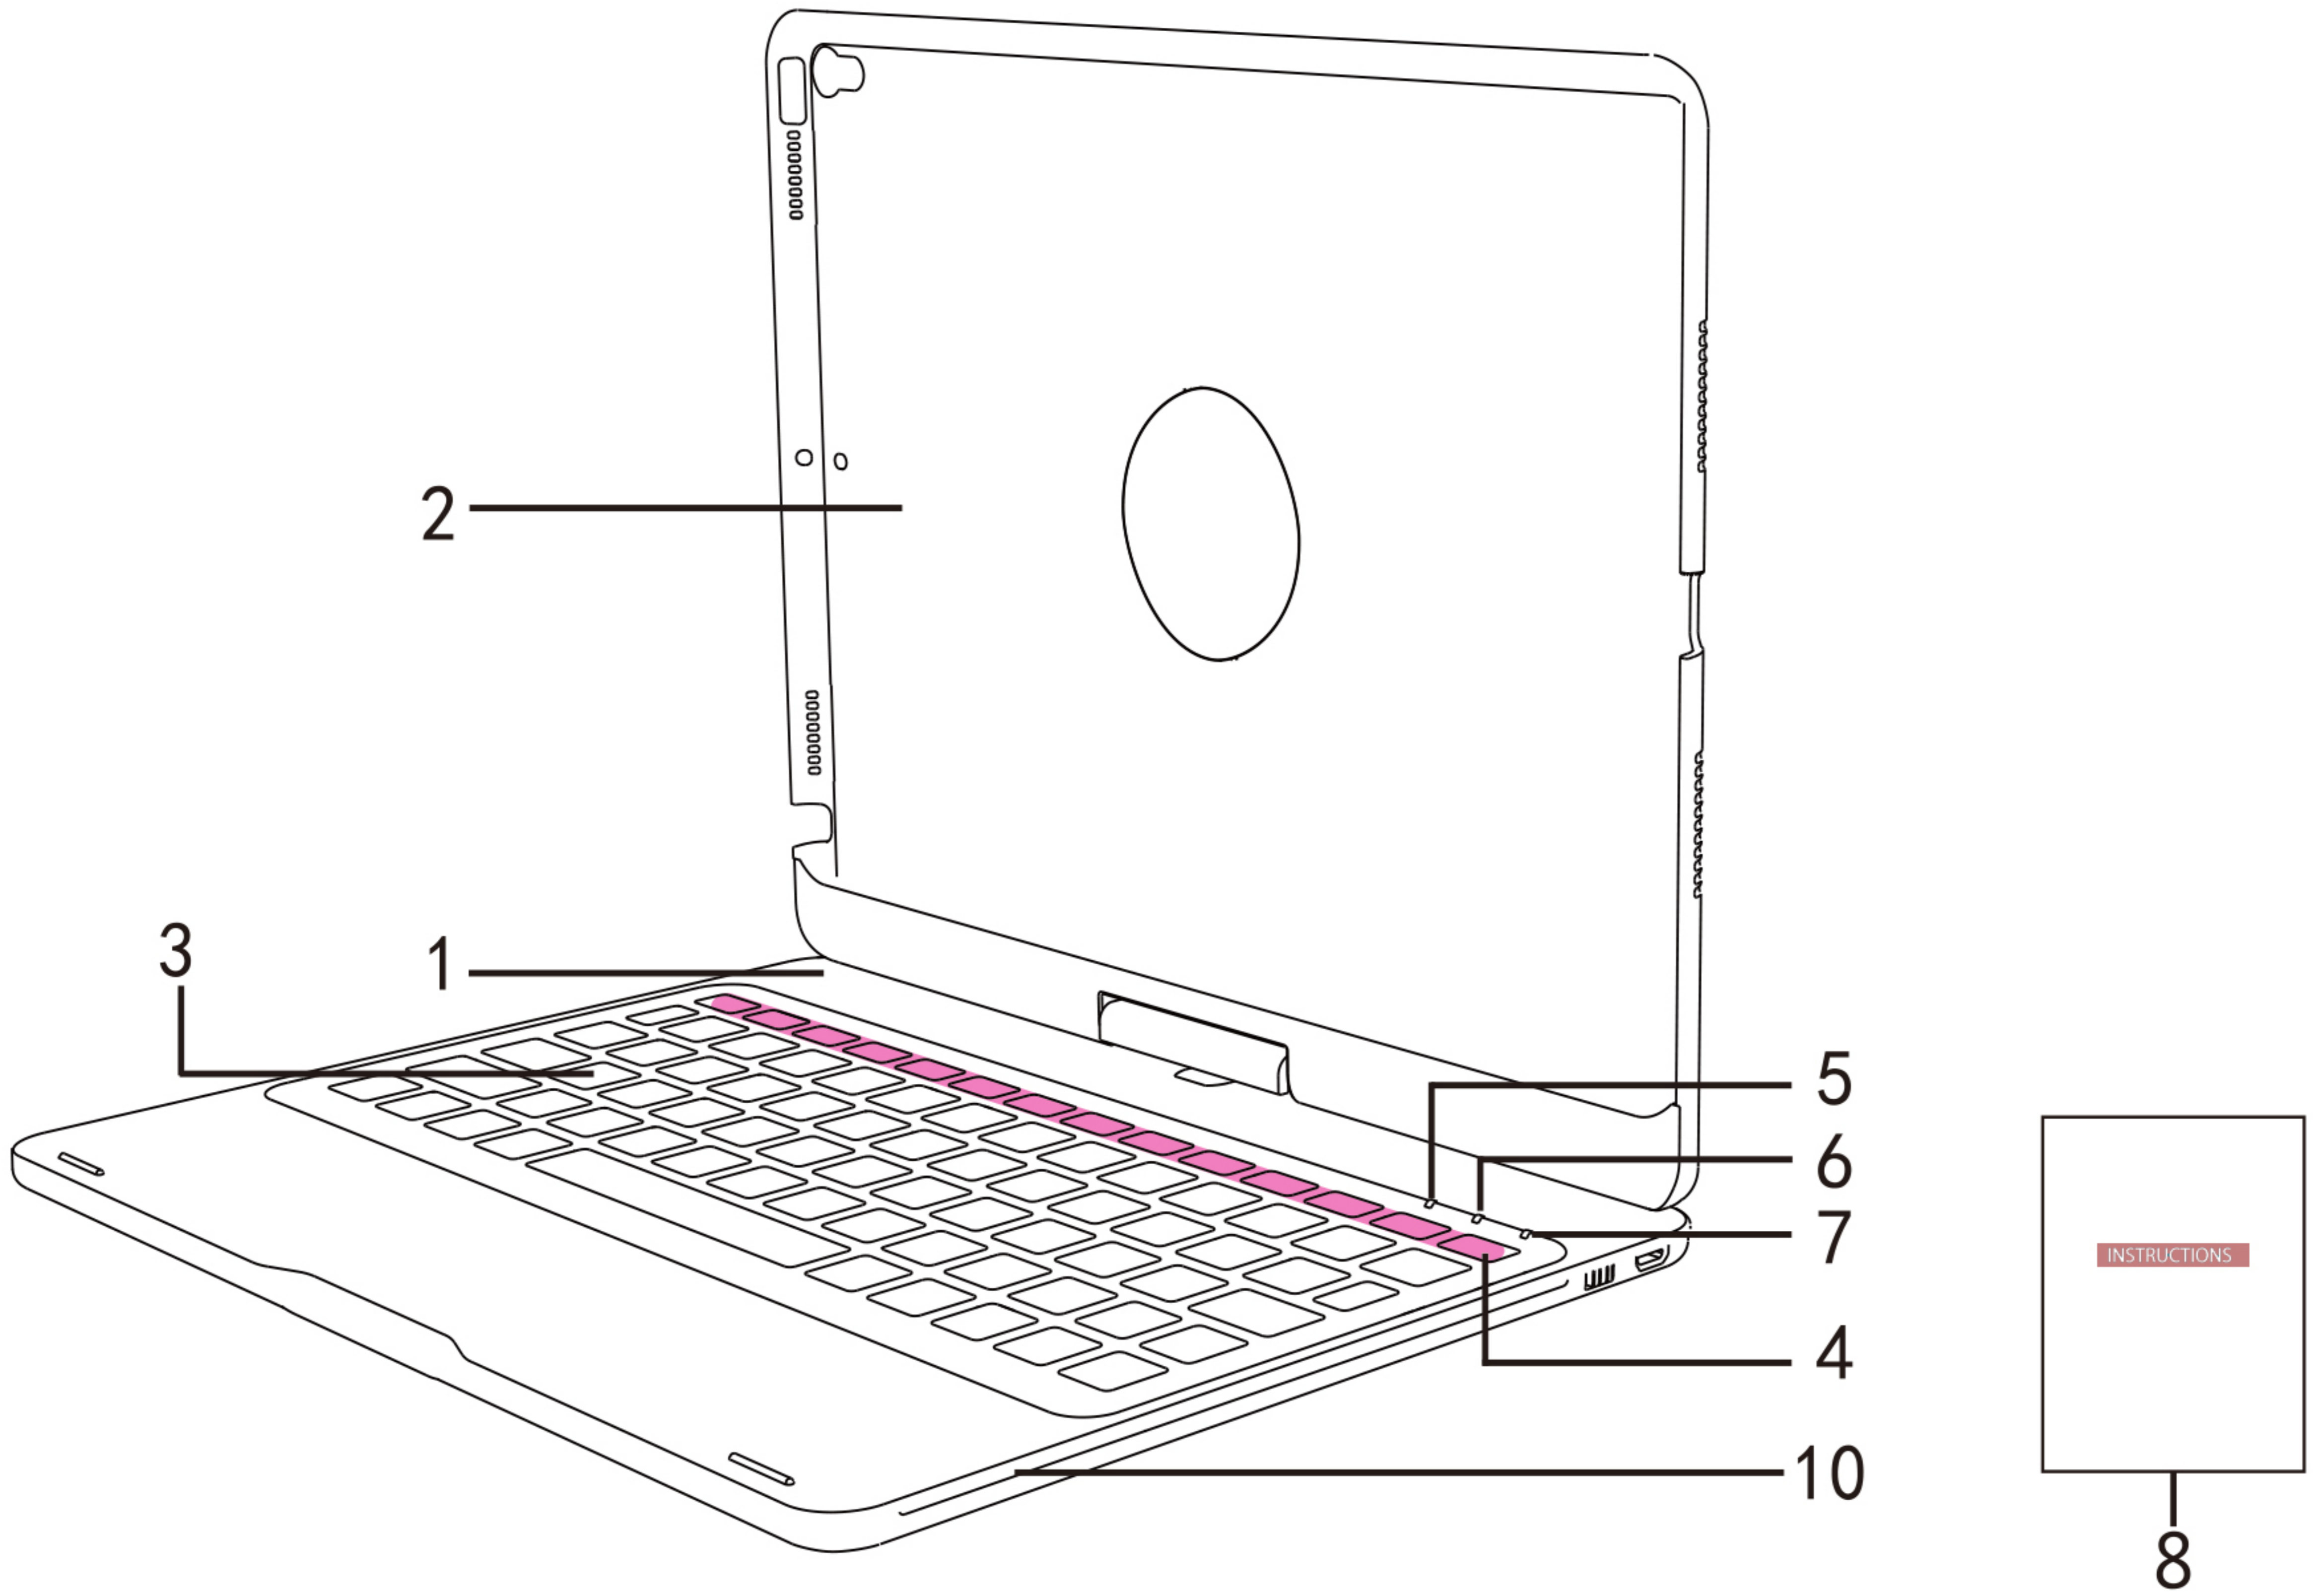


- 1. Keyboard body
- 2. Protective cover
- 3. Keyboard
- 4. Function keys
- 5. Capital indicator
- 6. Battery indicator


- 7. Wireless indicator
- 8. Manual
- 9. Charging keyboard interface
- 10. Colorful breathing lamp
- 11. Keyboard switch
- 12. Micro-usb charging cable

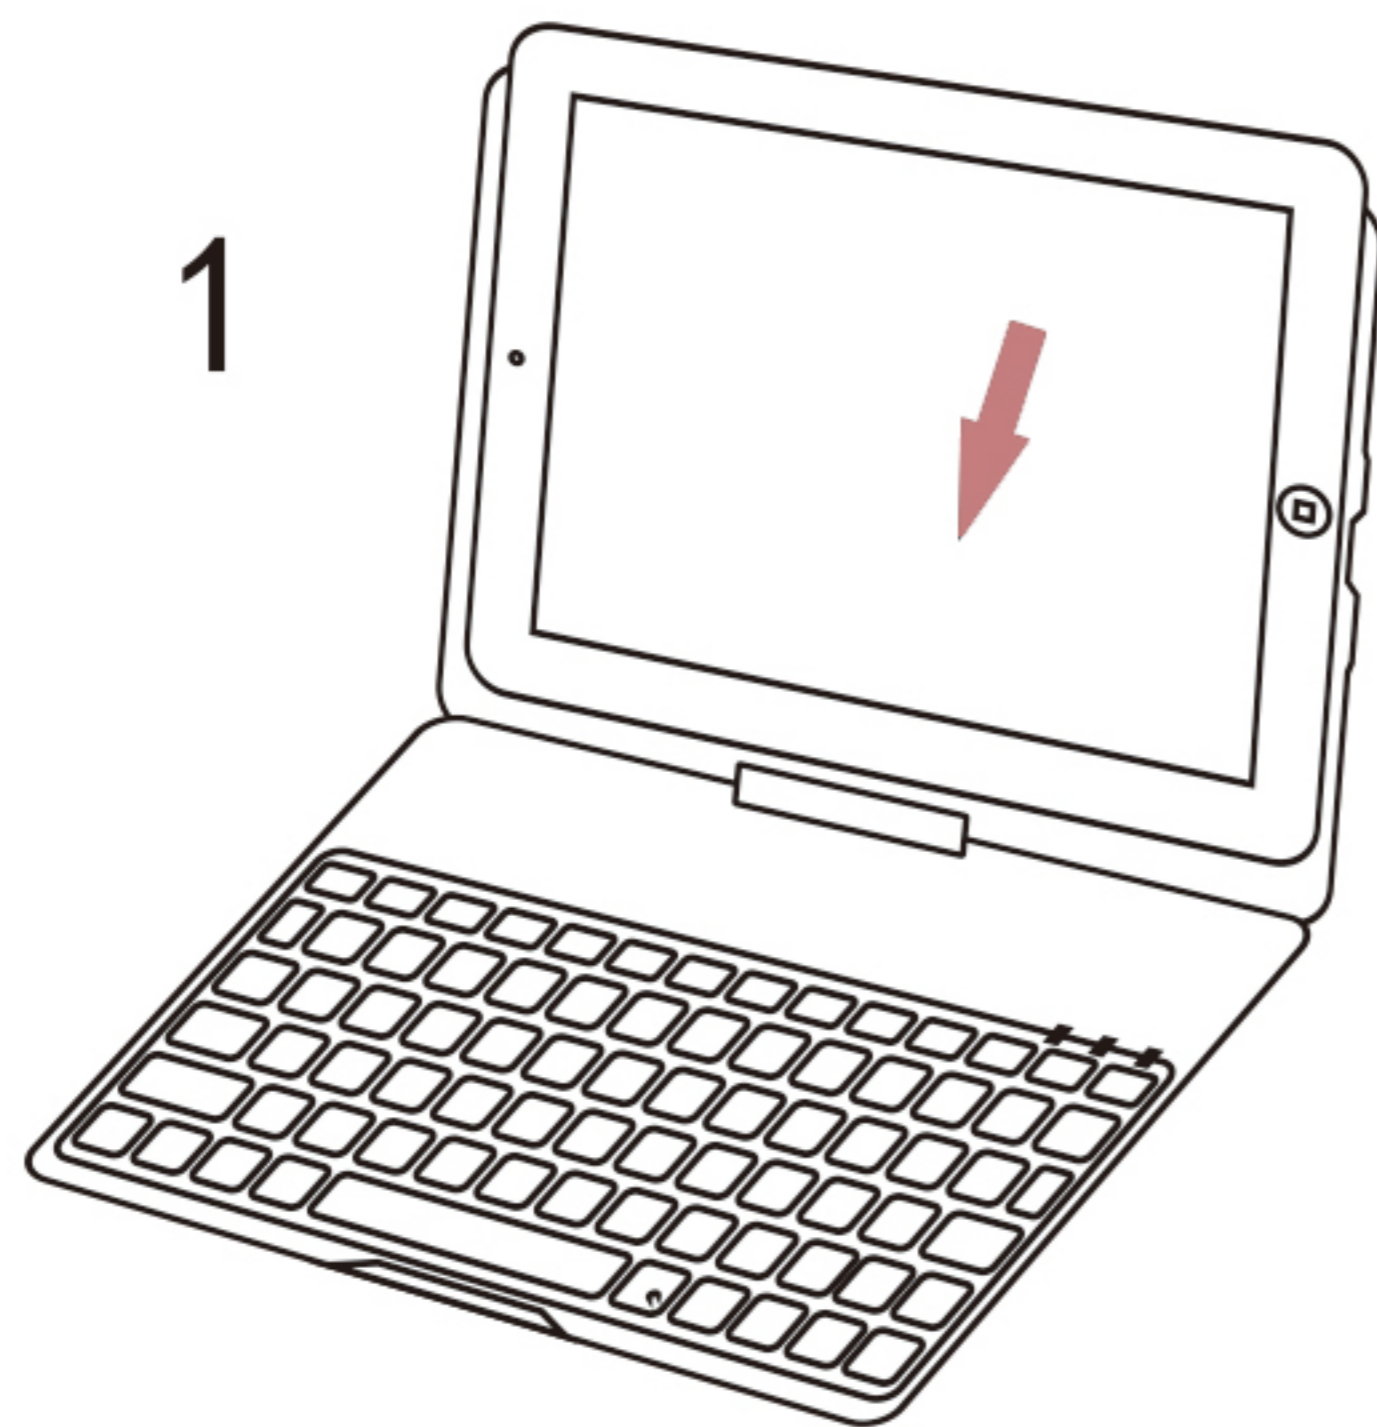

insert your iPad
Bottom first to
the your smart case

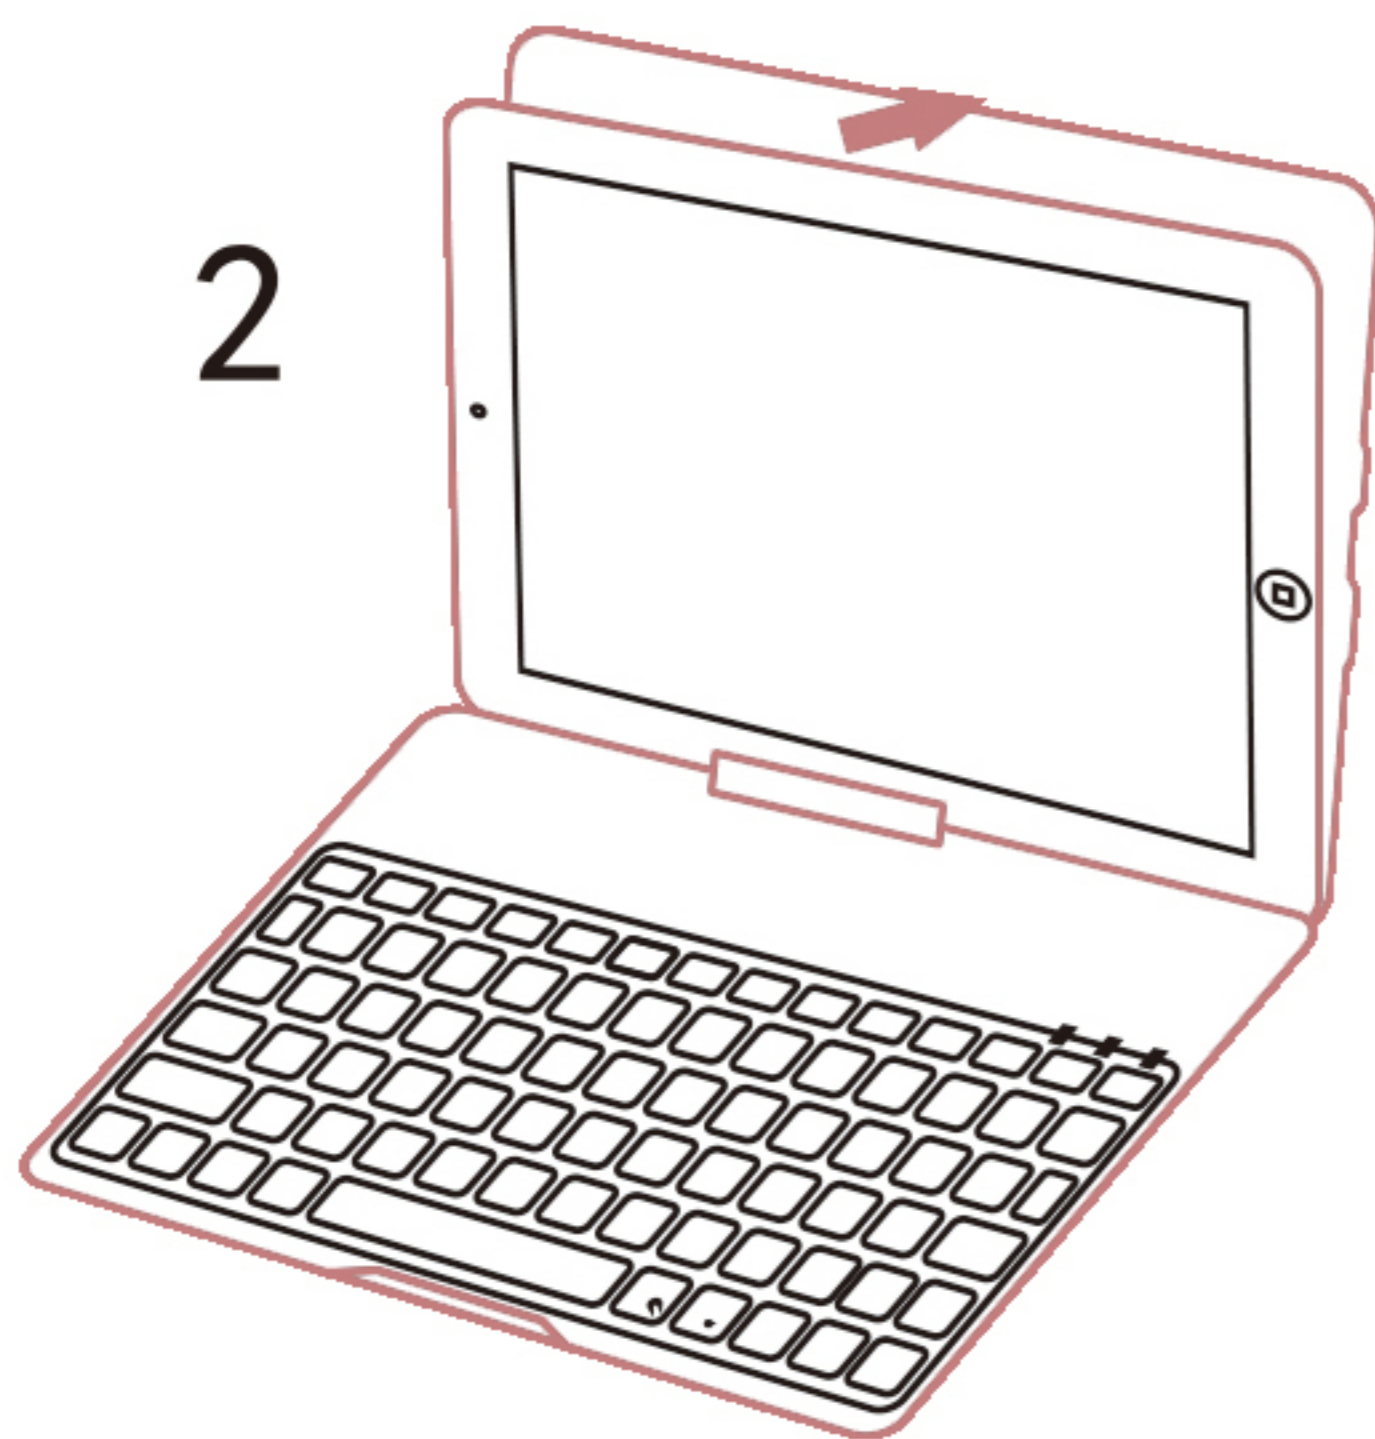


Press your iPad
against the smart case slot
on both top corners

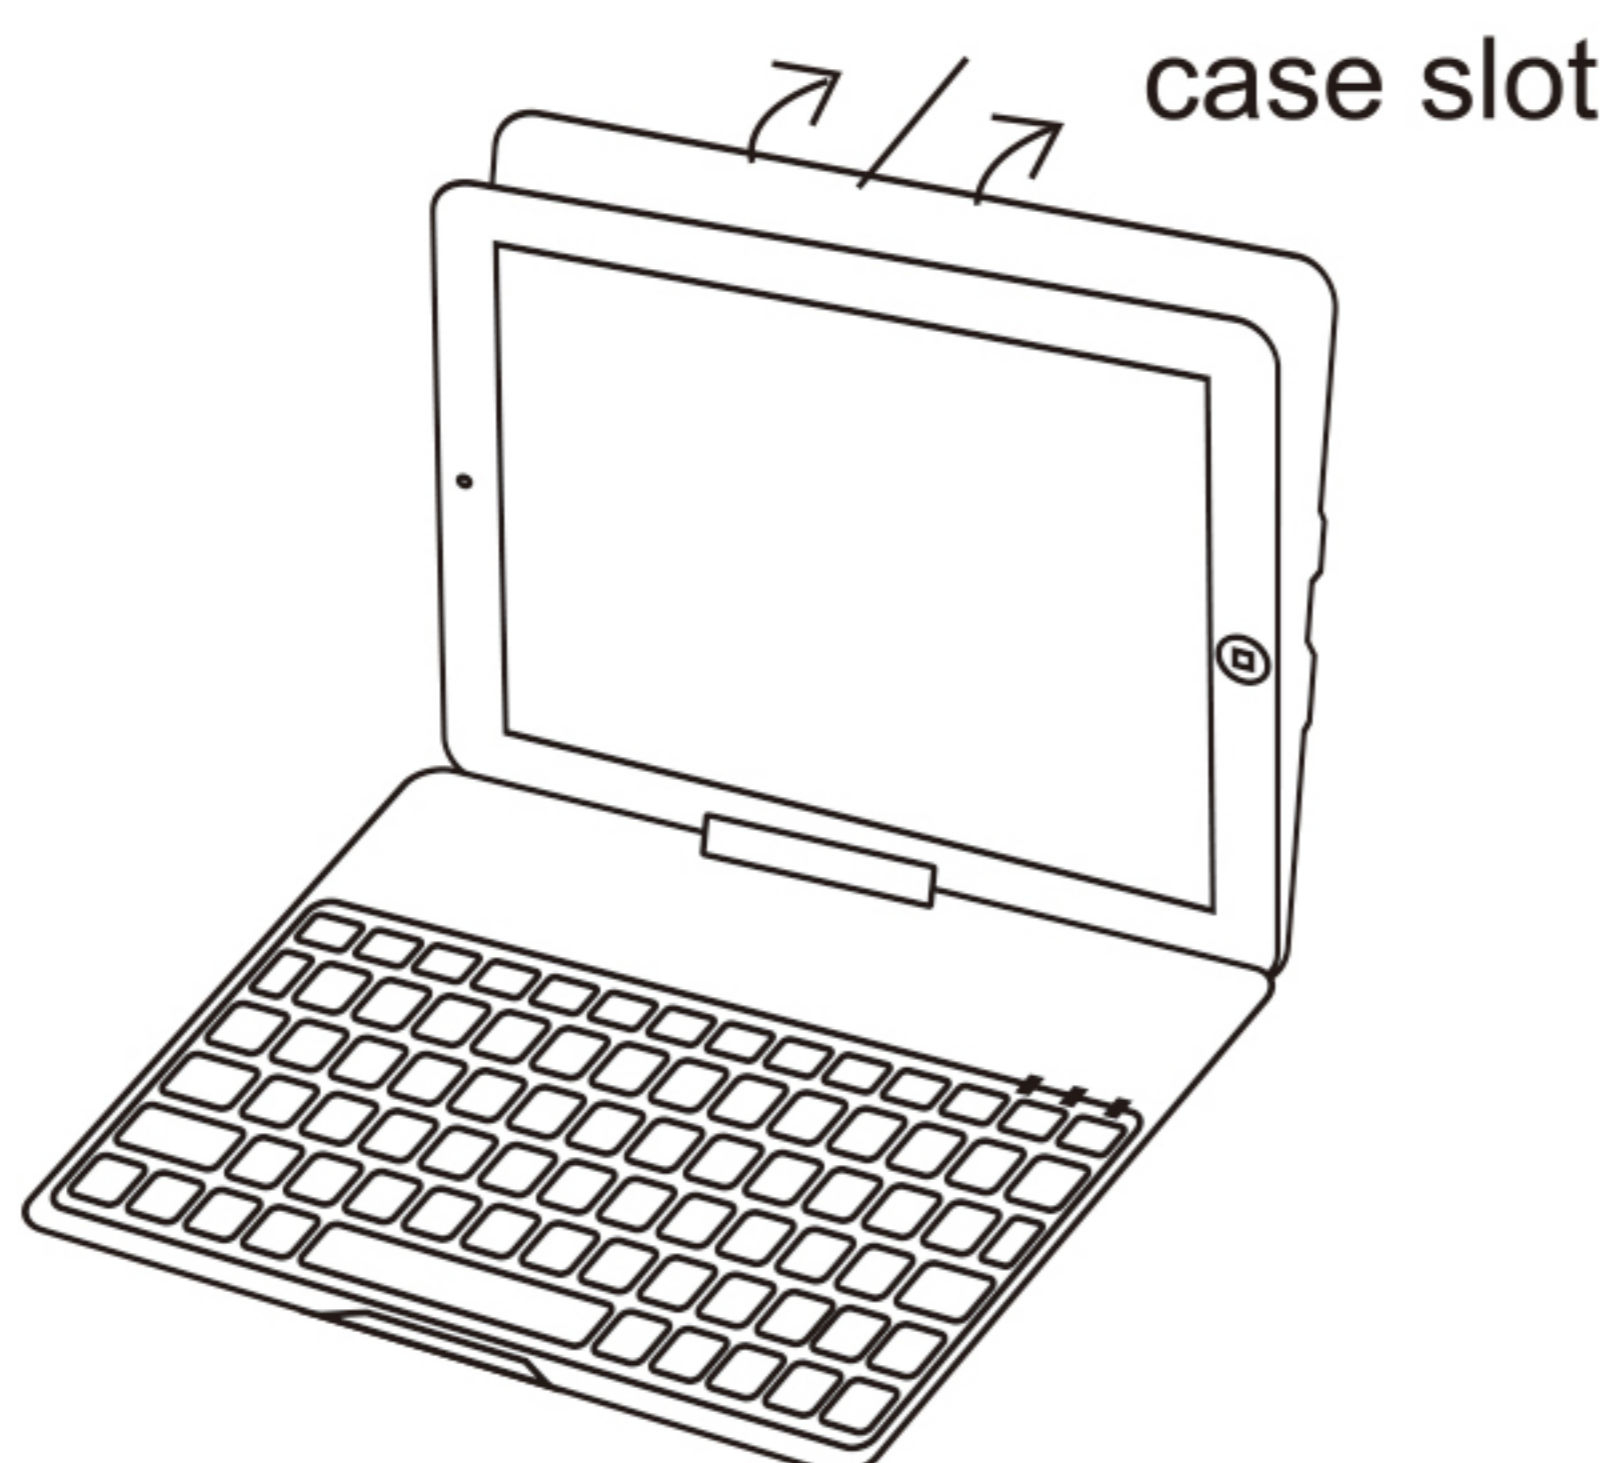


To unload your iPad
simply press the
smart case back nozzle

1

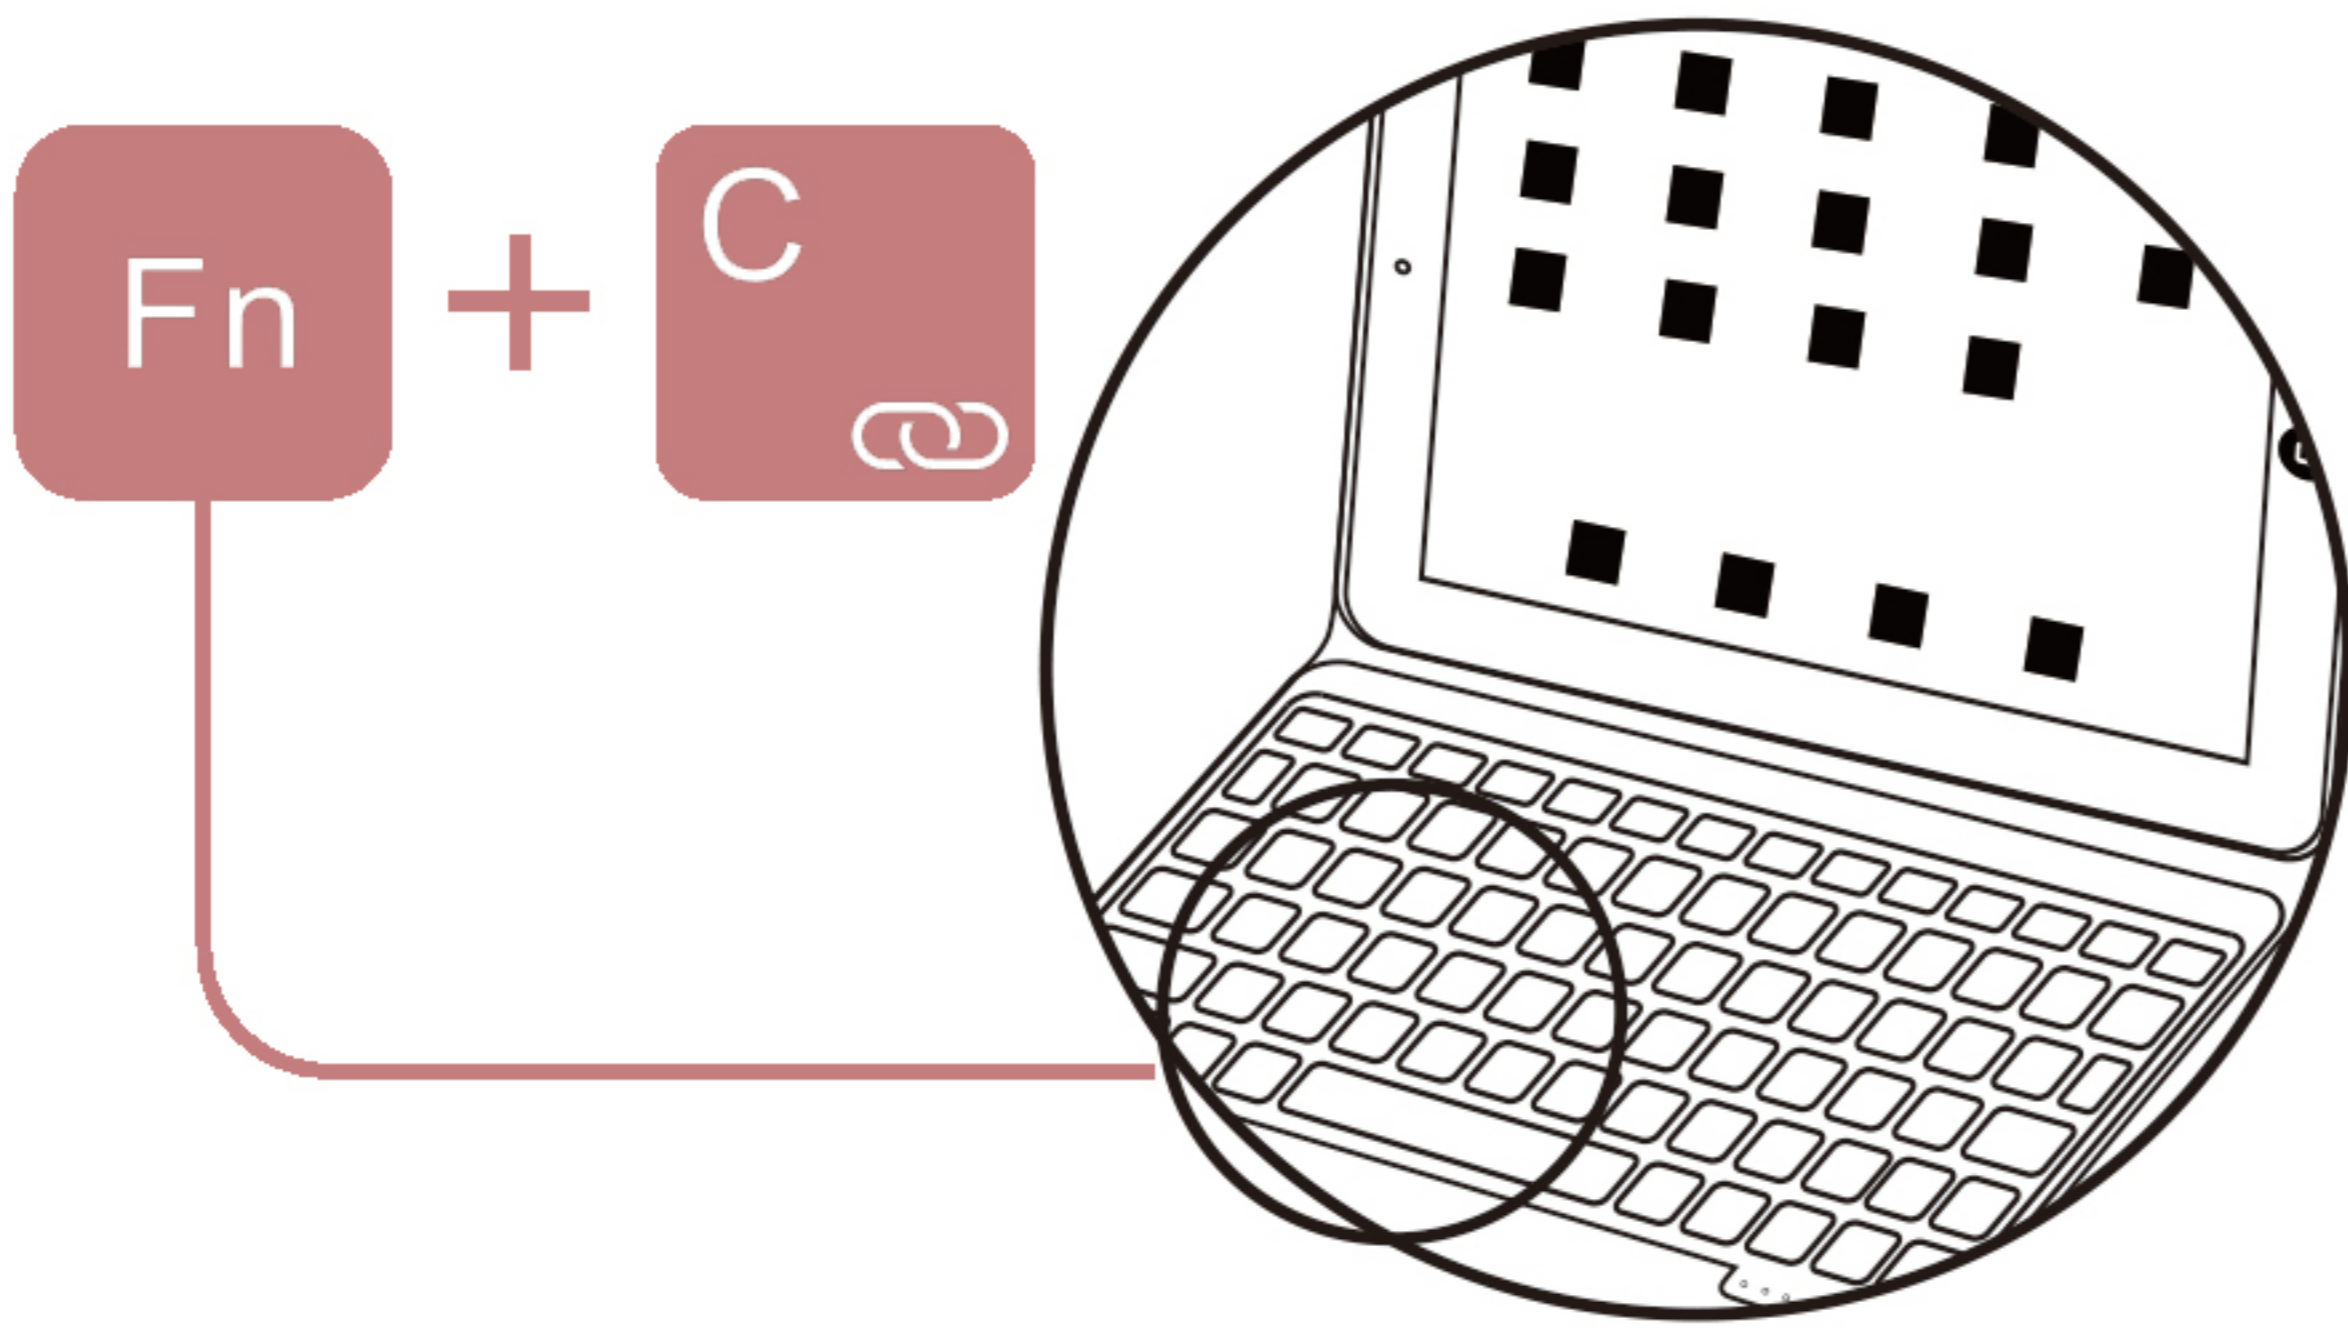


Click  on the smart case keyboard to enter pairing mode

2

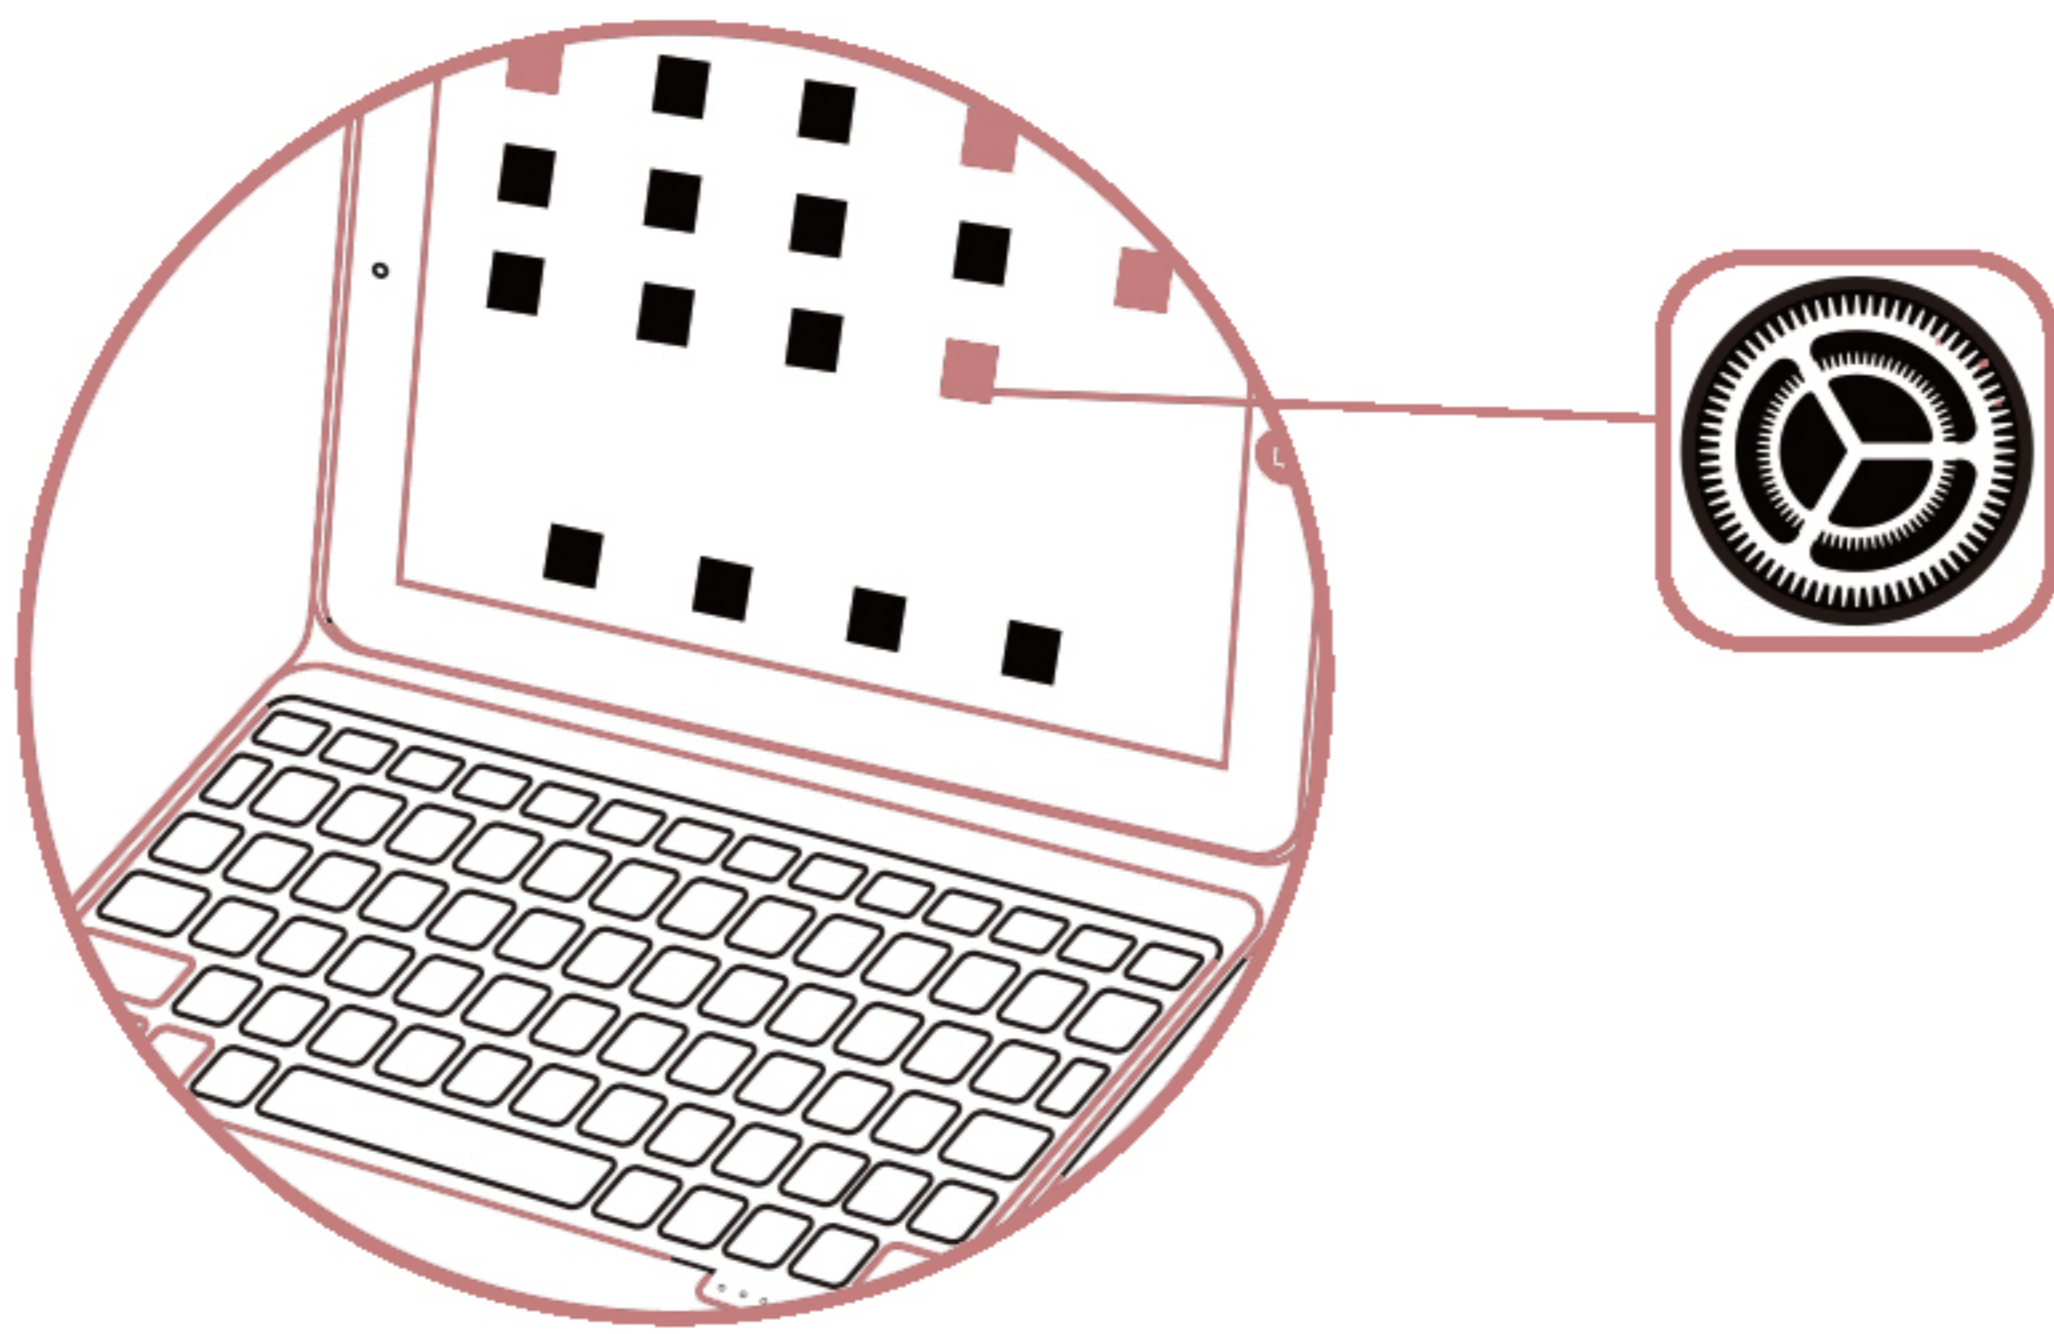


Tap your iPad's settings

3

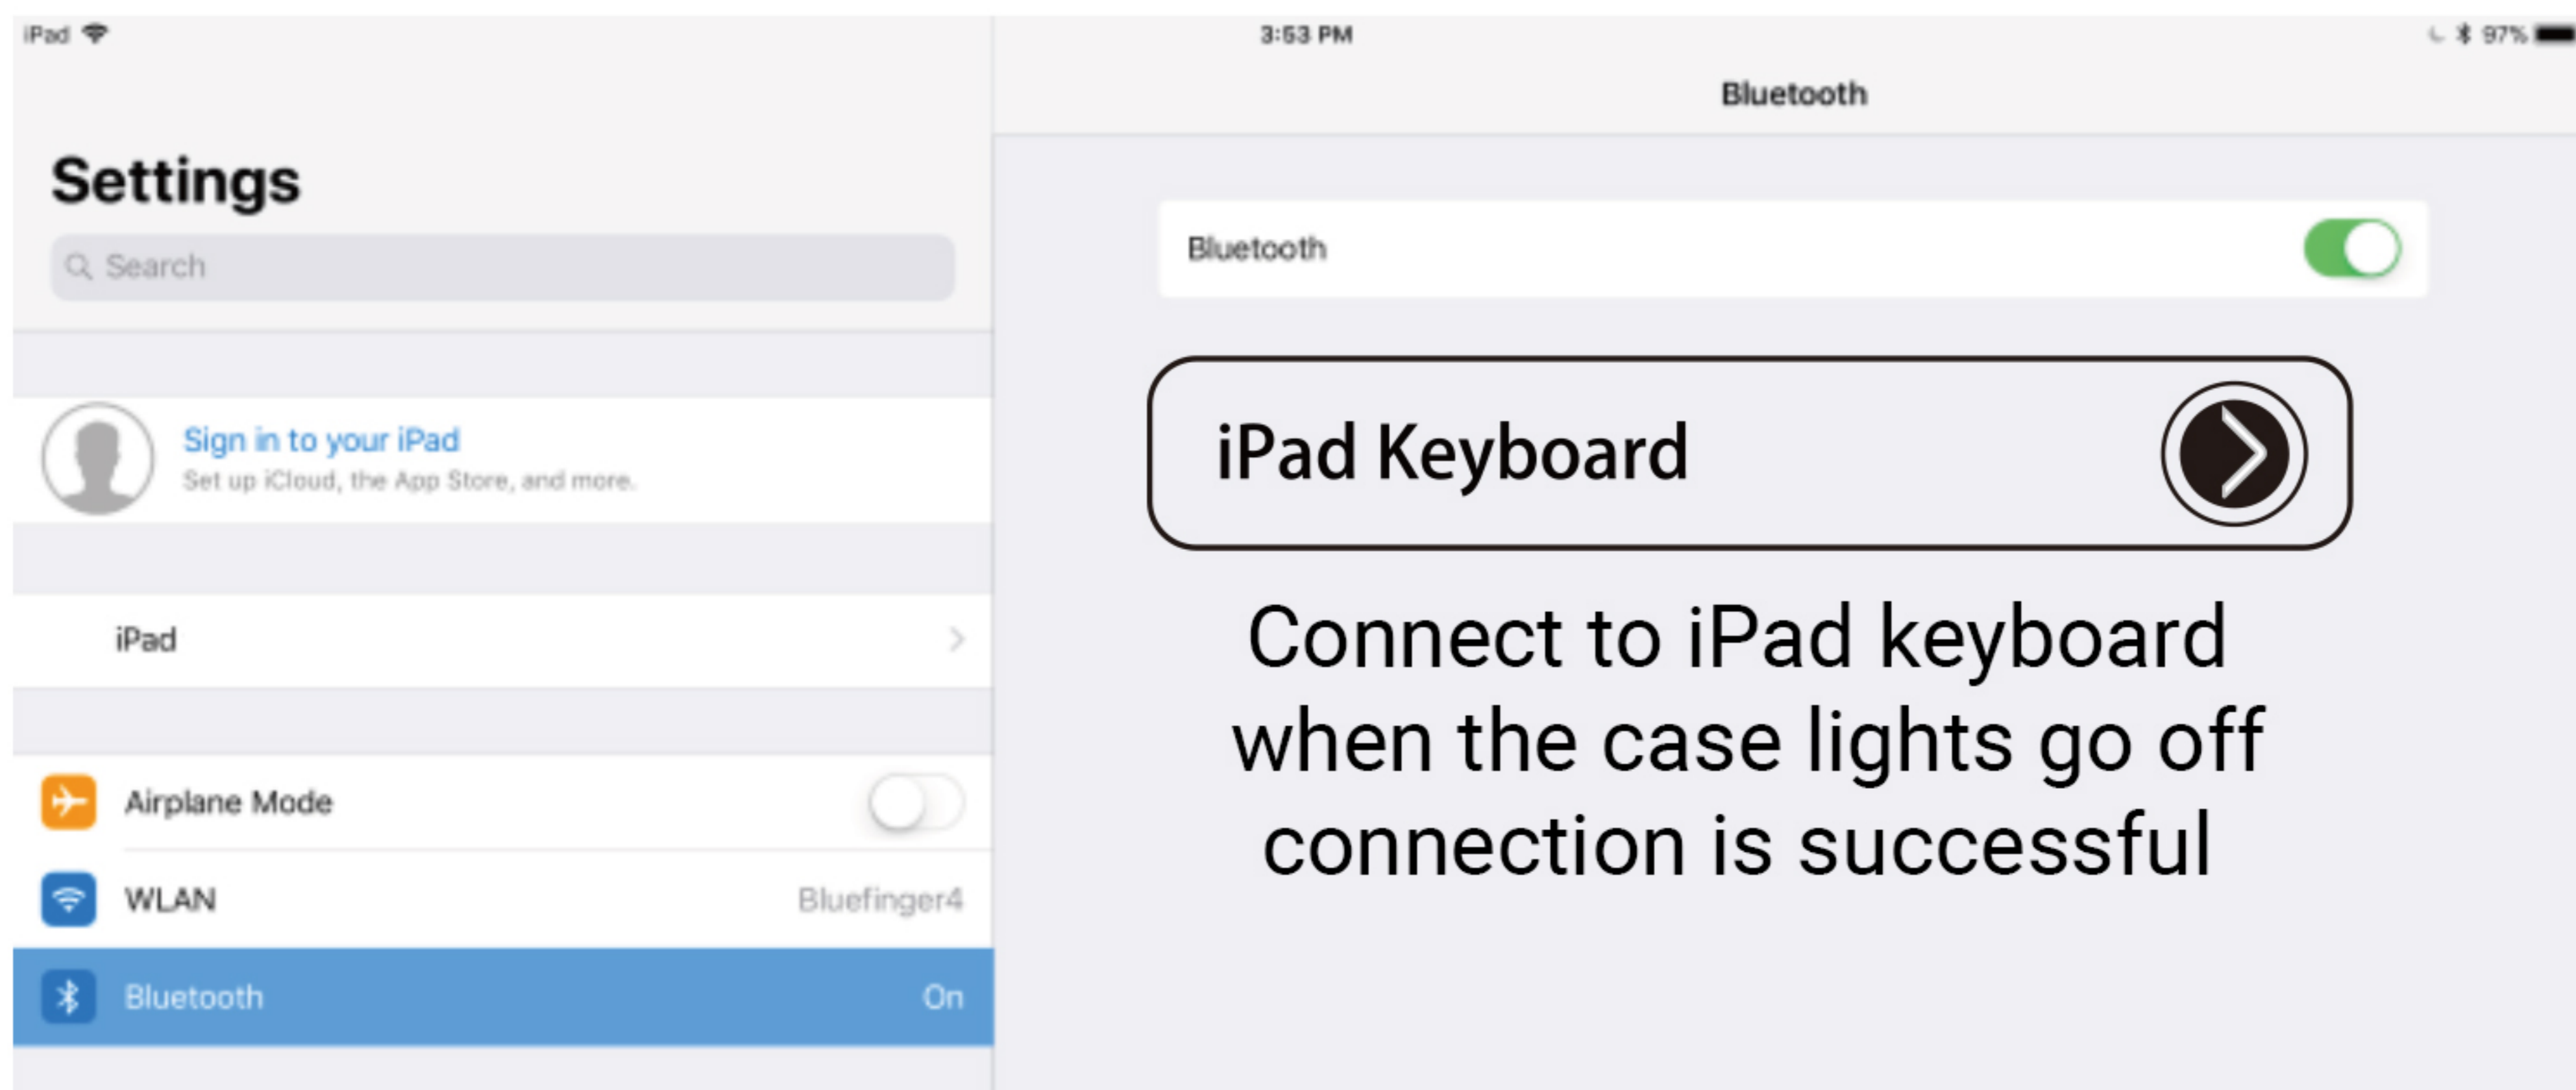

Connect to iPad keyboard when the case lights go off connection is successful


Note : Bluetooth will automatically be connected when using next time.

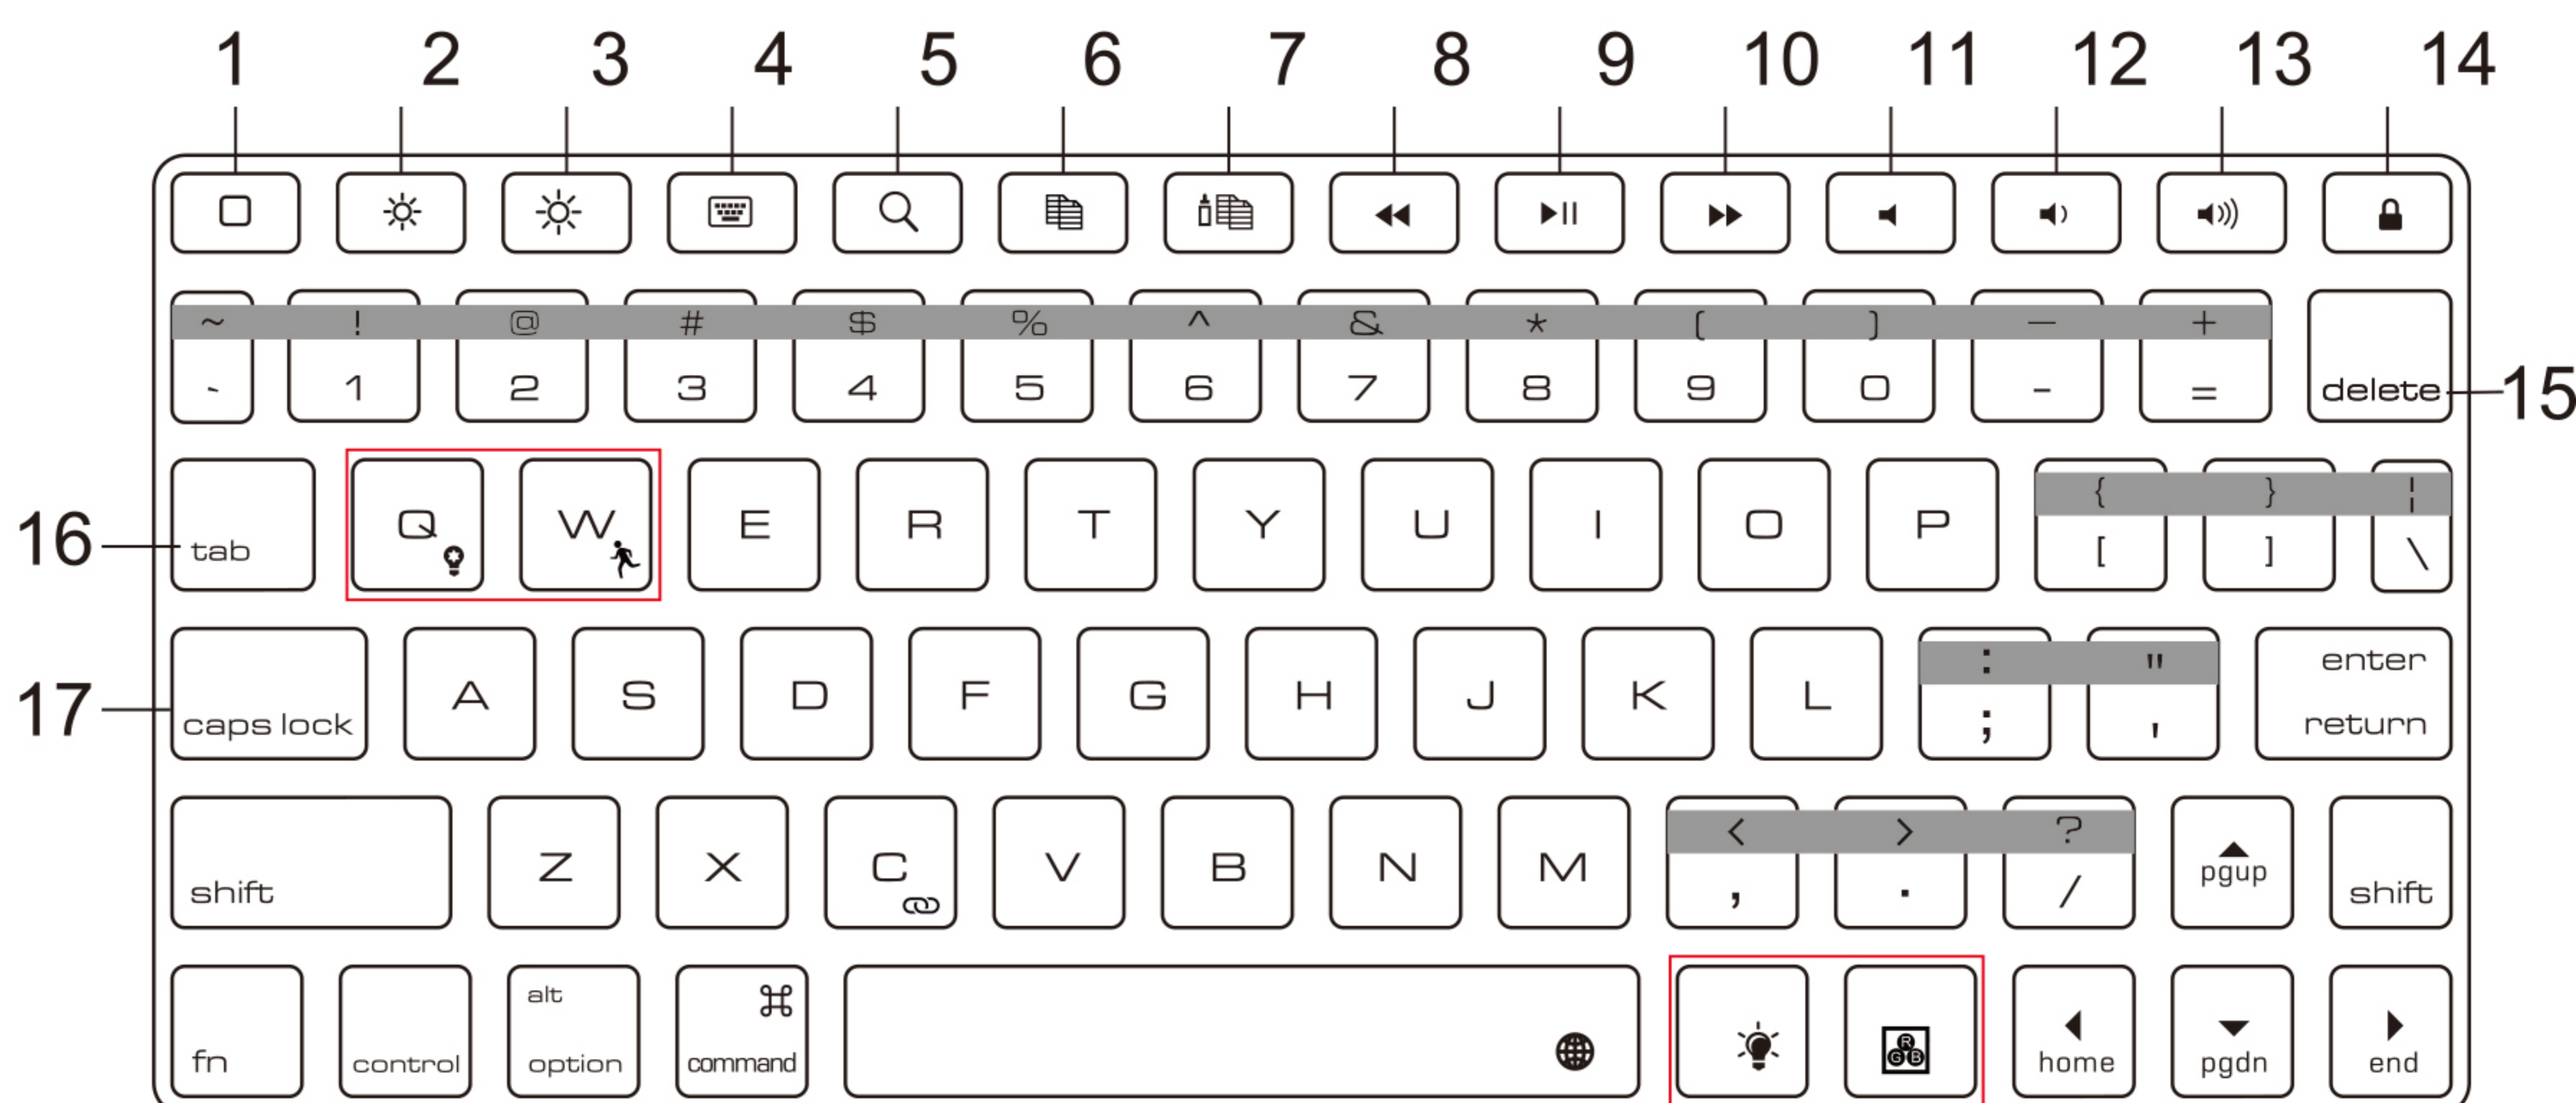

- | | |
|--|----------------------|
| 1. Home (Displays the iPad home screen) | 10. Forward |
| 2. Darker | 11. Mute |
| 3. Brighter | 12. Volume down |
| 4. Virtual keyboard | 13. Volume up |
| 5. Search (Launches the iPad search function) | 14. Fn+ Lock screen |
| 6. Copy | 15. Delete |
| 7. Stick | 16. Tab |
| 8. Back | 17. Caps Lock |
| 9. Play/pause | |

Special key instructions

- 1、 To alternate the language input methods by pressing **Fn** + .
- 2、 Turn on/off or adjust the backlit. Operating Method: Press once to turn on the backlit. Press again will increase the brightness. The third time will maximize the brightness. And the fourth time will turn off the backlit
- 3、 To alternate the 7 backlit color (red, yellow, blue, green, cyan, purple, white)
- 4、To type the character in grey area, hold shift and press the desired character.

5、 + other keys can realise some uncommon special characters

6、Some special short characters



Cut  + 

Paste  + 

Select all  + 

Copy  + 

7、Breathing lamp mode: There are 2 key combinations,  +  control breathing lamp switch


 +  controls the speed of the breathing lamp.

Product parameter

1. Operating distance : 10 meters
2. Modulation System: GFSK
3. Working voltage: 3.3-4.2 V
4. Charging Current: Backlight version 225 mA
5. Standby Time: Backlight version 45 days/No backlight version 25 days
6. Continuous working time: Backlight version 150 H(without backlight)/< 2.5 H(with backlight)
7. Charging Time: < 3 hours
8. Lithium battery capacity : Backlight version 450 mAh
9. Lithium battery Life: 3 years
10. Key life: >5 million strokes
11. Operating temperature : -10~55°C

Product Features

1. Folio Smart 360 Rotate stand 7 Color Backlit Keyboard Case , which makes viewing more convenient and more versatile
2. Flip Wireless keyboard with protective cover
3. Fantastic, colorful breathing light and backlight.
4. Slim, comfortable keyboard

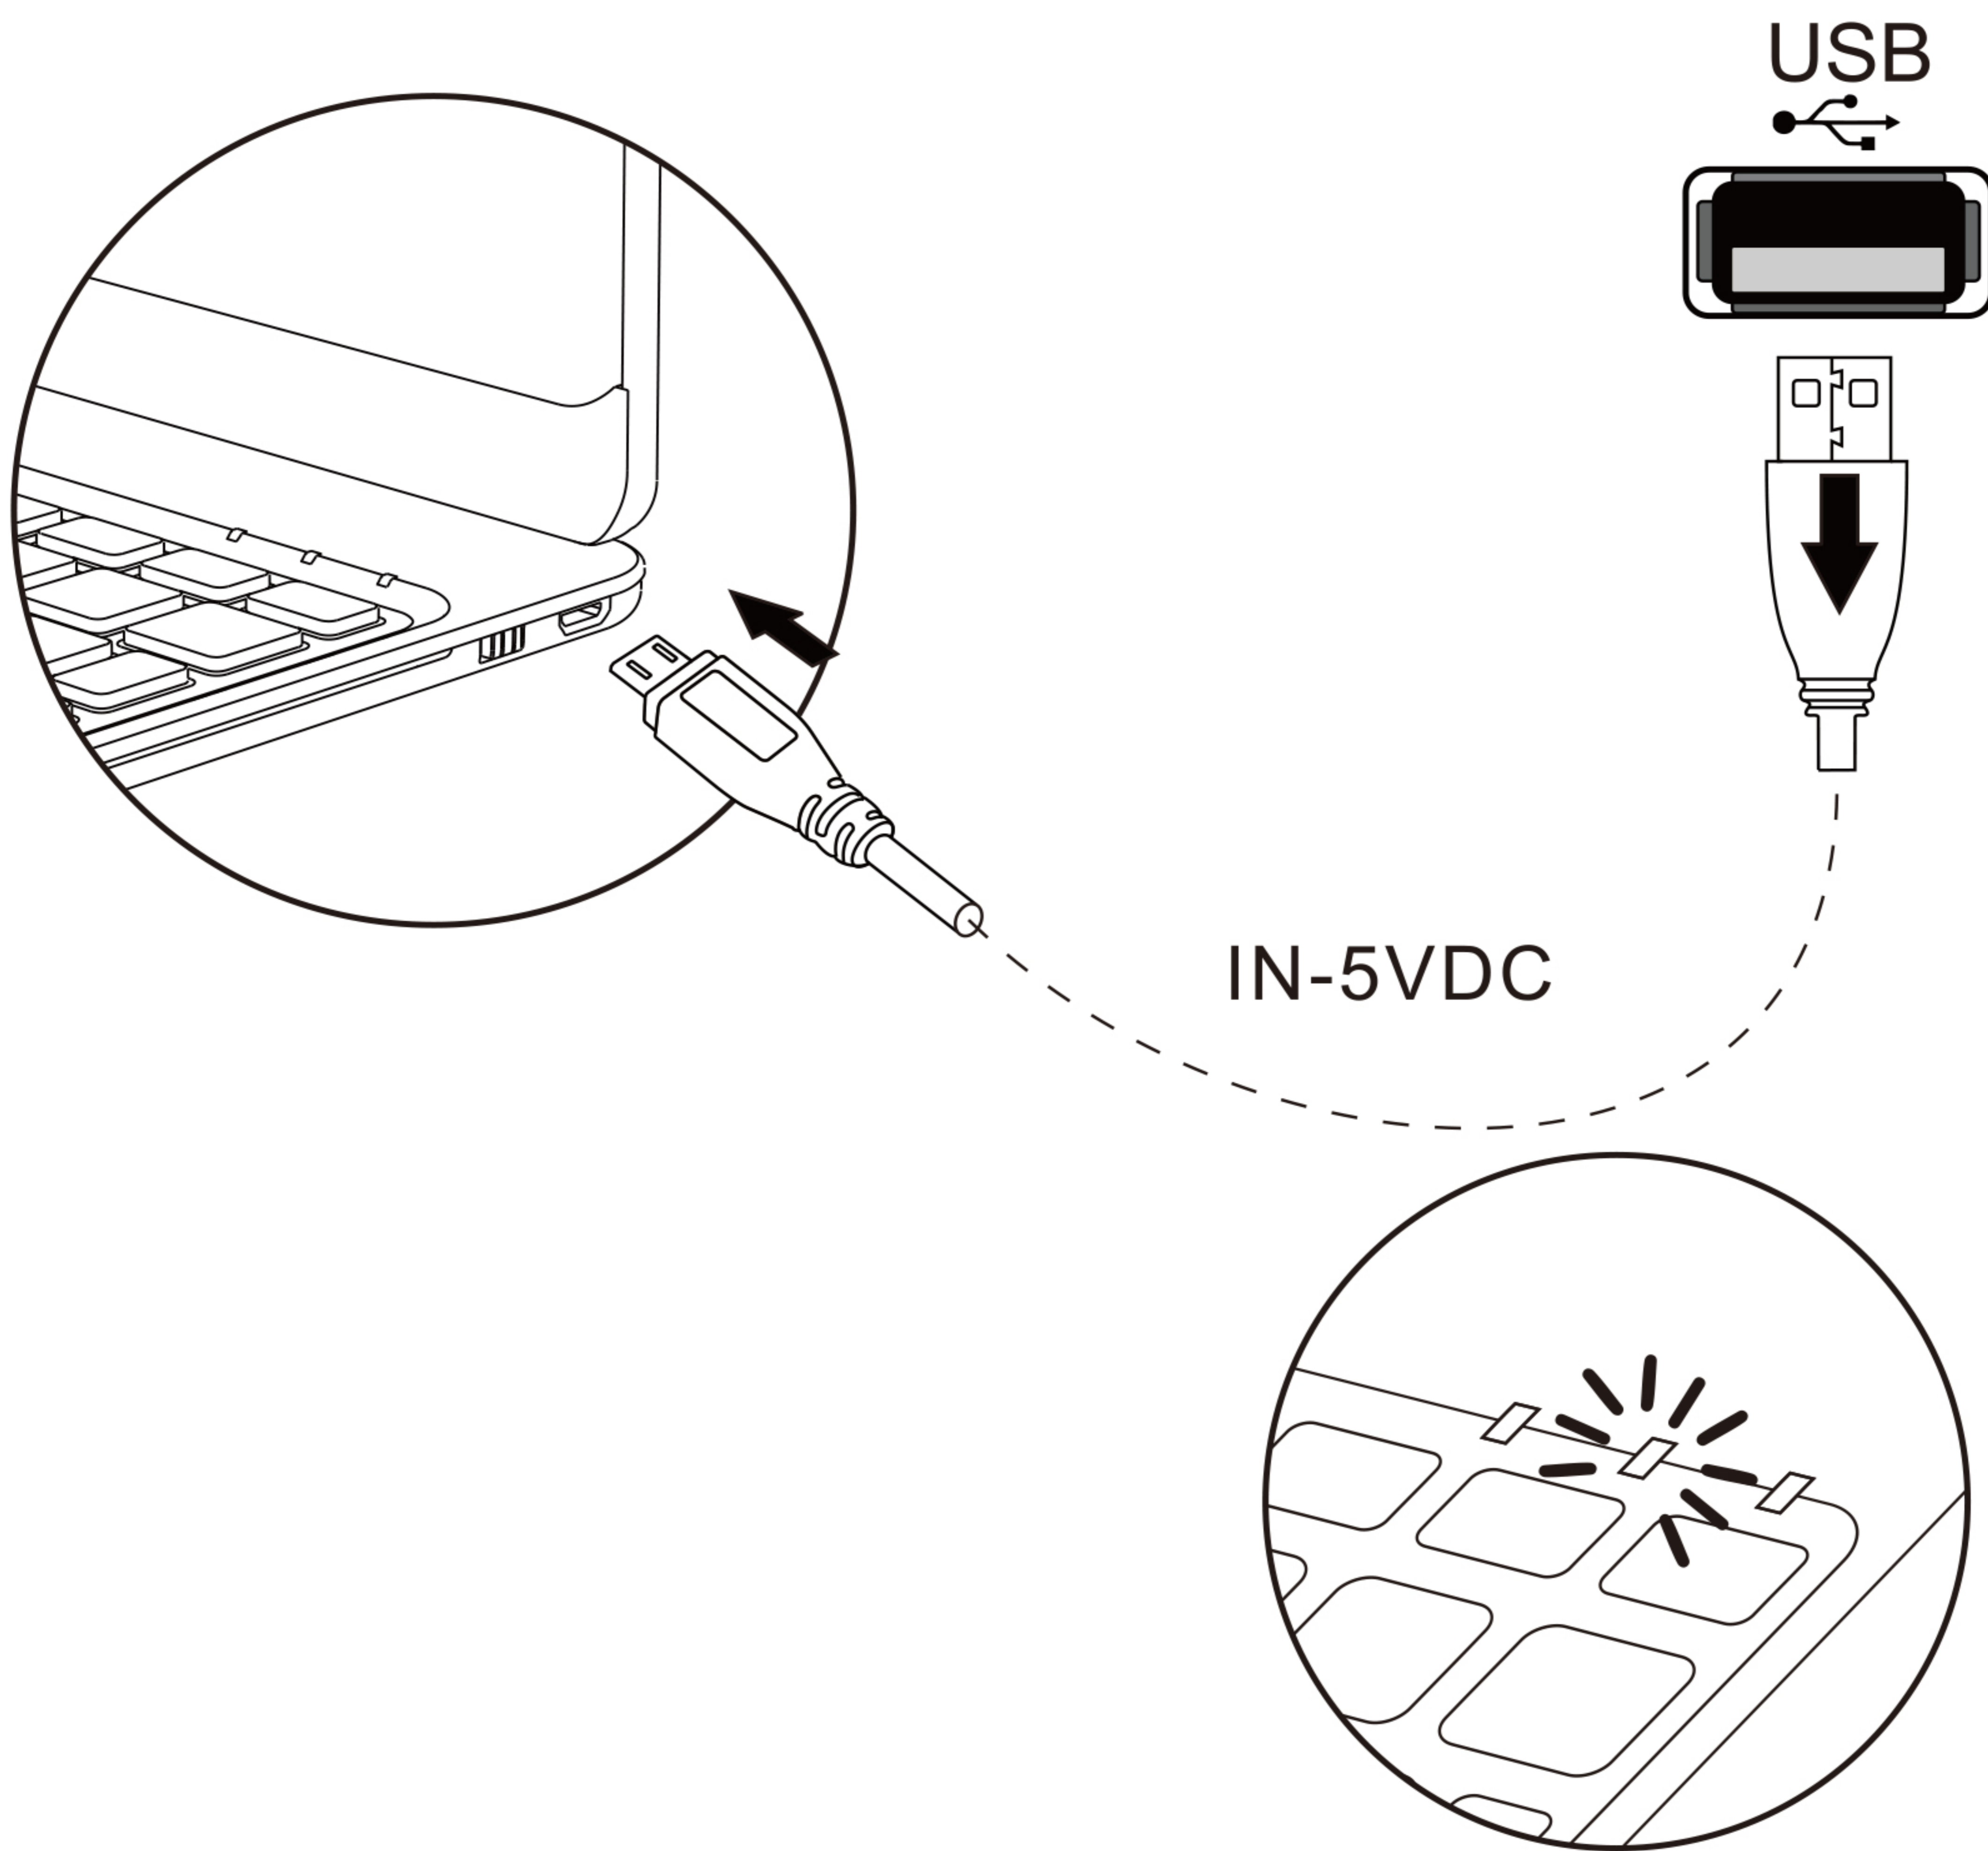

1. Open the keyboard, when the battery indicator is flashing orange, please recharge the keyboard.
2. Insert the usb charging cable at the keyboard and usb port on the computer, indicator become steady red light, shows it is recharging the keyboard.
3. Recharge keyboard until the green status indicator light into stable means a full charge (about 3 hours can be fully charged)

Maintenance:

Preserve the keyboard under normal temperature, recharge under normal voltage. If do not use for long time, need to timely charge (once of two months).