



Instructional video



Start Here

Features





- · Water resistant nano-coating
- Auto-off feature
- · Flexible bowl / Protective cover
- · Backlit digital display
- · 2000 gram capacity
- · Accuracy: 0.1 gram
- · Multiple weighing units
- Requires two AAA batteries (included)

What's in the box?



Layout


Flexible Bowl / **Protective Cover** Platform Measuring LCD Readout ON/OFF & Mode Weight Tare Button Button

Install the Batteries



- · Remove the battery cover.
- Insert the batteries with the negative ends against the springs.
- · Replace battery cover.
- · If silicone gasket is missing or damaged, replace it with one of the included spares.

Flexible Bowl / Protective Cover

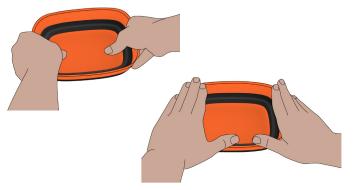

- To change the cover into a bowl:
- · Grip the outer orange rim.
- · Push the flat orange bottom from the inside outward.
- To change the bowl into a cover:
 - · Place bowl on a flat surface.
 - · Push downward on the outer orange rim.

Operation



- Press ON/OFF button to turn on the scale.
- Press MODE button to select the weighing unit.
- · Place the item to be weighed on the platform.

Tare Function



- Press ON/OFF button to turn on the scale.
- · Place the item to be tared (i.e. the bowl) on the platform.
- Press ON/OFF button and wait until LCD displays "0.00".
- Add the item to be weighed (i.e. coffee beans).



Auto-off Function




- Turn off the scale.
- · Press and hold the ON/OFF and MODE buttons at the same time until "180" is displayed.
- · Release the buttons.
- Press MODE button to select 60, 120, or 180 seconds.
- · Select "0" to disable the Auto-off function.
- Turn off the scale to apply the setting.

Washing Instructions



- · Hand wash only with mild soapy water.
- Do not submerse the scale in water. Doing so may require excessive drying time.
- Wash only the platform. Rinse other parts with plain water if needed.
- Shake out excess water by firmly grasping the scale in one hand, and tapping it against your other hand.
- Do not press hard on the platform.
- Dry the exterior of the scale with a soft cloth or leave to dry on a dish rack.

Drying Instructions

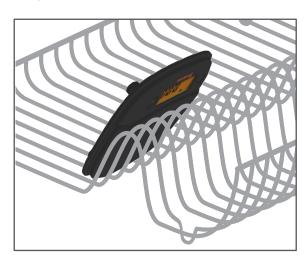

Note: To acheive the fastest drying time, lean scale up to dry in a drying rack with the buttons and LCD above the scale platform.





1133 W. 27th Street, Cheyenne, WY 82001, USA | www.mybrewista.com Toll Free in North America: 888-538-8683 | Local: 307-222-6086