




LiteMarker XV Laser System

User Guide

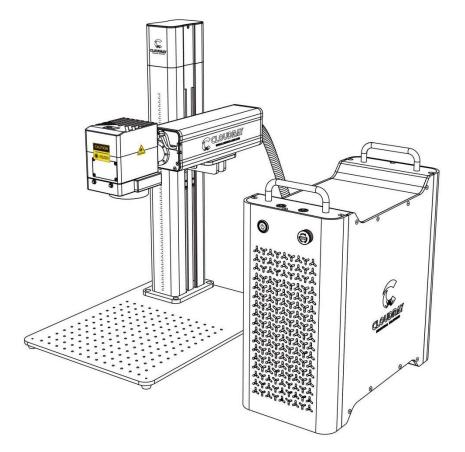

Version 1.3(2024.08)

www.cloudraylaser.com



PREFACE

Dear Customer:

Thank you for choosing Cloudray Laser System.

This fiber laser marking machine is intended for personal and professional use.

Cloudray is committed to providing the highest level of customer satisfaction and support. To ensure a favorable customer experience, we kindly suggest that the customer can thoroughly read the **User Guide** provided with your equipment before using it.

Your usage experience and suggestions will be essential for Cloudray to improve our product and service.

Tell us about your experience with Cloudray Laser Machine at info@cloudray.com. What's more, you can earn \$50-\$300 Cashback by sharing your buyer show and Usage Report (download on the product page).

Join our Facebook group to learn more laser general knowledge and discuss with more people in the laser industry. Join in Cloudray Forum to find laser machine solutions.

Facebook Group: https://www.facebook.com/groups/cloudray

Cloudray Forum: https://forum.cloudray.com/

Should you have any questions, you can get support from Cloudray Official Customer Support with any of following contact.

Email: info@cloudray.com

Skype: info@cloudray.com

WhatsApp: +86 153 3512 0540.

Again, thank you for choosing Cloudray.

Sincerely,

Cloudray Official Team





Cloudray cannot be held responsible for any direct or indirect damages, which result from using or working with the products electric circuits or software described herein. The apparatus must be used only by trained and skilled personnel. Before use the manual should be read and followed carefully.

Furthermore, Cloudray reserves the right to change or alter any product described herein without prior notice.

Document History

Version	Date	Content
V1.0	09/2023	V1.0 official version released
V1.1	04/2024	Renew some pic.
V1.2	06/2024	Renew some pic.
V1.3	08/2024	Renew some details.



CONTENTS

1. General Information	1
1.1. Meaning of symbols and notes	1
1.2. Designated Use	3
1.3. Disposal Remarks	4
1.4. Manufacturer's Label	4
1.5. Machine Size	5
1.6. EC–Declaration of Conformity	6
1.7. Complementary Documentation	7
2. Safety Information	8
2.1. Disclaimer	8
2.2. General Safety Instructions	8
2.3. Laser Safety Instructions	9
2.4. Electrical Safety Instructions	10
2.5. Material Safety Instructions	10
3. Technical Specifications	13
4. System Overview	14
4.1. Control Elements on the Front	15
4.2. Laser Module Interface	15
4.3. Laser Module (Inside)	16
5. Installation	17
5.1. Installation Overview	17
5.2. Location Selection	17
5.3. Electrical Grounding	18
5.4. Assembly Instructions	18
5.5. Control Computer Installation	20
6. Operation	21
6.1. Operation Overview	21



6.2. Software Installation	21
6.2.1. Driver Installation	21
6.2.2. Drive Uninstallation	23
6.3. EZCAD main interface view	26
6.3.1. Marking parameter	26
6.3.2. Laser Marking Control Bar	27
6.4. Focusing	27
6.5. Camera calibration	29
6.5.1. Software introduction	29
6.5.2. Software using	29
6.6. Rotary attachment (optional)	33
6.6.1. Mounting the work piece in the rotary attachment	33
6.6.2. Text rotate marking	33
6.6.3. Vector file rotate marking	37
7. 1st Marking Job	
8. Instructions for Specific Materials	
8.1. Metals	45
8.2. Plastics	45
8.3. Stone	46
9. Maintenance	
9.1. Maintenance Overview	47
9.2. Regular Maintenance Procedures	47
9.3. Cleaning the Lenses	48



1. General Information

This manual is the designated user guide for the installation, setup, safe operation, and maintenance of your fiber laser marking machine. It is divided into six chapters covering general information, safety instructions, installation steps, operation instructions, maintenance instructions, and contact information.

All personnel involved in the installation, setup, operation, maintenance, and repair of this machine should read and understand this manual, particularly its safety instructions. Substandard performance and longevity, property damage, and personal injury may result from not knowing and following these instructions.

Your fiber laser marker works by emitting a powerful laser beam from its fiber laser source, sending that beam through a fiber optic cable, focusing its power through the galvo lens, and using this focused light to etch designs into certain substrates.

This fiber laser marking machine uses a nanoscale fiber laser source. Its single-mode output, good heat dissipation, high efficiency, and compact structure make it ideal for high-precision laser marking. With typical use, this device has an average lifespan around 100,000 working hours. However, constantly running your laser above 80% of its maximum rated power can significantly shorten its service life. It is recommended to use settings from 10–75% of the maximum rated power to enjoy optimal performance and longevity.

Note that this is a high-voltage device and, as a safety precaution, it is recommended to only touch its components with one hand at a time during use.

Note also that this device does not have a protective housing. It is thus recommended to use a special room or to raise protective screens around the work area. The active laser is invisible to the human eye and anyone in or near the working area MUST use special protective eyewear when the laser is in use to avoid potentially permanent injury.

1.1. Meaning of symbols and notes

Important technical safety notes and instructions in this manual are indicated by symbols. It is important to observe and follow these notes and instructions on workplace safety. Avoid accidents, personal injury, and material damage to property by acting with extreme caution.



Caution!

This symbol indicates a potentially hazardous situation. Not observing these notes may result in personal injury or damage to equipment.



Caution!

Dangerous electrical voltage - indicates a risk of electric shock and warns of imminent danger to the life and health of individuals or of significant damage to equipment.

www.cloudraylaser.com





Cloudray Laser System

Caution!

Laser beam - means that the laser machine may operate in laser class 4 when commissioning the laser head. Warns of damage to eyes or skin caused by direct or scattered radiation.

CLOUDRAY



Caution! Wear eye protection during operation!



Caution! Unplug before cleaning, maintenance and repair!



Caution! Read instruction manual before operation, cleaning and maintenance!



Warning! TOXIC FUMES/PARTICLES MAY BE GENERATED BY THIS MACHINE



Important: Information the user must observe or know to avoid process disruptions or malfunctions when using the product.



Tip: Gives the user the information needed to achieve the objective directly and without problems.




Protective eyewear should be worn by anyone around this machine during operation.



This product contains electrical components that should not be disposed of with regular garbage.



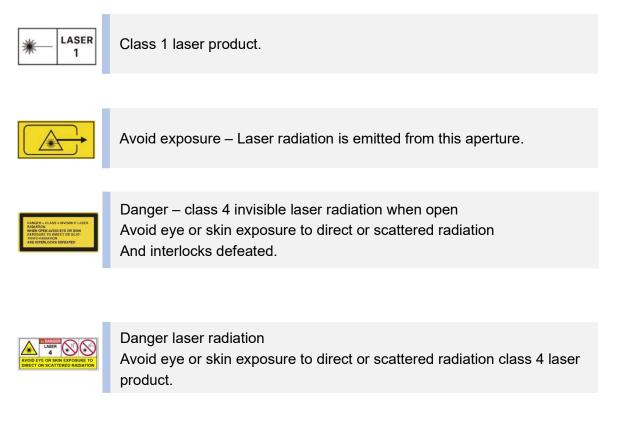



"Complies with FDA performance standards for laser products except for conformance with IEC 60825-1 Ed. 3., as described in Laser Notice No.56, dated May 8, 2019."

1.2. Designated Use

This machine is intended for use engraving signs and other consumer products on applicable substrates. This laser can process a wide variety of metals including steel, aluminum, titanium, brass, copper, tungsten, carbide, and chrome. It can also be used with stone and some hard plastics such as acrylic. (See 2.5 & 4.3 for further details.) Use of this system for non-designated purposes is not permitted.

The system must be operated, maintained, and repaired by personnel familiar with the field of use and the dangers of the machine and the material being engraved including its reflectivity, conductivity, potential for creating harmful or combustible fumes, etc.

Laser beams are dangerous. The manufacturer and/or seller bear(s) no responsibility and assume(s) no liability for any improper use of this device or for any damage or injury arising from such use. The operator is obliged to use this fiber laser marker only in accordance with



its designated use, the other instructions on the device and in its manuals, and all applicable local and national laws and regulations.


1.3. Disposal Remarks



Do not dispose the machine with domestic waste! Electronic devices have to be disposed according to the regional directives on electronic and electric waste disposal.


1.4. Manufacturer's Label

The Manufacturer's Label is located on the side/backside of the machine (see picture below)

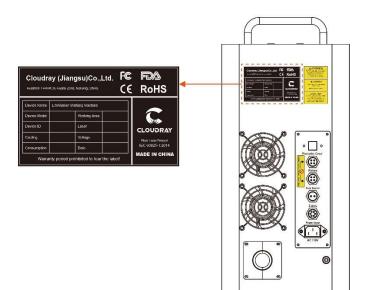



1.5. Machine Size

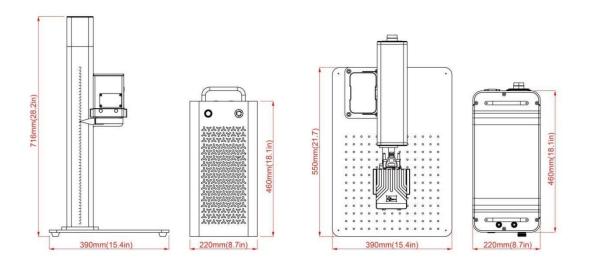



1.6. EC–Declaration of Conformity

D	eclaration of Conformity	CE
For the fol	owing equipment :	
Product Nar	ne: Laser Marking Machine	
Model Name	: CLM20F, CLM30F, CLM50F, CLM60F, C CEM20F, CEM30F, CEM50F, CEM60F, C CAM20F, CAM30F, CAM50F, CPM20F, C CPM60F, CPM80F, CPM100F, CUM20F, CUM60F, CUM80F, CUM100F, C3DM30F, CLM05U, CLM10U, CLM40C, CLM60C, C C3DMCO2	CEM80F, CEM100F, CPM30F, CPM50F, CUM30F, CUM50F, C3DM50F, CLM03U,
Applicant:	Cloudray (Jiangsu) Co., Ltd.	
Address:	Room 101, 3-A, No.10 Huashenmiao, Huashen T-Park, Yuhuatai Zone, Nanjing, Jiangsu, China 210012	
Directive on the Electromagneti		tes relating to lirective) For the
EN ISO 12100:		
_	anufacturer/importer is responsible for this decl ible for marking this declaration:	laration:
Nanjing, Chi 14.10.2022	na Rayner DING General Manager (ryner Ding



1.7. Complementary Documentation

Complementary documentation can be found on the supplied U disc.

Software:

CameraCali

EZCad2.14.11-LitePro (Different Lens Software)

USB Driver

Cor File

*RS232 Files:

E-LP&M7-GUI Software & Manual

RS232 Cable Driver & Manual

Operation Manual:

EZCad2_EN_Manual

LiteMarker XV User Guide V1.3

USB Driver and Software Install V2

Instructions for Rotating Marking

Videos:

USB Driver Install

USB Driver Uninstall

Uninstall Lightburn and Driver

Lightburn Install

Import Parameters From EZCad to Lightburn

Import Cor File in Lightburn

Import Cor File in EZCad

9 Points Correction

How to Use Rotary



2. Safety Information

2.1. Disclaimer

Your engraver may differ somewhat from those shown in this manual due to options, updates, etc. Please contact us if your marking machine came with an outdated manual or if you have any other questions.

2.2. General Safety Instructions

• Use this laser marking device only in accordance with all applicable local and national laws and regulations.

• Use this device only in accordance with this instruction manual and the manual for the engraving software included with it. Only allow this device to be installed, operated, maintained, repaired, etc. by others who have also read and understood both manuals. Ensure that this manual and the software manual are both included with this device if it is ever given or sold to a third party.



• DO NOT operate this device continuously for more than 5 hours. Stop every 5 hours for at least $\frac{1}{2}$ hour.

• DO NOT leave this device unattended during operation. Observe the device throughout operation and, if anything seems to be operating strangely, immediately cut off ALL power to the machine and contact either our customer service or your dedicated repair service. Similarly, ensure the device is FULLY turned off in the correct order after each use.

• DO NOT allow minors, untrained personnel, or personnel suffering from physical or mental impairment that would affect their ability to follow this manual and the software manual to install, operate, maintain, or repair this device.

• Any untrained personnel who might be near the device while it is in operation MUST be informed that it is dangerous and fully instructed on how to avoid injury during its use.

• Always keep a fire extinguisher, water hose, or other flame retardant system nearby in case of accidents. Ensure that the local fire department's phone number is clearly displayed nearby. In the case of a fire, cut electrical power before dousing the flame. Familiarize yourself with the correct range for your extinguisher before use. Take care not to use your extinguisher too close to the flame, as its high pressure can produce blowback.



2.3. Laser Safety Instructions

This machine uses an invisible CLASS 4 LASER, the strongest and most dangerous class of laser available for public use. Used without care, it can cause serious property damage and personal injury including but not limited to the following:



- The laser will easily burn nearby combustible materials
- Some working materials may produce radiation or harmful gasses during processing
- Direct exposure to the laser will cause bodily harm including serious burns and irreparable eye damage

As such,

• NEVER interfere with the laser beam.

• DO NOT place any part of your body under the laser lens during operation. Take measures to protect yourself from potentially reflected laser beams including the use

• NEVER attempt to view the laser directly without protective eyewear. Always wear safety goggles or glasses designed to filter the specific wavelength of your engraver's laser with an optical density (OD) of 5+. As even seemingly matte materials can produce harmful reflected beams, care should be taken to keep anyone without protective eyewear from observing the machine during operation. EVEN WITH protective eyewear, do not stare or allow others to stare continuously at the laser beam during operation.

• DO NOT leave potentially combustible, flammable, explosive, or corrosive materials nearby where they could be exposed to the direct or reflected laser beam.

- DO NOT use or leave sensitive EMI equipment nearby. Ensure the area around the laser is free of strong electromagnetic interference during any use.
- ONLY use this machine as described in the Material Safety section of this manual. The laser settings and engraving process must be properly adjusted for specific materials.
- Ensure the area is kept free of airborne pollutants, as these might pose a similar risk of reflection, combustion, etc.
- NEVER use this marking machine with the fiber source's housing opened, as the closed laser light path is necessary to prevent laser radiation leakage.

• DO NOT modify or disassemble the laser and do not use the laser if it has been modified or disassembled by anyone except trained and skilled professionals. Dangerous radiation exposure and other injury may result from the use of adjusted, modified, or otherwise incompatible equipment.



2.4. Electrical Safety Instructions

• ONLY use this device with a compatible and stable power supply with less than 5% fluctuation in its voltage.



DO NOT connect other devices to the same fuse, as the laser system will require its full amperage. Do not use with standard extension cords or power strips. Use only surge protectors rated over 2000J.

• ONLY turn on the power to this device when it is well grounded, either via a firm connection to a 3-prong outlet or via a dedicated grounding cable firmly connected to the proper slot on the back of the main tower. Do not use with an ungrounded 3 to 2 prong adapter. The device's grounding should be checked regularly for any damage to the line or loose connections.

• Turn the device on and off using its key and power buttons in the correct order. The mainboard, galvo, and laser have separate power supplies that are grounded in order. Activating everything at once, too quickly, or in the wrong order may send electrical current to an ungrounded component, causing short circuits and other electrical hazards.

• ONLY use this device with one hand at a time. The laser is powered by an extremely high voltage connection and placing two hands on the machine at one time during operation has the potential to create a closed circuit with the human body, resulting in electrical shock.

• The area around this laser marking device should be kept dry, well ventilated, and environmentally controlled to keep the ambient temperature between 40–95°F (5–35°C). The ambient humidity should not exceed 70%.

• Adjustment, maintenance, and repair of the electrical components of this device must be done ONLY by trained and skilled professionals to avoid fires and other malfunctions, including potential radiation exposure from damage to the laser components. Because specialized techniques are required for testing the electrical components of this marking system, it is recommended such testing only be done by the manufacturer, seller, or repair service.

• Unless otherwise specified, ONLY undertake adjustment, maintenance, and repair of the device when it is turned off and disconnected from its power supply.

2.5. Material Safety Instructions

• Users of this fiber marking machine are responsible for confirming that materials to be processed can withstand the heat of a class 4 laser and will not produce any emissions or



byproducts either harmful to people nearby or in violation of any local or national laws or regulations. In particular, do not use this device to process polyvinyl chloride (PVC), TEFLON, or other halogen containing materials under any circumstances.

• Users of this fiber laser are responsible for ensuring that every person present during operation has sufficient PPE to avoid any injury from emissions or byproducts of the materials being processed. In addition to the protective laser eyewear discussed above, this may require goggles, masks or respirators, gloves, and other protective outer clothing.

• Users must exercise special caution when working with conductive materials as buildup of their dust and ambient particles may damage electrical components, cause short circuits, or produce other effects including reflected laser radiation.

This machine can be safely used with the following materials:

- Aluminum
- Brass
- Carbide
- Gold
- Silver
- Steel
- Stone, including Granite, Marble, etc.
- Titanium
- Tungsten

This machine can be used with some other metals, hard plastics, and other materials with some care. For other materials, if you are unsure about its safety or laser ability with this device, seek out its material safety data sheet (MDS). Pay especial attention to information about safety, toxicity, corrosiveness, reflectivity, and reaction(s) to high heat. Alternatively, contact our support department for further guidance.

This machine **CANNOT** be used with the following materials or with any materials which include them:

- Artificial Leather containing Hexavalent Chromium (Cr [VI]), due to its toxic fumes
- Astatine, due to its toxic fumes
- Beryllium Oxide, due to its toxic fumes
- Bromine, due to its toxic fumes

• Chlorine, including Polyvinyl Butyral (PVB) and Polyvinyl Chloride (PVC, Vinyl, Cintra, etc.), due to its toxic fumes

• Fluorine, including Polytetrafluoroethylenes (Teflon, PTFE, etc.), due to its toxic fumes



• Iodine, due to its toxic fumes

- Paper and Paperboard, due to their high flammability when exposed to the concentrated laser
- Phenolic Resins, including various forms of Epoxy, due to their toxic fumes

[•] Wood, including MDF, Plywood, Balsa, Birch, Cherry, Oak, Poplar, etc., due to its high flammability




3. Technical Specifications

🗕 Laser					
Laser (maintenance free)	MOPA Fi	ber Laser			
Laser power (Depending on model)	60W (M7)	100W (M7)			
Wavelength	1060 - 1	1085 nm			
Frequency (kHz)	1 - 4000				
Pulse width	2 - 50	00 ns			
Cooling	Air coole	d (filters)			
→ Galvo Scanner					
Marking area	F-160	F-254			
	110 x 110mm	175 x 175mm			
Camera pixels	500MP				
Max marking speed	5000mm/s				
Positioning speed	10m/s with F=160mm				
- Control					
Computer	Microsoft Windows XP, VISTA, Win7, Win10, Win11				
Interfaces	USB				
Marking software	EZCad2 (LitePro) / LightBurn				
Correction software	CorFile2				
Laser power	Adjustable from 1 - 100%				
→ Ambient Conditio	ons				
	Operating temperature +5 to +35° C.				
Ambient conditions	Relative humidity max. 90 %.				
	Non-condensing				
Power requirements	110-230V AC, 50/60Hz, single-phase				
Power consumption	Max. 615 W				
Equipment protection	IP54 (Marking head), IP20 (Laser unit)				



4. System Overview

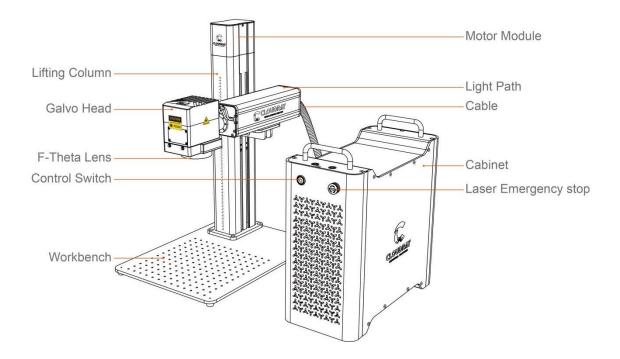

Main Parts

Cabinet—Contains controllers, laser, power supply units, etc.

Galvo Head——Focuses the laser beam to a fine point, directing it to proper locations on the target material during engraving.

Workbench——This platform holds the target material, with optional positioning bars to ensure precise alignment.

Fiber Cable——This transmits the laser beam from its source to the galvo lens.

Lifting Column——Lifting column holds the laser arm and includes a precise graduated rule for quickly adjusting height to work with different materials and thicknesses.

Motor——This motor moves the laser arm up and down for the correct alignment across different materials and thicknesses.

F-Theta Lens——Focused beam is the strongest energy point.

Control Switch——Laser marking machine start-stop control switch.


Light Path——Internal isolator with laser.



4.1. Control Elements on the Front

Switch—Activates the controller, galvo and laser power. Press this second during startup and first during shutdown.

Emergency Stop—Activates the fiber laser power. Rotate this first during startup and press second during shutdown. In case of emergency, press to cut off the fiber laser power at any time.

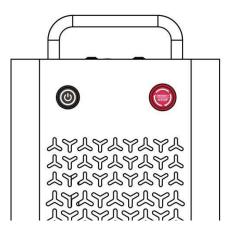

4.2. Laser Module Interface

Protective Cover (Optional) ——This port connects to protective cover with a 4-pin connection cable.

Rotary (Optional) ——This port enables use of a rotary axis engraver with a 4-pin connection cable. (Compatible rotary axis devices are sold separately)


Foot Switch——This port enables optional pedal control of laser activation to free your hands for manual adjustment of the target material.

Z Axis—Provides power and direction signals for the Z-axis motor.

Power Input——This 3-pin port connects to the device's standard 3-prong power cord (Voltage and power cord types are standard according to actual conditions)

Ground Pole—— This pole used to introduce current into the ground; when the electrical equipment leaks or the voltage is too

high, the current enters the ground through the ground.

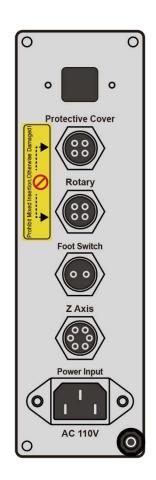





4.3. Laser Module (Inside)

- A. Relay—Used for switching circuit control conversion.
- **B. Z Axis Controller**—Control motor to adjust light path up and down.
- **C. Stepper Driver(down)**—Control rotary work and realize rotary marking function.


Stepper Driver(up)—Control Z-Axis move up and down to adjust focus.

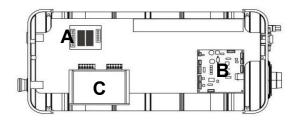

- **D. 24V Power Supply1**—Provide 24V power for the relay.
- **E.** ±15V Power Supply—Provide ±15V power to galvo.
- **F. 24V Power Supply2**——Provides 24V power for fiber laser, drivers and fans.
- **G. Filter**—Filter signal clutter to eliminate interference to control signals.

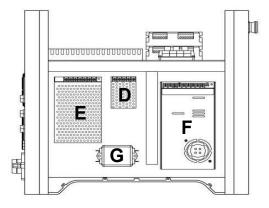

- H. Fiber Laser—Provide laser source.
- I. Fans—Provide heat dissipation for cabinet.

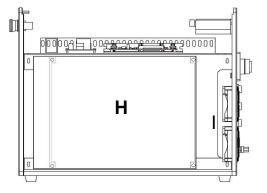



5. Installation

5.1. Installation Overview

A complete working system consists of the fiber laser source, the laser arm with the galvo lens, the laser key, a computer (not included) with engraving software (included), and all applicable connection cables. A support column and workbench come included to assist your work. Users can also configure other additional accessories (such as a rotary axis) to suit their needs.



Use only the hardware, wiring, and power sources that came with or are compatible with this device. Installing equipment that your device is not designed to work with can lead to poor performance, shortened service time, increased maintenance costs, property damage, and personal injury.

Please note the specific requirements of your system's installation. Every customer must understand these notes before installation to execute a proper setup and achieve safe laser performance. If you have any installation questions or problems, contact our technicians and customer support team.

Any auxiliary equipment must be adjusted to the base machine. Queries may be directed to the dealer or manufacturer of such equipment.

5.2. Location Selection

Prior to assembling your fiber laser marker, select an appropriate location for its use.

Be sure that it meets all of the requirements discussed in the Safety Information above. The location should be stable, level, dry, and climate controlled to ensure an ambient temperature 40–95°F and an ambient humidity under 70%. In particular, the temperature and humidity together should not be close to the dew point. It is also advisable to use a windowless room or to use blinds and/or curtains to avoid exposure to the potential additional heat of direct sunlight. The location should be free of dust and other airborne pollutants and well ventilated enough to process any fumes produced by the engraving process in accordance with all applicable laws and regulations. Depending on the materials to be processed, this may require construction of a dedicated ventilation system. It should be away from children; combustible, flammable, explosive, or corrosive materials; and sensitive EMI devices. The power cord should be plugged into a compatible and stable power source via a grounded 3-prong outlet. No other item should be drawing current from the same fuse. There should be fire-fighting equipment nearby and the local fire department's phone number should be clearly displayed.

It is highly recommended to have an extra work table nearby in order to avoid placing objects on or directly adjacent to the machine, which could become a fire or laser hazard.



5.3. Electrical Grounding


This device employs a class 4 laser. As discussed in the Safety Information above, it is extremely high voltage and potentially dangerous, so users must securely ground it to avoid the buildup of static electricity. Using a standard 3-prong outlet will provide sufficient grounding. If you do not have access to a 3-prong outlet, you MUST use the grounding cable and ensure its proper connection. The far end of the cable should be securely connected to a metal rod driven at least 8 feet (3 m) deep into soil located at least 5 feet (1.5 m) from the machine. The resistance along the line should be no greater than 5Ω .



Poor grounding WILL cause equipment failure and create a serious electrical shock hazard. The manufacturer and/or seller bear(s) no responsibility and assume(s) no liability for any damage, accidents, or injuries caused by bad grounding connections. service time, increased maintenance costs, property damage, and personal injury.


5.4. Assembly Instructions

Step 1. Use 4Pcs M8x10 hex socket head cap head screws to fix the lifting column and the workbench.

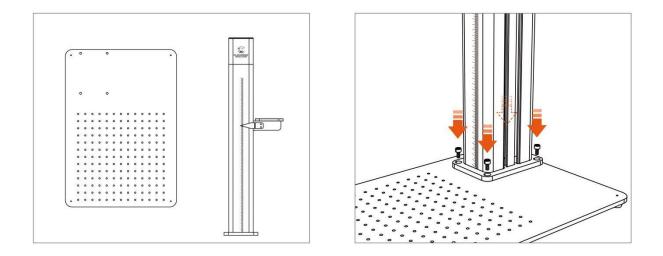

Step 2. Install the light path onto the lifting column using the provided screws. Tighten the four screws with the Allen key.




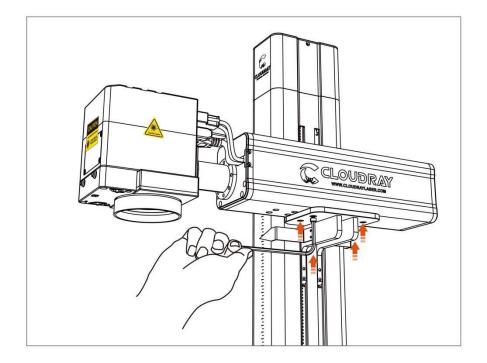

Step 3. Connect the PC-USB cable, Protective cover cable, Rotary cable,

Foot Switch cable, Z Axis cable and Power cable.

Note: Rotary and protective cover is optional parts and plug in the corresponding port.

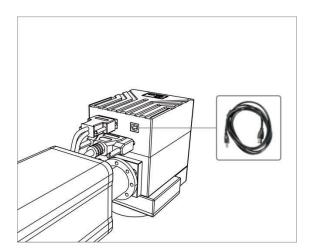




Step 4. Plug in the U disk (software, driver, electronic manual), and connect the USB cable to the PC.

Step 5. Remove the dust cover, start the device and turn on the red light and the LED light at


the front of galvo head.

- ① LED light button
- 2 Red light button
- ③ Camera (For obtaining images)
- (4) Red light (For focusing)
- **(5)** LED light (For supplementing light)

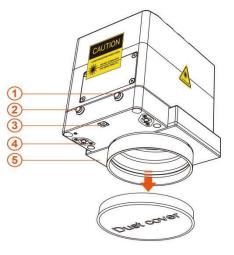

OUDRAY

Step 6. Press up and down button to adjust the two red dots to coincide to achieve focus.

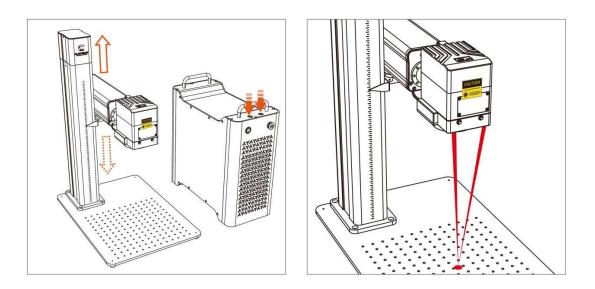

5.5. Control Computer Installation

The control computer should not be placed more than 15 feet (4.5 m) away from the fiber laser marker to avoid possible interference to the signal in its line. Familiarize yourself with your software's image design features and laser control settings before beginning operation of the laser itself.





6. Operation

6.1. Operation Overview




Operate this laser marking machine only in accordance with all the instructions provided in this manual. Failure to follow the proper guidelines detailed here can result in property damage and personal injury.


This section will address only some of the options and features provided by the operation software. Before beginning to use the machine, make sure that you have read this entire manual (particularly the Safety Information above), the separate software manual, and any and all warnings provided on the machine itself.

6.2. Software Installation


6.2.1. Driver Installation

- Turn on the fiber laser.
- Connect your fiber laser and PC via USB cable.
- Start Windows.
- Go to "Windows Settings". Search "Device Manager" and open it.

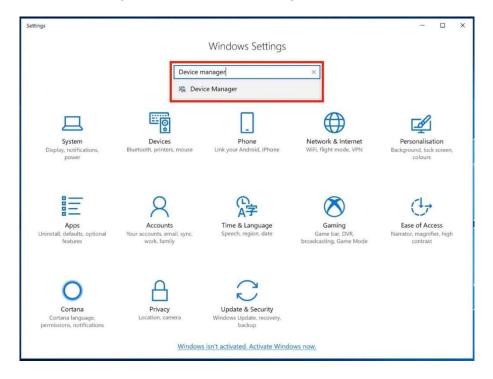

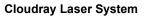

٠

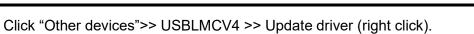

Device Manager		- 0
Action View He	p	
al 🗊 🗊 🖌	1 💻 🗜 🗙 💿	
> 💻 Computer		
> 👝 Disk drives		
> 🔙 Display adapters		
> 🎽 Firmware		
> 🗛 Human Interface	Devices	
> 📷 IDE ATA/ATAPI co	ntrollers	
> 🔤 Keyboards		
> Mice and other p	pointing devices	
> 🤜 Monitors		
> 🔄 Network adapte	\$	
 Other devices 		
USBLMCV4		
> 🖃 Print queues	Update driver	
> Processors	Disable device	
Security devic	Uninstall device	
Software com		
> Software devi	Scan for hardware changes	
> 💐 Sound, video	Properties	
> Storage contr	riopeides	

• Click "Browse my computer for driver software".

	×
← Update Drivers - USBLMCV4	
How do you want to search for drivers?	
→ Search automatically for drivers	
Windows will search your computer for the best available driver and install it on your device.	
\rightarrow Browse my computer for drivers	
Locate and install a driver manually.	
	Cancel

• Select the correct drive folder's location (USB $Driver X64AMD_LmcV2u$).

Please select the subdirectory of the last level. And do not select zipped up or compressed folders.


CLOUDRAY

		\times
←	Update Drivers - USBLMCV4	
	Browse for drivers on your computer	
	Search for drivers in this location:	
	D\EZCAD2\Driver Y Browse	
	☑ Include subfolders	
	\rightarrow Let me pick from a list of available drivers on my computer	
	This list will show available drivers compatible with the device, and all drivers in the same	
	category as the device.	
	Next Cano	el

• Congratulations. You have finished installing the drivers for this device.

6.2.2. Drive Uninstallation

Because of the diversity of windows and hardware versions, drivers are often installed incorrectly (as shown below). At this time, we need to uninstall the driver originally installed before installing another driver.

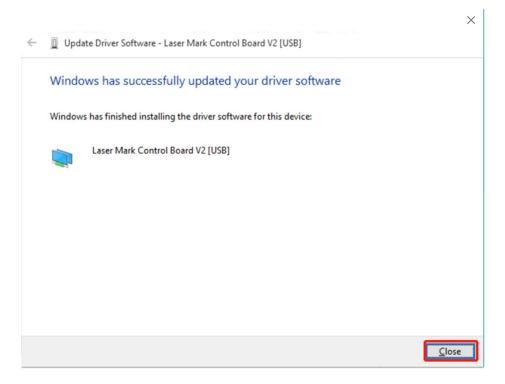

CLOUDRAY



- Go to "Windows Settings". Search "Device Manager" and open it.
- Click Other devices>> USBLMCV2 >> Uninstall device (right click).

Notice: Before install LightBurn need to uninstall this driver of EzCad.

🗄 De	evice Manager		-	×
File	Action View Help			
(= =)) 🖬 🖾 🚺 🖬 💻 💺	× 🖲		
× 🗄	WIN-AEBQHIGIE9T			^
>	Audio inputs and outputs			
>	Batteries			
~	BJJCZ Device			
	🚮 Laser Mark Control Board V4	ILISB1		
>	8 Bluetooth	Update driver		
>	Computer	Disable device		
>	 Disk drives 	Uninstall device		
>	🔙 Display adapters	of mistail defice		
>	Firmware	Scan for hardware changes		
>	🛺 Human Interface Devices	Properties		
>	IDE ATA/ATAPI controllers	Properties		
>	Keyboards			
>	Mice and other pointing devices			
>	Monitors			
>	Network adapters			
>	Portable Devices			
>	Print queues			
>	Processors			~
Uninsta	Ils the driver for the selected device.			

• Enable "Delete the drive software for this device" in the pop-up window.

🛃 Device Manager	- 🗆 🗙
File Action View Help	
* + 🗊 🔛 🖳 🖳 🖳 🌜	
✓ ♣ WIN-AEBQHIGIE9T	
Audio inputs and outputs	
> 🗃 Batteries	
 BJJCZ Device 	
🔣 🙀 Laser Mark Control Board V4 [USB]	
> 🕴 Bluetooth	
> Computer Uninstall Device X	
> 👝 Disk drives	
> 🥃 Display adapters Laser Mark Control Board V4 [USB]	
> 📕 Firmware	
> 🙀 Human Interface Dev	
> 📹 IDE ATA/ATAPI control Warning: You are about to uninstall this device from your system.	
> 🔤 Keyboards	
Mice and other point	
Monitors	
> 🛃 Network adapters	
Portable Devices	
Print queues Uninstall Cancel	
Processors	
> 🛐 Security devices	
> F Software components	
> Software devices	
> 🖣 Sound, video and game controllers	
> Storage controllers	
> 🍢 System devices	
Iniversal Serial Rus controllers	

• After the device manager reloads, click the "Action" from menu and choose "Scan for hardware changes".

• Uninstall is complete, you can try to reinstall the new driver.

EZCAD2 Installation



• Copy EZCad2 folder to PC's hard disc.

to Quick Co access	Paste shortcut	to• to• •	Rename	New item	ss • Properties	Select of Provide the Providence of Providen	none election	
	Clipboard	Organize		New	Open	Sele	ct	
• • •	1 > This PC > USB Dri	ve (E:) > Cloudray				~	U	Search Clo
	Name		Date mod	lified	Туре	Size		
st Q	Driver			10:19 AM	File folder			
	Ezcad2.14.11	Open		50 PM	File folder			
+	Ezcad2.14.11	Open in new window		I6 PM	Compressed (zipped)	3,664	КВ	
H	Ezcad2_EN_Manual	Pin to Quick access		2:40 PM	Microsoft Edge PDF	5,267	KB	
-	Instructions for Rotatin			38 PM	Microsoft Edge PDF	931	КВ	
	📫 LiteMarker Machine Di	Send to	>	1:35 AM	Microsoft Edge PDF	64	КВ	
	LiteMarker User Guide	Cut		7:06 PM	Microsoft Edge PDF	3,479	ΚВ	
	Settings after chage F-	Сору		22 PM	Microsoft Edge PDF	238		
1	USB Driver And Sfotwa .	1.6		. 3:40 PM	MP4 File	10,576		
T 1	USB Driver and Softwa	Create shortcut		6:33 PM	Microsoft Edge PDF	1,110	KB	
2		Delete						
		Rename						
~		Properties						
~				_				
*								
~U								

• Double click the EZCad2.exe to open EZCAD2.

f head	Manage Manage Share View Application Too	E:\Cloudray\Ezca	ANR			- 0 ×
* [Copy Paste	Copy to	Easy access *	Properties	Select all	
	Clipboard	Organize	New	Open	Select	
→ ×	↑ 📕 > This PC > USB Drive (E:) > C	loudray > Ezcad2.14	L11 >		v 0	Search Ezc
^	Name	Date	modified T	rpe	Size	
🖈 Q						
	FONT			le folder		
+	LANG			le folder		
12	PARAM			le folder		
-	plug			le folder		
1	res			le folder		
3 11	AUTOSAVE			ZD File	317 KB	
	i cfglog			ext Document	134 KB	
	CorFile2			pplication	4,896 KB	
	Custom			onfiguration settings	1 KB	
N	DataMgr.dll			pplication extension	1,464 KB	
2	EZCAD.CFG			onfiguration settings FG File	1 KB 13 KB	
	EzCAD.CFG			pplication	2.804 KB	
~	18 EZCADZ			pplication	2,804 KB	
~	S Lmc1.dll			pplication extension	640 KB	
*				pplication extension	40 KB	
-U				ext Document	266 KB	
	mathlib.dll			pplication extension	188 KB	




Important: If user run the software without connect the fiber laser, a caution will appear, and the software will work at demo state. In demo state, we can evaluate the software, but we cannot save files and cannot control laser device.



Important: The Software, Drive, Manual and Correction files are in the Udisk coming with the fiber machine.



6.3. EZCAD main interface view

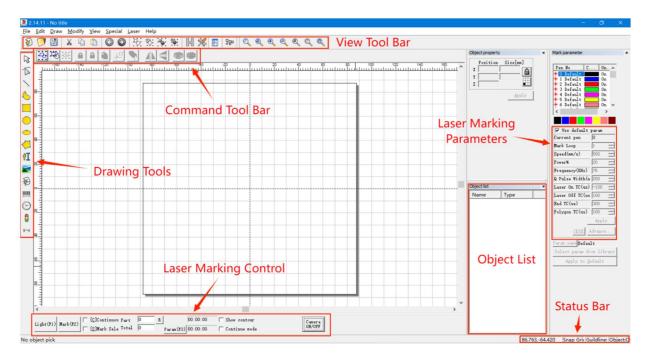

Cloudray LiteMarker marking machine is controlled by the included EZCad2 software, which must be installed on a compatible computer to direct the laser. See its separate instruction for full details on its components and use. Some features which are particularly important to note include the following parameters and controls:

6.3.1. Marking parameter

• **Loop Count / Mark Loop**—Specifies how many times the laser beam will repeat its path, creating greater contrast in the marked image.

• **Speed**—Specifies the speed of the beam in millimeters per second, with greater speed creating less contrast in the marked image.

• **Power**—Specifies the % of the machine's rated power that will be used, with greater power creating greater contrast. Note again that running the machine at greater than 80% power will shorten its service life and 10–75% is recommended for most applications.

• **Frequency**—Specifies the laser's frequency in kilohertz (kHz), with higher frequency producing a denser laser mark and darker engraving.

• **Q Plus Width**—The pulse width of MOPA fiber laser has arbitrary tunability (ranging from 2ns to 500ns). The narrower the pulse width is, the smaller the heat affected area is, and higher machining accuracy can be obtained.



6.3.2. Laser Marking Control Bar

• **Red/Light (F1)**—This item is used to mark the frame of the object without laser output so that users are convenient to orient the workpiece. This function is available in those laser machines which have guide light.

- Mark (F2)—Fires the laser beam and focus improvement.
- **Continuous:** Mark the objects recently until user stop the mark.
- Mark Selected: Only those selected objects would be marked.
- Part: The total counts that the mark command has been executed.

• **Total:** The total counts that the mark command should be executed. The value would decrease 1 automatically after the mark command has been executed each time. It is unavailable under the mode of Continuous Marking. When in marking process, if the amount number is more than 1, the marking operation will not stop until the marking number is 0.

- Parameter: Machine parameter.
- Camera ON/OFF: The switch of the galvo camera.

6.4. Focusing




It is essential to maintain the correct focal distance for every laser marking process. Only when in focus will the laser beam achieve the power density necessary for permanent and clearly legible marking.

Prior to any marking it is therefore necessary to set the correct focal distance between the marking head and the workpiece. An incorrect focal distance is the most common cause of poor or even indistinguishable markings.

The focal distance (A) is measured between the lower edge of the galvo head (B) and the upper surface of the workpiece (C). The correct focal distance depends on the F-theta lens used (focal length).

Note: The data is for reference only and subject to actual usage!



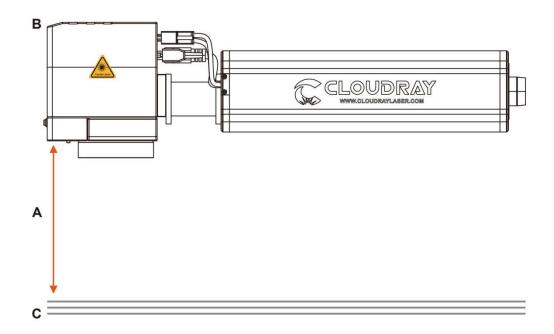

Lens	Scan Field(mm)	Focal distance (A)
F254	175x175	320
F160	110X110	216

*For reference only, the actual situation shall prevail.



Use the manual Z-Axis handle or the up and down buttons on the Keypad to move the head in the correct position.



6.5. Camera calibration

6.5.1. Software introduction

Camera collect image and send it to Ezcad workspace, calibrate program match the camera and scan head coordinate, so with this system, where you put the text on in workspace, where it will be marked on the real part(inside of the calibration area). User can view the part and also adjust the text marking position according to the position of the part, no need to use red point. Use this system in Windows OS, after get the key file from seller, put cursor on ezcad.exe then right keyboard choose 'Run as Administrator(A)'. Only the first time to operate it like this, from the second time, just double click to run it.

6.5.2. Software using

The software consists of two parts, Ezcad2.14.11 - LitePro and CameraCali , which are marking software and camera calibration software respectively. The galvanometer parameter calibration is the same as other Ezcad2 version software calibration. It can be calibrated through the software system or by using the corfile software of nine-points calibration. The calibration method is not described here. The main step is camera calibration, and the specific method is as follows:

1. Unzip the CameraCali software package, open the "LicenseManager" program, click the "


S button, select "Complete activation via the internet" and enter the authorization code (request it from the manufacturer), click "OK" and it will prompt "Activation successful".

Please Input SN	\times
SN is the software activation string provided by ISV.	
ОК	Cancel
UN	


www.cloudraylaser.com



2. Open the Ezcad2 software, draw a point matrix with a diameter of 5mm and an odd number of points in the x/y direction. (The translation distance of the points should be greater than the diameter of the points, and the entire point matrix size should be consistent with the field mirror size). Mark the point matrix, and do not move the marked workpiece after marking is completed.

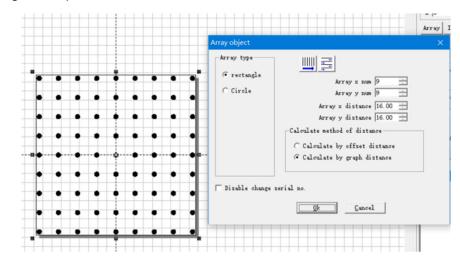


3. Before using camera calibration software, you need to disable the built-in camera in your computer's device manager. The first time you use the CameraCali program, you need to run it as administrator. After opening the program, adjust the camera focus to achieve the best clarity in the image. Right-click in the camera display area and select "Set Camera Parameters." Adjust the XY mirroring to match the actual observation direction. Adjust the "LIGHT/CONTRAST/EXPOSURE" to ensure that each point is clear and not affected by other light sources.

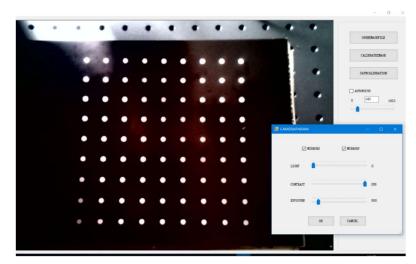



4. Click "CALIBRAEIMAGE" to set the number of rows and columns in the XY direction (which should be the same as the number of dot matrices), and set the "MINSIZE" and "MAXSIZE" (Referring to the pixel size of each dot. The mouse scroll wheel can be used to zoom in on the dot matrix, and a grid will appear. Count the number of grid squares at the diameter of each dot and set the minimum and maximum sizes to ensure that the diameter grid squares fall within these values). The default "CENPOINTCOOR" are (0.0), and the "POINTSPACING" is set to the same value as the dot matrix.

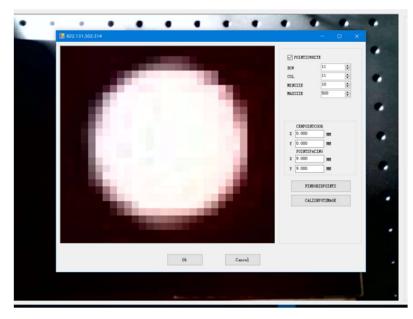

5. Double-click the red box to adjust its size to include the pixel grid and drag the red box to align its center with the pixel grid center. Click "FINDGRIDPOINTS" and green crosshairs will appear at the center of each pixel. If the operation fails, it may be due to incorrect maximum and minimum size settings or a misalignment between the red box center and the pixel grid center. Click "CALIINPUTIMAGE" and you will notice a significant change in the displayed image. Click "OK" and save the correction file.





PON 9 COL 9 COL 9 RINEIZZ 25 RASEZZZ 25 CENFOLFCOOR MM COL 9 RASEZZZ 25 CENFOLFCOOR MM CENFOLFCOOR <th></th> <th></th> <th></th> <th></th> <th></th> <th></th> <th></th> <th></th> <th>~</th> <th></th> <th></th> <th></th> <th></th> <th>POINTISWE</th> <th>ITE</th> <th></th>									~					POINTISWE	ITE	
0 0					-						-	-	RO		9	
• • • • • • • • • • • • • • • • • • •									-		14	•	C01	L		
CENTOLINGOOR CENTOLINGOOR CENTOLINGOOR CENTOLINGOO MM								1								
x 0.000 MX	+	+	•	•	٠	٠	٠	٠	٠				MA	ISIZE	25	
x 0.000 MX x 0.000 MX y 0.000 MX	+	٠	٠								1	•				
x 0.000 MM x 0.000 MM y 1.000 MM	-															
• • <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td>1</td> <td>1</td> <td>+</td> <td></td> <td>ſ</td> <td></td> <td></td> <td>CENPOINT</td> <td>COOR</td> <td></td>							1	1	+		ſ			CENPOINT	COOR	
• • <td></td> <td>•</td> <td></td> <td>*</td> <td></td> <td>•</td> <td>•</td> <td>•</td> <td></td> <td></td> <td>ł</td> <td></td> <td>I</td> <td>0.000</td> <td>MM</td> <td></td>		•		*		•	•	•			ł		I	0.000	MM	
		٠	+		٠	٠	٠						Ŧ	0.000	MM	
+ + + + + + + + + + + + + + + + + + +												•				
								Ť								
	+	•	•	-	+	٠	•	•	•		•		Y	21.000	MM	
FINDOLUPOINTS					٠								1			
													1	FIND	GREEPPOINTS	
CALINFUTDAGE						-	-0 i i i			1013 C		2 - C		CALI	INPUTIMAGE	

6. Copy the saved calibration file into the Ezcad2.14.11(20210302) - LitePro folder (a prompt will appear to overwrite, select overwrite), open the Ezcad2 program, and mark a pattern.When the marked pattern displayed by the camera matches the pattern in the software workspace without any offset, it indicates that the camera calibration is successful.



6.6. Rotary attachment (optional)



Damage to electronics.

Inserting or removing the Rotary attachment while the machine is turned on may irreparably damage the electronics. Switch off the machine before inserting or removing the Rotary attachment.

6.6.1. Mounting the work piece in the rotary attachment

1. Put the rotary axis attachment onto the working table.

2. Connect the rotary axis attachment via the control cable with the 4-Pin plug connector of the motion system.

3. Before you mount the object into the rotary axis attachment, measure the diameter of the object at the position to be engraved with a sliding caliper or a similar tool. Record the value (e.g., 50mm).

4. Fix the slider to make the work piece fitting into the rotary axis attachment.

5. Position the galvo head over the workpiece at the position where you want to mark.

6. Use the manual Z-Axis handle to move the head in the correct position (upper surface at focal length position).


6.6.2. Text rotate marking

1. Create a new text, click the "Draw Test" button on the drawing tools bar.

a) Enter the text in the Test box.

b) Modify the text size and font.

c) Press the apply button for the changes to take effect. (Set the text according to the marking requirements)

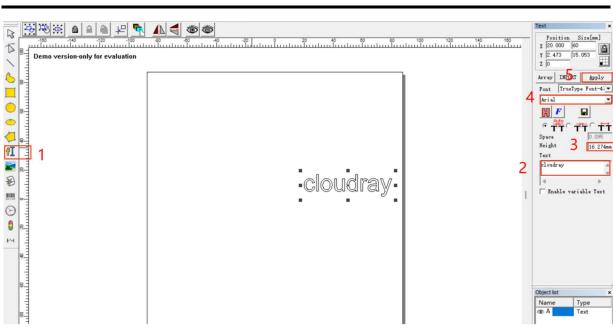


2. Adjust the text direction as required.

Array	Ę.		╈╍⋞ӹ₫
Array Text		(QD)	Angle
TRANSFORM		<u> </u>	90 🕂 Deg
PLASTIC	-80		Center X -21.772 - mm
Distribution	/er:		у 18.330 <u>т</u> mm
Resort			Relatively center
Trim		\bigcirc	
Curve edit	>		
Align	>		Apply to <u>c</u> opy object
Jsf font			Apply


3. Press "Put to origin" button to place the text in the center of the processing area.

CLOUDRAY



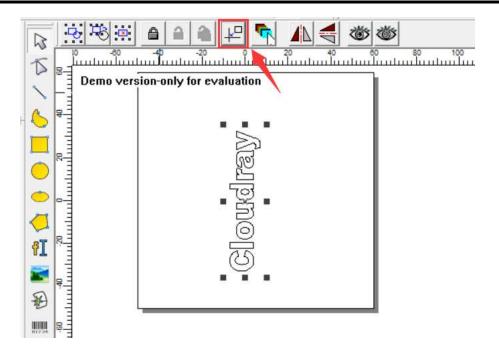

4. Press "Hatch" button to fill in the text.

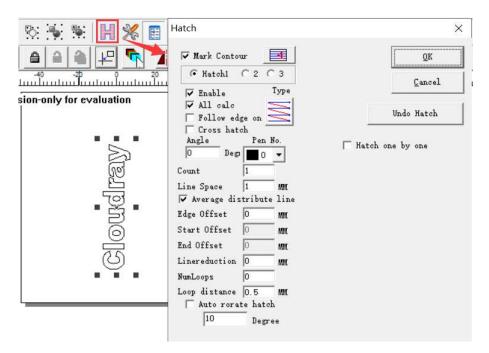

5. Menu bar—Laser—Rotate Text Mark—Set parameters

RotateTextMark SplitMark2	Light(F1) Mark(F2) 2ar am (F3) Quit(F5) Quit(F5)
External Axis1 External Axis2 HardInfo	Rotate Axis
,	Gear Ratio 1 Part Diameter 10 mm
Step per rotation 12800 B	
Dist per rotation5mmMin Coor1000mmMax Coor.1000mmMin Speed100pulse/sMax Speed5000pulse/sAcc. time100msIv Finish goto start postion	✓ Zero Zero Speed 100 pulse/s Zero Offset 0 mm Zero time out 10 s □ Accurate Zero
Speed 5000 pulse/s	Space Comp. 0 mm Shear Comp. 0.000 mm

A. Enable extended axis, reverse mode, enable Y axis (enable X or Y axis according to the direction in which the rotation axis is placed).

B. The value of the number of pulses per revolution is the subdivision value on the drive, and the number of pulses usually used is 12800 or 25600.

C. Enable the function of the rotary, the gear ratio value is determined according to the reduction ratio of the rotating axis, the workpiece diameter is the actual diameter of the workpiece to be processed.

6. Enter the diameter of the workpiece to mark.




Part 0 R Total num	Time part 00:00:00 Time Total	X D.000 Special pos	>	
	00:00:00	0.000	Part Diameter	>
☐ Continuous ✓ Mark Select	ted	5		
	Invert	Axis step	50	mm
art Diameter				
art Diameter	10.000 mm		<u>Q</u> K	Cancel
Light(F1) Mar	k(F2)	Param(F3) Quit(F5)		


7. Press Mark(F2), the fiber laser will mark your image.

6.6.3. Vector file rotate marking

1. Import vector files, modify text size and parameters, and fill files

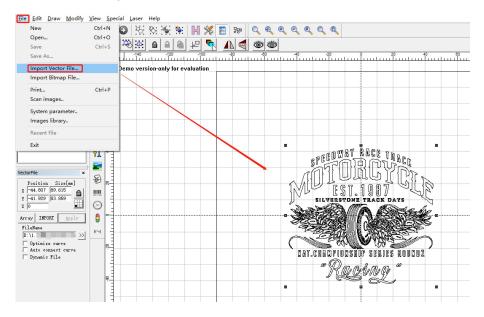



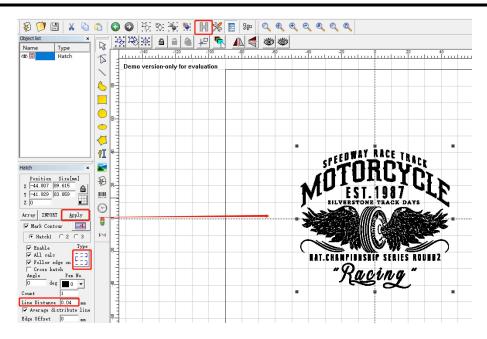

2. Menu bar-Laser-Split Mark2-Set Parameters

	MarkDemo version
Laser Help AngleRotate AngleRotate2 MultiFileMark PowerRuler RingTextMark	Part Time part X Iotal num Time Total 00:00:00 Total num Time Total Oci 00:00:00 00:00:00 Image: Continuous Image: Continuous Image: The Kalesced Image: Continuous Image: Continuous Image: Continuous
RotaryMark RotateTextMark	Enable cross split
SplitMark2 ProjectMark	Light(F1) Mark(F2) Param(F3) Quit(F5)



ID X ▼	ⁿ A	I Rotate Axis Gear Ratio Part Diameter	C	
Step per rotation 12800 Dist per rotation 5 Min Coor. -1000 Max Coor. 1000 Min Speed 100 Max Speed 5000 Acc. time 100	B mm mm pulse/s pulse/s ms	 ✓ Zero Zero Speed Zero Offset Zero time out 	100 pulse/s 0 mm 10 s	
Finish goto start postion Speed 5000	pulse/s	Scale Comp. Space Comp. Shear Comp.	1.000 0 mm 0.000 mm	

A. Enable extended axis, reverse mode, enable Y axis (enable X or Y axis according to the direction in which the rotation axis is placed).

B. The value of the number of pulses per revolution is the subdivision value on the drive, and the number of pulses usually used is 12800 or 25600.

C. Enable the function of the rotary, the gear ratio value is determined according to the reduction ratio of the rotating axis, the workpiece diameter is the actual diameter of the workpiece to be processed.

D. The smaller the split size, the better the engraving effect. Usually, the split size is 1~5mm.

3. Enter the diameter of the workpiece to mark.

CLOUDRAY

ıdray Laser System			
MarkDemo version Part Time part 00:00:00 Total num Time Total 00:00:00 Continuous W Mark Selected Force split Force all split Part Diamete 50.000 mm Enable cross split 0.100	X 0.000 Special position when finish Axis step 5.00 \checkmark Split Size χ 5	Part Diameter	mm Cancel
Light (F1) Mark (F2)	Param(F3) Quit(F5)		

4. Press Mark(F2), the fiber laser will mark your image.



7. 1st Marking Job



Operate this laser marking machine only in accordance with all the instructions provided in this manual. Failure to follow the proper guidelines detailed here can result in property damage and personal injury.

To be safe, never ever run the laser system unattended.

This section will address only some of the options and features provided by the operation software. Before beginning to use the machine, make sure that you have read this entire manual (particularly the Safety Information above), the separate software manual, and all warnings provided on the machine itself.



Step 1. Put on your protective eyewear. Ensure that anyone else who might bet exposed to direct or reflected laser beams is also wearing protective eyewear.

Step 2. Turn on the laser marker by following these steps:

- 1. Rotate in the direction of the arrow and pop out the emergency stop button.
- 2. Press the controller switch.



Turning the laser key and pressing the buttons out of order may cause electrical hazards as the separate power supplies are grounded in order. Do not activate everything quickly. Give each power supply time to come online, activating its fans. 3 seconds is sufficient.




To reduce the risk of electric shock, once the engraver is on, try to touch its components with only one hand at a time.

Step 3. If you previously disconnected the control computer, reconnect it via the USB cable now. If your computer is already connected and EZCad2 is already running, restart it now to establish a connection between the computer and the laser's control board.



Step 4. Load or create a design in EZCad2.

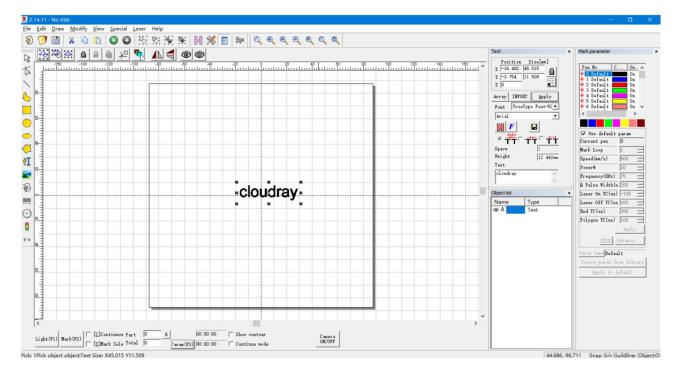



This software supports these file types: Common types of images are supported. (bmp, jpg, gif, tga, png, tif...) Common vector images are supported. (ai, dxf, dst, plt...)

Step 5. Press Hatch button at command tool bar, choose Hatch1(or you can choose the other according to your need). Set the Line space as 0.05mm (Range of 0.01-0.1mm is recommended), then press "OK".

Step 6. Customize your contrast and marking depth by adjusting the marking parameters in EZCad2.

To darken an image, use a higher frequency setting. To lighten it, use a lower one. To increase engraving depth, increase the amount of energy per unit area by reducing the speed parameter or increasing the laser's power or the number of loops. Marking too deep, however, reduces image quality, especially for coated materials. Again, constantly using power settings over 80% will shorten the expected service life of your laser.

Resolution should usually be set to 500 dots per inch. Reducing your image resolution can be helpful in some cases, reducing flaming and increasing the energy of the pulse in a way that improves the quality of the resultant image in some materials such as some plastics.

Step 7. Activate the laser guidance system by pressing Red or hitting F1 in EZCad2. The design should be displayed in red indication light on the workbench, showing where the laser will fire.



Step 8. Place an expendable piece of the material to be engraved in the location shown by the laser guidance. Do not use a different target as the galvo lens automatically focuses on different heights for different materials. Being careful that no part of your body is near the workbench or laser path, press Mark or hit F2 in EZCad2 Lite to fire the test laser. Alternatively, you can activate the laser by using the foot pad.



Step 9. The laser is invisible but will create a buzzing noise and sparks and begin engraving when it is correctly focused on your test material. If no sparks are emitted, the laser is out of focus. Continue to fire it while adjusting the up or down using its height adjustment knob. Small, consistent sparks will be emitted at the marking point when the beam is correctly in focus. Take a note of the correct height for future reference.



Step 10. Replace the test material with the actual material. Use the foot pad or press Mark or hit F2 in EZCad2 to engrave your pattern. Again, do not stare at the laser in operation even with protective eyewear. Watch for possible issues like sparks or fires, however, and be prepared to quickly extinguish a fire if necessary.

Step 11. Examine the quality of your first run and adjust the laser parameters in EZCad2 as necessary to create your desired effect. The foot pedal is particularly useful for continuous or repeated operation of the laser once you've settled on your design and its ideal parameter settings. You can also achieve more control of the marking process by reducing the laser's speed and using the foot pad.

Step 12. When you have finished engraving your design, close EZCad2 and then turn off the laser marking machine by following these steps:

- 1. Press the controller switch.
- 2. Press the emergency switch.



Step 13. Cover the galvo lens and fully clean the workbench. For best results, disconnect your fiber marking machine from its power supply between uses. Unplug it or turn off its intermediary surge protector.



8. Instructions for Specific Materials

When engraving a new material, it can be helpful to engrave a test matrix of small boxes produced with various speed, power, and frequency settings to home in on the exact effect that you are looking for. To speed the process, here are some general guidelines for commonly engraved materials. Again, however, these are only guidelines for your convenience and it is the responsibility of the user to consult material safety data sheets and other sources to ensure the safety of working with various materials and setups. Some of the materials listed will require additional workspace and personal protective equipment in addition to this engraver:

8.1. Metals

When engraving metals, generally use high power, a low frequency, and low to medium speed settings. To avoid using your marker at greater than 80% power for extended periods, you can also get similar effects by reducing the power somewhat while also increasing the number of passes or decreasing the engraving speed. Be mindful that some metals will produce conducting, reflective, and/or toxic dust. Softer metals naturally produce more dust during engraving, while harder metals can require higher power settings that also produce more dust. In addition to the risk to the user's skin and eyes, there may be enough dust produced (especially for repetitive industrial applications) that a full ventilation system is required to address the problem. Similarly, operators and others in the work area may need to use breathing PPE such as masks and respirators.

Aluminum: Bare aluminum requires a somewhat higher frequency than other metals and will never produce a strong black mark similar to those created by engraving steel. When darker marking is required, consider employing anodization or producing a deep engraving that can be darkened by using black epoxy or other filler. Anodized aluminum requires a little more speed but a very low frequency.

Powder Coated Metals: Metals with a powder coating usually require a very high frequency and, for best results, at least 3 passes to remove the coating and polish the bare lower layer.

Precious Metals: Gold and similarly soft metals should be engraved with less power but a moderate speed. Silver and other semidurable metals are best engraved at a slightly higher power and slightly slower speed, but still not at the same power and speed as steel or aluminum.

8.2. Plastics

When engraving plastics, generally use low power and high speed settings. Marking and engraving with too much power or at too low a speed can concentrate too much energy at the point of contact, causing the plastic to melt. Among other problems, this may produce, poor engraving quality, noxious fumes and even fires.



8.3. Stone

When engraving various kinds of stone, generally use moderate power and speed at low frequency. As with ceramics and metals, be mindful of the dust created (especially for repetitive industrial applications) and take similar measures to ensure the safety of users and others in the work area.





9. Maintenance

9.1. Maintenance Overview



Unless otherwise specified, ONLY perform adjustment and maintenance of this device when the power is turned off and the power supply has been disconnected. ONLY allow trained and skilled professionals to modify or disassemble this device.

All maintenance work must be carried out according to the safety regulations.

9.2. Regular Maintenance Procedures

- Always keep the workroom clean and dust-free.
- Ensure the device is fully powered off when not in use.
- Cover the galvo lens when it is not in use.

• Clean the workbench after use with a cloth wetted with greater than 75% rubbing alcohol. NEVER clean this device with abrasive or caustic cleansers, with aerosol sprays, or with enough water to enter any electrical component. Always allow surfaces to fully dry before further use.

• If removing dust from the device's vents using a vacuum, ONLY use the lowest power setting to avoid damage to internal components.

• It is normal for a laser to experience a certain power decline after long-term use. It is recommended to use the equipment reasonably to protect the lifespan of the entire machine; At the same time, high reflective materials have a certain impact on the equipment, and attention should be paid to reasonable processing.



No other servicing should be done by the operator. Do not attempt to service or replace other parts yourself.



9.3. Cleaning the Lenses

This system is fitted with high quality optical components, which under normal operating conditions are maintenance free for their lifetime. However, it may be necessary to clean output lenses, e.g. the scanner flat field lens (f-theta lens) if it becomes covered in dust or fumes.



• Never touch the optical components with your fingers! Oily or dirty hands may damage the lens surfaces.

• Do not use any tools or hard objects to clean the surfaces. Scratches cannot be repaired.

• Never touch the optical components with your fingers! Oily or dirty hands may damage the lens surfaces.

• Do not use any tools or hard objects to clean the surfaces. Scratches cannot be repaired.

• Laser optics are highly sensitive and their surfaces are not as hard as traditional glass.

• They can also be easily damaged by cleaning. It is therefore necessary to ensure that any dirt is removed using a suitable suction device and that the surrounding area is cleaned regularly.

• Do not use compressed air as it contains small quantities of oil and water.

• To remove larger pieces of dirt, only use a lens cleaning cloth with high proof (min. 98 %) alcohol.

• Do not dip the cleaning cloth in the cleaning solution. This contaminates the solution and makes it unusable. Place drops of the solution on the cloth!

• Apply the cleaning solution carefully in order to avoid scratching the surface of the lens.

• Do not wipe the lens with a dry cloth. Do not touch the reverse side of the cloth. Dirt and sebum on the fingers can be transferred to the lens by the cloth and cause damage.

• Distribute the cleaning fluid carefully using small circular motions. Start at the center of the lens and move outwards to the edge. Keep moving the cloth until the entire surface is clean.

• Do not exert any pressure on the lens.