
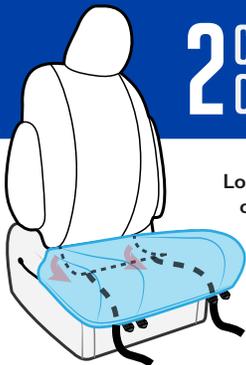


VISIT US AT:
WWW.PROMASTERPARTS.COM

FRONT SEAT COVERS

1 HEADREST REMOVAL

Remove the headrest by pushing the button. If there is a pinhole instead of a button, insert the longer, straight end of an "s" clip into the pinhole of the bracket.


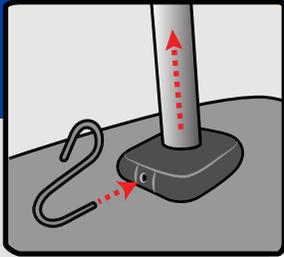


2 CUSHION COVERS

Locate the manufacturer tag stitched on the inside of the cushion covers. These tags identify the doorside of the seat that they should be placed on. Push straps between the backrest and cushion, then towards the front under the seat.

3 STRAPS & BUCKLES



Insert straps into the outer buckles. Pull the straps downwards and tighten. Attach the elastic loop at the back end of cushion cover with an "s" hook to the underside of the seat.

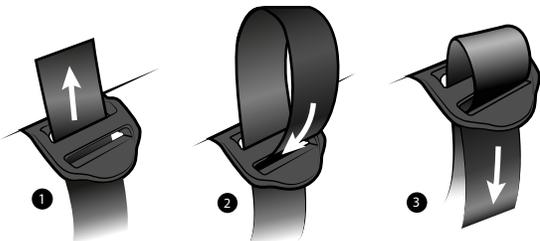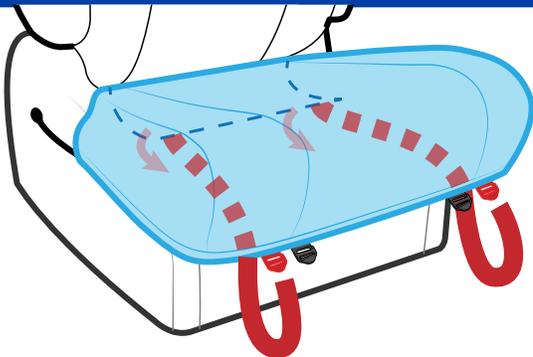

4 HOOK & LOOPS


Pull chord end closest to the door through the space between the backrest and seat cushion. Pull the loop at the opposing end around the side to the back of the seat.

PLEASE use eye protection when attaching elastics and hooks.

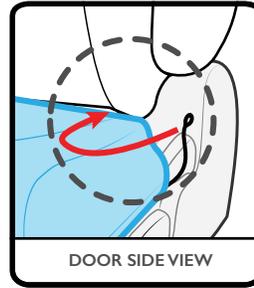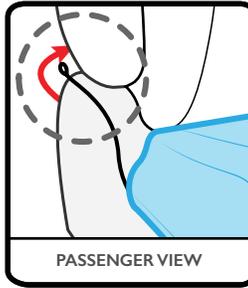

5 BACKREST COVER

Identify the driver and passenger backrest covers and pull them down over your backrests. If your backrests have large bolstered sides, it may be necessary to compact them with your hands until the covers are all the way down.

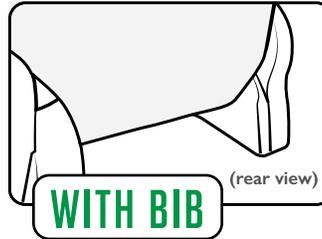

If your hand can't pass through to the back between the backrest and cushion, your seat has a bib. The backrest cover will have straps on the front tab and elastics/velcro on the back. Push the straps between the backrest and cushion, and below the cushion towards the front, and then attach them to the inner buckles. Attach the velcro strip at the back to the carpeting on the seat. Or, if there are elastics, attach them using the "s" clips to the underside of your cushion.




TIP FOR BETTER FIT:

While tightening straps/velcro, push downward on the backrest frontside to smooth wrinkles.




If backrests have side impact airbag tags, make sure to install with the side airbag tags over the airbags.

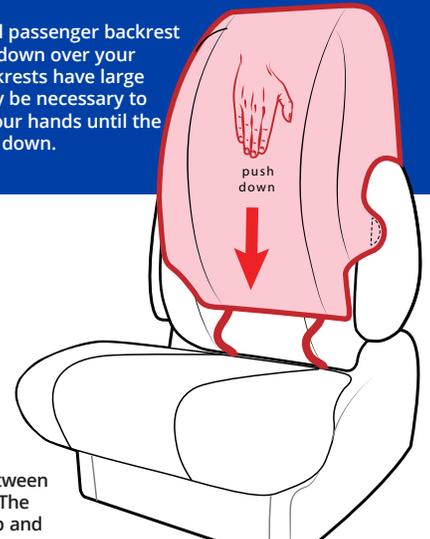


If your hand can pass through to the back between the backrest and cushion, your seat has no bib. Your backrest cover will have a carpeted tab and a velcro strip on the back. Push the front tab between the backrest and cushion to the back, and attach to velcro.

6 HEADREST HOLES

Due to pattern complexity, some covers require headrest holes to be made after installation. Material will not run, and covers are fully warranted.

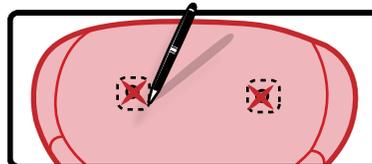

On the top of the backrest cover, mark with a pen an "x" over each headrest post.

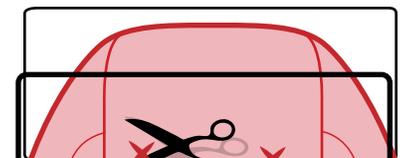

Pinch material, cut along the "x" markings, and tuck the material under the brackets.

