



H O R I Z O N

OWNER'S MANUAL





PRODUCT INFORMATION

| | |
|-------------------|---|
| Unit & Parts..... | 4 |
|-------------------|---|


PRODUCT INSTALLATION

| | |
|--------------------------|---|
| Seat Installation..... | 5 |
| Remote Installation..... | 8 |

PRODUCT OPERATION

| | |
|---------------------------|----|
| Functions & Settings..... | 10 |
| Maintenance..... | 14 |
| Warranty..... | 16 |
| Specifications..... | 18 |

UNIT & PARTS

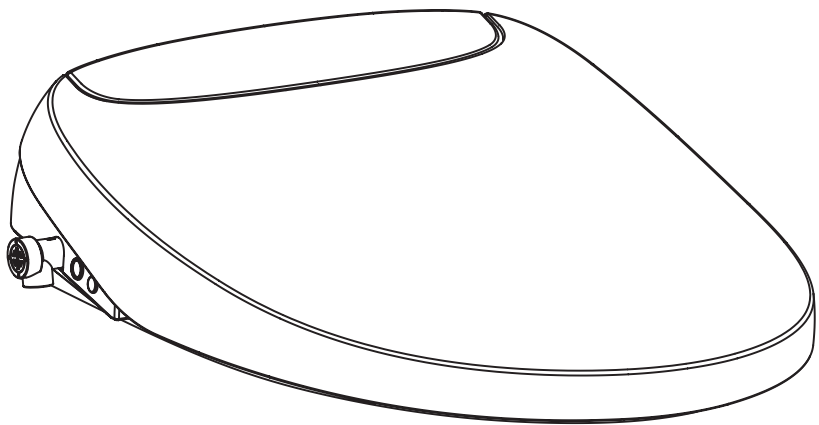


HORIZON BIDET SEAT




REMOTE
CONTROL



AAA
BATTERY



CATCH
PLATE

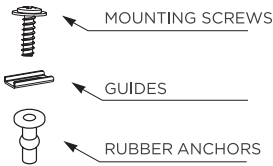

INSTALL SCREW
ASSEMBLY



T-VALVE
(WITH RUBBER
GASKET)



1/2" CONVERSION
NUT (OPTIONAL)




BIDET HOSE
(1/2" to 1/2")



TOILET HOSE
(7/8" to 3/8")




1. Attach Rubber Anchors

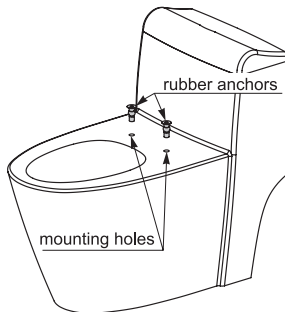

Remove the existing toilet seat and insert the rubber anchors into the mounting holes.

2. Attach the Mounting Plate

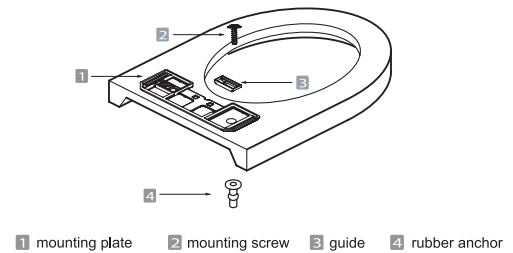


Place the catch plate and guides over the mounting holes. Insert the mounting screw and secure the catch plate to the toilet.

3. Attach the Bidet Seat



Slide the bidet seat all the way on to the catch plate. You will hear a click once the product is securely mounted to the catch plate.


4. Seat Sensor

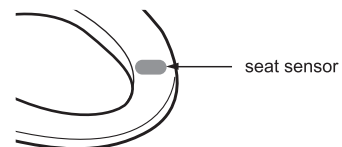

This appliance is equipped with a seat sensor and will not function unless it is occupied.

SEAT INSTALLATION (CONT.)

5. Connect the Water Hose

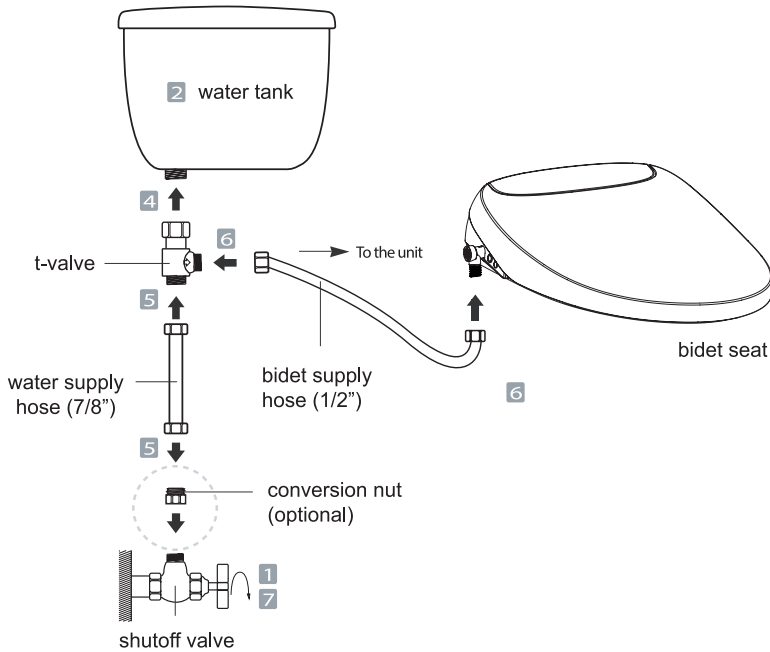

1. Close the water shutoff valve.
2. Flush the toilet to empty the tank.
3. Remove the existing water supply hose from the tank.
4. Install the t-valve on to the tank. Ensure the rubber gasket is properly seated inside the T-Valve.
5. Connect the 7/8" water supply hose to the water shutoff valve and t-valve. If necessary, use the included conversion nut.
6. Connect the 1/2" water supply hose to the bidet seat and t-valve.
7. Open the water shutoff valve.
8. Check for any leaking or dripping.




6. Plug it in!

- Plug the power cord into a 120V power outlet.
- Please contact our service center at 847-458-2334 if you have any questions.

REMOTE INSTALLATION

1. Installation

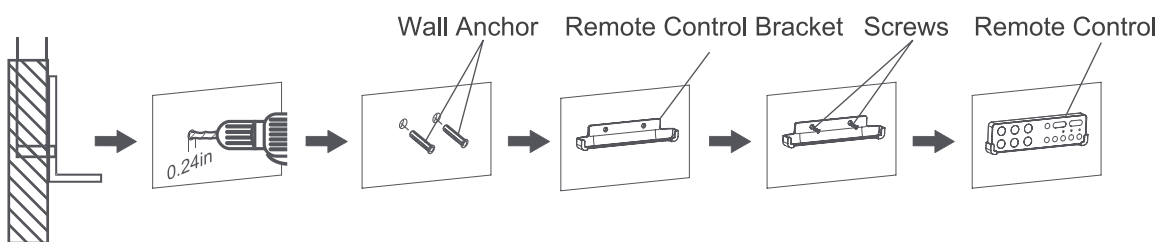

- Drill two 6mm holes on the wall that line up with the remote bracket.
- Install the wall anchors in the newly drilled holes with a hammer.
- Place the remote bracket over the wall anchors.
- Use the provided screws to attach the remote control bracket to the wall.
- Place the remote control on the bracket.



2. Remote Pairing



(Follow these instructions if the bidet seat is not responding to the remote)

- Unplug the bidet seat.
- Press and hold the “STOP” button on the remote until the indicator lights flash.
- Hold the remote close to the bidet seat and plug it back in.
- The indicator lights will stop flashing when the remote has successfully paired.

FUNCTIONS & SETTINGS

Turn On The Seat

- Press the Power Button on the side of the seat.

Pre Nozzle Rinse

- As soon as the seat sensor is activated, a pre-rinse cycle will begin. This process rinses the nozzle in preparation for a wash function. Water will drain into the bowl during this time.

Turn Sounds On/Off

- Press and hold the night light button for 3 seconds to turn beeping sounds on/off.



OPEN/CLOSE LID*

Press to open or close the lid.

OPEN/CLOSE SEAT*

Press to open or close the seat.

*Press and hold the “open/close lid” buttons for 3 seconds to turn the automatic open function on/off.

AUTO

Press to activate a rear wash for 90 seconds, followed by the dryer function for 4 minutes. Pressing the Auto button a second time during the wash will skip ahead to the dryer function.

FRONT

Press to activate the oscillating front wash.
Press again to turn off oscillation.

REAR

Press to activate the oscillating rear wash.
Press again to turn off oscillation.

STOP

Press to stop any operations.

DRYER

Press to activate the warm air dryer.
Press again to adjust the fan speed.

FUNCTIONS & SETTINGS (CONT.)

AIR TEMP | WATER TEMP. | SEAT TEMP.

Press the corresponding buttons to adjust the temperature settings on each feature.

- **Low** - Blue
- **Medium** - Purple
- **High** - Red

WATER THERAPY

Press during a wash to quickly alternate between hot and cold water. This feature assists in stimulating bowel movements.

NIGHT LIGHT

Press to turn the night light on/off.

NOZZLE CLEAN

Press and hold the Water Temp button for 3 seconds to extend the nozzle for manual cleaning. This feature can only be activated when the seat is not occupied.

WATER PRESSURE

The water pressure starts off low. Press the + or - buttons to adjust the water pressure accordingly.

NOZZLE POSITION

Press the arrow keys to adjust the position of the nozzle accordingly.



ULTRAVIOLET STERILIZATION


This feature automatically activates after a wash cycle. The seat cannot be used during this time. This feature can only be activated when the seat is not occupied.

POWER/STOP BUTTON

Short press to power on or long press to enter standby mode.

Short press while powered on to stop any operations.

- When the power button is **blue**, it is in UV sterilization mode.
- When the power button is **red**, it is in the normal power-on state.
(both when ready to use or in use)

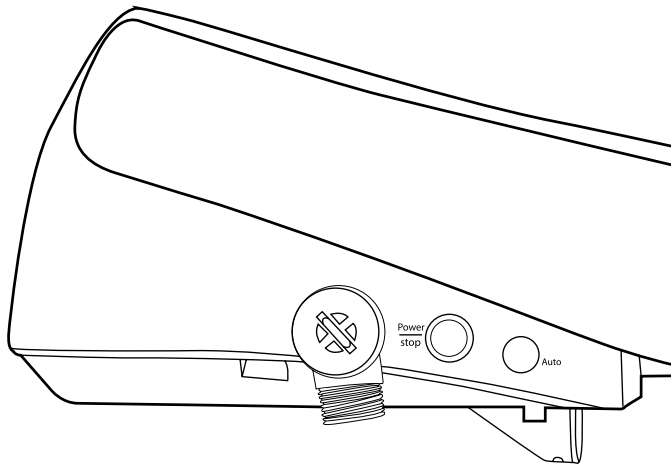

MAINTENANCE



Cleaning the Unit

- Disconnect the power plug and wipe the seat with a dry or damp cloth using a neutral cleaning solution.
- Do not spray water directly on this product.
- Do not use harsh cleaning chemicals, as those can cause damage or discoloration.

Extended Travel

When the seat will not be used for more than a few days, it is recommended to unplug the unit and turn off the water shutoff valve.



WARRANTY

2 YEAR WARRANTY

Your product is warranted against defects in materials or workmanship for (2) years from the date of original purchase. Defective parts or a defective products returned to Bio Bidet Innovation LLC will be repaired with new or comparable rebuilt parts or exchanged for a refurbished product as determined by Bio Bidet Innovation LLC in their sole discretion.

This limited warranty given by Bio Bidet Innovation LLC covers all defects encountered in normal product use, and do not apply in the following cases:

1. Loss of or damage to product due to abuse, misuse, tampering. Mishandling, improper packaging by you, alteration or fail to follow operating instructions.
2. Use of parts or supplies (other than those by Bio Bidet Innovation LLC dealers that cause damage to product.
3. Replacement of discolored or stained parts caused by chlorine, bleach, ammonia and other chemicals, cleaning supplies, oxidation, normal wear and tear.
4. Damage to or malfunction of the unit as a result of improper and negligent installation.
5. Any and all damages to plumbing, walls, floors, ceiling and personal properties resulting from water leaks or breakage. The product must be used at the user's own risk. Therefore, the owner hereby releases the manufacturer and distributor from any and all claims for damages where the above condition exists.



No implied warranty, including any implied warranty of merchantability or fitness or a particular purpose, applies to Bio Bidet Innovation LLC bidet after the applicable period of the express limited warranty stated above, and no other express warranty or guarantee, except as mentioned above, given by any person or entity with respect to Bio Bidet Innovation LLC shall bind Bio Bidet Innovation LLC, (Some States and provinces do not allow limitations on how long an implied warranty, so the above limitation may not apply to you) Bio Bidet Innovation LLC shall not be liable for revenues or profits, inconvenience, expense for substitute equipment or service, or any other special, incidental or consequential damages caused by the use or misuse of, or inability to use product, regardless of the possibility and foresee-ability of such damages. In no event shall recovery of any kind against Bio Bidet Innovation LLC be greater in amount than the purchase price of the product and causing the alleged damage. Without limiting the foregoing, you assume all risk and liability for loss, damage or injury to you and your property and to others and their property arising out of use or misuse of, or inability to use, the product not caused directly by the negligence or Bio Bidet Innovation LLC. This limited warranty shall not extend to anyone other than the original purchaser of the product.

SPECIFICATIONS

| | | | |
|---------------------------|----------------------------|---------------------------------|-----------------------|
| Model | Horizon | Rated Power | 1050W |
| Rated Voltage | 120V, 60Hz | Waterproof Guide | IPX4 |
| Seat Temp | Off / 93.2~102.2°F | Water Temp. | Off / 95 ~ 102.2°F |
| Product Dimensions | 20.79" x 16.38" x 5.59" | Ambient Temp Requirement | 39.2-104° F |
| Water Heating | Instant | Air Temp | Off / 95-131°F |



Warning

- The product must be reliably grounded.
Otherwise, electric shock may be caused by fault or short circuit.
When in doubt, contact the electrical installation company.
- Do not touch or plug the power plug with wet hands.
Otherwise there is the risk of electric shock.
- Do not use defective power outlets or damaged power plugs.
Otherwise, poor contact and damage will lead to electric shock or fire hazard.
- Please use the power socket within the specified range (ac 120V±10%, maximum current above 10A).
Otherwise easy to cause fire, electric shock.
- Do not pull, break, bend or twist the power cord at will,
stretch, crimp, bundle, load bearing or over squeeze.
Otherwise, damaged power lines may lead to electric shock or fire.
- If the power cord is damaged, it must be replaced by a professional from
the manufacturer, its maintenance department or similar department to avoid danger.
Otherwise easy to cause electric shock, fire.
- Do not use industrial water or contaminated water sources.
Otherwise it is likely to cause cystitis, dermatitis and internal corrosion of
machinery will cause electric shock, fire.
- Please avoid installation in damp and easily soaked bathroom.
Do not spray water on the product or rinse it with water, in case of internal
water flooding and loss. Otherwise easy to cause electric shock, fire.
- Do not put lit cigarettes and other incendiary materials into the intelligent toilet lid.
Otherwise fire is likely to happen.
- Do not use in lightning weather (in the vicinity of lightning, please unplug the power plug).
Otherwise, an accident or malfunction may occur.
- In case of damage to the seat and cover plate, in order to avoid danger, please be sure to remove
the power plug, turn off the water source, and contact the local dealer for replacement.
Otherwise easy to happen electric shock, fire danger.
- Please pull out the power plug regularly and wipe the dust on the power plug with dry cloth.
Otherwise, when the insulation is poor, it will cause a fire.

SPECIFICATIONS (CONT.)

- Persons (including children) with physical, perceptual, intellectual disabilities or lack of experience and common sense are requested to use the product in the company of someone.
Otherwise use for a long time, may cause low temperature burns.
- Children should not play with this product.
Otherwise it may cause personal injury.
- It is forbidden to disassemble, repair or modify the product if it is not the after-sales maintenance personnel or the designated professional maintenance personnel.
Otherwise, it is easy to cause electric shock, fire or abnormal operation and cause personal injury.
- Do not urinate into the warm air outlet.
Otherwise there is the risk of electric shock.
- Do not put your hands or other things into the warm air outlet.
Do not cover the warm air outlet when using the product.
Otherwise, it is easy to cause electric shock, fire or abnormal operation and cause personal injury.
- Cleaning and maintenance of plastic parts, please do not use inappropriate cleaner (such as sulfuric acid, nitric acid, glacial acetic acid, carbon tetrachloride, chloroform, acetone, butanone, benzene, toluene, phenol, cresol and dimethyl formamide, methyl ether, soybean oil, 95% acetate, 40% nitric acid and concentrated hydrochloric acid, alcohol, gasoline, kerosene, brake oil, etc.)
Otherwise, the plastic may crack, causing personal injury, electric shock or fire.
- Please do not force back, stand on the cover plate, or roughly open and close the cover plate, seat ring, to avoid damage.
Otherwise, it is easy to damage and cause personal injury.
- Do not add water or detergent to the inside of the smart toilet seat.
Do not wet intelligent toilet lid and power plug with water or detergent.



Attention

- Do not use the “high” or “medium” range of seat temperature, warm air/wind temperature for a long time.
Otherwise, there will be the risk of burns if used for a long time.
- During use, keep the skin close to the sensing area of the seat, otherwise the product will stop cleaning or warm air drying.
It can be difficult for children to touch the sensing area.
- Do not pour urine on the nozzle of the washer.
Otherwise it creates dirt and causes clogging.
- Please use the new hose assembly that comes with this machine. The old one cannot be reused. If it is equipped with other appliances connected to the water source, please replace them as well.
Otherwise, it is easy to cause water leakage and property loss.
- When sudden power failure, please unplug the power plug, close the Angle valve, to prevent leakage.
Otherwise, it is easy to cause water leakage and property loss.
- Please avoid direct sunlight or keep heating equipment near this product.
Otherwise it may cause discoloration of the product.
- In order to avoid the danger caused by the wrong resetting of the thermal circuit breaker, do not supply power through external switching devices, such as timers or circuits connected to regular on-off or off-off by common components.
- Be sure to turn off the water supply Angle valve when removing strainer.
Tighten the strainer firmly when installing it.
Otherwise easy to cause water leakage.
- When it is not used for a long time, such as business trip or travel, please be sure to remove the power plug, close the water source, and drain the internal water.
Otherwise, damage caused by frozen internal water can lead to fire and water leakage.
- During the cold winter months, when products are transported long distances or stored for a long time, the remaining water in the products may freeze.
To prevent damage caused by freezing, please take anti-freezing measures.
Otherwise, damage caused by frozen internal water can lead to fire and water leakage.
- In the same room where this product is installed, a water stop valve shall be installed at a convenient position to cut off the inlet water of this product in case of emergency without the help of tools.
Otherwise, unexpected failure of the product may lead to loss of users.

SPECIFICATIONS (CONT.)

- Please do not pour newsprint, paper pad, sanitary napkin and other easily blocked articles into the toilet.
- Please do not use in the environment below 0°C.
- Do not hit the ceramic with gravity to prevent damage and leakage.
- Please do not insert cementing materials (cement mortar, etc.) in the base of the toilet to prevent cracking due to expansion.
- Please use the battery correctly according to the following methods.
- Please press plus or minus to install the battery correctly; Remove the battery when not in use for a long time. Battery power depletion will affect signal reception, please replace the battery in time; When the battery is discarded, please use tape to insulate it. Please place the battery out of the reach of infants; When the electrolyte touches the body, please wash it with clean water. Do not rub your eyes if the electrolyte accidentally enters your eyes. Rinse with water immediately and seek medical advice immediately. Otherwise, fluid from the battery could cause a fire. If swallowed, seek medical advice. Otherwise it is easy to cause blindness.
- Do not do the following when using the battery.
- Do not carry or keep with metal products (necklaces, watches, etc.);
Do not mix old and new batteries;
Do not decompose the battery or put it into water or fire.



Thank You



Technical Support/Customer Service
7900 S Route 31 Crystal Lake, IL 60014
T: 847.458.2334
TOLL FREE: 877.339.5214

support@biobidet.com
www.biobidet.com