





UVC LED Multi-function Sterilizing Bag

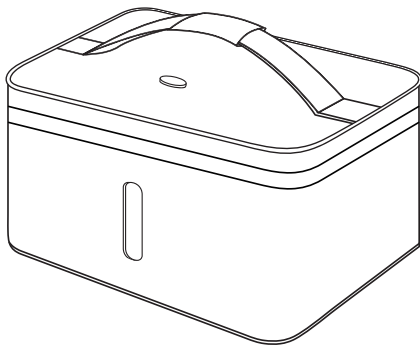

Operating Manual


ABOUT PRODUCT

The product uses Deep UV LED lights to kill most bacteria / virus in daily life. This product is extremely convenience, portable and high disinfection rate up to 99.99%. It's safe, radiation free to take good care of you daily life.


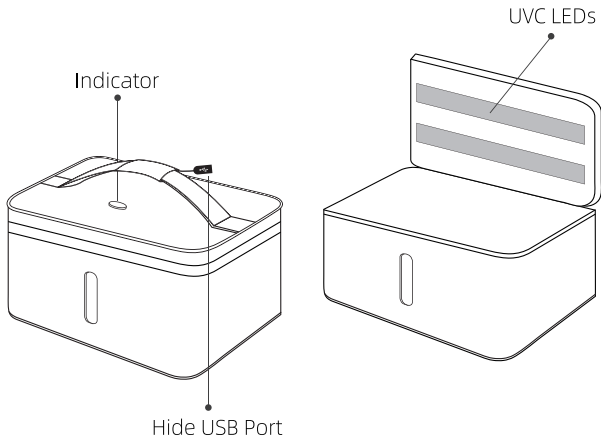


HOW TO USE

- 1.** Plug in USB cable & fully charge the Built-in rechargeable battery.

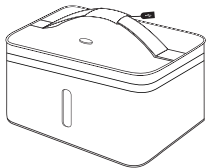

- 2.** Open the bag,
Put in items to be sterilized.

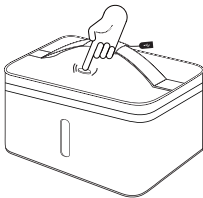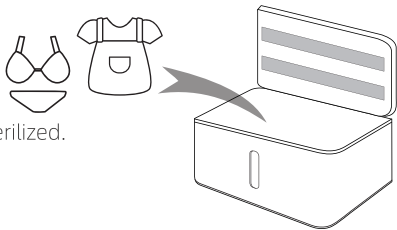

- 3.** Click Sterilizing Button to start sterilization, LED indicator is flickering, and sterilization lasts for 5mins.
- 4.** When sterilization completes, the indicator stop flickering & normally on, buzzing for 6 times, take out items.

APPLICATION

Apply to adult underwear and the baby pants, all personal items surface sterilization.

SAFETY PROTETION

There are safety protection switches in the product, the LED will stop working when the tilt is $> 45^\circ$.

STERILIZING PRINCEPE

LED UVC light kills bacteria by destroying its DNA or RNA, to stop them from reproduction and regeneration physically.

ABOUT BUTTON

Click the button, start sterilizing; (Working time: 5 Minute)
And click the button again in the working time, will be suspended.

INDICATOR STATUS

SN	CONDITION	INDICATOR
①	Working	Blue light flashing
②	Finish	Blue light normally on, buzzing for 6 times
③	Not Kept Flat	Blue light flashing fast
④	Low Power	Red light flashing, buzzing for 10 times
⑤	Charing	Green light flashing

BUZZER STATUS

SN	CONDITION	BUZZER
①	Working	Buzzing for 1 time
②	Finish	After Buzzing for 6 times
③	Not Kept Flat	Long Buzzing for 10 times
④	Low Power	Buzzing for 10 times (with red light)

REF. OF THE COMMON GERMS AND THE RESULTING DISEASE

BACTERIA	DISEASES THAT CAN BE CAUSED
Escherichia coli	Diarrhea, sepsis, urinary tract infection, etc.
Influenza virus	Influenza, bird flu, etc.
Eberthella typhi	Typhoid fever, gastroenteritis, sepsis, etc.
Bacillus dysenteriae	Enteric infectious diseases such as dysentery
Hepatitis virus	Viral hepatitis such as hepatitis A and hepatitis B
Gonococcus	Urethritis, cervicitid, arthritis, ect.
HFMD	Fever, rash, myocarditis, meningitis, ect.
Norwalk viruses	Infectious diarrhea, vomiting, abdominal pain, ect.
Tubercle bacillus	Tuberculosis, inflammation, ect.
Others	No UV-resistant bacteria have been found yet

Note: the above for the pathobiology popular science content.

TECHNICAL PARAMETERS

Product Name	UVC LED Multi-function Sterilizing Bag
Model	B5101
Input	DC5V 1A
LED Beads	12 Pcs
Dimension	260 x 190 x 140mm
Net Weight	520g
Wavelength	260-280nm
Input Connector	Micro USB
Battery Parameters	Battery Type: Polymer lithium battery Battery Voltage: 5V Battery Capacity: 2000mAh
UVC LED Life	10000 hours
Working Temperature	0-40°C
Storage Temperature	-20~50°C

PACKING LIST

- ① Sterilizing Bag x 1
- ② USB Cable x 1
- ③ User Manual x 1

CAUTIONS

- ① Make sure the zipper is completely closed before use;
- ② Click sterilizing button to activate if from Sleeping (Power-Saving) mode;
- ③ The working voltage has to be compatible with the product;
- ④ Study the manual carefully and thoroughly, keep it properly.



CHILDREN PROHIBITED



DO NOT EXPOSE TO EYES & SKIN



NO TRAMPLING



NO WASHING & WATER DIPPING

WARRANTY

Warranty Details

Thank you for purchasing our product. In order to offer you good experience and protect your rights, we provide after-sales service in accordance with regulations & requirements by MII and AQSOQ.

The following circumstances are not covered by warranty:

1. Warranty expires.
2. Malfunction or damage resulted from failure to use, maintain or keep the machine as instructed by the user Manual.
3. Disassemble the machine by customers without permission.
4. Malfunction or damage caused by human errors(Such as misuse, collision or wrong voltage input).

Product Model: _____ Date of purchase: _____

Dealer: _____ User Name: _____

Phone Number: _____

User Address: _____

▲ This voucher serves as an important evidence to resort for after-sales service and shall be kept properly.



BELLEMA CO.

Address: 915 Mariner St, Brea, CA 92821

Telephone: +1 (800) 385-6819

Executive Standard: Q/KLG 006-2019

Website: <http://www.bellemausa.com>

Tmall: <https://bellema.tmall.hk>