





UV Steriliser Manual



Kills up to 99.9% of bacteria, viruses and mould

1. Package contents and descriptions of each part of Model morethanmilkuvsteriliser

Please check the contents before use. If there are any missing parts, please contact the buyer.

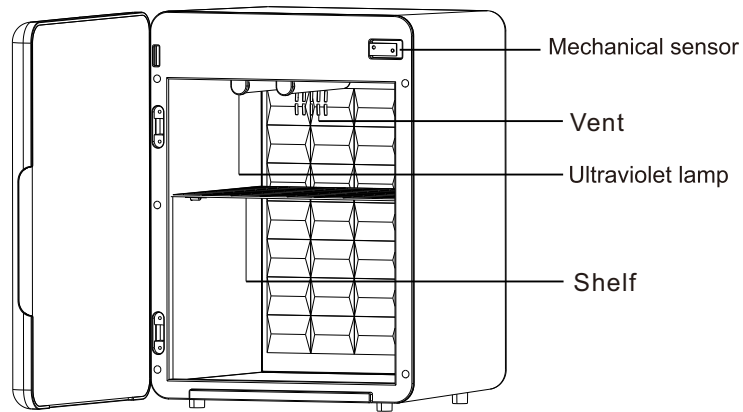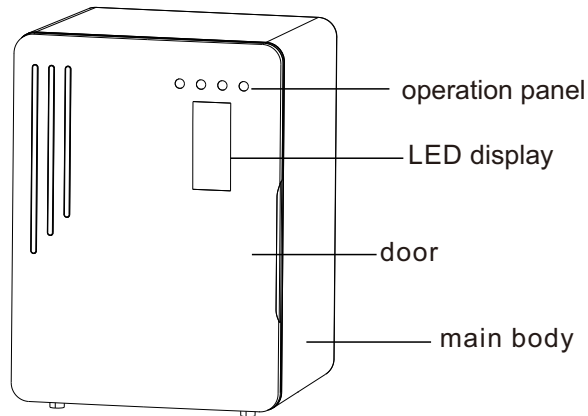

UV lamp is not working

Check the door is closed firmly.
Check the UV lights have been installed correctly (if recently changed).
Ensure the power cord is plugged in.

UV lamp is flickering

UV lamp may need replacing.
Ensure power supply is adequate.

9. Replacement parts

Change the filter every 3-6 months.
Lamps need replacing every 18 months.
** this will vary depending on usage.

10. Warranty

12 month warranty - this does not include accessories.
Proof of purchase is required and all warranties are taken from the purchase date.

Any questions or concerns email us at hello@morethanmilk.co.nz

4. Product specification



Name	UV Cabinet	Service life of ultraviolet tube	≥6000h
Function	UV/Dry/Auto/Storage	UV lamp power	Philips TUV 4W * 2
Pack	1 piece	The main band of ultraviolet light	UV-C,253.7nm
Rated power	110W	Use environment	Please use it indoors
Load capacity of shelf	1.5KG	Room temperature	15°C~30°C
Outline size	265*290*390mm	Humidity	50%~80%
Net weight	4.5KG	Qualification level	Qualified
Gross weight	5KG	Drying temperature	55°C~60°C

Installation instructions for shelf

Shelf should be put on the fixing screws on the sides of cabinet(Fig. One)
 Shelf has fluted left and right sides, put it horizontally on the fixing screws(Fig. Two)

Reminder:

- When placing the articles, please place them in the place where the ultraviolet light is unobstructed and can be directly irradiated, so as to achieve better effect.
- The shelf can be adjusted according to the demand.

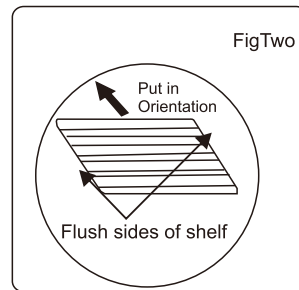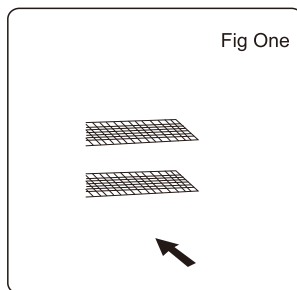

5. FAQs

How much can I fit in here?

The UV steriliser is 20L capacity and can fit up to 12 large bottles

What can I sterilise in the UV Steriliser?

Breast pump parts, bottles, dummies, toys, keys and cellphones to name a few.

How long does it take to sterilise my items?

Quick sterilise option in 6 mins

Dry and sterilise in 31 mins

Can I put my items in wet?

Yes BUT always shake off any excess water before popping in for the dry or auto function.

I don't know what setting to choose?

For most items auto is great as it will dry and steriise everything for you :)
 Electronic items - use sterilise only

6. Hot Tip

If you put wet items in the steriliser - choose the auto function so it dries and sterilises. Ensure all items are visible to the UV light so they can be directly irradiated.

7. Cleaning

Only use a clean cloth to wipe the inside and outside of the product. Do not pour water on the product or use liquid detergent.

Do not use hard cleaning products or scrubbing brushes.









Air inlet - open this cover at the back once a month and take out the filter screen and clean with cold water. It is recommended to clean this once a month to prevent issues with the drying setting.

8. Trouble shooting

Machine won't start

Check the power outlet is working by plugging in another item.
Ensure the power cord is plugged in correctly.
Ensure the cord is not damaged.

2. Description of operation panel

Function	Function Description
 UV	Press the button 1/2/3/4 time: Sterilizing 5/10/15/20mins + 1min air exchange 
 DRY	Press the button 1/2/3/4 time: Drying 30/60/120/180mins + 1min air exchange 
 AUTO	Press the button 1/2/3/4 time: Drying 20/50/110/170mins + Sterilizing 10mins + 1min air exchange 
 STORAGE	Press the button 1 time: First hour: Drying 20mins + Sterilizing 10min After every 2 hours (2mins drying, 1min sterilizing) 

3. Functions:

Dry -

This is for drying items only, this will not sterilize your items.

Sterilise -

This is for sterilising items only, this will not dry your items.

Auto -

This is your main setting to use as it will DRY and STERILISE your items

Storage -

This is used to keep items sterilised.

First hour - it will dry for 20 mins then sterilise for 10 mins.
Every 2 hours it will dry do a 2 min dry then one minute sterilise.