


LOCKKINK × sevanda

# Nautilus Estim Chastity Cage

## Instruction Manual

Read this instruction manual carefully before using the product, and please keep it properly

## ● Remote Diagram:

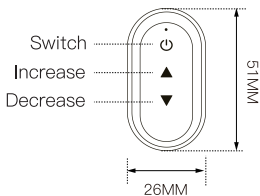

## ● Remote Parameters:

Material:	ABS
Size:	51*26*12mm
Net Weight:	11g
Charging:	Battery
Battery model:	CR2032 – 210mA
Note:	The Remote is not waterproof


## ● Operation instructions on the remote:

1. Press and hold the power button ( ⏻ ) for 2 seconds, the light flashes once, and the remote control turns on.
2. Tap once the Increase button ( ▲ ) to increase e–stim intensity by 1 level  
Tap once the Decrease button ( ▼ ) to decrease e–stim intensity by 1 level
3. When the e–stim intensity is in 1st level, then the indicator light flashes once; When the e–stim intensity is in 2nd level, then the indicator light flashes twice; and so on.Total of 9 e–stim intensities.


## ● Operating instructions on the cage:

1. Press and hold the Switch button on the cage for 2 seconds to turn on the power of the cage, and the cage enters the standby mode.
2. Press and hold the Switch button on the cage for 2 seconds to turn off.
3. When the cage is in standby mode, the indicator light will be always on.
4. The cage will not work properly during charging, and the indicator light will flash slowly;  
After fully charged, the indicator light will always be on.

## ● Product Diagram

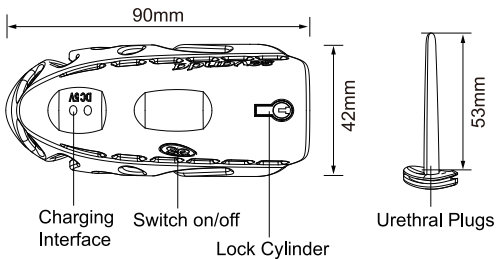


L size Ring

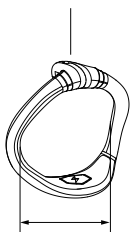


$\Phi$ :55mm  
C:172mm

M size Ring

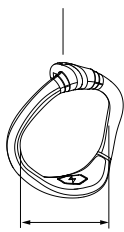

$\Phi$ :50mm  
C:157mm

S size Ring

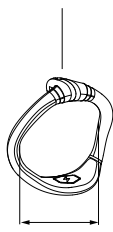

$\Phi$ :45mm  
C:147mm

## ● Product Parameters

Product Name	Nautilus Estim Chastity Cage
Product Size	90×42mm
Ring Size	L: Φ55MM , M: Φ50MM , S: Φ45MM
Product Weight	Remote:11g, Cage: 45g
Product Material	ABS+PC+SILICONE
Product Control	Wireless Remote Control
Certification Standard	ROSH certification
Endurance:	battery fully charged state, less than or about 48 hours
Product Features	9 electric shock frequencies
Waterproof Grade	IPX6
Battery Specification	120mAh polymer lithium battery

1. The charging time is about 60 minutes, and there is a deviation according to the empty state of the battery.
2. The charging voltage is DC 5V, and the maximum value shall not exceed DC5.4V.
3. If you are in a wet environment, such as showering, soaking in urine, etc., it is forbidden to charge immediately.  
Please dry it in a ventilated environment before charging.
4. The working distance of the remote will be about 3 to 8 meters, which varies according to the actual environment and power.
5. The product has a total of 9 e-stim intensities, the voltage is DC 10V~70V, the tolerance is plus or minus 5V  
The specific output voltage is:  
1st level-10V; 2nd level-20V; 3rd level-30V; 4th level-35V;  
5th level-40V; 6th level-45V; 7th level-55V; 8th level-60V;  
9th level-70V
6. After the product is fully charged, the battery will last less than or about 48 hours.

# Warning

1. It is recommended to clean the product frequently, at least more than once after 2 weeks.
2. Do not immerse in water or other liquids. And it should not be worn when swimming or diving.
3. Avoid sharp objects coming into contact with this product.
4. This product is not intended for medical purposes.
5. It is recommended NOT to wear continuously for more than 14 days.
6. If congestion, swelling, or obvious pain is unbearable, it should be immediately stopped. Do not put it in high temperature and open fire. To ensure health, please use it privately and do not wear it interchangeably. After going to the toilet, it should be cleaned up in time and thoroughly. It is normal to feel a sense of restraint during erection.
7. Please avoid strong impact on the product.
8. Mild heating during use is normal.
9. Do not expose the product to strong direct sunlight for too long.
10. Due to the unique product definition, please use this product with caution. Our company is not responsible for any physiological problems caused.