

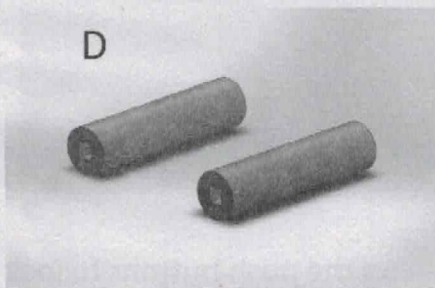
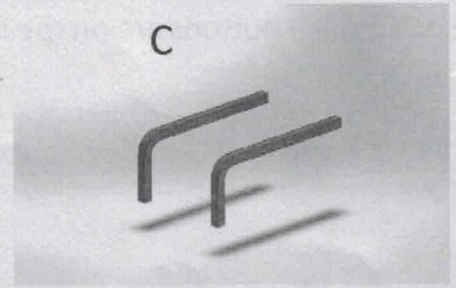


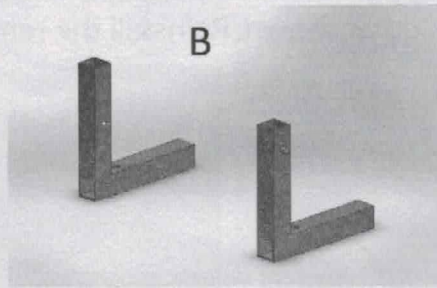

Rear Door Hanger Option Part# 014-120

| Part: | Qty: | Reference |
|------------------------------------|------|-----------|
| Main Frame | 1 | A |
| Support Brackets with spring clips | 2 | B |
| Support Arms with spring clips | 2 | C |
| Foam Protectors | 2 | D |
| Bungee Cords | 2 | E |

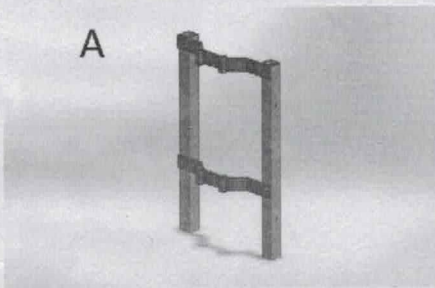

If you have questions, missing parts, or need technical help, call us toll free. You will get faster service and answers to your questions if you call us directly. Do not call your dealer, they will not be able to help you. Call us Monday thru Friday 9-4:30 MST at:

1 866 284 7428




LANGE
Originals

3651 South 700 East
Salt Lake City, Utah 84106
Toll Free 866 284 7428
www.hoistatop.com
www.langeoriginals.com



Step 1

Remove the two bolts on the front of you cart as shown

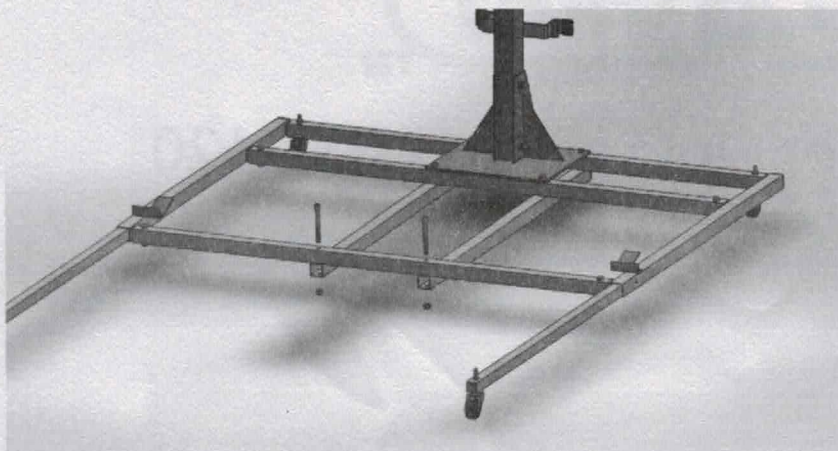

Step 2

With the bolts removed insert the support bracket (part: B) into the open tube. Make sure that the spring push buttons are on the outside as shown. Reinstall the removed hardware.

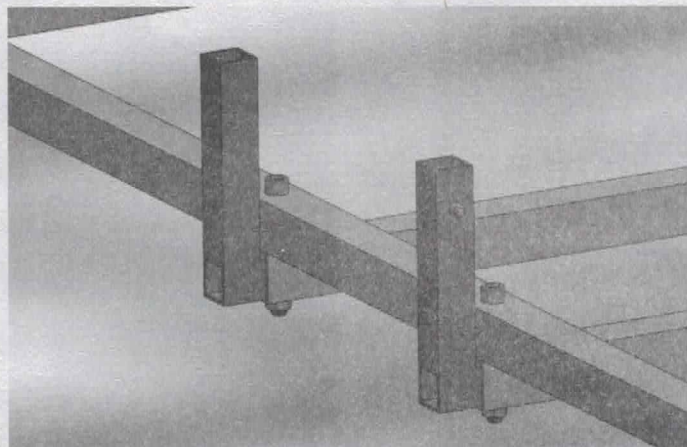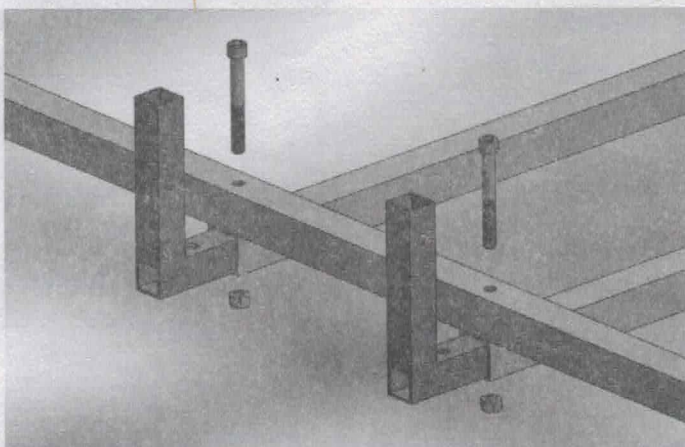

Step 3

Slide your door hanger frame (part: A) over the support brackets allowing the push buttons to lock in place. Make sure that the door hanger hinge barrels are facing out as shown. Next insert your support arms into the top of the door hanger frame, again with the push buttons on the outside allowing the arm to lock in place.

