



# 92/92B Extra Roll Kit Instructions



1) Move large roller to the back, lower set of holes.



2 Add new roller with 3/8 x 1 1/2 bolts to each side.



3) Attach chain to outside of bracket with a washer and lock nut.

**Mechanical Transplanter Co.**

1150 Central Ave - Holland, MI 49423 \* Phone 616-396-8738 \* Fax 616-396-3619


Website: [www.mechanicaltransplanter.com](http://www.mechanicaltransplanter.com)

E-mail: [mtcparts@egl.net](mailto:mtcparts@egl.net)


DIRECTION OF TRAVEL



SMALL ROLLERS

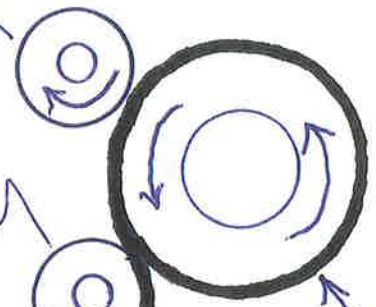

ROLL OF PLASTIC

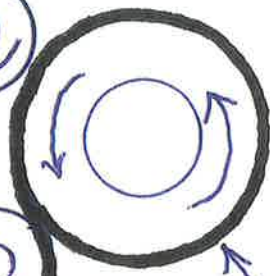

LARGER ROLLER



INSIDE OF PLASTIC IS LAID OUT ON TOP

