I-PK & I-CS Bed Frame Assembly Instructions

Use with models: I-PK170, I-PK165, I-PK465, I-PK470; I-CS374PR, I-CS374PG

Parts included:

All frames include:

- (2) Side Rails with Cross Rails
- (2) Extender Rails
- (2) End Caps
- (2) Screws (4 Screws for I-CS frames)
- (2) Thumb Nuts (4 Thumb Nuts for I-CS frames)
- (1) Center Rail (I-CS frames include a Double Center Rail)
- Set side rails out with the headboard brackets on the same end. Swing out cross rails from the side rails to a 90° angle.




Foot parts for I-PK170, I-PK470, and I-CS374PR:

- (4) Plastic Sockets
- (4) Rollers
- (2) Glides


Foot parts for I-PK165, I-PK465, and I-CS374PG:

- (6) Glides
- 2 Install the glides **OR** the sockets & rollers on the legs.

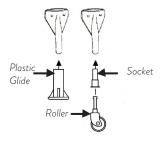


3 Find the keyholes on the cross rails needed for the appropriate size bed. See images below.


For Queen Size Beds



For California King Size Beds




For King Size Beds




Insert rivets on extender rail into selected keyholes. Slide arms away from each other to lock the position. Then insert plug lock into keyhole at the end of the overlap. Repeat on the other side of the bed.




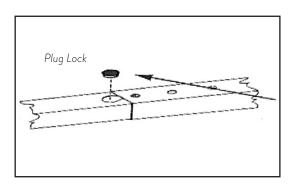

Attach each end of center rail to the extender rails using screws and thumb nuts. First, select the correct holes on the extender rails, which will be determined by your frame model. For I-PK frames, use just the center hole. I-CS frames use the first and third hole (not the center hole).

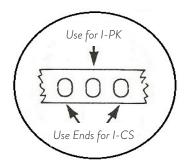

For I-PK model frames: Insert a screw through the hole in the center rail and the middle hole in the side extender rail. Center rail should run head to foot. Secure with thumb nut. Repeat at the other end. Center rail can be used for all sizes.

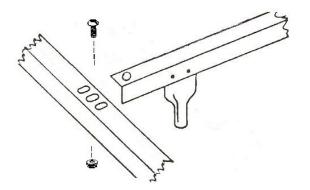

6 Slip the end caps over the foot ends of the side rails (opposite the headboard brackets). Your bed frame is now ready to use.



I-CS model frames have a double center rail. Insert a screw through the holes at the ends of the center rail and the two end holes in the side extender rail. Center rail should run head to foot. Secure with thumb nut. Repeat on the other end.

