




RIZE® REMEDY REMOTE PROGRAMMING INSTRUCTIONS

HOW TO SYNC TWO BEDS TOGETHER

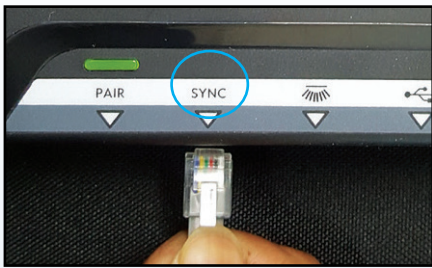

EACH ADJUSTABLE BED ARRIVES PRE-PROGRAMMED TO ONE REMOTE. IF YOU WANT TO OPERATE TWO REMEDY BASES TOGETHER, DO THE FOLLOWING:

STEP 1: MAKE SURE BOTH BASES ARE PLUGGED IN AND ARE NEXT TO EACH OTHER. MOVE BOTH BEDS TO A FLAT POSITION.

STEP 2: INSERT ONE END OF THE SYNC CABLE INTO THE PORT ON THE CONTROL BOX LABELED “SYNC”. DO THIS ON BOTH BEDS. NOW YOU CAN THEN USE EITHER REMOTE TO OPERATE BOTH BEDS TOGETHER.


HOW TO PROGRAM YOUR OWN POSITIONS

THE REMEDY COMES WITH THREE PRESET POSITIONS: INCLINE, ANTI-SNORE, AND ZERO GRAVITY. YOU CAN ALSO CREATE A CUSTOM POSITION BY SAVING OVER ONE OF THE PRESETS. FOLLOW THESE INSTRUCTIONS:

STEP 1: MOVE THE HEAD AND/OR FOOT SECTIONS INTO YOUR DESIRED POSITION.

STEP 2: PRESS AND HOLD THE “PROGRAM” BUTTON AND EITHER THE “INCLINE” OR “ZERO GRAVITY” BUTTON AT THE SAME TIME. HOLD FOR 3 SECONDS. THE NEW POSITION IS NOW STORED UNDER THE PRESET BUTTON YOU SELECTED.

NOTE: FOR SAFETY REASONS THE ANTI-SNORE AND FLAT BUTTONS CANNOT BE REPROGRAMMED.

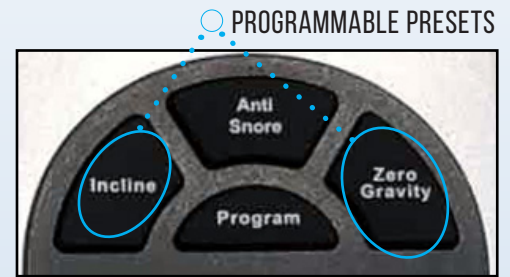


HOW TO RESET YOUR SYSTEM

AFTER YOU HAVE SAVED A NEW POSITION INTO YOUR REMOTE, YOU WILL NEED TO RESET THE REMOTE IN ORDER TO GO BACK TO THE PRE-PROGRAMMED POSITIONS THAT COME WITH THE REMEDY. THIS CLEARS ALL CUSTOM SETTINGS AND WILL ALSO UNPAIR TWO BASES THAT WERE SYNCED TO OPERATE TOGETHER.

STEP 1: PRESS THE “PROGRAM” AND “FLAT” BUTTONS ON THE REMOTE AT THE SAME TIME. THE LIGHT ON THE REMOTE CONTROL WILL START FLASHING.

STEP 2: KEEP PRESSING THE BUTTONS UNTIL THE LIGHT STOPS FLASHING. BOTH THE BASE AND THE REMOTE ARE NOW RESET.

NOTE: TO PAIR ONE REMOTE TO BOTH BASES AGAIN, FOLLOW THE STEPS ABOVE: “HOW TO SYNC TWO BEDS TOGETHER.”

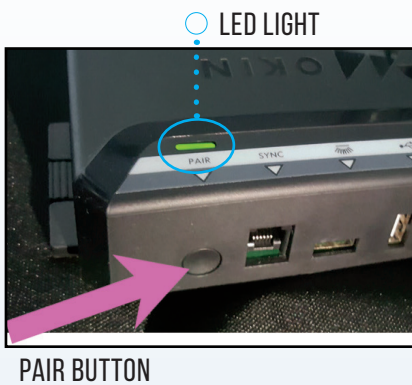

HOW TO PAIR A REMOTE TO YOUR BED

IF YOU REPLACED A REMOTE, OR IF YOU WANT TWO BASES THAT HAD BEEN PREVIOUSLY PAIRED TO OPERATE SEPARATELY, YOU CAN PAIR A REMOTE TO EACH BASE MANUALLY.

STEP 1: UNPLUG ALL BASES AND WAIT 30 SECONDS.

STEP 2: PLUG THE FIRST BASE BACK IN. THE LED LIGHT ON THE CONTROL BOX WILL TURN GREEN.

STEP 3: PRESS THE PAIR BUTTON ON THE CONTROL BOX TWICE. THE LIGHT SHOULD TURN BLUE.

STEP 4: ON THE REMOTE CONTROL, PRESS AND HOLD THE HEAD UP AND HEAD DOWN BUTTONS AT THE SAME TIME. THE LIGHT ON THE REMOTE WILL FLASH.

STEP 5: AFTER ABOUT 30 SECONDS, THE LIGHT ON THE CONTROL BOX WILL TURN FROM BLUE TO GREEN AND THE LIGHT ON THE REMOTE WILL STOP FLASHING. THE REMOTE SHOULD NOW BE PAIRED TO THE BED.

STEP 6: IF YOU HAVE A SECOND BED BASE THAT YOU WANT TO OPERATE SEPARATELY, COMPLETE THE STEPS ABOVE FOR THE SECOND BASE.

