

Packet Inclosure

WARNING: The plastic bag is not a toy. To avoid danger of suffocation, keep away from babies and children. Do not use in cribs, beds, carriages or playpens. Dispose of properly.

Contents of package: two (2) Simply Dump It (*SDI*) wheelbarrow handle assemblies which consists of **adapter**, which slides on your handle, and **grip** which pivots for emptying your load, six (6) sizing shims (three for each side), two (2) 8-32 bolts and two (2) #8 nylock nuts.

Tools needed to assemble: Standard screwdriver, wrench, drill, 3/16" drill bit, rubber hammer (or hammer and block of wood). Sand paper may be needed to prepare oversized handle surface.

INSTALLATION INSTRUCTIONSRead ALL instructions before assembling.****

Fits most wheelbarrow handle sizes when installed properly using installation shims, if required, and securing with bolt and nut provided.

1. Place Simply Dump It (*SDI*) assemblies on your wheelbarrow handles to determine if *SDI*'s are snug without the use of sizing shims. If they are loose, skip to #3 below.


DO NOT HAMMER OR POUND ON THE *SDI* UNIT.

Align *SDI* so that the word "TOP" is up and centered on your wheelbarrow handle. Skip to number 4 to continue with the installation instructions.

2. If your wheelbarrow handle is too large for *SDI*, *light* sanding may be required for *SDI* to fit. To function safely and properly the bolt and nut are a required part of the installation. Skip to number 4 to continue with the installation instructions.
3. If adapter fits loosely on handle then sizing shims are required. Remove *SDI* from handle and separate the six sizing shims. Squeeze and slide sizing shim(s) one at a time into the **adapter**, reinstalling *SDI* after each shim inserted. If still loose, remove and continue placing shims, one at a time, until snug fit on handle is achieved, (offset open adjusting slot on sizing shims for solid spacing under *SDI*) and reinstall *SDI*. DO NOT HAMMER OR POUND ON *SDI* UNIT. Align *SDI* so that the word "TOP" is up and centered on your wheelbarrow handle. *Light* sanding may be required even if shims are used.
4. **TO FUNCTION SAFELY AND PROPERLY THE BOLT AND NUT ARE A REQUIRED PART OF THE INSTALLATION.**
5. Position 3/16" drill bit in drill over the letter "O" in the word "TOP" on the **adapter** and drill straight down completely through *SDI* and your wheelbarrow handle.
6. Place one (1) 8-32 bolt into hole and one (1) #8 nylock nut, applied snugly with threads going completely through the nylock nut, on the bolt (both provided).
7. Your Simply Dump It wheelbarrow handle accessory is now ready to use and enjoy.

NOTE: To function safely and properly the bolt and nut are a required part of the installation.

CAUTIONS: Nylon products may deteriorate and weaken with prolonged exposure to direct sunlight. Moving parts - may pinch fingers or other body parts. Minor children must be supervised when operating.

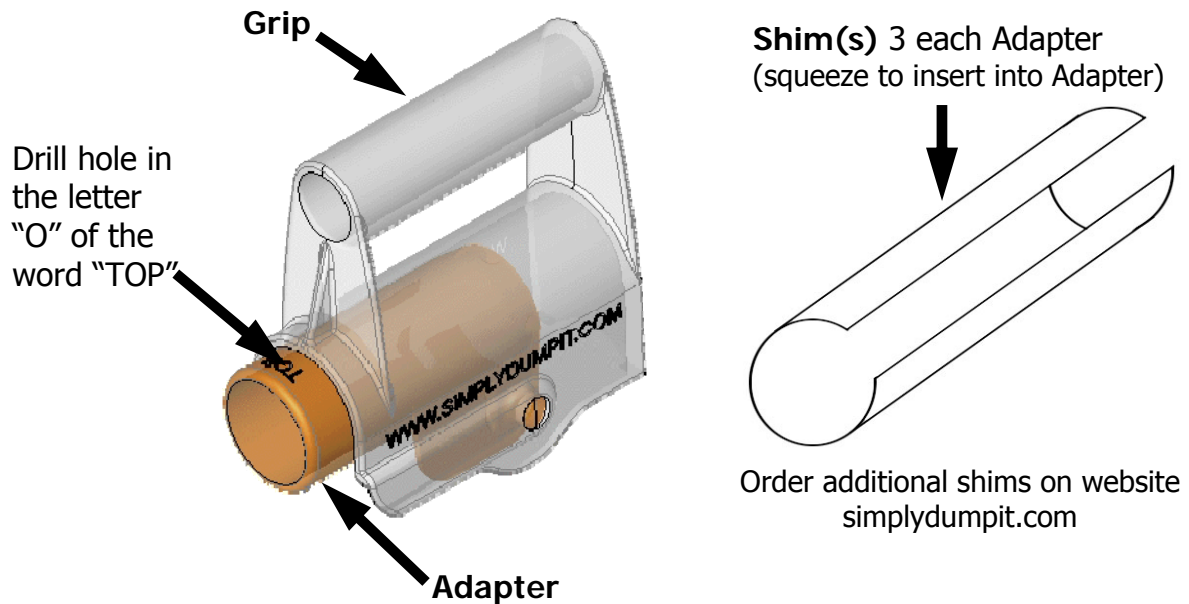

Insert shims one at a time into adapter

Complete Installation Instructions, with photographs, are available on online at <https://simplydumpit.com/pages/how-to-install>.

Maintenance: No maintenance is necessary except to regularly clean *Simply Dump It* assembly to remove debris, particularly when transporting sand, concrete or other abrasive materials.

WARRANTY

Simply Innovated warrants the *Simply Dump It* (SDI) handles for household use for the period of one hundred eighty days (180 days) from original purchase against defects in material and workmanship. Defective product will be replaced (exchange only) upon submission of proof of purchase and when *Simply Dump It* handles are sent pre-paid to the return address on the website at <https://simplydumpit.com/pages/warranty>. This warranty gives you specific legal rights and you may have other rights which vary from state to state.

THE COMPANY SHALL NOT BE LIABLE FOR AND WILL DETERMINE IF THERE HAS BEEN, IMPROPER USE OR INSTALLATION, NORMAL WEAR, ACTS OF NATURE, ABUSE, UNAUTHORIZED REPAIR, INSTALLATION MODIFICATIONS OR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THE PRODUCT. SUPERVISION OF A MINOR AND THE PROPER HANDLING OF THE SDI IS THE RESPONSIBILITY OF THE PURCHASER.

Manufactured for and distributed by:
Simply Innovated
simplydumpit.com

Patent#7121565

Made in USA