



1-1/8" (28mm)
DIAMETER SWING-UP
GRAB BAR WITH
LOCKING MECHANISM


INSTALLATION GUIDE:

1. Provide concealed anchor device or backing as specified or required in accordance with local building codes before wall is finished.
2. Hold mounting plate to the wall in desired location. This grab bar is designed to swing in an upward manner and should be installed to swing in that direction. (**Important note:** in order to ensure proper safety when in use, screws should be placed so that they are drilled into in-wall studs.) Use mounting flange as a template to mark the locations of the four mounting screw holes. Remove grab bar and drill flange mounting holes in the marked areas.
3. Place the folding grab bar back on the wall, aligning the holes installation holes of the grab bar with the holes on the wall.
4. Insert 1/4"-20 x 2" (M6.3-1 x 51mm) stainless steel screws into the drilled holes and tighten as much as necessary.


Note: Concealed mounting screws and anchor devices are not included with this grab bar. It is important to use the proper types of screws and supports necessary for you wall type. If you are unsure what type of support is necessary please consult a professional. **For your safety, proper in-wall support is imperative.**




1-1/8" (28mm) DIAMETER SWING-UP GRAB BAR WITH LOCKING MECHANISM

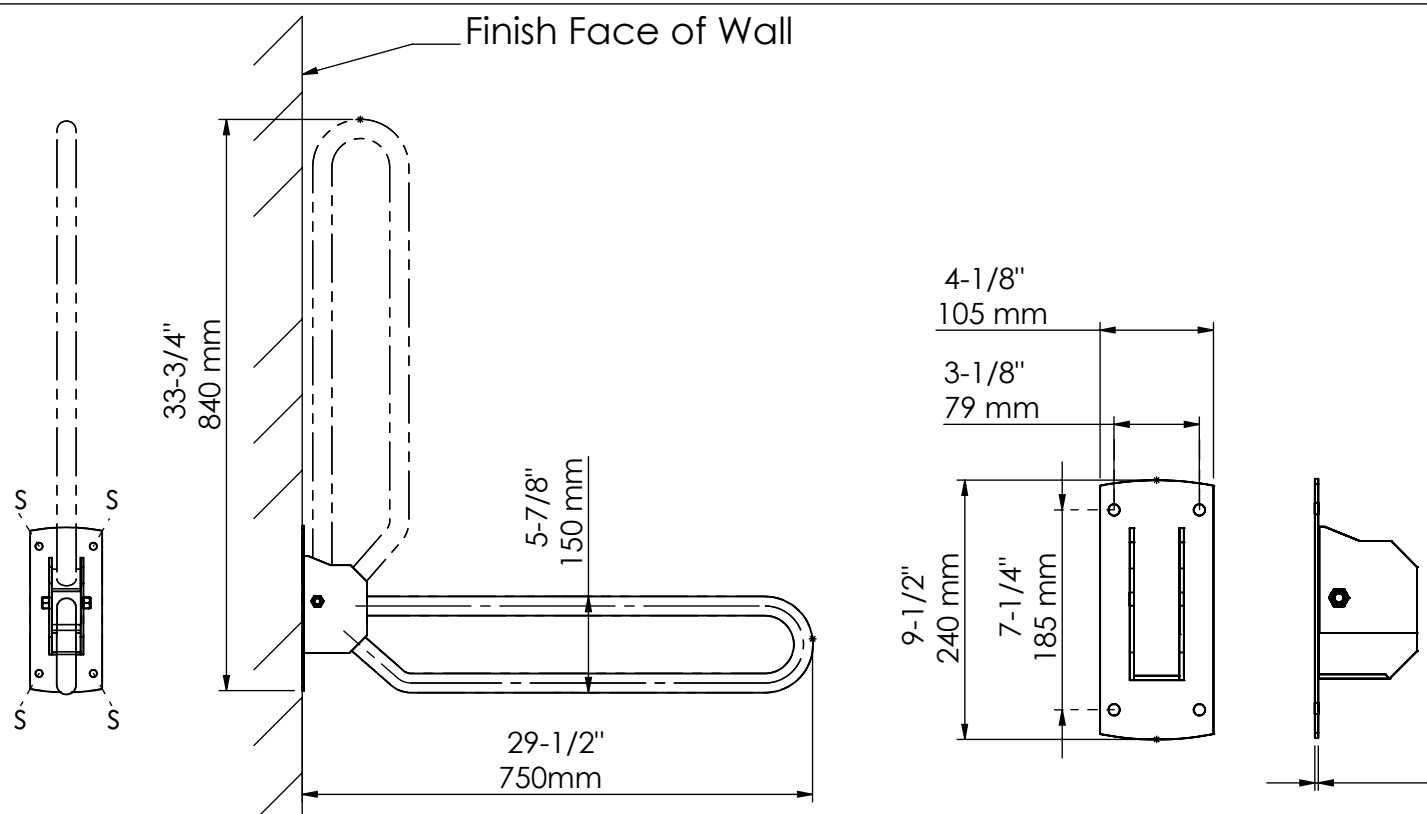

Mounting Flange

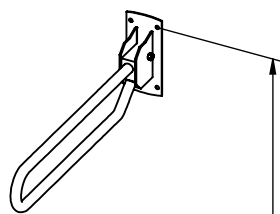

27" - 29-57/8"
710 - 760 mm

**MATERIALS:**

- Grab Bar - 18-8, Type 304, 15-gauge (5/8") stainless steel tubing with satin-finish. 1-1/4" (32mm) outside diameter. Tubing is tig argon welded to mounting flanges.
-
-