



MEDIFY AIR

A HIGHER STANDARD OF AIR PURIFICATION



MA-45WM AIRPURIFIER

READ AND SAVE THESE INSTRUCTIONS
INSTRUCTION MANUAL AND WARRANTY INFORMATION

MA-45WM
Rev: 11/08/21

LIFETIME WARRANTY:

IF FILTERS ARE REPLACED ON TIME WITH GENUINE MEDIFY REPLACEMENT FILTERS.

IMPORTANT SAFETY INSTRUCTIONS:

WHEN USING ELECTRICAL PRODUCTS, ESPECIALLY WHEN CHILDREN ARE PRESENT, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED, INCLUDING THE FOLLOWING:

READ ALL INSTRUCTIONS BEFORE USING.

DANGER — TO REDUCE THE RISK OF ELECTRIC SHOCK:

- Always unplug the air purifier from the electrical outlet immediately after using and before cleaning or replacing filters.
- Keep cord away from heated surfaces.
- Always place the air purifier on a firm, level surface.
- Always place the air purifier at least 3 feet from heat sources such as stoves, radiators, or heaters.
- DO NOT reach for an appliance that has fallen into water. Unplug it immediately.
- DO NOT place or store appliance where it can fall or be pulled into a tub or sink.
- DO NOT place in or drop into water or other liquid.
- Keep dry — DO NOT operate in wet or moist conditions.
- Check your air purifier cord and plug connections. Faulty wall outlet connections or loose plugs can cause the outlet or plug to overheat. Be sure the plug fits tightly in the outlet.

NOTE: This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of shock, this plug is intended to fit only one way in a polarized outlet. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician.

DO NOT attempt to defeat this safety feature. To do so could result in an electric shock hazard.

WARNING — TO REDUCE INJURY TO PERSONS:

- Always unplug the air purifier when not in use.
- Do not operate the air purifier with a damaged cord or plug, or has been dropped or damaged in any manner. Contact to www.medifyair.com for examination, electrical or mechanical adjustment, or repair.
- This air purifier is not intended for use in bathroom, laundry areas, and similar moist indoor locations.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic areas where it can be tripped over.

- To disconnect the air purifier, first turn controls to the off position, then remove plug from outlet.
- Do not tilt or move the air purifier while it is in operation. Shut off and remove plug from outlet before moving.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the air purifier.
- Do not block air intakes or exhaust in any manner. Do not use on any soft surface, like a bed, where openings may become blocked.
- Use this air purifier only for its intended use as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- DO NOT use outdoors.

SAVE THESE IMPORTANT INSTRUCTIONS FOR EASY REFERENCE.

UNIQUE FEATURES & SPECIFICATIONS

GENUINE MEDIFY TRUE HEPA H13 FILTRATION SYSTEM

- **TRUE HEPA H13 FILTRATION**

Removes up to 99.9% of airborne particles as small as 0.1 microns, such as allergens, pollen, dust, germs, pet dander, odor, mold spores, and smoke from air that passes through the filter.

- **CARBON ODOR FILTRATION**

Reduces odors and VOCs (volatile organic compounds)/gases as shown by independent laboratory testing.

- **PRE-FILTER**

Captures large particles.

4 SPEEDS

1,2,3,and 4 speeds

BUILT-IN TIMER

Choose any time from 1 to 12 hours.

REPLACE FILTER INDICATOR


Illuminates when it is time to replace the filter.

SUGGESTED ROOM SIZE

Up to 550 sf every 15 min and up to 1100 sf every 30 min. Portable air purifiers will be more effective in rooms where all the doors and windows are closed.

AIR CHANGES PER HOUR

This air purifier will purify the air up to 550 sf every 15 min and up to 1100 sf every 30 min (assuming an 8 FT/2.43 M ceiling) on high speed in a closed room.

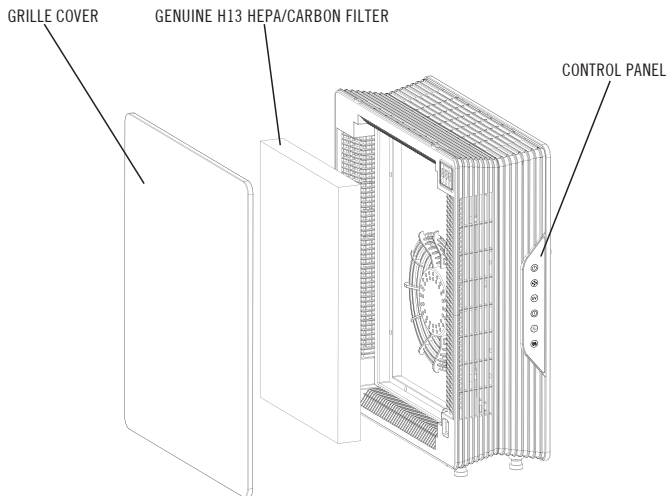

CONTROL PANEL





HOW TO USE


BEFORE TURNING THE UNIT ON

- Take the air purifier out of the box and remove the clear protective plastic bag around the filters.
- Mount the air purifier securely on the wall or place the air purifier on a level surface.
- Plug the power cord into a standard AC outlet.



POWER BUTTON AND FAN SPEED SETTINGS

- To turn the air purifier on, press the power  button.
- This air purifier has 4 fan speed settings: 1,2,3,and 4 speeds. The higher the fan speed setting, the faster the air will be purified. To select or change fan speed, press the fan speed  button until the desired setting is reached.

TIMER

The Air Purifier can be programmed to turn off after a preset amount of time. Press the  button to program the timer. Each press will add one hour up to a total of 12 hours. Keeping the button pressed will automatically increase to 12 hours, 1 hour at a time.

DIMMER


Press the dimmer  button to change the backlight to desired brightness, there are 4 brightness levels to change for all buttons' backlight LEDs. The dimmer  button backlight will turn off for 1 second when the dimmer button been pressed.




FILTER REPLACEMENT

Filter Indicator Light

When it is time to replace the True HEPA H13 filter based on the air purifier's hours of use, a reminder will appear on the LED display to alert you to change the filters before further use.


REPLACING THE TRUE HEPA H13 FILTER

For optimal performance, replace every 2500 hours under normal usage conditions. Once the filter has been replaced, press and hold the dimmer  button for 3 seconds to reset the indicator.

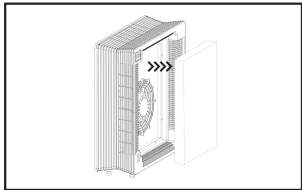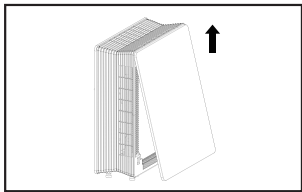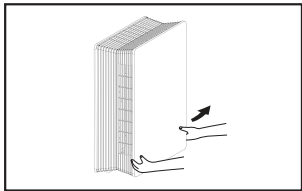


1. Unplug the air purifier. Open the filter grille covers on the left and right of the unit by pushing the lock tabs on the top of the covers.
2. Take away the grills from the unit.
3. Pull the tabs to remove the old filter.


To purchase genuine Medify replacement True HEPA H13 filters, model MA-45WM, visit www.medifyair.com.

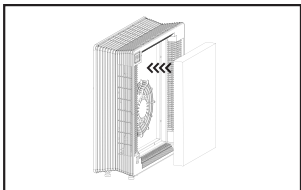


4. Install a new genuine Medify replacement filter with the filter Tabs facing out.

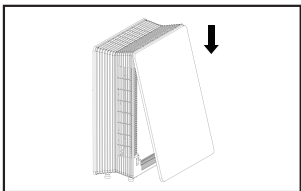

5. Align the tabs at the bottom of the grille overs with the unit. Gently push the grille covers until they snap back into place.

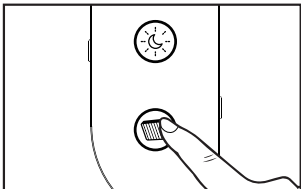







6. Plug the power cord into a standard AC outlet. Press and hold the dimmer  button for 3 seconds to reset the indicator.

MA-45WM wall-hanging bracket installation instructions

1. Preparations before installation


- Installation tools: electric drill, $\Phi 10$ drill bit, cross screwdriver, etc;
- Check whether the accessories are complete according to the accessories list;

No	specification	Quantity
A	 4	4
B	 4	4
C	 10mm	4
D	 4	4
E	 M6*20	4
F	 M4*50	2


- Installation location selection: must be able to bear the weight of the product and easy to operate maintain, filter replacement, etc.;

2. Installation steps


- Attach the base to the wall

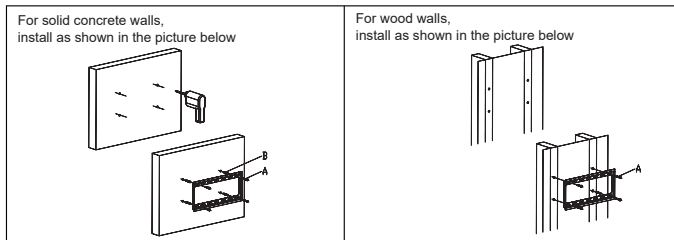

- Fix the bracket to the MA-45WM unit.

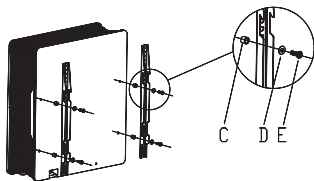


- Attach the MA-45WM unit to the wall

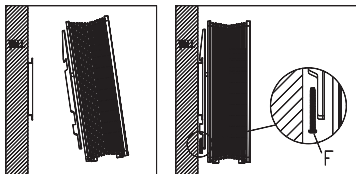

CLEANING AND MAINTENANCE

CLEANING THE PRE-FILTER

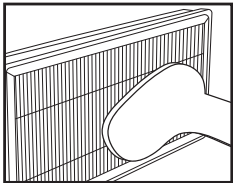

NOTE: For best performance, vacuum the pre-filter once a month under normal usage.

1. Unplug the air purifier.
2. Remove the True HEPA H13 filter as described in the Replacing the True HEPA H13 Filter section.
3. Place the True HEPA H13 filter back into the air purifier and close grille.
4. Plug the power cord into a standard AC outlet.

FOR BEST PERFORMANCE:

- NEVER use water or any cleaners or detergents to clean the True HEPA H13 filter.
- Clean off the outside of the unit with a dry cloth as needed.
- NEVER use water, wax, polish, or any chemical solution to clean the outside of the unit.
- Clean off the grille cover using a damp cloth or the brush attachment of your vacuum as needed.
- Replace the True HEPA H13 filter every 2500 hours under normal usage conditions.
- Always use a genuine Medify replacement filters to keep your lifetime warranty active.



This product earned the ENERGY STAR by meeting strict energy efficiency guidelines set by the US EPA. US EPA does not endorse any manufacturer claims of healthier indoor air from the use of this product. The energy efficiency of this ENERGY STAR qualified model is measured based on a ratio between the model's CADR for dust and the electrical energy it consumes, or CADR/Watt.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	SOLUTION
Unit will not operate	<ul style="list-style-type: none">• Unit is not plugged in• Power button not pressed• No power to unit	<ul style="list-style-type: none">• Plug unit in• Press the power button to turn the power on• Check circuits, fuses, try a different outlet
Reduced airflow	<ul style="list-style-type: none">• The back grille may be blocked• The filter needs to be replaced	<ul style="list-style-type: none">• Make sure side intakes are not blocked or the front outflow area• Replace the filter
Reduced odor removal	<ul style="list-style-type: none">• The filter needs to be replaced	<ul style="list-style-type: none">• Replace the filter
Excessive noise	<ul style="list-style-type: none">• The unit is not level or securely mounted to the wall	<ul style="list-style-type: none">• Place the unit on flat, level surface or mount the unit securely on the wall.
Replace filter light remains lit after filter replacement	<ul style="list-style-type: none">• The replace filter indicator needs to be reset	<ul style="list-style-type: none">• Press and hold the DIMMER button for 3 seconds until the replace filter light turns off

WARRANTY INFORMATION

To register for your lifetime warranty, go to www.medifyair.com and go to the warranty section to register your unit. Medify offers a lifetime warranty for parts and service as long as you are on record as having purchased Genuine Medify Replacement Filters as directed every 2500 hours of use.

See website for details and easy online registration.

Medify Air

1325 SW 30TH AVENUE
DEERFIELD BEACH, FL
33442

www.medifyair.com

Contact: info@medifyair.com

Phone: (888)258-1008