


**INSTALLATION MANUAL** 

# **Counterbalance Monitor Desk Arm**



**ELTGM**01-1

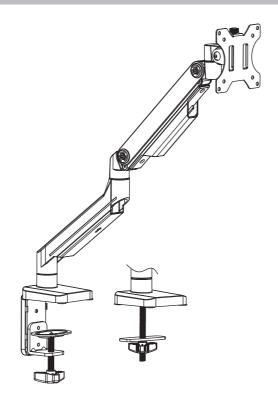











Read the entire instrution manual before you start installation and assembly. If you have any questions regarding any of the instructions or warnings, Please contact at service@eletabergo.com for assistance.

#### CAUTION:

.


Use with products heavier than the rated weights indicated may result in instability causing possible injury.

- Mounts must be attached as specified in assembly instructions. Improper installation may result in damage or serious personal injury.
- Safety gear and proper tools must be used. This product should only be installed by professionals.
- Make sure that the supporting surface will safely support the combined weight of the equipment and all attached hardware and components.
- Use the mounting screws provided and DO NOT OVER TIGHTEN mounting screws.
- This product contains small items that could be a choking hazard if swallowed. Keep these items away from children.
- This product is intended for indoor use only. Using this product outdoors could lead to product failure and personal injury.

#### **IMPORTANT:**


Ensure that you have received all parts according to the component checklist prior to installation. If any parts are received damaged or defective, please contact us at **service@eletabergo.com**. We are happy to replace parts to ensure you have a fully functioning product.

## PRODUCT LINE GRAPH

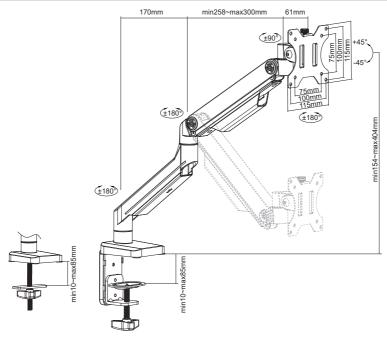


## **Parts**

## **Tools required**



### **Components**

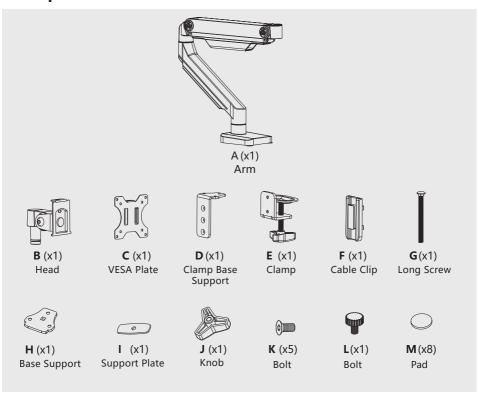


### **Hardware**




# STEP 1 Choose a mounting option

## **OPTION A: Clamp Installation**

Install clamp base support (D) onto base of monitor stand (A) with bolts (K) using provided 4mm Allen wrench (N).

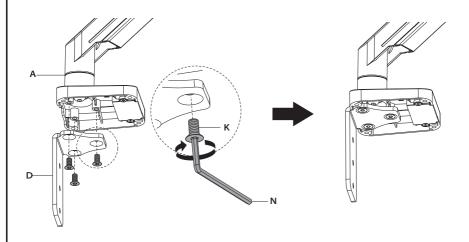


Apply pads (M) to bottom of base to prevent table top from being scratched.

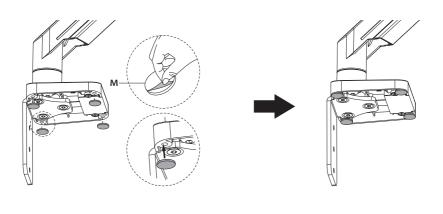


#### Adjust the Mount to the Desktop Thickness 10-55mm

Secure clamp (E) to upper two holes with bolts (K) using 4mm Allen wench (N) for desks with a thickness of 10-55mm.

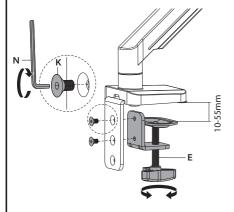



#### Adjust the Mount to the Desktop Thickness 50-85mm

Secure clamp (E) to lower two holes with bolts (K) using 4mm Allen wrench (N) for desks with a thickness of 50-85mm.

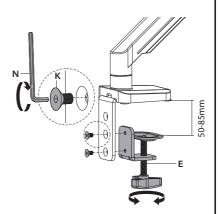

Attach base support cover (F) to clamp base support (D). Tighten the clamp to the desktop using the plastic knob.

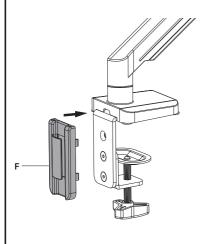

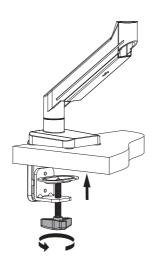


# **STEP 1 (Continued)**


### **OPTION B: Grommet Base Installation**

Slide long screw (G) through the top of the grommet base support (H) and install on base of monitor stand with bolts (K) using 4mm Allen wrench (N).

Apply pads (M) to bottom of base to prevent table top from being scratched.

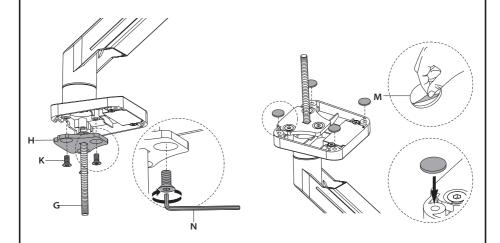


Position stand on desk with long screw through hole, and secure by using the support plate (I) and clamp knob (J) on under side of the mounting surface.

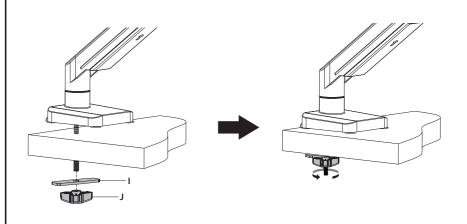


# **STEP 2 Head attachment process**

- 1. Loose the screw little bit to ensure the distance between two plastic spacers is more than 4mm
- 2. Attach the Head(B) to monitor arm

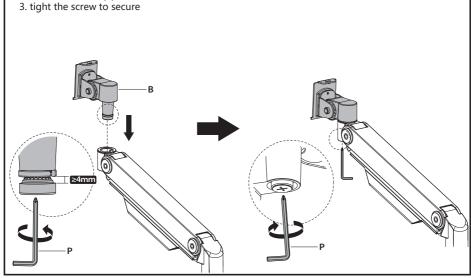


# STEP 3 Attach the monitors to the arm

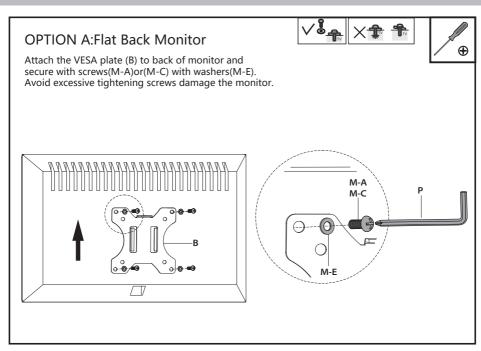



### **OPTION B:Curved Back Monitor**








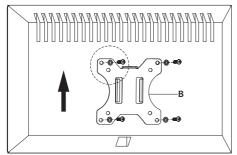

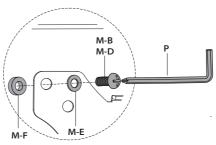

Attach the monitors whith VESA to the arm. Use screws (L) to tight them.




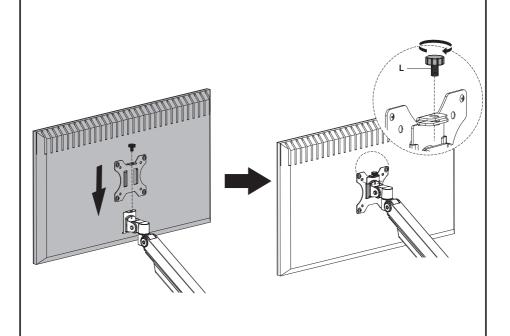

## **STEP 4 Adjust the tension**


Adjust the spring tension until it supports your monitor to an optimal position.

The initial spring setting will be in a reasonable range, and generally you don't need to adjust the spring tension.

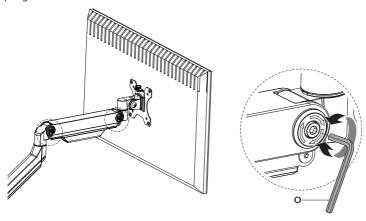


Case 1: Monitor/Arm falls down (after install your monitor)

If your monitor is too heavy and causes the monitor to sink, turn clockwise to increase spring tension till it can hold the weight of your monitor. (Press the arm to make it keep it in horizontal position and then use the Allen Key to adjust the screw on the arm.)

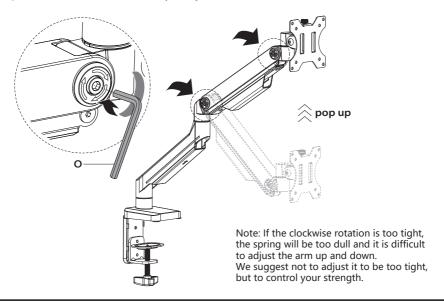


Case 2: Monitor/Arm pops up (after install your monitor)

If your monitor is too light to pop up, or if you accidentally adjust the tension counterclockwise causing the upper arm to pop up, please adjust the tension clockwise to the appropriate tension!

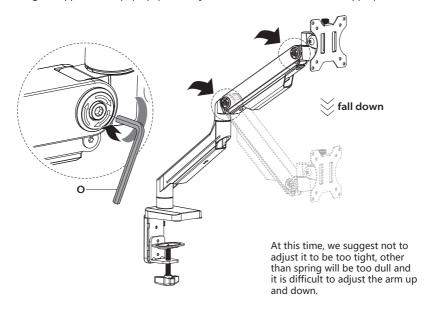


Case 3: Monitor tilt forward

If needed, adjust the bolt on the side of the hinge behind the VESA plate to tighten the tilt angle support.

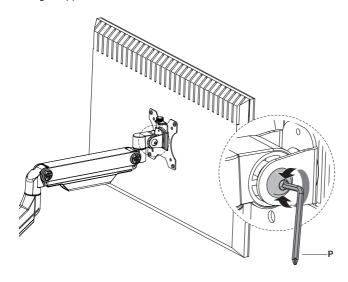


# STEP 5 Cable management

Just slide the cable cover up and away from the spring arm, do not need to take much effort to pull the ends of the cable cover away from the spring arm.

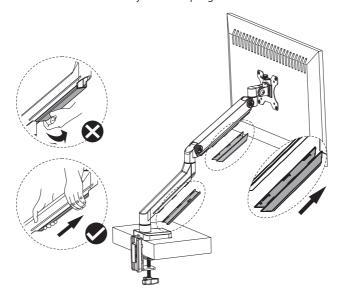

Insert the cable and slide the cable cover down to reattach the cable cover.

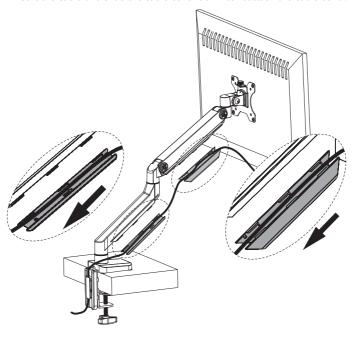

### WARRANTY SERVICE

To provide the best service to you, do not forget to register your EleTab product to obtain 12 months extended warranty and lifetime after-sales service.



### **Feedback**

Love it? Hate it?

Let us know with a customer review.

EleTab is committed to delivering customer-driven products that live up to you high standards. We encourage you to write a review sharing your experierience.

Should you have any issues, please don't hesitate to contact us.



Scan the QR code above to join our Facebook group

For further services:





