


Delphi Pendant Installation Guide


$M \cdot M$


Included for installation:




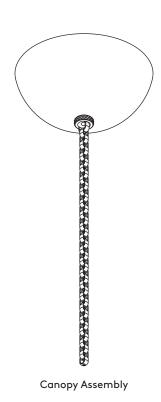

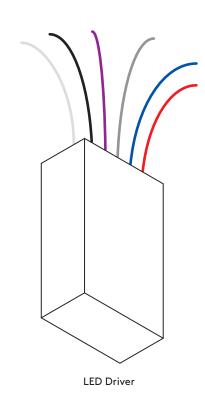





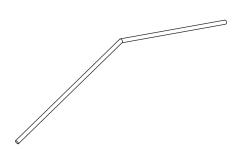


5× Wire nuts 2× 8-32 Canopy Screw

Assembly Aid

$M \cdot M$

Delphi Pendant Installation Guide


Step 1.

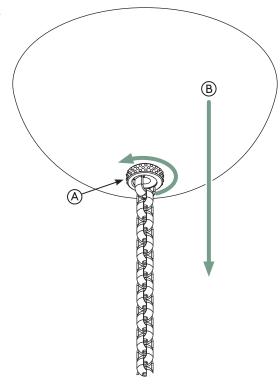

 Caution: Turn off power at the circuit breaker before beginning installation. Matter Made recommends the Delphi Pendant be installed by a qualified electrician.

Unscrew the studded collar (A) from the canopy assembly and separate the collar and domed canopy (B) from the crossbar and chain assembly.

Step 2.

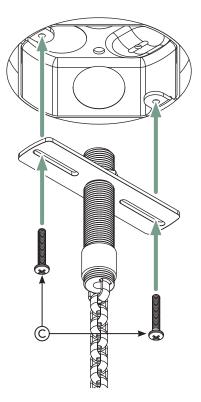


2. Using the included 8-32 canopy screws (C), attach the crossbar and chain assembly to the junction box.


+1 212 343 2600 mattermade.us sales@mattermade.us MATTER . MADE

$M \cdot M$

Delphi Pendant Installation Guide

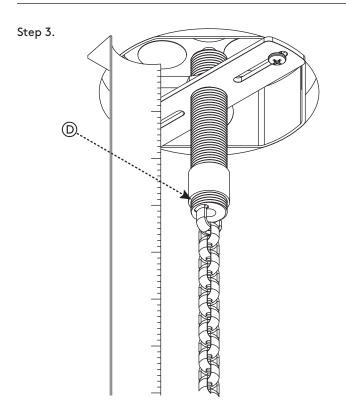

3. Depending upon the location of your junction box and crossbar, you may need to adjust the length of the threaded nipple. The bottom shoulder of the brass coulper (D) should sit 2.5in (63.5mm) from the ceiling. To adjust length of the threaded nipple, loosen the hex nut above the crossbar, rotate the nipple until the proper length is achieved, then re-tighten the hex nut.

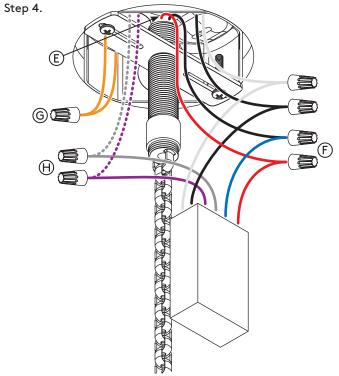


- 4. Using the provided wire nuts:
 - connect the live wire from the junction box to the black wire of the driver (D).
 - connect the neutral wire from the junction box to the white wire of the driver(D).
 - connect the black wire from the threaded nipple (E) to the blue wire of the driver (F)
 - connect the red wire from the threaded nipple (E) to the red wire of the driver (F)
 - connect the ground wire from the junction box to the wire that is connected to the crossbar (G).

If you are using 0-10v dimming, connect the grey and purple wires of the driver (H) to the corresponding wires connected to the dimmer. If 0-10v dimming is not used, cap the grey and purple wires separately with wire nuts or electrical tape.

+1 212 343 2600 mattermade.us sales@mattermade.us MATTER . MADE


M . M

Delphi Pendant Installation Guide

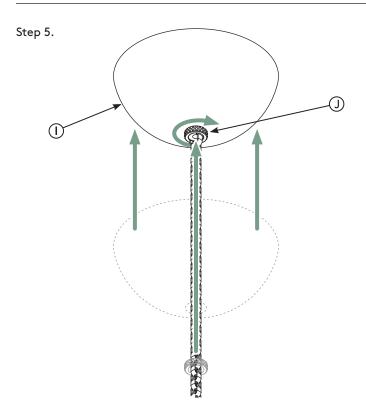

 Feed the chain through the center hole of the canopy and lift the canopy towards the ceiling (I). Carefully tuck the driver and wires inside the canopy. Feed chain through the studded collar towards the ceiling and screw the collar onto the threaded hook (J).



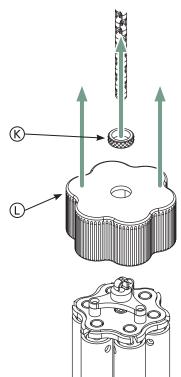


 The following steps require care while handling the pendant cluster assembly. Matter Made recommends a second set of hands to assist with the forthcoming steps.

Unscrew the studded collar (K) from the pendant cluster assembly. Remove the studded collar and fluted cap (L) from the pendant cluster assembly. Feed the chain through studded collar and the fluted cap.

+1 212 343 2600 mattermade.us sales@mattermade.us MATTER . MADE


Delphi Pendant Installation Guide

Step 7.

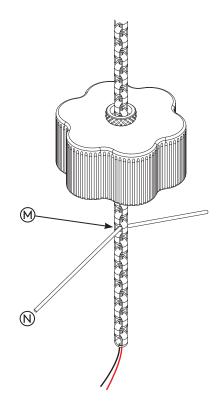

 Insert the included assembly aid (M) through one of the chain links (N) approximately 6in (15cm) from the end of the chain. The assembly aid allows you to rest the fluted cap and studded collar while you perform the next steps.


Step 8.

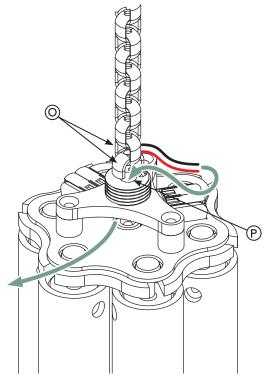


8. Loop the last link of the chain onto the hook of the pendant cluster assembly (O). Feed the wires from the chain (P) through the threaded portion below the hook.

$M \cdot M$

Delphi Pendant Installation Guide

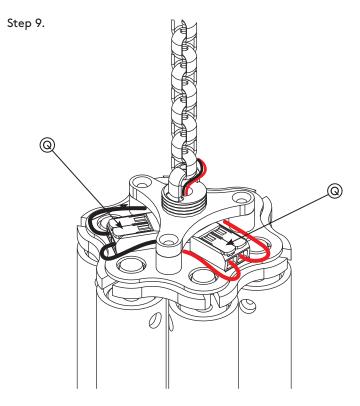

 Connect the black and red wires from the chain to the corresponding lever nuts (Q) on the pendant cluster assembly.

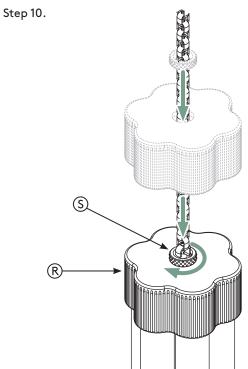

 Slide the fluted cap (R) down the chain and on to the cluster assembly. Slide the studded collar (S) down the chain and thread the collar on to the cluster assembly.

Turn on the power at the circuit breaker and test switch and dimming function.

Installation of the Delphi pendant is now complete. Enjoy!

+1 212 343 2600 mattermade.us sales@mattermade.us MATTER. MADE