


# JACK MASON

---

## Miyota Caliber No. 0S25 Chronograph Function

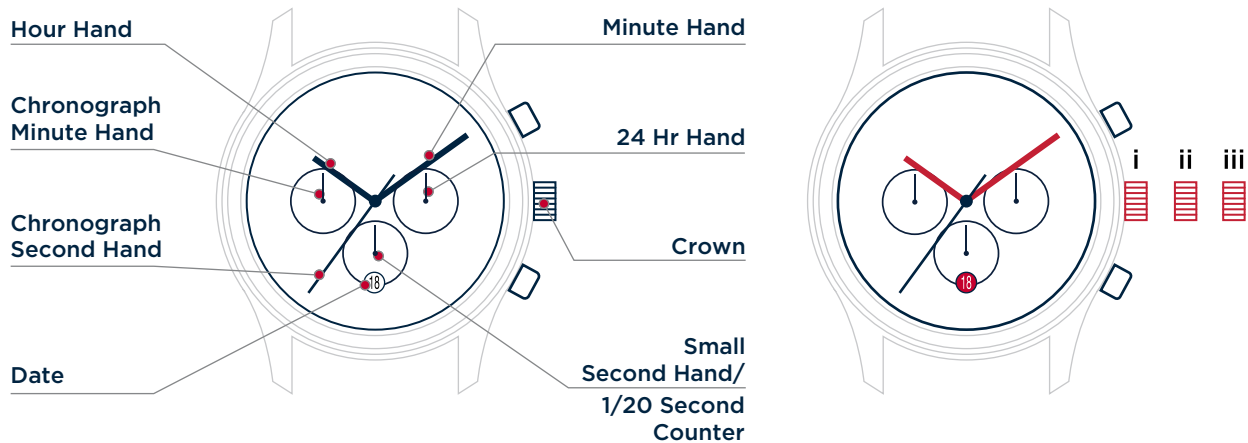

\*Date position may be located at different positions depending on model.

\*24 Hr Hand is day/night indicator when setting time and date.

### SETTING THE TIME

1. Pull the crown out to position (iii).
2. Turn the crown to set hour and minute hands.
3. When the crown is pushed back to position (i), second hand begins to run.

### SETTING THE DATE

1. Pull the crown out to position (ii).
2. Turn the crown counter-clockwise to set the date.  
\* If the date is set between the hours of around 9:00 PM and 1:00 AM, the date may not change the following day.
3. After the date has been set, push the crown back to position (i).

# JACK MASON

---

## Miyota Caliber No. 0S25 Chronograph Function



### USING THE CHRONOGRAPH FUNCTION


This chronograph will measure and display time in 1/20 second units up to a maximum of 59 minutes 59 seconds, and 950 milliseconds. The chronograph second hand moves continuously for 59 minutes 59 seconds after starting. The 1/20 second hand will stop moving after 30 seconds, but continues count internally.

1. To start: Press pusher A.
2. To stop: Press pusher A once more.
3. To reset: Press pusher B to reset the chronograph second hand, chronograph minute hand, and chronograph 1/20 second hand to the zero position.
  - Press pusher B once more to return the second hand to normal function.

# JACK MASON

---

## Miyota Caliber No. 0S25 Chronograph Function

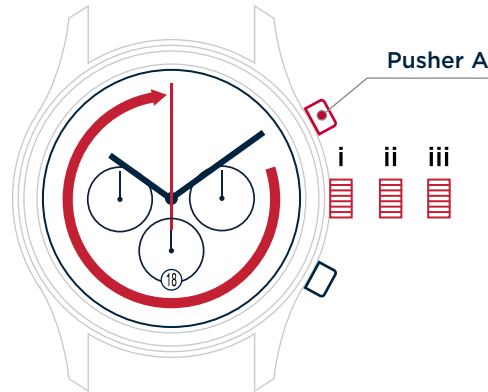

### CHRONOGRAPH RESET

This procedure should be performed when the chronograph second hand does not return to the zero position after the chronograph has been reset, as well as after the battery has been replaced.

1. Pull the crown out to position (iii).
2. Press Pusher A to set the chronograph second hand to the zero (12:00) position. The chronograph hand will advance rapidly by pressing and holding Pusher A.
3. Once the hand has been zeroed, return the crown to position (i).