

GOTRAX

V14

ELECTRIC ASSISTED BALANCE SCOOTER

USER MANUAL





Congratulations on your purchase!

This user manual will help you assemble and operate your new Electric Scooter. Be sure to read **ALL OF THE INFORMATION** in this manual before riding.

NOTE TO ALL RIDERS UNDER 5 YEARS OR AGE:

It's very important that you get parental permission before riding your electric scooter. Electric scooter for kids age of 5+ .





Don't ride until you read this



ALWAYS wear a helmet when riding your Electric Scooter.



Make sure your scooter has a **full battery** before taking it out to ride.



Always be aware of local road laws, and follow them.



Do not ride the scooter under the influence of drugs or alcohol.



Always respect pedestrians.



Do not ride under wet conditions. The scooter may slide from under your feet causing injury. Wet conditions may damage the electronics and void the warranty.



Warning Message


1. **Avoid water** - The electric bike is not waterproof. The electronics may be damaged due to water and water damage is not covered by our warranty. Riding in wet conditions is also very dangerous and may result in injury.
2. **Abuse** - We do not cover physical damage due to negligent care and extreme riding.
3. **Whenever you ride the GOTRAX scooter**, you risk severe injury or even death from loss of control, collisions, and falls. Use caution and ride at your own risk.
4. **Do not** modify the product from the manufacturer's original design.
5. **Keep** hands and all body parts away from moving parts while operating the scooter.
6. **Before riding** - be sure to check the scooter over and make sure the scooter is operating correctly before each use.
7. **Before riding** - be sure to check that the braking system is functioning properly, also be sure to check that all safety labels are in place and you understand the safety warnings.
8. **Before riding** - be sure that any and all axle guards, chain guards, or other covers or guards supplied by the manufacturer are in place and in serviceable condition.
9. **Before riding** - be sure to check that the tires are in good condition, inflated properly, and have sufficient tread remaining.
10. Never exceed the 138 lbs (63 kg) maximum load rating.
11. **Maximum Speed** - Your electric scooter goes the maximum speed of 15.5 mph (25km/h).



Unpack

You should find each of these items in your box:

1. Electric Scooter
2. Saddle
3. Battery charger
4. User Manual
5. Instrument: 4mm hex wrench x 1 (phillips screwdriver, hex socket), 15&18mm open end wrench x 2

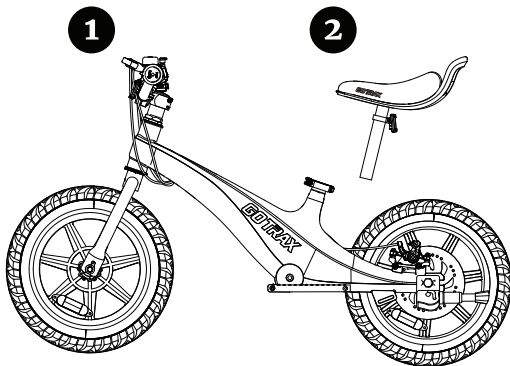


3



4



5

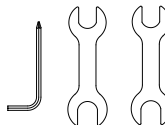

Remove all packaging material, then inspect each item for any accidental damage that may have occurred during shipping.



Get To Know Your Scooter



The electric scooter comes partially assembled.



Specifications

Top Speed:	15.5 mph
Distance per Charge:	15.5 miles
Max Weight:	138 lbs
Battery Type:	36V 5.2Ah
Battery Input:	DC 42V 0.85A
Charge Time:	About 6-7 hours
Motor Power:	250W
Power Requirements:	AC 100-240V 50/60Hz 1.5A





Assemble Your Scooter




1. Open the tool box and find the front axle core, remove one side of the nut gasket and put the axle core into the front wheel. Note the assembly position of the front axle gasket.

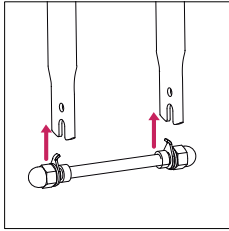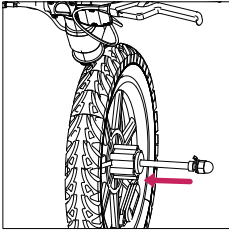




2. Load the front wheel into the front fork and use a wrench to lock the nuts on both sides. Note: Front wheel stop gasket must be installed in place.

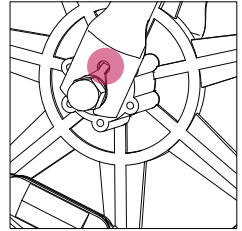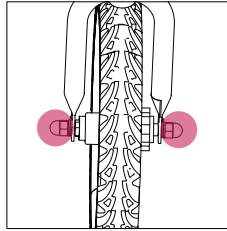

3. Use the tool to loosen the handlebar to fix the pressing block, load the handlebar hand, and lock the pressing block (the horizontal handlebar must be centered).

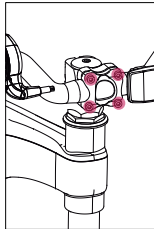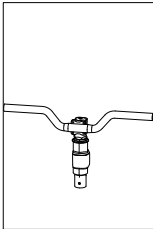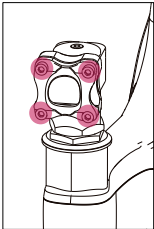

4. Install the saddle: Open the quick release handle and insert the saddle, adjust the right height for you and lock the quick release.

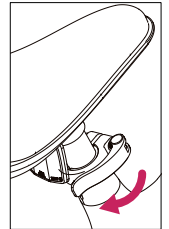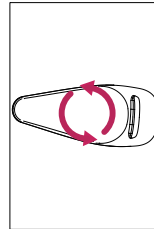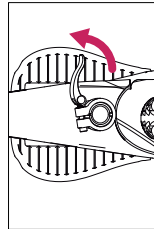


CAUTION: Make sure post at least is inserted to minimum insertion marking are NOT visible.



Charge Your Scooter

Before using the scooter, you must fully charge the battery.

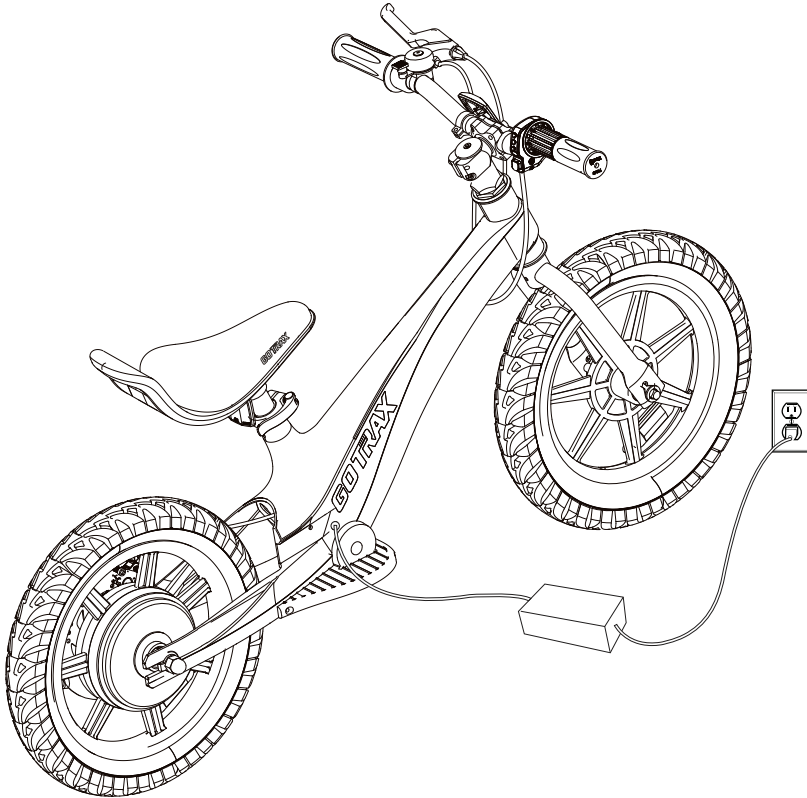

1. Open the rubber charging port cover.
2. Insert the charging plug into the port.
3. The charger box will have a green light when fully charged and a red light when charging.
4. When you are done charging be sure to cover the charging port to keep it clear of dust and debris.
5. Charging Time: About 6-7 hours.



Scooter Console Functions

1. Long press the power button for 2-3 seconds, the buzzer will emit a "di~" sound and scooter will power on, long press again for 2-3 seconds, the buzzer will emit a "di~" sound again, release the key to shut down. Or condition of rest for 30 seconds automatically shut down.

2. **Power display:** when the battery is fully charged the green, yellow and red lights are all on, and the green and yellow lights will turn off in turn according to the reduction of power consumption. When only the red light is on, it indicates that the power is low. When the power is too low, the buzzer will continuously issue a "di di" sounds prompt, which requires timely charging.

3. The bell use method, fingered for use.



Riding Tips

When you start riding your scooter, first you need sit in the saddle, put one foot on the pedals, keep your foot on the ground, press the accelerator and start moving.

Press the brake handbrake to slow down or stop.

The scooters perform best when on a smooth surface e.g. carparks, smooth roads, footpaths, & bike lanes.

Always clean your scooter (wheels, platform, etc.), it's a machine and needs to be maintained.

Do not press the throttle while walking with the scooter beside you.

Be aware of the terrain you are riding on, watch out for curbs and obstacles!


Maintenance & Repair

If you regularly clean and maintain your electric scooter, it will extend its life.

Cleaning and storage: If the scooter is dirty, wipe it clean with a soft damp cloth.

Disc Brake Adjustments: If the brake is too tight, use a 4mm Allen wrench to loosen the screws counterclockwise. Push the brake wire to shorten and lock the screw in place. If the brake is too loose, loosen the screws and pull the brake wire to extend the wire and lock the screws.

Tiller Adjustments: If the tiller wiggles while riding, please check the set screws. Use an Allen wrench to tighten the screws as the figure shows.

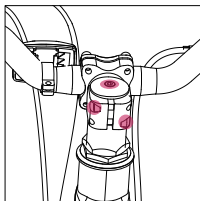

Tires: If you notice that the tire pressure is low, please fill to the recommended PSI on the side of the tire. Recommended PSI: 36

DO NOT use alcohol, gasoline, kerosene, or other corrosive chemical solvents to clean the scooter. It can severely damage the appearance and structure of the scooter. Please do not use a pressure washer as it may also cause damage to the electronics.

Storage: When you're not using your scooter store in a dry and cool location. Avoid storing your scooter outdoors because sun exposure can damage it's appearance and may cause wear on the life of the battery and tires.



Battery Information

Only use the approved GOTRAX power adapter to charge your scooter, others may cause risk of fire & equipment may be damaged.

Improper disposal of used batteries may seriously pollute the environment. Please comply with local disposal regulations.

Make sure to store your scooter and power adapter in conditions that do not exceed 122 degrees Fahrenheit or below -4 degrees Fahrenheit.

Warning - Risk of Fire - No User Serviceable Parts, The prolonged exposure to UV Rays, Rain and the Elements may damage the enclosed materials, store indoors when not in use.

Troubleshooting

We frequently update our user manuals at **GOTRAX.com**, and reserve the rights to update and change manuals online.

Please contact our customer service team if you are experiencing problems or need more detailed information. They can be reached at GOTRAX.com

Warranty

For warranty information, please visit **GOTRAX.com**.



WWW.GOTRAX.COM

#RideGOTRAX





GOLABS, INC

GOTRAX.com
2201 Luna Rd.
Carrollton, TX 75006