


Hunter
SINCE 1886

Portable Air Conditioner

Owner's Manual

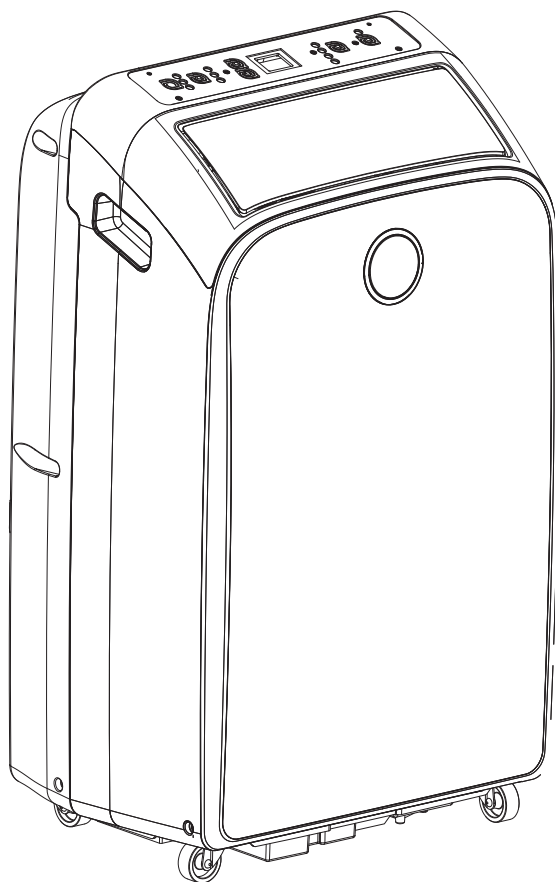

English

Model

HPAC-10C150

HPAC-12C150

HPAC-12C150P

HPAC-14C150

HPAC-14C150P

(all models, all colors)

READ AND SAVE THESE INSTRUCTIONS

Form #HPAC
11282023

© 2023 Produced exclusively for Mindful LLC under license by Hunter Fan Company
All rights reserved

Table of Contents

Air Conditioner Safety	1-4
Identification of Parts	5
Installation Requirements	6
Electrical Requirements	7
Location Requirements	7
Installation Instructions	8-13
<i>Safety Instructions</i>	8
Portable Air Conditioner Use	13-18
<i>Starting Your Portable Air Conditioner</i>	14-15
<i>Using the Remote</i>	15-16
<i>Using the Features</i>	17
<i>Dehumidification & Draining</i>	18
Portable Air Conditioner Care	19-20
<i>Troubleshooting</i>	20-21
Limited Warranty	22-24

Air Conditioner Safety

Your safety and the safety of others is very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word "DANGER" or "WARNING."

These words mean:

 **DANGER**

A hazard that if not avoided will result in death or serious injury.

 **WARNING**

A hazard that if not avoided could result in death or serious injury.

All safety messages will tell you what the potential hazard is and tell you how to reduce the chance of injury.

IMPORTANT SAFETY INSTRUCTIONS

WARNING: To reduce the risk of fire, electrical shock or injury when using your air conditioner, follow these basic precautions:

- Plug into a grounded 3 prong outlet.
- Do not use an extension cord.
- Do not remove ground prong.
- Unplug air conditioner before servicing.
- Do not use an electrical adapter.
- Use two or more people to move and install air conditioner.
- The appliance is not intended for use by young children or impaired persons without supervision. Young children should be supervised to ensure that they do not play with the appliance.

SAVE THESE INSTRUCTIONS

STORAGE AND DISPOSING OF THE UNIT

- Please recycle or dispose of the packaging material for product in an environmentally responsible manner.
- Never store or ship the air conditioner upside down or sideways to avoid damage to the compressor.
- Dispose of this appliance in accordance with Federal and Local regulations. Refrigerants must be evacuated before disposal.



WARNING

Risk of Fire or Explosion. This unit contains flammable refrigerant. Additional safety precautions must be followed.

- Do not use means to accelerate the defrosting process or to clean, other than those recommended by the manufacturer.
- When handling, installing, and operating the appliance, care should be taken to avoid damage to the refrigerant tubing.
- The appliance shall be stored in a room without continuously operating ignition sources (for example: open flames, an operating gas appliance or an operating electric heater).
- Do not drill holes in the unit.
- Do not pierce or bum refrigerant tubing. Be aware that refrigerants may not contain an odor.
- Maintenance, cleaning, and service should only be performed by technicians properly trained and qualified in the use of flammable refrigerants.
- Keep ventilation openings clear of obstruction.
- Dispose of air conditioner in accordance with Federal and Local Regulations. Flammable refrigerants require special disposal procedures. Contact your local authorities for the environmentally safe disposal of your air conditioner.

Air Conditioner Safety

Precautions for using R32 Refrigerant

The basic installation work procedures are the same as the conventional refrigerant (R22 or R410A). However, pay attention to the following :

1. Transport of equipment containing flammable refrigerants.

- Compliance with the transport regulations.

2. Marking of equipment using signs.

- Compliance with local regulations.

3. Disposal of equipment using flammable refrigerants.

- Compliance with national regulations.

4. Storage of equipment/appliances.

- The storage of equipment should be in accordance with the manufacturer

5. Storage of packed (unsold) equipment.

- Storage package protection should be constructed such that mechanical damage to the equipment inside the package will not cause a leak of the refrigerant charge.

- The maximum number of pieces of equipment permitted to be stored together will be determined by local regulations.

6. Information on servicing.

- Checks to the area: Prior to beginning work on systems containing flammable refrigerants, safety checks are necessary to ensure that the risk of ignition is minimised.

For repair to the refrigerating system, the following precautions shall be complied with prior to conducting work on the system.

- Work procedure: Work shall be undertaken under a controlled procedure so as to minimise the risk of flammable gas or vapour being present while the work is being performed.

- General work area: All maintenance staff and others working in the local area shall be instructed on the nature of work being carried out. Work in confined spaces shall be avoided. The area around the workspace shall be sectioned off. Ensure that the conditions within the area have been made safe by control of flammable material.

- Checking for presence of refrigerant: The area shall be checked with an appropriate refrigerant detector prior to and during work, to ensure the technician is aware of potentially flammable atmospheres. Ensure that the leak detection equipment being used is suitable for use with flammable refrigerants, i.e. nonsparking, adequately sealed or intrinsically safe.

- Presence of fire extinguisher: If any hot work is to be conducted on the refrigeration equipment or any associated parts, appropriate fire extinguishing equipment shall be available to hand. Have a dry powder or CO2 fire extinguisher adjacent to the charging area.

- No ignition sources: No person carrying out work in relation to a refrigeration system which involves exposing any pipe work that contains or has contained flammable refrigerant shall use any sources of ignition in such a manner that it may lead to the risk of fire or explosion. All possible ignition sources, including cigarette smoking, should be kept sufficiently far away from the site of installation, repairing, removing and disposal, during which flammable refrigerant can possibly be released to the surrounding space. Prior to work taking place, the area around the equipment is to be surveyed to make sure that there are no flammable hazards or ignition risks. "No Smoking" signs shall be displayed.

- Ventilated area: Ensure that the area is in the open or that it is adequately ventilated before breaking into the system or conducting any hot work. A degree of ventilation shall continue during the period that the work is carried out. The ventilation should safely disperse any released refrigerant and preferably expel it externally into the atmosphere

- Checks to the refrigeration equipment: Where electrical components are being changed, they shall be fit for the purpose and to the correct specification. At all times the manufacturer's maintenance and service guidelines shall be followed. If in doubt consult the manufacturer's technical department for assistance. The following checks shall be applied to installations using flammable refrigerants: The charge size is in accordance with the room size within which the refrigerant containing parts are installed; The ventilation machinery and outlets are operating adequately and are not obstructed; If an indirect refrigerating circuit is being used, the secondary circuit shall be checked for the presence of refrigerant; Marking to the equipment continues to be visible and legible. Markings and signs that are illegible shall be corrected; Refrigeration pipe or components are installed in a position where they are unlikely to be exposed to any substance which may corrode refrigerant containing components, unless the components are constructed of materials which are inherently resistant to being corroded or are suitably protected against being so corroded.

- Checks to electrical devices: Repair and maintenance to electrical components shall include initial safety checks and component inspection procedures. If a fault exists that could compromise safety, then no electrical supply shall be connected to the circuit until it is satisfactorily dealt with. If the fault cannot be corrected immediately but it is necessary to continue operation, an adequate temporary solution shall be used. This shall be reported to the owner of the equipment so all parties are advised. Initial safety checks shall include: That capacitors are discharged: this shall be done in a safe manner to avoid possibility of sparking; That there no live electrical components and wiring are exposed while charging, recovering or purging the system; That there is continuity of earth bonding.

7. Repairs to sealed components

- During repairs to sealed components, all electrical supplies shall be disconnected from the equipment being worked upon prior to any removal of sealed covers, etc.

- If it is absolutely necessary to have an electrical supply to equipment during servicing, then a permanently operating form of leak detection shall be located at the most critical point to warn of a potentially hazardous situation.

- Particular attention shall be paid to the following to ensure that by working on electrical components, the casing is not altered in such a way that the level of protection is affected.

- This shall include damage to cables, excessive number of connections, terminals not made to original specification, damage to seals, incorrect fitting of glands, etc.

- Ensure that apparatus is mounted securely. Ensure that seals or sealing materials have not degraded such that they no longer serve the purpose of preventing the ingress of flammable atmospheres.

Air Conditioner Safety

• Replacement parts shall be in accordance with the manufacturer's specifications.

NOTE: The use of silicon sealant may inhibit the effectiveness of some types of leak detection equipment. Intrinsically safe components do not have to be isolated prior to working on them.

8. Repairs to intrinsically safe components

- Do not apply any permanent inductive or capacitance loads to the circuit without ensuring that this will not exceed the permissible voltage and current permitted for the equipment in use.
- Intrinsically safe components are the only types that can be worked on while live in the presence of a flammable atmosphere. The test apparatus shall be at the correct rating.
- Replace components only with parts specified by the manufacturer. Other parts may result in the ignition of refrigerant in the atmosphere from a leak.

9. Cabling

- Check that cabling will not be subject to wear, corrosion, excessive pressure, vibration, sharp edges or any other adverse environmental effects.
- The check shall also take into account the effects of aging or continual vibration from sources such as compressors or fans.

10. Detection of flammable refrigerants

- Under no circumstances shall potential sources of ignition be used in these arching for or detection of refrigerant leaks.
- Ahalide torch (or any other detector using a naked flame) shall not be used.

11. Leak detection methods

- The following leak detection methods are deemed acceptable for systems containing flammable refrigerants:
 - Electronic leak detectors shall be used to detect flammable refrigerants, but the sensitivity may not be adequate, or may need re-calibration. (Detection equipment shall be calibrated in a refrigerant-free area.)
 - Ensure that the detector is not a potential source of ignition and is suitable for the refrigerant used.
 - Leak detection equipment shall be set at a percentage of the LFL of the refrigerant and shall be calibrated to the refrigerant employed and the appropriate percentage of gas (25 % maximum) is confirmed.
 - Leak detection fluids are suitable for use with most refrigerants but the use of detergents containing chlorine shall be avoided as the chlorine may react with the refrigerant and corrode the copper pipe-work.
 - If a leak is suspected, all naked flames shall be removed/ extinguished.
 - If a leakage of refrigerant is found which requires brazing, all of the refrigerant shall be recovered from the system, or isolated (by means of shutoff valves) in a part of the system remote from the leak.
 - Oxygen free nitrogen (OFN) shall then be purged through the system both before and during the brazing process.

12. Removal and evacuation

- When breaking into the refrigerant circuit to make repairs - or for any other purpose - conventional procedures shall be used.

However, for flammable refrigerants it is important that best practice be followed, since flammability is a consideration. The following procedure shall be adhered to:

- a) safely remove refrigerant following local and national regulations ;
 - b) purge the circuit with inert gas ;
 - c) evacuate (optional for A2L);
 - d) purge with inert gas (optional for A2L);
 - e) open the circuit by cutting or brazing;
- The refrigerant charge shall be recovered into the correct recovery cylinders if venting is not allowed by local and national codes. For appliances containing flammable refrigerants, the system shall be purged with oxygen - free nitrogen to render the appliance safe for flammable refrigerants. This process might need to be repeated several times. Compressed air or oxygen shall not be used for purging refrigerant systems.
 - For appliances containing flammable refrigerants, refrigerants purging shall be achieved by breaking the vacuum in the system with oxygen - free nitrogen and continuing to fill until the working pressure is achieved, then venting to atmosphere, and finally pulling down to a vacuum (optional for A2L). This process shall be repeated until no refrigerant is within the system (optional for A2L). When the final oxygen - free nitrogen charge is used, the system shall be vented down to atmospheric pressure to enable work to take place.
 - Ensure that the outlet for the vacuum pump is not close to any potential ignition sources and that ventilation is available.

13. Charging procedures

- In addition to conventional charging procedures, the following requirements shall be followed:
 - Ensure that contamination of different refrigerants does not occur when using charging equipment.
 - Hoses or lines shall be as short as possible to minimise the amount of refrigerant contained in them.
 - Cylinders shall be kept up right.
 - Ensure that the refrigeration system is earthed prior to charging the system with refrigerant.
 - Label the system when charging is complete (if not already).
 - Extreme care shall be taken not to overfill the refrigeration system.
- Prior to recharging the system it shall be pressure tested with OFN.
- The system shall be leak tested on completion of charging but prior to commissioning.
- A follow up leak test shall be carried out prior to leaving the site.

14. Decommissioning

- Before carrying out this procedure, it is essential that the technician is completely familiar with the equipment and all its detail.
 - It is recommended good practice that all refrigerants are recovered safely.
 - Prior to the task being carried out, an oil and refrigerant sample shall be taken in case analysis is required prior to re-use of reclaimed refrigerant. It is essential that electrical power is available before the task is commenced.
- a) Become familiar with the equipment and its operation.
 - b) Isolate system electrically.
 - c) Before attempting the procedure ensure that:

Air Conditioner Safety

- Mechanical handling equipment is available, if required, for handling refrigerant cylinders;
 - All personal protective equipment is available and being used correctly;
 - The recovery process is supervised at all times by a competent person;
 - Recovery equipment and cylinders conform to the appropriate standards.
- Pump down refrigerant system, if possible.
 - If a vacuum is not possible, make a manifold so that refrigerant can be removed from various parts of the system.
 - Make sure that cylinder is situated on the scales before recovery takes place.
 - Start the recovery machine and operate in accordance with manufacturer
 - Do not overfill cylinders. (No more than 80% volume liquid charge).
 - Do not exceed the maximum working pressure of the cylinder, even temporarily.
 - When the cylinders have been filled correctly and the process completed, make sure that the cylinders and the equipment are removed from site promptly and all isolation valves on the equipment are closed off.
 - Recovered refrigerant shall not be charged into another refrigeration system unless it has been cleaned and checked.

15. Labeling

- Equipment shall be labelled stating that it has been decommissioned and emptied of refrigerant.
- The label shall be dated and signed. Ensure that there are labels on the equipment stating the equipment contains flammable refrigerant.

16. Recovery

When removing refrigerant from a system, either for servicing or decommissioning, it is recommended good practice that all refrigerants are removed safely.

- When transferring refrigerant into cylinders, ensure that only appropriate refrigerant recovery cylinders are employed.
- Ensure that the correct number of cylinders for holding the total system charge is available.
- All cylinders to be used are designated for the recovered refrigerant and labelled for that refrigerant (i.e. special cylinders for the recovery of refrigerant).
- Cylinders shall be complete with pressure relief valve and associated shut-off valves in good working order.
- Empty recovery cylinders are evacuated and, if possible, cooled before recovery occurs.
- The recovery equipment shall be in good working order with a set of instructions concerning the equipment that is at hand and shall be suitable for the recovery of flammable refrigerants.
- In addition, a set of calibrated weighing scales shall be available and in good working order.
- Hoses shall be complete with leak-free disconnect couplings and in good condition.
- Before using the recovery machine, check that it is in satisfactory working order, has been properly maintained and that any associated electrical components are sealed to prevent ignition in the event of a refrigerant release.

- Consult manufacturer if in doubt.
- Opening of the refrigeration systems shall not be done by brazing.
- The recovered refrigerant shall be returned to the refrigerant supplier in the correct recovery cylinder, and the relevant Waste Transfer Note arranged.
- Do not mix refrigerants in recovery units and especially not in cylinders.
- If compressors or compressor oils are to be removed, ensure that they have been evacuated to an acceptable level to make certain that flammable refrigerant does not remain within the lubricant.
- The evacuation process shall be carried out prior to returning the compressor to the suppliers.
- Only electric heating to the compressor body shall be employed to accelerate this process.
- When oil is drained from a system, it shall be carried out safely.


WARNING: Risk of fire or explosion. This unit contains flammable refrigerant.

Additional safety precautions must be followed.

- Do not use means to accelerate the defrosting process or to clean, other than those recommended by the manufacturer.
- The appliance shall be stored in a room without continuously operating ignition sources (for example: open flames, an operating gas appliance or an operating electric heater).
- Do not pierce or burn refrigerant tubing. Be aware that refrigerants may not contain an odor.
- Compliance with national gas regulations shall be observed.
- Keep ventilation openings clear of obstruction.
- The maximum refrigerant charge amount is shown on nameplate on the air conditioner.
- When handling, installing, and operating the appliance, care should be taken to avoid damage to the refrigerant tubing.
- Do not drill holes in the unit.
- Maintenance, cleaning, and service should only be performed by technicians properly trained and qualified in the use of flammable refrigerants.
- Dispose of air conditioner in accordance with Federal and Local Regulations. Flammable refrigerants require special disposal procedures. Contact your local authorities for the environmentally safe disposal of your air conditioner.
- The appliance shall be stored so as to prevent mechanical damage from occurring.
- The appliance shall be stored in a well-ventilated area where the room size corresponds to the room area as specified for operation.
- This product contains small parts such as (batteries, battery cover and screws) that may cause suffocation if swallowed by children.



Identification of Parts

FRONT

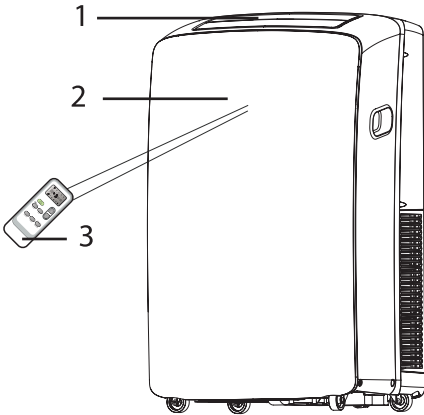

1. Cool Air Outlet
2. Signal Receptor
3. Remote Control
4. Control Panel
5. Evaporator Air Intake
6. Transport Handle
7. Secondary Drain Port
8. Air Outlet Hose
9. Condenser Air Intake
10. Primary Drain Port
11. Drain Hose Clip (Heat Pump Models)
12. Drain Hose (Heat Pump Models)
13. Power Supply (May differ from one shown)

BACK

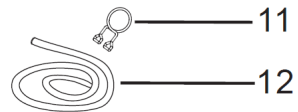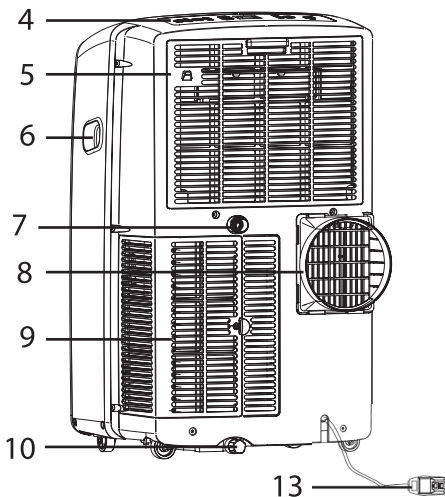

*The figures in this manual are based on the external view of a standard model. They may differ from that of the air conditioner you have selected.

Installation Requirements

Gather the required tools and parts before starting installation. Read and follow the instructions provided with any tools listed here.


Tools Needed:

- Phillips Screwdriver
- Scissors
- Pencil
- Cordless Drill & 1/8" Bit

Parts Supplied


Check that all parts are included in parts package

- A. Foam Seal
- B. Coupling
- C. Flexible Exhaust Hose
- D. Window Exhaust Adapter
- E. Screws (4)
- F. Window Lock Bracket (2)
- G. Outer Slider Section w/ Vent
- H. Inner Slider Section - Short
- I. Inner Slider Section
- J. Outer Slider Section
- K. Foam Seal - Long (2)
- L. Foam Seal - Short (2)
- M. Drain Hose (Heat Pump Models)
- N. Drain Hose Clip (Heat Pump Models)
- O. Rivets (4)

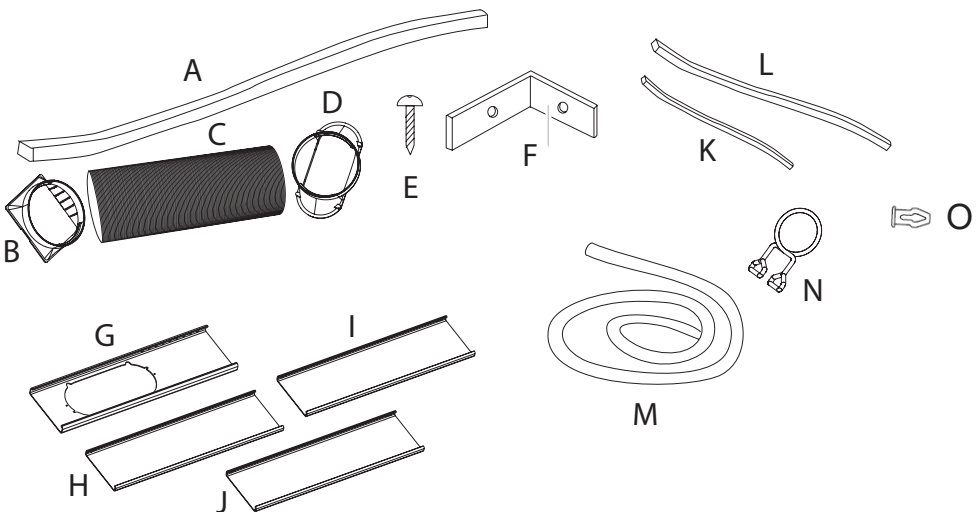

Electrical Requirements

⚠ WARNING



Electrical Shock Hazard

Plug into a grounded 3 prong outlet
 Do not remove ground prong
 Do not use an adapter
 Do not use an extension cord
 Failure to follow these instructions can result in death, fire, or electrical shock

Recommended Grounding Method

This portable air conditioner must be grounded. This portable air conditioner is equipped with a power supply cord with a three-prong grounding plug. The cord must be plugged into a mating, grounded three-prong outlet, grounded in accordance with all local codes and ordinances. If a mating outlet is not available, it is the customer's responsibility to have a properly grounded three-prong outlet installed by a qualified electrical installer.

It is the customer's responsibility:

To contact a qualified electrical installer. To assure that the electrical installation is adequate and conforms to the Nation Electrical Code. ANSI/NFPA 70-last edition, and all local codes and ordinances.


Copies of the standards listed may be obtained from:
 Nation Fire Protection Association
 1 Batterymarch Park
 Quincy, MA 02169-7471
www.nfpa.org

Wiring Requirement

115 V (103.5 min. to 126.5 max.)

15 A time-delay fuse or circuit breaker

Power Supply Cord

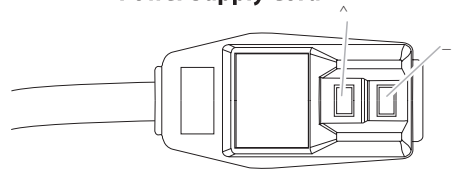

A. Test Button
 B. Reset Button

NOTE:

Your air conditioner's device may differ from the one shown. This room air conditioner is equipped with a power supply cord required by UL. This power supply cord contains state-of-the-art electronics that sense leakage current. If the cord is crushed, the electronics detect leakage current and power will be disconnected in a fraction of a second.

To test your power supply cord:

1. Plug power supply cord into a grounded 3 prong outlet.
2. Press RESET (on some devices, a green light will turn on).
3. Press TEST (listen for click; Reset button will trip, and on some devices, a green light will turn off).
4. Press and release RESET (listen for click; Reset button will latch, and on some devices, a green light will turn on). The power supply cord is ready for operation.

NOTE:

- The Reset button must be pushed in for proper operation.
- The power supply cord must be replaced if it fails to trip when the test button is pressed or fails to reset.
- Do not use the power supply cord as an off/on switch. The power supply cord is designed as a protective device.
- A damaged power supply cord must be replaced with a new power supply cord obtained from the product manufacturer and must not be repaired.
- The power supply cord contains no user serviceable parts. Opening the tamper-resistant case voids all warranty and performance claims.

Location Requirements

NOTE:

- The flexible exhaust hose allows placement of the air conditioner at least 20" from window or door.
- Confirm you are using the correct size air conditioner for the space to be cooled, per sizing recommendations, below:

Area to be cooled		DOE Capacity Needed (BTUs)
Up to 10' x 15' room	150 sq. ft	5000 Single Hose
Up to 10' x 25' room	250 sq. ft	6000 Single Hose
Up to 15' x 20' room	300 sq. ft	7000 Single Hose
Up to 10' x 35' room	350 sq. ft	8000 Single Hose

NOTE: Match BTUs to room use and location:

- Shaded room reduce to next smaller size
- Sunny room increase to next larger size
- For kitchens, increase to next larger size


Area to be cooled		DOE Capacity Needed (BTUs)
Up to 15' x 30' room	450 sq. ft	10000 Single Hose
Up to 10' x 55' room	550 sq. ft	10000 Dual Hose
Up to 10' x 55' room	500 sq. ft	12000 Single Hose

Safety Instructions




The length of the exhaust hose is specially designed according to the specification of the product. Do not replace, or extend, or otherwise modify the hose.

Vertical Sliding Window


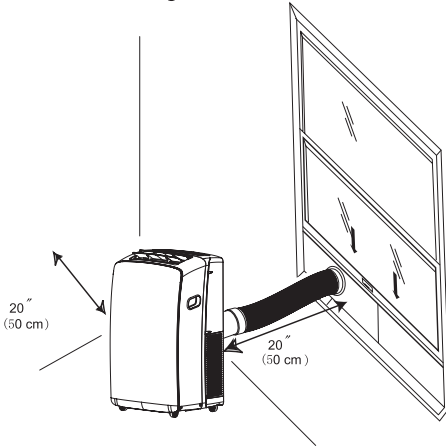


Horizontal Sliding Window

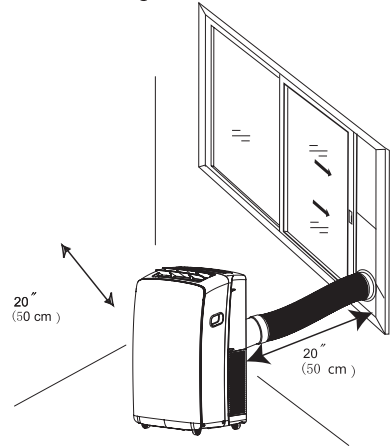

NOTE:

- For best performance, allow at least 20 in of air space on all sides of the unit for good air circulation.
- Do not block the air outlet.
- Provide easy access to the grounded 3 prong outlet.
- To ensure proper function, DO NOT overextend or bend the hose. Make sure that there is no obstacle around the air outlet of the exhaust hose in order for the exhaust system to work properly. All illustrations in this manual are for explanation purposes only. Your air conditioner may be slightly different. The actual shape shall prevail.

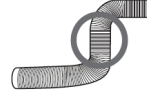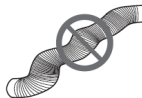

Installation Instructions

Unpack the Air Conditioner

⚠ WARNING

Excessive Weight Hazard

Use two or more people to move and install air conditioner

Failure to do so can result in back or other injury

Remove packaging materials

Remove and recycle packaging materials.

Remove tape and glue residue from surfaces before turning on the air conditioner. Rub a small amount of liquid dish soap over the adhesive with your fingers. Wipe with warm water and dry.

- Do not use sharp instruments, rubbing alcohol, flammable fluids, or abrasive cleaners to remove tape or glue. These products can damage the surface of your air conditioner.
- Handle the air conditioner gently
- Keep unit upright at least 2 hours prior to use

Caution: Installation accessories are stored in the top of the carton, and are required for proper cooling performance. Please remove all accessories from packing materials before use.




Installation Instructions

Window Vent Panel and Extensions

The window installation kit allows you to install the air conditioner in most vertical-sliding windows 11.8" to 47" wide or horizontal sliding windows 11.8" to 47" tall.


Panel Length \ Window Length	H 18"	I 9 1/2"	J 18"	K 18"	Fig.
18"	✓				a
19" - 26"	✓	✓			b
27" - 34"	✓		✓		c
35" - 50"	✓		✓	✓	d

1. Please check your window size and choose the fit from the above table.
2. If your window size requires more than 2 panels, after adjusting the length, please secure the panels with rivets, E.

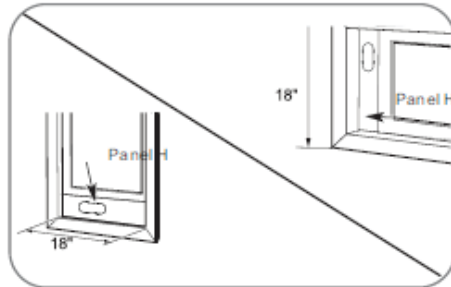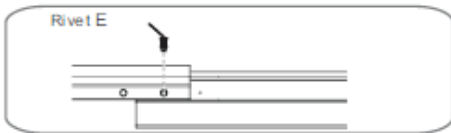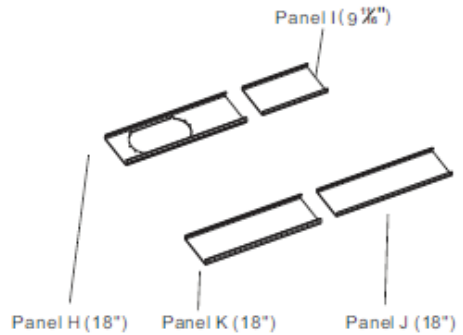


For an 18" window opening, use the window vent panel by itself.

Fig. "a"

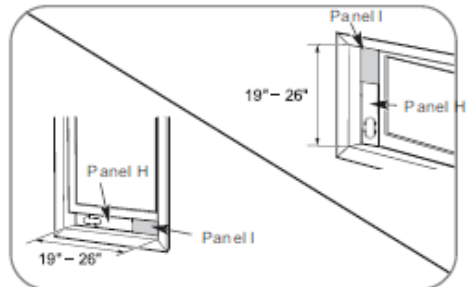


For window openings from 19" to 26", use the window vent panel (Panel H) and an extension panel (Panel I).

Fig. "b"

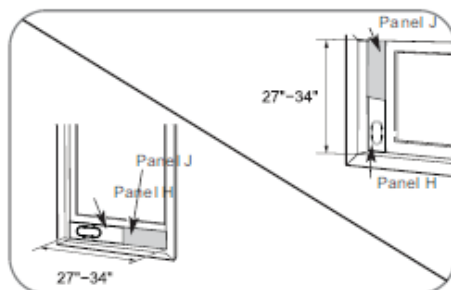

For window openings from 27" to 34", use the window vent panel (Panel H) and an extension panel (Panel J).

Fig. "c"

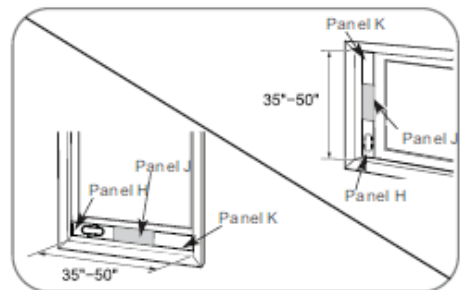

For window openings from 35" to 50", use the window vent panel and two extension panels (Panel K and Panel J).

Fig. "d"

Installation Instructions


Install the Portable Air Conditioner

Install Exhaust Hose and Adapter

1. Roll the air conditioner to selected location. see "Location Requirements" on page 4.


2. Preparing the exhaust hose assembly:

Press the coupling and the window exhaust adapter into the flexible exhaust hose. Both the coupling and window exhaust adapter have integral clips that snap onto the hose.

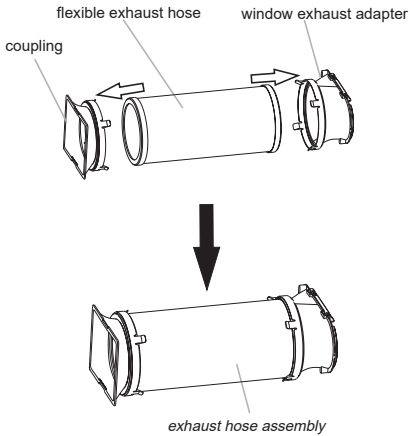

3. Insert the coupling into the slot on the back of the air conditioner.

4. Slide down to lock the hose into place.

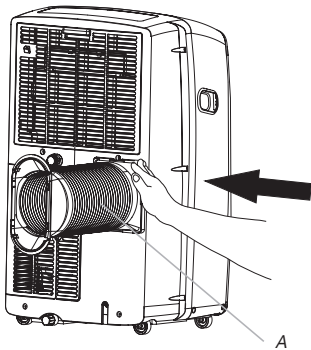

A. Flexible exhaust hose assembly


5. Confirm the hose is locked in place before operating

Window Installation

Your window installation kit has been designed to fit most standard vertical and horizontal window applications. Roll the air conditioner to selected location. see "Location Requirements" on page 4.

1. Attach the window exhaust adapter to the outer slider

NOTE: Product must be used with included Duct Window installation kit for effective cooling

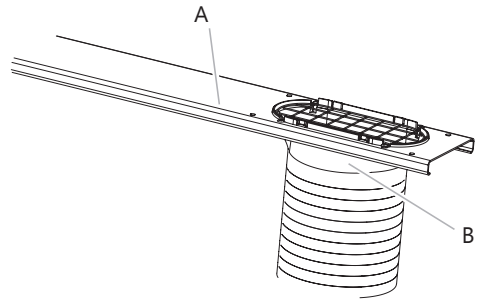


A. Outer slider section
B. Window exhaust adapter

Installation in Vertical Sliding Windows


Contents: Four (4) screws

Required tools: Drill


NOTE: The window installation kit can be used with vertical sliding windows between 11.8" and 47" wide

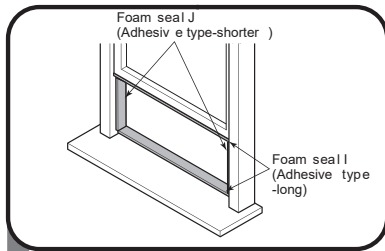


Cut the foam seal I (adhesive type-long) & J (adhesive type-shorter) to the proper length, and attach it to the window sash and frame.

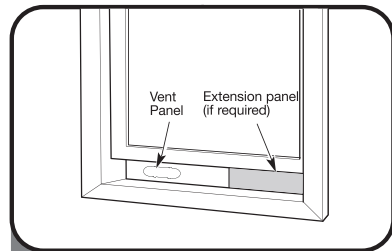


Insert the vent panel assembly, including extension panels, if needed, into the window opening. Extend the extension panels to the window width.

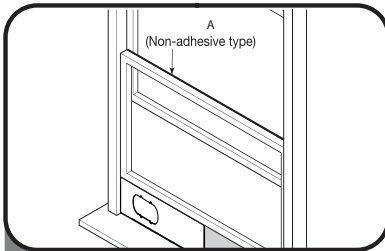


Cut the foam seal A (Non-adhesive type) to the window width. Stuff the foam seal A between the glass and the window to prevent air and foreign objects from getting into the room.

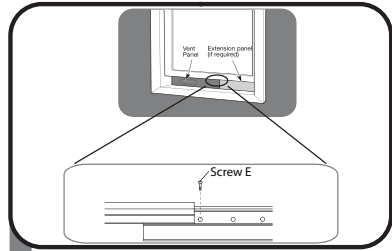

To secure extension panel and prevent panels from sliding, use enclosed screw. Insert screw through hole in extension panel as shown. Use hole that allows panel to best fit window opening. Tighten in place.

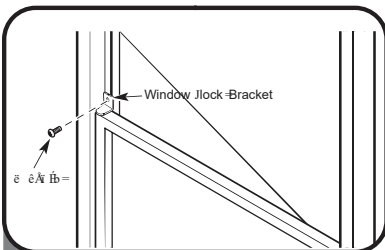


Install window lock bracket with 1 screw per bracket, as needed for secure installation.

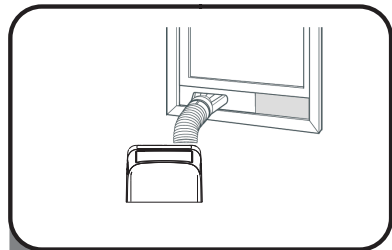

Insert the window exhaust adapter into the opening in the vent panel.


Installation in Vertical Sliding Windows

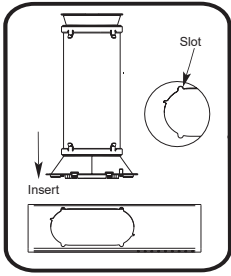


Align the tabs on the window exhaust adapter with the slots in the vent panel. Insert the window exhaust adapter into the opening in the vent panel.

Installation in Horizontal Sliding Windows


NOTE: The window installation kit can be used with vertical sliding windows between 11.8" and 47" wide

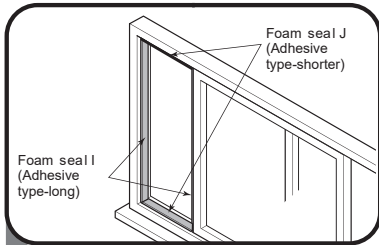


Cut the foam seal I (adhesive type-long) & J (adhesive type-shorter) to the proper length, and attach it to the window sash and frame.

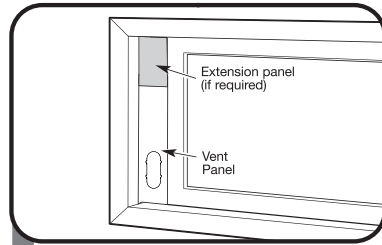

Insert the vent panel assembly, including extension panels, if needed, into the window opening. Extend the extension panels, if used.

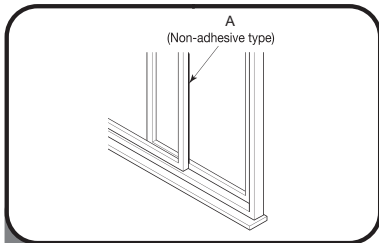


Cut the foam seal A (Non-adhesive type) to the window width. Stuff the foam seal A between the glass and the window to prevent air and foreign objects from getting into the room.

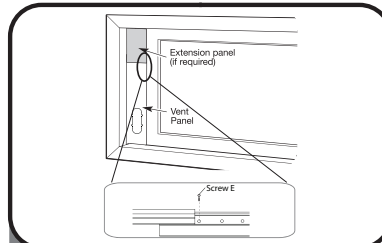


To secure extension panel and prevent panels from sliding, use enclosed screw. Insert screw through hole in extension panel as shown. Use hole that allows panel to best fit window opening. Tighten in place.

Installation in Horizontal Sliding Windows

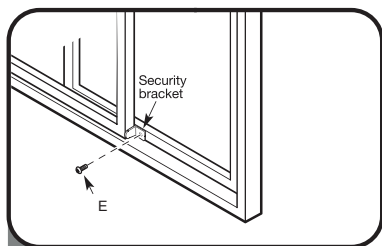


5

Install the Window-lock bracket with a type E screw as shown if you need.

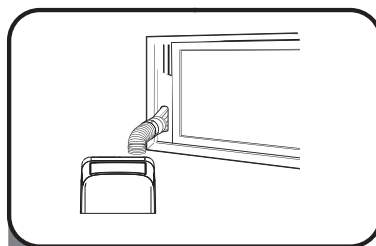

6

Insert the window exhaust adapter into the opening in the vent panel.

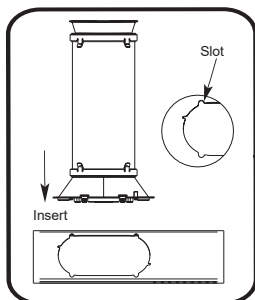

Align the tabs on the window exhaust adapter with the slots in the vent panel. Insert the window exhaust adapter into the opening in the vent panel.

Portable Air Conditioner Use

Operating your portable air conditioner properly helps you to obtain the best possible results.

This section explains proper air conditioner operation.

IMPORTANT:

- Do not stay in direct airflow from the air conditioner for extended periods of time.

- Never use in tightly enclosed spaces. Always ensure there is sufficient airflow of outside air entering the household especially when used in conjunction with combustible devices such as gas stoves, fireplaces, furnaces, hot water heaters etc. Do not place the power cord or air conditioner near a heater, radiator, stoves or other apparatus (including amplifiers) that produce heat.

- This air conditioner is intended for household use as a residential appliance. Do not use it as a precision climate control for commercial use, or for precision equipment, food, pets, plants, artwork, etc.

- Do not block or obstruct the exhaust vent hose as it may severely affect performance, or cause failure of the air conditioner.

- The air conditioner display shows the current room temperature.

- When changing modes while the air conditioner is in operation, the compressor will stop for 3 to 5 minutes before restarting. If a button is pressed during this time, the compressor will not restart for another 3 to 5 minutes.


- In Cooling or Dry mode, the compressor and condenser fan will stop when the room temperature reaches the set temperature.

- On Dry mode, the humidity level is automatically set, but is not able to be displayed.

NOTE: In the event of a power failure, your air conditioner will operate at the previous settings when the power is restored.

Starting Your Portable Air Conditioner

Control Panel

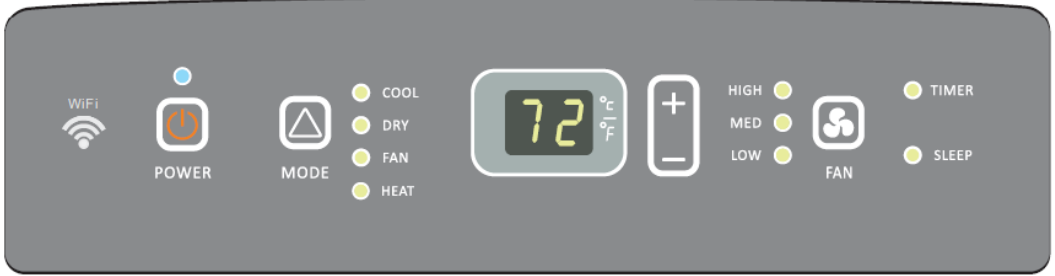

NOTE: The symbols may be different from these models, but the functions are similar

Power On or Off

NOTE: Keep upright at least 2 hours before use to prevent damaging the compressor



POWER

At the first time when the air conditioner is plugged in and turned on after your purchase, it will be set in Cool Mode. When the air conditioner is turned on at all other times, it will run according to the previous setting.

Mode

1. Press and release MODE until you see the symbol for the desired setting.

Operating modes: Cool, Dry, Fan, or Heat



MODE

Cool - Cools the room. Press FAN to select High, Mid, or Low speeds. Press the + or - button to adjust the temperature.



COOL

Dry - Dries the room. The air conditioner automatically selects the temperature. The fan runs on Low speed only. Dehumidification ranges between 2 to 3 pints per hour, by model.

NOTE: Dry mode should not be used to cool the room.



DRY

Fan Only mode. Press FAN to select High, Mid, or Low



FAN

Heat - Heats the room. Press FAN to select High, Mid, or Low speeds. Press the + or - button to adjust the temperature

NOTE: Heating is NOT available for cooling only models.



HEAT (Optional)


Fan Speed


1. Press and release FAN to choose the desired fan speed.



FAN

2. Choose High, Mid, or Low

High - For maximum fan speed HIGH 

Mid - For normal fan speed MED 

Low - For minimum fan speed LOW 

*Fan may take up to 3 seconds to change speed once selected.

Starting Your Portable Air Conditioner

Temperature

Press the + button to raise the temperature. Press the + button once to increase the set temperature by 1° F (1° C).



Press the - button to lower the temperature. Press the - button once to decrease the set temperature by 1° F (1° C).



NOTE:

- In the Cooling mode, the temperature can be set between 61° F and 86° F (16° C and 30° C).
- In Fan Only mode, the temperature cannot be set.
- The unit LED shows the target temperature for 5 seconds and then displays the room temperature.

Change Display Between °F and °C


To change the temperature display between °F and °C, press both the + and - adjust buttons at the same time.



Using the Remote


Insert the Batteries

1. Remove the battery cover along the arrowed direction.

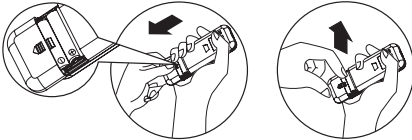

2. Insert new batteries making sure that the (+) and (-) of battery are matched correctly.

3. Re-attach the cover by sliding it back into position.

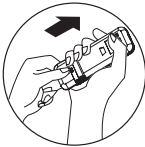


NOTE:

- Use 2 standard AAA (1.5 volt) batteries. Do not use rechargeable batteries
- Replace batteries with new ones of the same type when the display becomes dim, or after 6 months.
- When replacing batteries, always replace both batteries with new batteries. Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cd, ni-mh, etc) batteries.
- If the air conditioner will not be used for an extended period of time, remove the batteries from the remote.


Storage Tip

The holder on the back of the unit can be used to store the remote control.

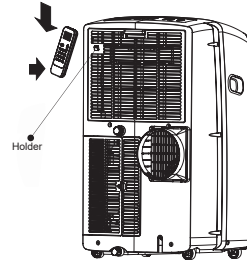

How to Use

To operate the room air conditioner, aim the remote control at the signal receptor. The remote control will operate the air conditioner at a distance of up to 23' (7m) when pointing at signal receptor of the air conditioner.

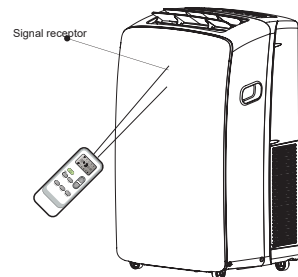


• **Do not use the remote if the batteries have leaked.**
The chemicals in batteries could cause burns or other health hazards.

• **DO NOT DISPOSE OF BATTERIES IN FIRE. BATTERIES MAY EXPLODE OR LEAK**

Using the Remote

Remote Control

NOTE: Remote control may differ in appearance

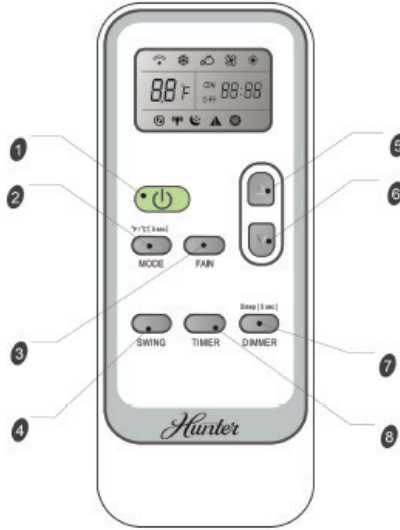

Button and Function

1		ON/OFF	5		UP
2		MODE	6		DOWN
3		FAN	7		DIMMER or Sleep
4		SWING	8		Timer On/Off

Indication Symbols

Indication symbols on LCD:

	Cooling indicator		Auto fan speed
	Dry indicator		High fan speed
	Fan only indicator		Medium fan speed
	Heating indicator		Low fan speed

	Sleep indicator
	Signal transmit.
	Display set temperature

NOTE: Press and hold the MODE button on the remote for 5 seconds to switch the temperature display from degrees Fahrenheit(°F) to degrees Celsius (°C).

Using the Features

Dimmer

Press the DIMMER button to turn off the control panel display



NOTE:

• When in DIMMER mode, new control inputs will return display to normal.

Sleep Mode

SLEEP mode can only be set in Cooling, Heating or Drying modes. When in sleep mode the unit will utilize lower, quieter fanspeeds and automatic temperature adjustments offering 8 hours of optimal sleeping conditions before shutting off.



NOTE:

- The appliance will stop operation automatically after operating for 8 hours.
- Fan speed is automatically set at low speed.
- In the Cooling mode, if the current room temperature is below 79° F (26° C) the temperature will automatically increase 1° F (1° C) during the first hour after Sleep control is activated, and continue running at that temperature. If the room temperature is 79° F (26° C) or above, set temperature will not change.
- In Heating mode, the set temperature will decrease by 6° F (3° C) at most, during 3 hours, and continues running at that temperature until auto shut off.

1. Press MODE to select COOL, HEATING, or DRY

NOTE: Sleep control cannot be selected in Fan mode.

2. Press the UP or Down button to set the temperature.

3. Press and hold the DIMMER button on the remote for 5 seconds to switch the DIMMER mode to SLEEP mode.

4. After 5 seconds, the lights on the control panel display will dim.

NOTE: The temperature and airflow direction may be adjusted during SLEEP control. The fan speed is automatically set to LOW speed. After 5 seconds, the lights on the control panel display will dim again.

5. To turn off SLEEP control, press MODE, FAN, SLEEP or wait 8 hours for SLEEP control to turn off automatically.

NOTE: The air conditioner will return to previous settings after SLEEP mode is turned off.

Timer

Use the TIMER function to turn the air conditioner ON/OFF automatically.



Setting the Air Conditioner to Turn On:

1. Plug in the air conditioner and use the remote to power it ON.
2. Use the remote to set the desired mode, temperature, fan speed, etc.
3. Use the remote to power OFF the air conditioner.
4. Press TIMER on the remote and use the UP, DOWN buttons to set the desired delay time until the air conditioner turns ON. The delay time can be set from 0 to 24 hours in one-hour increments.
5. Press TIMER again to confirm the delay time. The TIMER light on the unit will be on.

Setting the Air Conditioner to Turn Off:

1. Plug in the air conditioner and use the remote to power it ON.
2. Use the remote to set the desired mode, temperature, fan speed, etc.
3. Press TIMER on the remote and use the UP, DOWN buttons to set the desired delay time until the air conditioner turns OFF. The delay time can be set from 0 to 24 hours in one-hour increments.
4. Press TIMER again to confirm the delay time. The TIMER light on the unit will be on.

To cancel TIMER:

Press the TIMER button again. Once a “beep” is heard and the indicator disappears, the TIMER mode has been canceled.

NOTE: The TIMER function can only be set by the remote control.

Swing

Press SWING once to change the vertical airflow direction. Press again to hold the louver in a desired position.



NOTE:

- Airflow is automatically adjusted to a preset direction after turning on the unit.
- The direction of airflow can be adjusted by pressing the SWING button.
- Do not turn the airflow louvers manually, to prevent damage, turn off the unit first and cut off the power supply. Then restore power again after adjustment.

Normal Sounds

When your air conditioner is operating normally, you may hear sounds such as:

- Air movement from the fan.
- Clicks from the thermostat cycling.
- Vibration or noise due to poor wall or window construction
- A high-pitched hum or pulsating noise caused by the high-efficiency compressor cycling on and off.

Dehumidification & Draining

Cool Mode

Excess moisture is vented through exhaust hose and out window in COOL MODE. No additional parts are needed if room humidity remains under 92%.

USER NOTICE

Excessive room humidity may cause internal water reservoir to fill up. LED screen will display E5 and automatically shut off.

Refer to Page 14 of User Manual for draining instructions.

If operating in a room with excessive humidity over 92%, refer to DRAIN HOSE KIT for continuous use.

USER NOTICE

Air Conditioner does NOT display or determine room humidity. Please use other method to determine humidity in your home.

Heat Mode (For Heat Models Only)

Drain Hose Kit (included with heat models) must be used during HEAT MODE. Connect to Primary Drain Port.

USER NOTICE

Always connect drain hose on **HEAT MODE** or unit will stop running after water tank is full.

Dry Mode

(Not applicable for Hunter 8K BTU Conditioner)


When using DRY MODE, remove exhaust hose from window.

Drain air conditioner into a bucket using Secondary Drain Port . When using this method, monitor air conditioner to ensure unit is not leaking.

For your convenience, a Drain Hose Kit is available to purchase for continuous drainage.

USER NOTICE

Humidity levels cannot be adjusted with the dehumidification feature and does NOT replace a dehumidifier. For optimal humidity, we recommend purchasing a Hunter Dehumidifier.

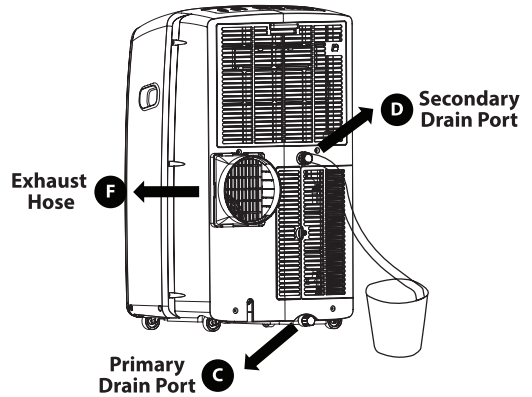


DRAIN HOSE KIT

Your Drain Hose Kit should include a drain hose and clip. Use Primary Drain Port **C** if used for **COOL MODE** or **HEAT MODE** . Use Secondary Drain Port **D** if used for **DRY MODE** .

Attaching the Hose :


1. Unplug or disconnect power .
2. Remove drain plug from proper draining port.
3. Attach drain hose and clip to drain plug.
4. Place other end of hose into a drain location. Ensure this end is on a lower level than end of hose attached to unit. Hose should not be kinked or pinched .
5. Plug in or reconnect power .

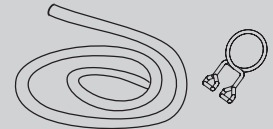

For your convenience, Drain Hose Kit (HPAC-HOSE) is available to purchase at hunterpureair.com or by calling Customer Service at (855) 887-1440 .

Portable Air Conditioner Care

Draining the Air Conditioner (non-Heating models)

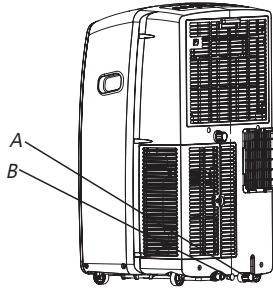

A. Primary Drain Cover
B. Primary Drain Plug

WARNING


Excessive Weight Hazard

Use two or more people to move and install the air conditioner.

Failure to do so can result in back or other injury.

1. Unplug the air conditioner or disconnect power.
2. Move the air conditioner to a drain location or outside.
3. Remove the primary drain cover and plug.
4. Drain water completely through the drain hole.
NOTE: If the air conditioner will be stored after use see "Storing After Use"
5. Reinstall the drain plug to the primary drain hole.
6. Reinstall the primary drain cover to the drain hole.
7. Reposition the air conditioner.
8. Plug in the air conditioner or reconnect power.

Draining the Air Conditioner (Heating models)

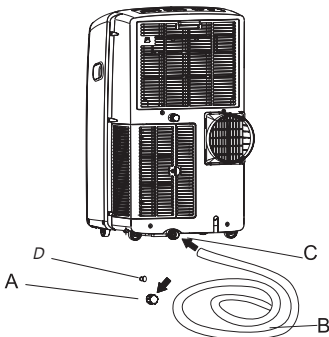

A. Primary Drain Cover
B. Drain Hose
C. Primary Drain Hole
D. Primary Drain Plug


WARNING: Please connect the drain hose on heating mode, or the unit will stop running after the water reaches warning level.

1. Uncover the primary drain port.
2. Attach the drain hose to the primary drain hose. Make sure the connector has no water leak.
3. Place the other end of drain hose into a outfall. Check to see that the hose lies flat and is in the drain. Make sure the hose end that goes to the drain is on a lower level than the hose end that connects to the unit. The hose should not be kinked or pinched.

Cleaning the Outside

1. Press ON/OFF to turn off the air conditioner.
2. Unplug the air conditioner or disconnect power.
3. Remove the air filter and clean separately. See "Cleaning the Air Filter".
4. Wipe the outside of the air conditioner with a soft damp cloth.
5. Plug in the air conditioner or reconnect power.
6. Press ON/OFF to start the air conditioner.

Cleaning the Air Filter

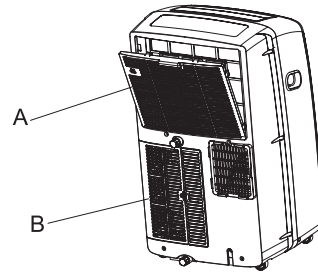

A. Evaporator Air Intake Filter Panel Door
B. Condenser Air Intake Filter Panel Door

1. Press ON/OFF to turn off the air conditioner.
2. Open the filter panel door on the back of the air conditioner and remove.
3. Remove the tapping screw from the condenser air intake filter panel door and remove.
4. Use a vacuum cleaner to clean the filter. If the filter is very dirty, wash the filter in warm water with a mild detergent.
NOTE: Do not wash the filter in the dishwasher or use any chemical cleaners.
5. Air dry the filter completely before replacing to ensure maximum efficiency.
6. Reattach the air filter to the filter panel door.
7. Reinstall the filter panel door and tapping screw.
8. Press ON/OFF to start the air conditioner.

Storing After Use

If the air conditioner will not be used for an extended period of time.

1. Drain the water completely, see "Draining the Air Conditioner"
2. Run the air conditioner set to Fan Only for approximately 12 hours to dry the air conditioner.
3. Unplug the air conditioner.

Portable Air Conditioner Care

Storing After Use (continued)

4. Remove the flexible exhaust hose and store with the air conditioner in a clean dry area. See "Installation Instructions".
5. Remove the window kit and store with the air conditioner in a clean dry area. See "Installation Instructions".
6. Remove the filter and clean. See "Cleaning the Air Filter".
7. Clean the outside of the air conditioner. See "Cleaning the Outside".
8. Reinstall the filter.

9. Remove the batteries and store the remote control with the air conditioner in a clean dry area.

Before Using the Air Conditioner Again


1. Make sure the filter and drain cap are in place.
2. Check the power cord to make sure it is in good condition, with no cracks or damage.
3. Place new batteries in the remote.
4. Install the air conditioner. See "Installation Instructions".

Troubleshooting

Before calling for service, please try the following suggestions below.

Air Conditioner Will Not Operate

⚠ WARNING



Electrical Shock Hazard

Plug into a grounded 3 prong outlet.

Do not remove ground prong.

Do not use an adapter.

Do not use an extension cord.

Failure to follow these instructions can result in death, fire, or electrical shock.

• The power supply is unplugged

Plug into a grounded 3 prong outlet. See "Electrical Requirements".

• Time-delay fuse or circuit breaker of the wrong capacity is being used

Replace with a time-delay fuse or circuit breaker of the correct capacity. See "Electrical Requirement".

• The power supply cord has tripped (Reset button has popped out)

Press and release RESET (listen for click; Reset button will latch and remain in) to resume operation.

• A household fuse has blown, or a circuit breaker has tripped

Replace the fuse or reset the circuit breaker. See "Electrical Requirements".

• The ON/OFF button has not been pressed

Press ON/OFF.

• The local power has failed

Wait for power to be restored.

Air Conditioner Blows Fuse or Trips Circuit Breaker

• Too many appliances are being used on the same circuit

Unplug or relocate appliances that share the same circuit.

• You are trying to restart the air conditioner too soon after turning off air conditioner

Wait at least 3 minutes after turning off air conditioner before trying to restart the air conditioner.

Air Conditioner Power Supply Cord Trips (Reset Button Pops Out)

• Disturbance in your electrical current can trip (Reset button will pop out) the power supply cord

Press and release RESET (listen for click; Reset button will latch and remain in) to resume operation

• **Electrical overloading, overheating, cord pinching, or aging can trip (Reset button will pop out) the power supply cord**
After correcting the problem, press and release RESET (listen for click; Reset button will latch and remain in) to resume operation. If the power cord fails to reset, contact a service technician.

NOTE: A damaged power supply cord must be replaced with a new power supply cord obtained from the product manufacturer and must not be repaired.

Air Conditioner Seems to Run Too Much

• Is there a door or window open?

Keep doors and windows closed

• The current air conditioner replaced an older model

The use of more efficient components may cause the air conditioner to run longer than an older model, but the total energy consumption will be less. Newer air conditioners do not emit the "blast" of cold air you may be accustomed to from older units, but this is not an indication of lesser cooling capacity or efficiency. Refer to the efficiency rating (EER) and capacity rating (in Btu/h) marked on the air conditioner.

• The air conditioner is in a heavily occupied room, or heat-producing appliances are in use in the room.

Use exhaust vent fans while cooking or bathing and try not to use heat-producing appliances during the hottest part of the day. Portable air conditioners are designed as supplemental cooling to local areas within a room. A higher capacity air conditioner may be required, depending on the size of the room being cooled.

Air Conditioner Runs for a Short Time Only, But Room is Not Cool

• Set temperature is close to room temperature

Lower set temperature. See "Portable Air Conditioner Use".

Troubleshooting

Display Error Code

- If the unit displays error code: E5, the water container is full. Drain the water, see "Draining the Air Conditioner". After draining, the unit can be operated again.
- If the unit displays error code E1/E2/E3/E4/E6/E7/EA, please contact customer service.

Air Conditioner Runs, But Does Not Cool

- **The filter is dirty or obstructed by debris**
Clean the filter
- **Air outlet is blocked**
Clear air outlet
- **Set temperature is too high**
Lower set temperature

Air Conditioner Cycles On & Off Too Much

- **The air conditioner is not properly sized for your room**
Check the cooling capabilities of your portable air conditioner. Portable air conditioners are designed as supplemental cooling to local areas within a room.
- **The filter is dirty or obstructed by debris**
Clean the filter
- **There is excessive heat or moisture, open container cooking, showers, etc. in the room.**
Use a fan to exhaust heat or moisture from the room. Try not to use heat-producing appliances during the hottest part of the day.
- **The louvers are blocked**
Install the air conditioner in a location where the louvers are free from curtains, blinds, furniture, etc.

Limited Warranty

Mindful, LLC makes the following limited warranty to the original residential user or consumer purchaser of the **Portable Air Conditioner**: If any part of the **Portable Air Conditioner** fails during the first (1) year from the date of purchase due to a defect in material or workmanship, we will provide a replacement part free of charge. If no replacement part can be provided, we will replace your **Portable Air Conditioner**. From the second (2) to the fifth (5) year from your original purchase date, Mindful, LLC will repair or replace any parts in the Sealed Refrigeration System (compressor, condenser, evaporator and tubing) that prove to be defective in materials or workmanship. In years 2-5, the consumer will be responsible for diagnostic, labor and parts costs as well as any removal, transportation and reinstallation expenses which are incurred during service on components other than those covered under the Sealed Refrigeration System 5-year warranty.

IF THE ORIGINAL RESIDENTIAL USER OR CONSUMER PURCHASER CEASES TO OWN THE **PORTABLE AIR CONDITIONER**, THIS WARRANTY AND ANY IMPLIED WARRANTY WHICH THEN REMAINS IN EFFECT, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE VOIDED. THIS WARRANTY IS IN LIEU OF ALL OTHER EXPRESS WARRANTIES. THE DURATION OF ANY IMPLIED WARRANTY, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE IS EXPRESSLY LIMITED TO THE PERIOD OF THE EXPRESS WARRANTY SET FORTH ABOVE.

This warranty is voided if your **Portable Air Conditioner** is not purchased and used in the USA or Canada.

This warranty excludes and does not cover defects, malfunctions, or failures of the **Portable Air Conditioner** which were caused by repairs by persons not authorized by us, use of parts, or accessories not authorized by us, mishandling, possession, or unreasonable use, including failure to provide reasonable and necessary maintenance. This warranty does not cover **Portable Air Conditioners** used in commercial applications. There are no express or implied warranties as to commercial purchasers or users.

See next page for more information on what is not covered.

Limited Warranty

What is not covered:

- Units that are sold “as is”, are used, or sold by unauthorized resellers (an unauthorized reseller is defined as any third-party reseller who has no official relationship with Mindful LLC.)
- Shipping or freight charges to return products for warranty service.
- Commercial or non-residential use or use inconsistent with the product instructions and manuals.
- Consumable parts (e.g., light bulbs, batteries, filters, etc.)
- Defects or damage resulting from accident, misuse, abuse, alteration, fire, floods, or acts of God.
- Rust on the exterior of the unit.
- Cosmetic damage (e.g., scratches, dents, chips, and other damage to finishes), unless such damage results from defects in materials and workmanship and is reported within 30 days from date of delivery.
- Units with original, factory installed model numbers removed, altered, or not easily determined.
- Damage resulting from improper packing of products returned for warranty service.
- Replacement parts, repair labor costs and/or replacement of a “failed” **Portable Air Conditioner** operated outside the United States and Canada.
- Damages to the finish or appliance or home incurred during installation, including but not limited to floors, cabinets, walls, etc.
- Mindful LLC will have the final determination regarding who an unauthorized reseller is determined to be.

Limited Warranty

To obtain service, contact Mindful, LLC Customer Service at 855-887-1440. You will be responsible for insurance and freight or other transportation to our factory service center. We will return the freight prepaid. The **Portable Air Conditioner** should be properly packaged to avoid damage in transit since we will not be responsible for any such damage. Proof of purchase is required when requesting warranty service. The purchaser must present sales receipt or other document that establishes proof of purchase.

IN NO EVENT SHALL **MINDFUL, LLC** BE LIABLE FOR DIRECT, INDIRECT, SPECIAL, CONSEQUENTIAL OR INCIDENTAL DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE **PORTABLE AIR CONDITIONER**. YOUR SOLE REMEDY WILL BE REPAIR OR REPLACEMENT AS PROVIDED ABOVE. SOME AMERICAN STATES AND CANADIAN PROVINCES DO NOT ALLOW:

- LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS;
- THE EXCLUSION OR LIMITATION OF DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES; THE EXCLUSION OR INVALIDITY OF EXPRESS OR IMPLIED WARRANTIES IF THE USER CEASES TO OWN THE **PORTABLE AIR CONDITIONER**;
- THE LIMITATION OF THE REMEDIES AND RECOURSES AVAILABLE TO THE PURCHASER; OR THE INVALIDITY OF AN EXPRESS WARRANTY WHEN A PRODUCT IDENTIFIED BY BRAND NAME IS NOT USED (UNLESS SPECIFIC CONDITIONS ARE FULFILLED); SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

To request warranty service, visit www.hunterpureair.com
or call (855) 887-1440