

***lenovo***

ThinkServer TD340  
User Guide and Hardware Maintenance  
Manual



ThinkThink**ThinkServer**Think

**Machine Types:** 70B4, 70B5, 70B6, and 70B7

**Note:**

Before using the information and the product it supports, be sure to read and understand the following:

- The *Read Me First* that comes with your product
- “Safety information” on page iii
- Appendix A “Notices” on page 213

**Second Edition (May 2014)**

**© Copyright Lenovo 2014.**

LIMITED AND RESTRICTED RIGHTS NOTICE: If data or software is delivered pursuant a General Services Administration “GSA” contract, use, reproduction, or disclosure is subject to restrictions set forth in Contract No. GS-35F-05925.

---

# Contents

<b>Safety information</b> . . . . .	<b>iii</b>	Viewing information in the Setup Utility program . . . . .	61
Products that are not assessed . . . . .	x	Setup Utility program interface . . . . .	62
<b>Chapter 1. General information</b> . . . . .	<b>1</b>	Setting the system date and time . . . . .	64
Introduction . . . . .	1	Using passwords . . . . .	65
Server documentation . . . . .	2	Selecting a startup device . . . . .	66
<b>Chapter 2. Server setup road map</b> . . . . .	<b>5</b>	Configuring the TPM function . . . . .	66
<b>Chapter 3. Product overview</b> . . . . .	<b>7</b>	Exiting the Setup Utility program . . . . .	67
Server package . . . . .	7	Updating or recovering the BIOS . . . . .	67
Features . . . . .	7	Using the ThinkServer EasyStartup program . . . . .	69
Specifications . . . . .	12	Features of the ThinkServer EasyStartup program . . . . .	69
Software . . . . .	12	Starting the ThinkServer EasyStartup program . . . . .	69
ThinkServer EasyStartup . . . . .	12	Using the ThinkServer EasyStartup program on a Windows operating system . . . . .	71
ThinkServer EasyUpdate Firmware Updater . . . . .	12	Configuring RAID . . . . .	72
BIOS and TMM update utilities . . . . .	13	About RAID . . . . .	72
RAID configuration utilities . . . . .	13	Configuring RAID using the ThinkServer EasyStartup program . . . . .	73
Lenovo ThinkServer EasyManage . . . . .	13	Configuring the ThinkServer RAID 100 or RAID 300 . . . . .	74
Remote management software . . . . .	13	Configuring the advanced SATA/SAS hardware RAID . . . . .	79
Diagnostic program . . . . .	13	Configuring the Ethernet controllers . . . . .	80
Locations . . . . .	13	Updating the firmware . . . . .	80
Machine type, model, and serial number label . . . . .	13	Using the Firmware Updater program . . . . .	80
Front view of the server . . . . .	15	Using the Lenovo ThinkServer EasyManage program . . . . .	80
Front panel . . . . .	17	<b>Chapter 6. Installing, removing, or replacing hardware</b> . . . . .	<b>83</b>
Intelligent diagnostics module . . . . .	19	Guidelines . . . . .	83
Rear view of the server . . . . .	21	Precautions . . . . .	83
Server locks . . . . .	25	Handling static-sensitive devices . . . . .	84
Server components . . . . .	28	System reliability guidelines . . . . .	85
Hot-swap hard disk drive status LEDs . . . . .	33	Working inside the server with the power on . . . . .	85
RAID card . . . . .	35	Removing the server cover . . . . .	85
Expander card . . . . .	38	Removing and reinstalling the front bezel . . . . .	87
Hot-swap hard-disk-drive backplane . . . . .	39	Removing and reinstalling the PCI card bracket assembly . . . . .	89
Connecting the cables . . . . .	43	Installing, removing, or replacing hardware . . . . .	92
System board components . . . . .	48	Installing or removing a memory module . . . . .	93
System board jumpers and switches . . . . .	52	Installing or removing the Ethernet card . . . . .	100
System board LEDs . . . . .	56	Installing or removing the RAID card . . . . .	104
<b>Chapter 4. Turning on and turning off the server</b> . . . . .	<b>59</b>	Installing or removing the ThinkServer RAID 500 Upgrade Key for Advanced RAID . . . . .	107
Turning on the server . . . . .	59	Installing or removing the ThinkServer RAID 700 Battery . . . . .	109
Turning off the server . . . . .	59		
<b>Chapter 5. Configuring the server</b> . . . . .	<b>61</b>		
Using the Setup Utility program . . . . .	61		
Starting the Setup Utility program . . . . .	61		

Installing or removing the ThinkServer RAID 100 or RAID 300 upgrade key for Advanced RAID . . . . .	112
Installing or removing the ThinkServer Management Module Premium . . . . .	116
Installing or removing the ThinkServer Trusted Platform Module . . . . .	119
Installing or removing the intelligent diagnostics module . . . . .	122
Installing or replacing an optical drive . . . . .	126
Installing or replacing a hot-swap hard disk drive . . . . .	130
Installing or removing a non-hot-swap hard disk drive . . . . .	134
Installing or replacing a 2.5-inch solid-state drive . . . . .	143
Installing or replacing a tape drive . . . . .	152
Installing or replacing the microprocessor . . . . .	157
Installing or replacing a hot-swap redundant power supply . . . . .	165
Replacing the PCI Express solid-state drive . . . . .	169
Replacing the non-hot-swap power supply assembly . . . . .	170
Replacing the hot-swap hard-disk-drive backplane. . . . .	172
Replacing the power distribution board and cage assembly. . . . .	177
Replacing the front panel board assembly . . . . .	180
Replacing the front system fan 1 . . . . .	183
Replacing the rear system fan . . . . .	185
Replacing the heat sink and fan assembly 1 . . . . .	188
Replacing the system board battery . . . . .	191
Replacing the system board . . . . .	193
Completing the parts replacement . . . . .	200
Reinstalling the server cover and reconnecting cables . . . . .	200
Updating the server configuration . . . . .	202

**Chapter 7. Troubleshooting and diagnostics . . . . . 203**

Troubleshooting procedure . . . . .	203
Viewing the status and diagnostic LEDs. . . . .	203
Using a diagnostic program . . . . .	203

Viewing the system event log . . . . .	204
Basic troubleshooting tables . . . . .	204
ThinkServer EasyStartup program problems . . . . .	204
Optical drive problems. . . . .	205
Hard disk drive problems. . . . .	206
Memory module problems . . . . .	207
Keyboard, mouse, or USB device problems. . . . .	208

**Chapter 8. Getting information, help, and service . . . . . 209**

Information resources . . . . .	209
Using the documentation. . . . .	209
ThinkServer Web site . . . . .	209
Lenovo Support Web site. . . . .	209
Help and service . . . . .	210
Before you call . . . . .	210
Calling for service. . . . .	210
Using other services . . . . .	211
Purchasing additional services . . . . .	211

**Appendix A. Notices . . . . . 213**

Trademarks . . . . .	214
Important notes . . . . .	214
Particulate contamination . . . . .	214
Polyvinyl Chloride (PVC) cable and cord notice . . . . .	215
Recycling information . . . . .	215
Battery return program. . . . .	215
Requirements for Batteries Containing Perchlorate . . . . .	216
Important WEEE information . . . . .	217
Restriction of Hazardous Substances Directive (RoHS). . . . .	217
European Union RoHS. . . . .	217
German Ordinance for Work gloss statement. . . . .	217
Export classification notice . . . . .	217
Electronic emission notices. . . . .	218
Federal Communications Commission (FCC) Statement. . . . .	218
Eurasian compliance mark . . . . .	219
ENERGY STAR model information . . . . .	220

**Index. . . . . 221**

---

## Safety information

**Note:** Before using the product, be sure to read and understand the multilingual safety instructions on the documentation DVD that comes with the product.

قبل استخدام المنتج، تأكد من قراءة إرشادات الأمان متعددة اللغات وفهمها، وتوجد هذه الإرشادات في قرص DVD الوثائقي الذي يأتي مع المنتج.

Antes de usar o produto, leia e entenda as instruções de segurança multilíngues no DVD de documentação que o acompanha.

Преди да използвате този продукт, задължително прочетете и вникнете в многоезичните инструкции за безопасност в DVD диска с документация, който се предоставя с продукта.

Prije upotrebe ovog proizvoda obavezno pročitajte višejezične sigurnosne upute koje se nalaze na DVD-u s dokumentacijom koji dobivate uz proizvod.

Před použitím produktu je třeba si přečíst a porozumět bezpečnostním pokynům uvedeným na disku DVD s dokumentací, který je dodáván s produktem.

Før du bruger produktet, skal du sørge for at læse og forstå de sikkerhedsforskrifter, der findes på flere sprog, på den dokumentations-dvd, der følger med produktet.

Lue tuotteen mukana toimitetulla DVD-tietolevyllä olevat monikieliset turvaohjeet ennen tämän tuotteen käyttöä.

Avant d'utiliser le produit, veuillez à bien lire et comprendre les instructions de sécurité multilingues figurant sur le DVD de documentation fourni avec le produit.

Πριν χρησιμοποιήσετε το προϊόν, βεβαιωθείτε ότι έχετε διαβάσει και κατανοήσει τις οδηγίες ασφάλειας, οι οποίες είναι διαθέσιμες σε διάφορες γλώσσες στο DVD τεκμηρίωσης που συνοδεύει το προϊόν.

Vor Verwendung des Produkts sollten Sie unbedingt die mehrsprachigen Sicherheitsanweisungen auf der Dokumentations-DVD lesen, die im Lieferumfang des Produkts enthalten ist.

לפני השימוש במוצר, הקפידו לקרוא ולהבין את הוראות הבטיחות, המופיעות בשפות שונות ב-DVD התיעוד המצורף למוצר.

A termék használata előtt mindenképpen olvassa el és értelmezze a termékhez kapott dokumentációs DVD lemezen található, több nyelven elolvasható biztonsági előírásokat.

Prima di utilizzare il prodotto, accertarsi di leggere e comprendere le informazioni sulla sicurezza multilingue disponibili sul DVD di documentazione fornito con il prodotto.

製品をご使用になる前に、製品に付属の Documentation DVD に収録されているマルチリンガルの「安全に正しくご使用いただくために」を読んで理解してください。

제품을 사용하기 전에 제품과 함께 제공되는 문서 DVD의 다국어 안전 지침을 주의 깊게 읽어보십시오.

Voordat u het product gebruikt, moet u ervoor zorgen dat u de meertalige veiligheidsinstructies op de documentatie-dvd van het product hebt gelezen en begrijpt.

Przed skorzystaniem z produktu należy zapoznać się z wielojęzycznymi instrukcjami bezpieczeństwa znajdującymi się na płycie DVD z dokumentacją dostarczoną wraz z produktem.

Antes de utilizar o produto, leia atentamente as instruções de segurança multilingues que constam no DVD de documentação fornecido com o produto.

Înainte de a utiliza produsul, asigurați-vă că ați citit și înțeles instrucțiunile de siguranță în mai multe limbi de pe DVD-ul cu documentație care însoțește produsul.

Før du bruker produktet, må du lese og forstå den flerspråklige sikkerhetsinformasjonen på DVDen med dokumentasjon som følger med produktet.

Прежде чем использовать этот продукт, внимательно ознакомьтесь с инструкциями по технике безопасности на разных языках, которые можно найти на DVD-диске с документацией в комплекте с продуктом.

在使用本产品之前，请务必先阅读和了解产品附带的文档 DVD 中的多语言安全说明。

Pre nego to upotrebite proizvod obavezno paljivo proitajte i prouite viejeziko uputstvo za bezbednost na dokumentacionom DVD-u koji ste dobili uz proizvod.

Pred pouvanm produktu si pretajte viacjazyn bezpenostn pokyny na disku DVD s dokumentciou dodanom s produktom.

Preden začnete uporabljati izdelek, je pomembno, da preberete in razumete večjezična varnostna navodila na DVD-ju z dokumentacijo, ki ste ga prejeli skupaj z izdelkom.

Antes de utilizar el producto, asegúrese de leer y comprender las instrucciones de seguridad multilingües del DVD de documentación que se proporciona con el producto.

Var noga med att läsa säkerhetsinstruktionerna på dokumentations-DVD-skivan som följer med produkten innan du börjar använda produkten.

使用本產品之前，請務必閱讀並瞭解產品隨附的文件 DVD 上的多國語言版本安全資訊。

Bu ürünü kullanmadan önce, ürünle birlikte gönderilen belge DVD'si üzerindeki çok dil içeren güvenlik yönergelerini okuyup anladığınızdan emin olun.

Перед використанням цього продукту уважно ознайомтеся з інструкціями з техніки безпеки на різних мовах, що можна знайти на DVD-диску з документацією в комплекті з продуктом.

**Important:** For translated versions of the caution or danger statement, refer to the *Safety, Warranty, and Support Information* document.

Ensure that you read and understand all caution and danger statements in this document before you perform the procedures. Read and understand any additional safety information that is included with the server or optional device before you install, remove, or replace the device.

## Statement 1



### DANGER

Electrical current from power, telephone, and communication cables is hazardous.

To avoid a shock hazard:

- Do not connect or disconnect any cables or perform installation, maintenance, or reconfiguration of this product during an electrical storm.
- Connect all power cords to a properly wired and grounded electrical outlet.
- Ensure that all power cord connectors are securely and completely plugged into receptacles.
- Connect to properly wired outlets any equipment that will be attached to this product.
- When possible, use one hand only to connect or disconnect signal cables.
- Never turn on any equipment when there is evidence of fire, water, or structural damage.
- Disconnect the attached power cords, telecommunications systems, networks, and modems before you open the device covers, unless instructed otherwise in the installation and configuration procedures.
- Connect and disconnect cables as described in the following table when installing, moving, or opening covers on this product or attached devices.

#### To connect:

1. Turn everything OFF.
2. First, attach all cables to devices.
3. Attach signal cables to connectors.
4. Attach power cords to outlets.
5. Turn devices ON.

#### To disconnect:

1. Turn everything OFF.
2. First, remove power cords from outlets.
3. Remove signal cables from connectors.
4. Remove all cables from devices.

## Statement 2



### DANGER

Danger of explosion if battery is incorrectly replaced.

When replacing the lithium coin cell battery, use only the same or an equivalent type that is recommended by the manufacturer. The battery contains lithium and can explode if not properly used, handled, or disposed of.

Do not:

- Throw or immerse into water
- Heat to more than 100°C (212°F)
- Repair or disassemble

Dispose of the battery as required by local ordinances or regulations.

Statement 3



**CAUTION:**

When laser products (such as CD-ROMs, DVD drives, fiber optic devices, or transmitters) are installed, note the following:

- Do not remove the covers. Removing the covers of the laser product could result in exposure to hazardous laser radiation. There are no serviceable parts inside the device.
- Use of controls or adjustments or performance of procedures other than those specified herein might result in hazardous radiation exposure.




**DANGER**


Some laser products contain an embedded Class 3A or Class 3B laser diode. Note the following:

Laser radiation when open. Do not stare into the beam, do not view directly with optical instruments, and avoid direct exposure to the beam.


Statement 4

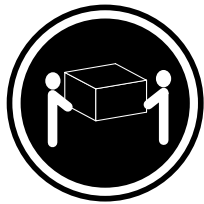

≥ 18 kg (39.7 lb)  
< 32 kg (70.5 lb)

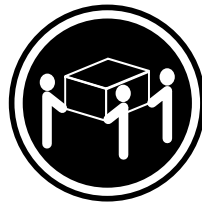

≥ 32 kg (70.5 lb)  
< 55 kg (121.2 lb)

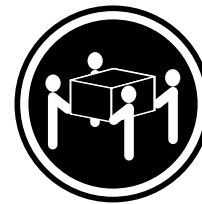

≥ 55 kg (121.2 lb)  
< 100 kg (220.5 lb)

**CAUTION:**


Use safe practices when lifting.

Statement 5



**CAUTION:**

The power control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.





**Statement 6**



**CAUTION:**

If you install a strain-relief bracket option over the end of the power cord that is connected to the device, you must connect the other end of the power cord to a power source that is easily accessible in case it needs to be disconnected.

**Statement 7**



**CAUTION:**

If the device has doors, ensure that you remove or secure the doors before moving or lifting the device to protect against personal injury. The doors will not support the weight of the device.

**Statement 8**



**CAUTION:**

Never remove the cover on a power supply or any part that has the following label attached.



Hazardous voltage, current, and energy levels are present inside any component that has this label attached. There are no serviceable parts inside these components. If you suspect a problem with one of these parts, contact a service technician.

**Statement 9**



**CAUTION:**

Disconnect the hot-swap fan cables before removing the fan from the device to protect against personal injury.

**Statement 10**



**CAUTION:**

The following label indicates a sharp-edge hazard.



**Statement 11**



**CAUTION:**

The following label indicates a potential heat hazard.



**Statement 12**



**DANGER**

Overloading a branch circuit is a potential fire hazard and a shock hazard under certain conditions. To avoid these hazards, ensure that your system electrical requirements do not exceed branch current ratings at the installation site.

**Statement 13**



**CAUTION:**

Ensure that the rack is secured properly to avoid tipping when the server unit is extended on the rails.

**Statement 14**



**CAUTION:**


Some accessory or option board outputs exceed Class 2 or limited power source limits. You must install the appropriate interconnecting cabling in accordance with your local electrical code requirements.

**Statement 15**



**CAUTION:**

The power-control button on the device may put the device in standby mode instead of turning off the device. In addition, the device might have multiple connections to dc power. To remove all electrical current from the device, ensure that all connections to dc power are disconnected at the dc power input terminals.

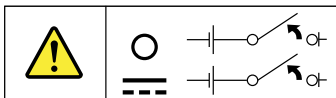

**Statement 16**



**CAUTION:**

To reduce the risk of electric shock or energy hazards:

- This equipment must be installed by trained service personnel in a restricted-access location, as defined by your local electrical code and the latest edition of IEC 60950.
- Connect the equipment to a reliably earthed safety extra low voltage (SELV) source. An SELV source is a secondary circuit that is designed so that normal and single fault conditions do not cause the voltages to exceed a safe level (60 V direct current).
- The branch circuit overcurrent protection must be rated in accordance with local electrical code requirements.
- Use 1.3 mm<sup>2</sup> or 16 American Wire Gauge (AWG) copper conductor only, not exceeding 3 meters in length.
- Torque the wiring-terminal screws to 1.4 newton-meters or 12 inch-pounds.
- Provide a readily available, approved and rated disconnect device in the field wiring.

**Statement 17**



**CAUTION:**

This product contains a Class 1M laser. Do not view directly with optical instruments.

**Statement 18**



**CAUTION:**

Do not place any object on top of rack-mounted products.



**Statement 19**



**CAUTION:**

Hazardous moving parts. Keep fingers and other body parts away.



## Statement 20



### **CAUTION:**

**A lithium ion battery is provided. To avoid possible explosion, do not burn the battery. Replace the battery only with the Lenovo-approved part. Recycle or discard the battery as instructed by local regulations.**

---

## **Products that are not assessed**

Typical products that are **not assessed** include but not limited to the following:

- Server and IT-rack components (for example, uninterruptible power supplies and current distribution systems)
- Devices in IT rooms (for example, bulk storage units and network products)
- Industrial low-voltage switchgear

---

## Chapter 1. General information

This chapter provides some general information about your product.

This chapter contains the following items:

- “Introduction” on page 1
- “Server documentation” on page 2

---

### Introduction

This user guide for your Lenovo® ThinkServer® product contains information about the server features, specifications, component locations, configuration instructions, hardware replacement procedures, and basic troubleshooting and diagnostics.

Your server comes with a documentation DVD that contains various server documents to help you use and maintain the server. Meanwhile, your server comes with a *ThinkServer EasyStartup* DVD that provides a convenient solution for configuring the server and installing an operating system.

The Lenovo Limited Warranty (LLW) contains the warranty terms that apply to the product you purchased from Lenovo. Read the LLW on the documentation DVD that comes with your server. A printable generic version of the latest LLW also is available in more than 30 languages at [http://www.lenovo.com/warranty/llw\\_02](http://www.lenovo.com/warranty/llw_02). If you cannot obtain the LLW through the documentation DVD or Lenovo Web site, contact your local Lenovo office or reseller to obtain a printed version of the LLW, free of charge.

For warranty service, consult the worldwide Lenovo Support telephone list. Telephone numbers are subject to change without notice. The most up-to-date telephone list for Lenovo Support is always available on the Web site at <http://www.lenovo.com/support/phone>. If the telephone number for your country or region is not listed, contact your Lenovo reseller or Lenovo marketing representative.

To obtain the most up-to-date information about the server, go to:  
<http://www.lenovo.com/thinkserver>

Lenovo maintains pages on the World Wide Web where you can get the latest technical information and download documentation or device drivers and updates. To access the Lenovo Support Web site, go to:  
<http://www.lenovo.com/support>

Record information about your server in the following table. You will need the information if you ever need to have your server serviced.

For where to find the product information label on the chassis, see “Machine type, model, and serial number label” on page 13.

<b>Product name</b>	_____
<b>Machine type and model (MT-M)</b>	_____
<b>Serial number (S/N)</b>	_____
<b>Date of purchase</b>	_____

You can register your server with Lenovo by following the instructions at:  
<http://www.lenovo.com/register>

When you register your server, information is entered into a database, which enables Lenovo to contact you in case of a recall or other severe problem. After you register your server with Lenovo, you will receive quicker service when you call Lenovo for help. In addition, some locations offer extended privileges and services to registered users.

---

## Server documentation

This topic provides general descriptions of the various documentation for your server and instructions on how to obtain all the documentation.

### Printed document

The following document is printed out and contained in your server package.

#### *Read Me First*

This is a multilingual document you should read first. This document provides instructions on how to access the complete safety, warranty, and support information on the documentation DVD that comes with your server. This document also provides instructions on how to find the most up-to-date information on the Lenovo Support Web site.

### Documentation DVD

The documentation DVD, which comes with your server, contains various documents for your server in Portable Document Format (PDF). To view the documentation, you need to have the Adobe Reader program installed. You can download the desired language version of the latest Adobe Reader program from the Adobe Web site at:  
<http://www.adobe.com>

To start the documentation DVD, insert the DVD into the optical drive. The DVD is AutoPlay enabled and starts automatically in most Microsoft® Windows® environments. If the DVD fails to start or if you are using a Linux® operating system, open the launch.htm file located in the root directory of the DVD.

**Note:** Lenovo maintains pages on the World Wide Web where you can get the latest technical information and download documentation or device drivers and updates. Some information in the documents on the documentation DVD might change without notice after the first release of the DVD. You can always obtain all the most up-to-date documentation for your server from the Lenovo Web site at:  
<http://www.lenovo.com/UserManuals>

The following documents are on the documentation DVD that comes with your server:

- *Safety, Warranty, and Support Information*

This is a multilingual document that includes all the safety statements for your product in more than 30 languages. Be sure to read and understand all the safety statements before using the product. This document also includes the Lenovo warranty statement, Customer Replaceable Units (CRUs) information, and information about how to contact the Lenovo Customer Support Center.

- *Lenovo License Agreement*

This document includes the terms and conditions of the Lenovo License Agreement.

- *User Guide and Hardware Maintenance Manual*

This document provides detailed information to help you get familiar with your server and help you use, configure, and maintain your server.

- *ThinkServer Management Module User Guide*

This document provides information about server remote management. This document is in English only. You might find this document on the documentation DVD that comes with your server. If not, download it from the Lenovo Web site at:

<http://www.lenovo.com/UserManuals>

**Note:** To obtain advanced remote management functions, install a ThinkServer Management Module Premium (TMM Premium) on the iKVM connector on the system board. See “Installing or removing the ThinkServer Management Module Premium” on page 116.

- *MegaRAID SAS Software User Guide*

This document provides information about Redundant Array of Independent Disks (RAID) and how to use the utility programs to configure, monitor, and maintain your server RAID and related devices. This document is in English only.

**Note:** Refer to this document for hardware RAID information if you have a required RAID card installed in the server. See “Installing or removing the RAID card” on page 104. For information about the ThinkServer RAID 100 or RAID 300 (also known as the onboard SATA/SAS software RAID), see “Configuring the ThinkServer RAID 100 or RAID 300” on page 74.

- *Other documents*

You might find other documents for the Host Bus Adapter (HBA), Ethernet card, or other optional parts on the documentation DVD.





---

## Chapter 2. Server setup road map

This chapter provides a general road map to guide you through setting up your server.

The server setup procedure varies depending on the configuration of the server when it was delivered. In some cases, the server is fully configured and you just need to connect the server to the network and an ac power source, and then you can turn on the server. In other cases, the server needs to have hardware features installed, requires hardware and firmware configuration, and requires an operating system to be installed.

The general procedure for setting up your server is:

1. Unpack the server package. See “Server package” on page 7.
2. Install any required hardware or server option. See the related topic in Chapter 6 “Installing, removing, or replacing hardware” on page 83.
3. Connect the Ethernet cable and power cords to the server. See “Rear view of the server” on page 21 to locate the connectors.
4. Turn on the server to verify operation. See “Turning on the server” on page 59.
5. Review the Unified Extensible Firmware Interface (UEFI) Basic Input Output System (BIOS) settings and customize as needed. See “Using the Setup Utility program” on page 61.
6. Configure RAID and install the operating system and basic drivers. See “Using the ThinkServer EasyStartup program” on page 69 and “Configuring RAID” on page 72.
7. Install any additional drivers needed for added features. Refer to the instructions that come with the hardware option.
8. Configure Ethernet settings in the operating system by referring to the operating system help. This step is not required if the operating system was installed using the ThinkServer EasyStartup program.
9. Check for firmware and driver updates. See “Updating the firmware” on page 80.
10. Install other applications. Refer to the documentation that comes with the applications that you want to install.



---

## Chapter 3. Product overview

This chapter provides information about the server package, features, specifications, software programs, and component locations.

This chapter contains the following items:

- “Server package” on page 7
- “Features” on page 7
- “Specifications” on page 12
- “Software” on page 12
- “Locations” on page 13

---

### Server package

The server package includes the server, power cords, printed documentation, a documentation DVD, and software media.

**Note:** Depending on the model, your server might look slightly different from the following illustration.

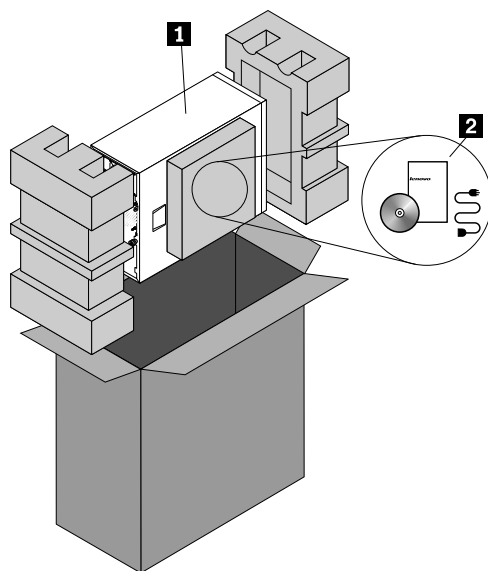


Figure 1. Server package

**1** Server

**2** Material box, including power cords, printed documentation, a documentation DVD, and software media

---

### Features

This topic provides general information about the server features for various models. Depending on your specific model, some features might vary or not be available. For information about your specific model, use the Setup Utility program. See “Viewing information in the Setup Utility program” on page 61. You also can

refer to the Personal Systems Reference document for ThinkServer products at:  
<http://www.lenovo.com/psref/>

## Microprocessor

One or two Intel® Xeon® microprocessors (internal cache size varies by model)

For a list of ThinkServer microprocessor options, go to:  
<http://www.lenovo.com/thinkserver>

## Memory

Your server has 12 memory slots. For more information, see “System board components” on page 48 and “Memory module installation rules” on page 93.

## Power supply

Your server comes with one of the following power supply configurations:

- One screw-secured, non-hot-swap 625-watt power supply assembly (universal input and compliant with 80 PLUS Bronze)
- One or two hot-swap 800-watt redundant power supplies (universal input and compliant with 80 PLUS Gold)

## System fans

Your server comes with the following fans to provide proper system cooling and airflow:

- One rear system fan
- Two front system fans
- Two heat sink and fan assemblies

## Internal drives

Internal drives are devices that your server uses to read and store data. The internal drives supported by your server vary by model.

- Hard disk drive

Your server supports one of the following hard disk drive configurations:

- Up to four 3.5-inch hot-swap Serial Advanced Technology Attachment (SATA) or Serial Attached SCSI (SAS) hard disk drives (SCSI is the acronym for Small Computer System Interface)
- Up to four 3.5-inch non-hot-swap SATA hard disk drives
- Up to eight 3.5-inch hot-swap SATA or SAS hard disk drives
- Up to eight 2.5-inch hot-swap SAS hard disk drives or SATA solid-state drives

**Note:** If you install 2.5-inch solid-state drives and hard disk drives into the same server, you can install up to two 2.5-inch solid-state drives for this configuration.

- Up to sixteen 2.5-inch hot-swap SAS hard disk drives or SATA solid-state drives

**Note:** If you install 2.5-inch solid-state drives and hard disk drives into the same server, you can install up to four 2.5-inch solid-state drives for this configuration.

- Support PCI Express solid-state drives

**Note:** The term “2.5-inch hot-swap hard disk drives” or “2.5-inch hard disk drives” hereinafter refers to all the supported types of 2.5-inch hard disk drives, including the solid-state drives.

- Optical drive

- Up to two 5.25-inch SATA optical drives
- The server has two optical drive bays. The lower optical drive bay is installed with a 5.25-inch SATA optical drive. The upper bay is for a secondary optical drive only. Some server models come with a secondary optical drive installed in the upper bay.

- RDX drive

Your server supports an internal RDX drive that enables you to store data on RDX media. The internal RDX drive must be installed in the upper optical drive bay. To install or replace an internal RDX drive, see “Installing or replacing an internal RDX drive” on page 153.

**Note:** If your server is installed with a Windows Server operating system, you can use the Windows Backup program to backup the data stored on RDX media. For detailed information, refer to the user guide of the RDX drive. The user guide is available for download at: <http://www.lenovo.com/UserManuals>

To locate the internal drives or drive bays, see “Server components” on page 28.

## External drives

If your server has a Host Bus Adapter installed, an external tape drive can be connected to store data on tapes. To connect an external tape drive, see “Connecting an external tape drive” on page 157.

## Expansion slots

The server has six expansion slots on the system board for installing appropriate Peripheral Component Interconnect (PCI) cards or PCI Express cards. For detailed information, see “System board components” on page 48.

## Input/Output (I/O) features

- One serial connector on the rear panel
- One Video Graphics Array (VGA) DB-15 connector on the rear panel
- Six USB 2.0 connectors (two on the front panel and four on the rear panel)
- Two RJ-45 Ethernet connectors on the rear panel (Ethernet connector 2 is for system management)

For the location information about the connectors, refer to the related topics in “Locations” on page 13.

## Video subsystem

An integrated graphics controller in the ThinkServer Management Module (TMM), which also is known as the Baseboard Management Controller (BMC) chip, is installed on the system board to support a VGA connector on the rear panel for connecting video devices.

## Ethernet connectivity

The server comes with an integrated Intel Gigabit Ethernet controller as well as an Ethernet physical layer (PHY) of the Open Systems Interconnection model (OSI model). They provide the server with the ability to support two Ethernet connectors on the rear panel with 10 megabits per second (Mbps), 100 Mbps, or 1000 Mbps network connectivity. For more information, see “Rear view of the server” on page 21.

## Reliability, availability, and serviceability

Reliability, availability, and serviceability (hereinafter referred to as RAS) are three important server design features. The RAS features help you to ensure the integrity of the data stored on the server, the availability of the server when you need it, and the ease with which you can diagnose and correct problems.

Your server has the following RAS features:

- **Security features**

- Server locks (see “Server locks” on page 25)
- Administrator password and user password to help protect unauthorized access to the server (see “Using passwords” on page 65)
- ThinkServer Trusted Platform Module (TPM), which is a security chip, to help enhance server security

**Note:** The TPM is only available in some models.

- Remote monitoring or control by an administrator to provide protection or help
- Hot-swap redundant power supplies to help avoid significant interruption to the operation of the system when a power supply fails (available in some models)

- **Basic system management features**

- Ability to store the power-on self-test (POST) hardware test results
- BIOS Setup Utility program

The BIOS Setup Utility program helps you view the server information and configure the server in the pre-operating system environment. See “Using the Setup Utility program” on page 61.

- TMM (also known as BMC), and Intelligent Platform Management Interface (IPMI) 2.0

The system board platform management subsystem is based on the integrated TMM features. The TMM is a management chip that is integrated on the system board of your server. With the TMM chip, no matter what condition the server operating system is in and no matter if the server is on or off, as long as the server is connected to network and an ac power source, the interaction with the TMM-controlled servers can be achieved through system network. The user can obtain the server hardware health information and system event log (SEL), and is able to conduct the operations including turning on or off the server, restarting the server, and so on. This part of server management is independent of the operating system and is called out-of-band management.

The system board platform management subsystem consists of the integrated TMM, communication buses, sensors, Basic Input Output System (BIOS), and server management firmware. It is responsible for error reporting, system power control, thermal monitoring, system fan control, and other management features. The TMM provides system management and monitoring features based on the IPMI 2.0 specification. IPMI helps lower the overall costs of server management. You can find more information about IPMI 2.0 from the Web site of Intel. The TMM also supports some non-IPMI features, such as the Dynamic Host Configuration Protocol (DHCP) and the Platform Environment Control Interface (PECI), to provide more system management functions.

You can find the default user name, password, and other information for the TMM in the *ThinkServer Management Module User Guide*, which is available for download at:  
<http://www.lenovo.com/UserManuals>

- Hot-swap feature

Some models support hot-swap hard disk drives or hot-swap redundant power supplies. With the hot-swap feature, you can install, remove, or replace hard disk drives or a failing power supply without turning off the server.

- Preboot Execution Environment (PXE)

The Intel PXE technology enables you to boot your computers, load an operating system, or deploy executable images from a remote server by using a network interface. The operation can be done independently of local data storage devices (such as hard disk drives) or operating systems.

- Redundant Array of Independent Disks (RAID)

Your server supports onboard SATA software RAID and advanced SATA/SAS hardware RAID configurations if you have a required RAID card installed. For detailed information, see “Configuring RAID” on page 72.

- Status light-emitting diodes (LEDs) and diagnostic LEDs

For more information about the LEDs for your server, refer to the related topics in “Locations” on page 13.

- Software programs

For more information about the software programs, see “Software” on page 12.

- Wake on LAN

When the Wake on LAN feature is enabled on a computer that is connected to a local area network (LAN), a network administrator can remotely turn on or wake up the computer from a management console using remote network management software. Besides, many other functions, such as data transfer and software updates, can be performed remotely without remote attendance and can be done after normal working hours and on weekends to save time and increase productivity.

- **Advanced system management features**

The advanced system management features are only available when the TMM detects the presence of a ThinkServer Management Module Premium (TMM Premium), which also is known as the integrated keyboard, video, and mouse (iKVM) key. The TMM Premium is a remote management module. You can purchase a TMM Premium from Lenovo and install it on the TMM Premium connector (also known as iKVM connector) on the system board of your server to enable the iKVM function and activate the advanced system management features.

For more information about advanced system management, refer to the *ThinkServer Management Module User Guide*, which is available for download at:  
<http://www.lenovo.com/UserManuals>

---

## Specifications

This topic lists the physical specifications for your server.

### Dimensions

Width: 195 mm (7.68 inches)

Height: 430 mm (16.93 inches) without foot stands; 445 mm (17.52 inches) with foot stands

Depth: 595 mm (23.43 inches) including the front bezel

### Weight

The product weight varies depending on different system configurations.

Range of product weight without package: 18 kg (39.68 lb) to 26 kg (57.32 lb)

Range of product weight with package: 22 kg (48.50 lb) to 31 kg (68.34 lb)

### Environment

- Air temperature:

Operating: 10°C to 35°C (50°F to 95°F)

Storage: -40°C to 60°C (-40°F to 140°F) in original shipping package

- Altitude: 0 to 3048 m (0 to 10 000 ft)

- Humidity:

Operating: 10% to 80% (non-condensing)

Storage: 8% to 90% (non-condensing)

### Electrical input

Universal input:

Minimum: 90 V ac

Maximum: 264 V ac

Input frequency range: 47 to 63 Hz

---

## Software

This topic provides information about the software programs that you can use to help you set up, use, and maintain the server.

### ThinkServer EasyStartup

The ThinkServer EasyStartup program simplifies the process of configuring RAID and installing supported Microsoft Windows and Linux operating systems and device drivers on your server. This program is provided with your server on a self-starting (bootable) *ThinkServer EasyStartup* DVD. The user guide for the program also is on the DVD and can be accessed directly from the program interface. For detailed information, see “Using the ThinkServer EasyStartup program” on page 69.

### ThinkServer EasyUpdate Firmware Updater

The ThinkServer EasyUpdate Firmware Updater program (hereinafter referred to as Firmware Updater) enables you to maintain your server firmware up to date and helps you avoid unnecessary server outages. The Firmware Updater program is provided on the Lenovo Support Web site. For more information about downloading and using the Firmware Updater program, see “Updating the firmware” on page 80.



## **BIOS and TMM update utilities**

The BIOS and TMM (also known as BMC) firmware keeps updating after the shipment of the server. Lenovo maintains pages on the Support Web site and provides the BIOS and TMM update utilities with instructions for download to help you update the BIOS and TMM firmware if needed. For more information, see “Updating or recovering the BIOS” on page 67 and “Updating the firmware” on page 80.

## **RAID configuration utilities**

Your server supports onboard SATA software RAID and advanced SATA/SAS hardware RAID configurations if you have a required RAID card installed. For detailed information, see “Configuring RAID” on page 72.

## **Lenovo ThinkServer EasyManage**

The Lenovo ThinkServer EasyManage program enables enterprise users to remotely control and monitor multiple Lenovo servers within a LAN.

For detailed information, see “Using the Lenovo ThinkServer EasyManage program” on page 80.

## **Remote management software**

The integrated TMM provides basic remote management features for the server. The add-on TMM Premium option provides advanced remote management features for the server.

For detailed information about the remote management software and server remote management, refer to the *ThinkServer Management Module User Guide*, which is available for download at: <http://www.lenovo.com/UserManuals>

## **Diagnostic program**

The ThinkServer Diagnostic Tool program is available for you to diagnose server problems.

For more information, see “Using a diagnostic program” on page 203.

---

## **Locations**

This topic provides information to help you locate your server components.


## **Machine type, model, and serial number label**

This topic helps you locate the two labels that contain the machine type, model, and serial number information for your server. The two labels are the same. One is on the front bezel and the other is on the chassis.

The machine type, model, and serial number identify your server. When you contact Lenovo for help, the information helps support technicians to identify your server and provide faster service.

The following illustration is a sample of the machine type, model, and serial number labels on the server.

**Note:** Depending on the model type, your server might look slightly different from this illustration.

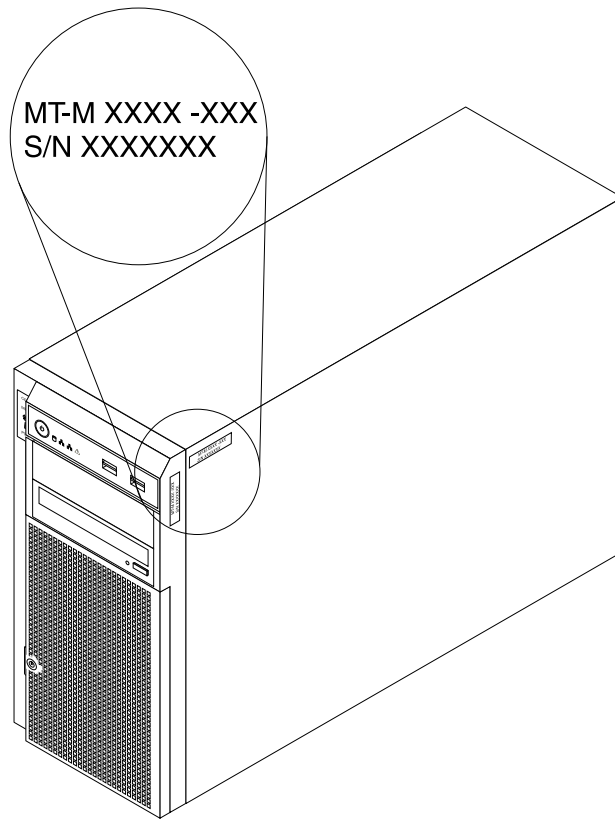

*Figure 2. Machine type, model, and serial number labels*

## Front view of the server

This topic provides information to help you locate the parts on the front of the server.

The following illustration shows the front view of the server.

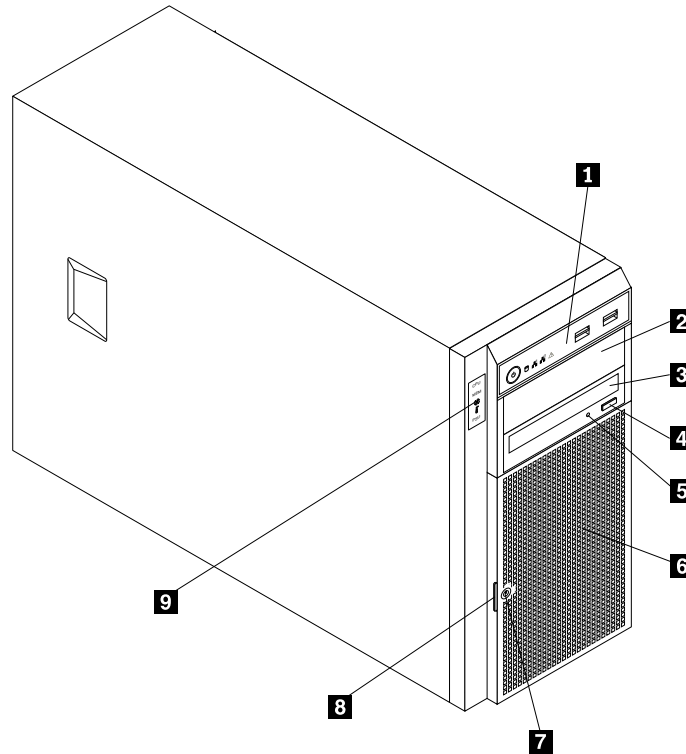


Figure 3. Front view of the server

<b>1</b> Front panel	<b>6</b> Front door
<b>2</b> Optical drive bay 2 (with an optical drive installed in some models)	<b>7</b> Front door lock
<b>3</b> Optical drive bay 1 (with an optical drive installed)	<b>8</b> Front door handle
<b>4</b> Optical drive eject/close button	<b>9</b> Intelligent diagnostics module panel (available in some models)
<b>5</b> Optical drive status LED	

### **1** Front panel

For detailed information about the control, connectors, and status LEDs on the front panel, see “Front panel” on page 17.

### **2** Optical drive bay 2

The 5.25-inch optical drive bay 2 is for a secondary optical drive. Some models have a secondary optical drive installed.

### **3 Optical drive bay 1**

Your server comes with an optical drive installed in the 5.25-inch optical drive bay 1.

### **4 Optical drive eject/close button**

Press this button to eject or close the optical drive when the server power is on.

### **5 Optical drive status LED**

The optical drive status LED is blinking in green when the optical drive is working or in the POST process.

### **6 Front door**

#### **7 Front door lock**

You can lock the front door to protect the hard-disk-drive cages from unauthorized access.

#### **8 Front door handle**

Use the front door handle to open the front door.

#### **9 Intelligent diagnostics module panel**

The intelligent diagnostics module panel is only available in models that come with an intelligent diagnostics module. For more information, see “Intelligent diagnostics module” on page 19.

## Front panel

This topic provides information to help you locate the control, connectors, and LEDs on the front panel of the server.

The following illustration shows the control, connectors, and LEDs on the front panel of the server.

**Note:** Depending on the model, your server might look slightly different from this illustration.

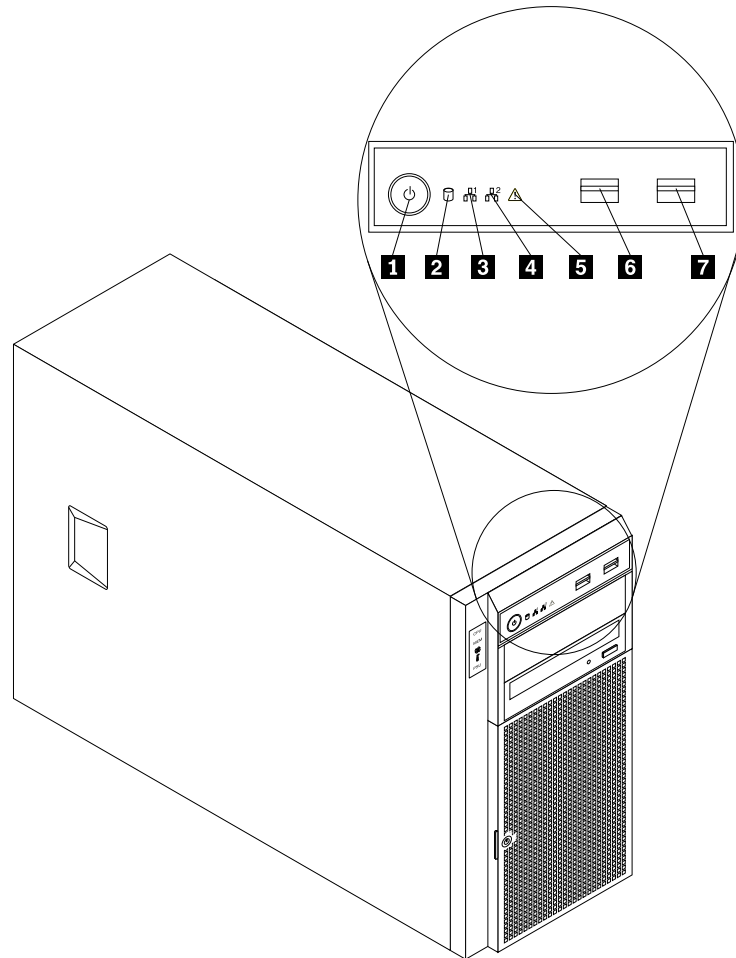


Figure 4. Front panel

<b>1</b> Power switch with power status LED	<b>5</b> System status LED
<b>2</b> Hard disk drive status LED	<b>6</b> Front USB connector 1
<b>3</b> Network Interface Controller (NIC) 1 status LED	<b>7</b> Front USB connector 2
<b>4</b> NIC 2 status LED	

### **1** Power switch with power status LED

Press the power switch to turn on the server when you finish setting up the server. Hold the power switch for several seconds to turn off the server if you cannot turn it off from the operating system. See Chapter 4 “Turning on and turning off the server” on page 59. The power status LED helps you to determine the current power status.

Power status LED	Color	Description
On	Green	The server is on.
Off	None	The server is off.
Blinking	Green	The server is in ACPI S1 mode, which also is known as Power On Suspend (POS) mode. In this mode, the microprocessor is not working while other hardware devices are still working.

## 2 Hard disk drive status LED

The hard disk drive status LED helps you to determine the status of the hard disk drive activity.

**Note:** The hard disk drive status LED is only for server models with non-hot-swap hard disk drives.

Hard disk drive status LED	Color	Description
Off	None	The hard disk drive is not in use.
Blinking	Green	The hard disk drive is active and data is being transferred.

## 3 NIC 1 status LED

## 4 NIC 2 status LED

The two NIC status LEDs indicate the LAN status for the Ethernet connector 1 and Ethernet connector 2 on the rear panel of the server.

NIC status LED	Color	Description
On	Green	The server is connected to a LAN.
Off	None	The server is disconnected from a LAN.
Blinking	Green	The LAN is connected and active.

## 5 System error LED

The system error LED helps you to determine if there are any system errors.

- **Off:** The server is off or the server is on and working correctly.
- **Amber:** The server has potential system errors. Check the information in the following table for potential system errors and corresponding solutions.

Potential system error (system error LED: amber)	Solution
The temperature of the server reached the non-critical temperature threshold.	Check the BMC for errors and check the system fans.
The voltage of the server reached the non-critical voltage threshold.	Replace the system board. <b>Note:</b> This action must be performed only by Lenovo service personnel. See Chapter 8 “Getting information, help, and service” on page 209.
A fan is running at low speed.	Check the system fans.
The power supply has a critical error.	Check the BMC for detailed information.

Potential system error (system error LED: amber)	Solution
A power cord has been disconnected or a redundant power supply has been removed.	<ol style="list-style-type: none"> <li>1. Ensure that the power supplies are installed securely.</li> <li>2. Ensure that the power cords are connected securely to the power supplies.</li> <li>3. Install a new power supply to replace the removed one.</li> </ol>
The system is overheated.	Check the BMC for errors and then check the system fans.

#### **6 Front USB connector 1**

#### **7 Front USB connector 2**

Used to attach a USB-compatible device, such as a USB keyboard, mouse, scanner, or printer. If you have more than six USB devices, you can purchase a USB hub, which you can use to connect additional USB devices.

### **Intelligent diagnostics module**

This topic provides information about the intelligent diagnostics module (hereinafter referred to as the IDM) and the diagnostic LEDs on the IDM panel.

**Note:** The IDM is only available in some models.

The following illustration shows the location of the IDM and the diagnostic LEDs on the IDM panel in the front of the server.

**Note:** Depending on the model, your server might look slightly different from this illustration.

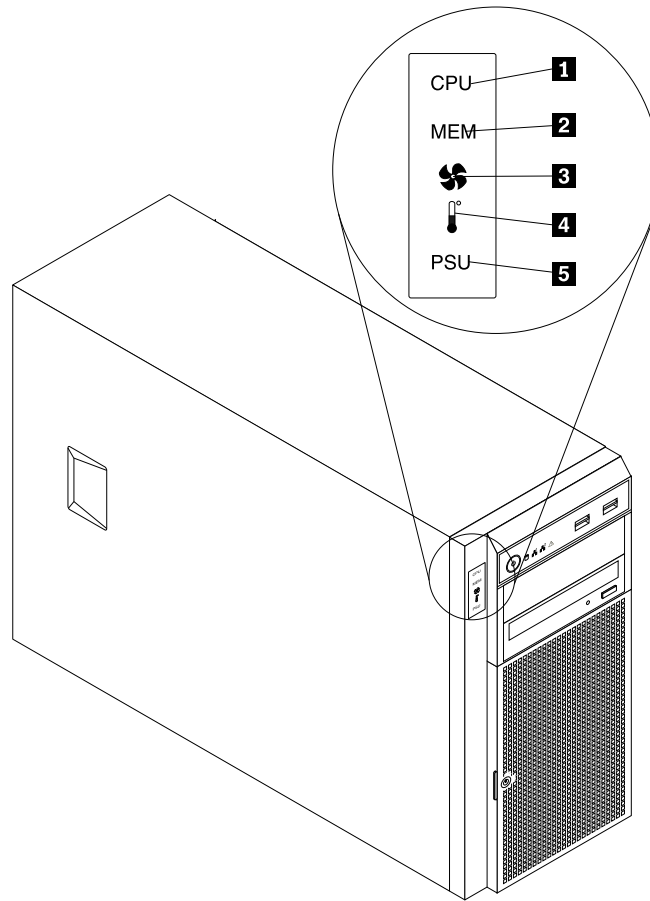


Figure 5. IDM panel

LED	Status	Description	Action
1 Microprocessor status LED (also known as CPU error LED)	Solid off	The microprocessors are operating at a normal temperature.	
	Solid on (amber)	One or more microprocessors are overheated.	Check the BMC for errors and run the diagnostic programs. See “Using a diagnostic program” on page 203.
2 Memory module status LED	Solid off	The memory modules are operating at a normal temperature.	
	Solid on (amber)	One or more memory modules are overheated.	Check the BMC for errors and run the diagnostic programs. See “Using a diagnostic program” on page 203.



LED	Status	Description	Action
3 System fan error LED	Solid off	The system fans are operating correctly.	
	Solid on (amber)	One or more system fans are running at low speed or have been removed.	Check the BMC for errors and run the diagnostic programs. See “Using a diagnostic program” on page 203. <b>Note:</b> To identify the failing system fans, check the status LEDs on the system board. See “System board LEDs” on page 56.
4 Ambient temperature limit LED	Solid off	The server is running at a normal temperature.	
	Solid on (amber)	The ambient temperature is below 7°C (44.6°F) or over 40°C (104°F).	Check the BMC for errors and run the diagnostic programs. See “Using a diagnostic program” on page 203.
5 Power supply error LED	Solid off	The power supply is working correctly.	
	Solid on (amber)	The power supply is likely to fail or has failed.	Check the BMC for errors and run the diagnostic programs. See “Using a diagnostic program” on page 203. <b>Note:</b> To identify the failing power supply, check the status LED near the power cord connector on the redundant power supply.

## Rear view of the server

This topic provides information to help you locate the connectors and components on the rear of your server.

The following illustration shows the rear view of the server with a screw-secured, non-hot-swap power supply assembly.

**Note:** Depending on the model, your server might look slightly different from the illustrations in this topic.

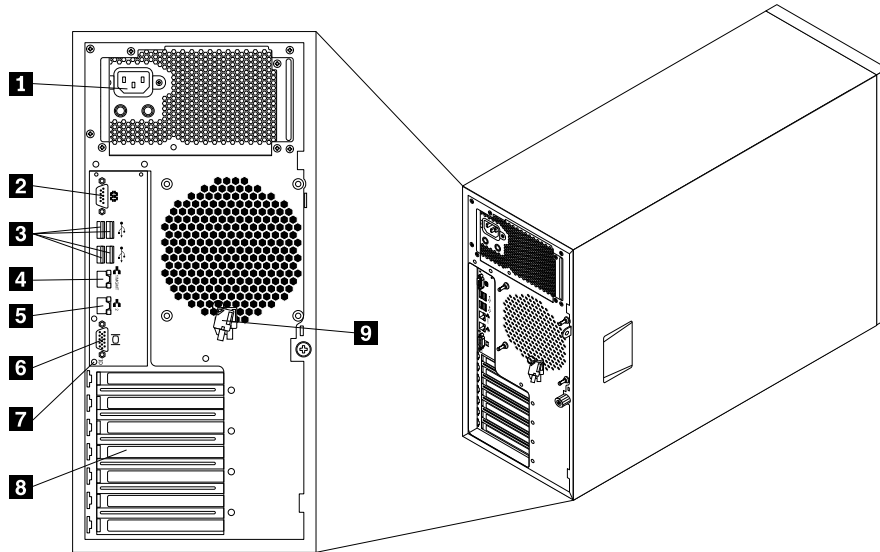


Figure 6. Rear view of the server with a non-hot-swap power supply assembly

<b>1</b> Power cord connector	<b>6</b> VGA DB-15 connector
<b>2</b> Serial connector	<b>7</b> ID LED
<b>3</b> USB connectors (4)	<b>8</b> Expansion card area
<b>4</b> Ethernet connector 1 for system management (RJ-45)	<b>9</b> Front door key
<b>5</b> Ethernet connector 2 (RJ-45)	

Your server model might have one or two hot-swap redundant power supplies. Each hot-swap redundant power supply has one power cord connector **1** on the rear of the server. For each hot-swap redundant power supply, there might be one or two status LEDs on the power supply near the power cord connector. When the LED is lit in green, it indicates that the hot-swap redundant power supply is working correctly. When the LED is lit in amber, it indicates that the hot-swap redundant power supply is likely to fail or has failed.

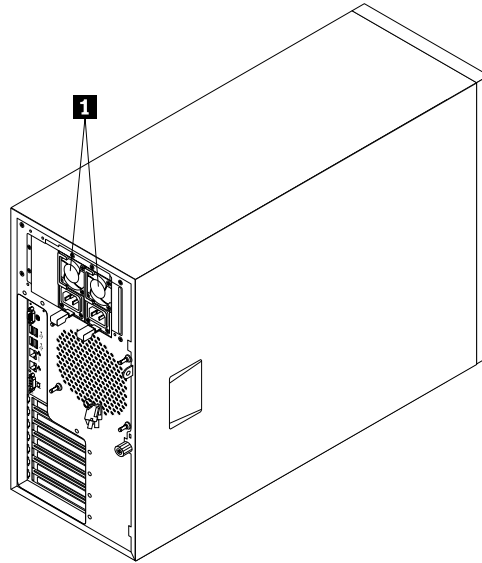


Figure 7. Rear view of the server with hot-swap redundant power supplies

### **1 Power cord connectors**

Used to connect the power cords.

### **2 Serial connector**

Used to attach a device that uses a 9-pin serial connector.

### **3 USB connectors**

Used to attach a USB-compatible device, such as a USB keyboard, mouse, scanner, or printer. If you have more than six USB devices, you can purchase a USB hub, which you can use to connect additional USB devices.

## 4 5 Ethernet connectors (RJ-45)

Used to attach an Ethernet cable for a LAN. Each Ethernet connector has two status LEDs to help you identify the Ethernet connectivity, activity, and connection speed.

**Note:** The Ethernet connector 1 (callout 4) marked with “MGMT” is for system management. If you want to use remote management functions, you need to connect an Ethernet cable to the Ethernet connector 1. The Ethernet connector 1 also supports teaming function. If the teaming function is enabled, the TMM management capability will be disabled.

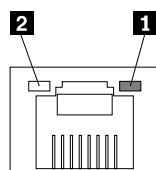


Figure 8. Ethernet status LEDs

Ethernet status LED	Color	Status	Description
1 Right	Green	On	The server is connected to a LAN.
	None	Off	The server is disconnected from a LAN.
	Green	Blinking	The LAN is connected and active.
2 Left	Amber	On	The connection speed is 1000 Mbps.
	Green	On	The connection speed is 100 Mbps.
	None	Off	The connection speed is 10 Mbps.

## 6 VGA DB-15 connector

Used to attach a VGA-compatible video device, such as a VGA monitor.

## 7 ID LED

When you press the ID button, the ID LED on the rear of the server is lit to help you locate the server among other servers. You also can turn on the ID LED using a remote management program for server presence detection.

ID LED	Color	Description
On	Blue	The server is identified.
Off	None	The ID LED is not in use or the server is not identified.

## 8 Expansion card area

Your server has six expansion slots on the system board for you to install appropriate PCI cards or PCI Express cards. You also can install a converged network adapter (CNA) into the PCI Express card slot. For detailed information, see “System board components” on page 48.

## Expansion card installation guidelines

Before installing any supported expansion card into a PCI or PCI Express card slot, ensure that you observe the following guidelines:

- Only one Host Bus Adapter can be installed.
- Up to three Ethernet cards can be installed.
- If the ThinkServer RAID 300 is available, your server does not support Host Bus Adapters or discrete graphics cards.
- If a RAID 500 Adapter, a RAID 700 Adapter, or a RAID 710 Adapter is installed, or the ThinkServer RAID 100 is available, your server supports one Host Bus Adapter or one discrete graphics card. However, if an I350-T4 Ethernet card is installed, your server does not support Host Bus Adapters or graphics cards.

### Notes:

- If a ThinkServer Host Bus Adapter is available, refer to its user guide and the table below for detailed information. The user guide is available for download at:  
<http://www.lenovo.com/UserManuals>

Table 1. ThinkServer Host Bus Adapter specification

Physical link width	Negotiable link width	Type
x8	x8, x4, x2, x1	Low-profile card

- If the server does not have a RAID card or a VGA adapter card installed, the Host Bus Adapter also can be installed in the PCI Express x16 card slot (PCI-E slot 5) on the system board. See “System board components” on page 48.
- If you are installing the QLE8242 Converged Network Adapter, do not install it in the PCI-E slot 4 to avoid thermal problems. See “System board components” on page 48.

## 9 Front door key

Used to open or lock the front door.

**Note:** Carefully save the front door key to avoid loss.

## Server locks

Locking the server cover prevents unauthorized access to the inside of your server. Locking the front door prevents unauthorized access to the installed hard disk drives.

**Note:** Depending on the model, your server might look slightly different from the illustrations in this topic.

## Padlock

Your server comes with a padlock loop. When a padlock is installed, the server cover cannot be removed.

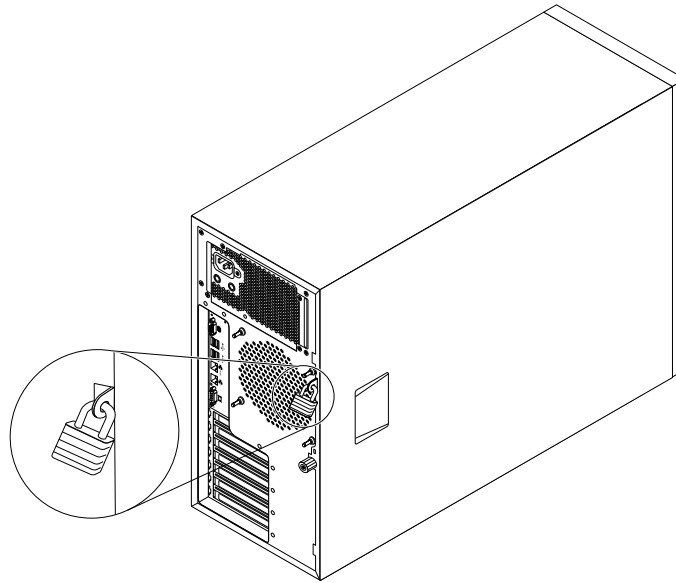


Figure 9. Padlock

## Integrated cable lock

An integrated cable lock, sometimes referred to as the Kensington lock, can be used to secure your server to a non-permanent fixture. The cable lock attaches to the integrated cable lock slot at the rear of your server and is operated with a key. The cable lock also locks the server cover. This is the same type of lock used with many notebook computers. You can order an integrated cable lock from Lenovo by searching for

**Kensington** at:

<http://www.lenovo.com/support>

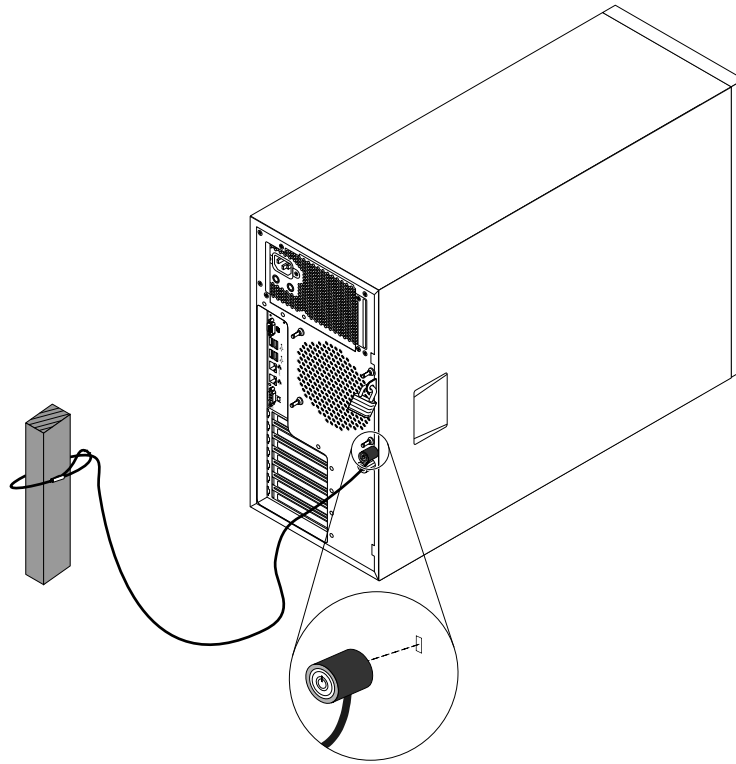


Figure 10. Integrated cable lock

## Front door lock

You can remove the key attached on the rear of the server and use it to open or lock the front door of the server. The front door protects the hard-disk-drive cages and prevents unauthorized access to the installed hard disk drives.

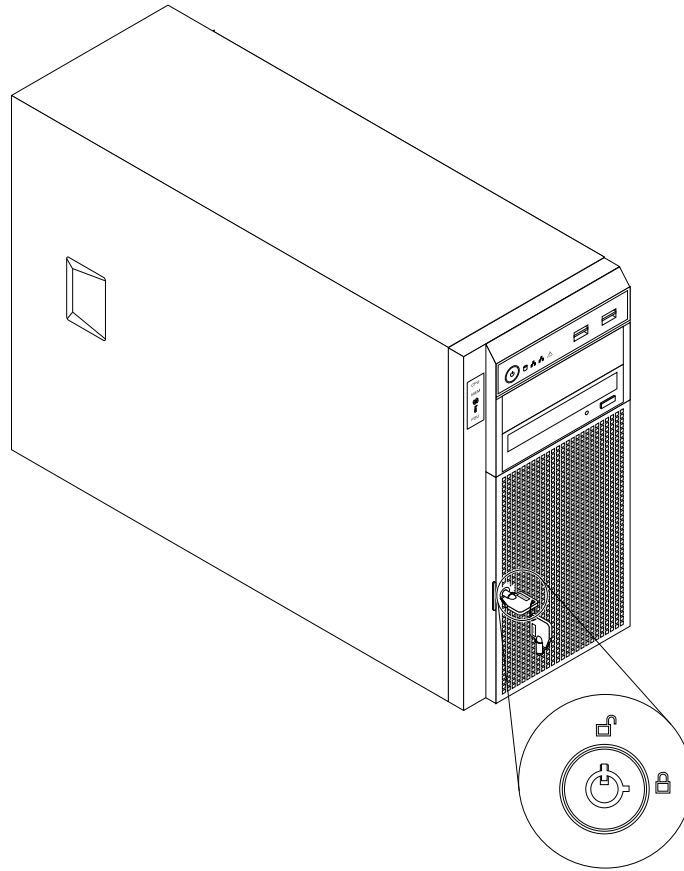


Figure 11. Front door lock

## Server components

This topic provides information to help you locate the components of your server. For more information about major components, see the related topics in “Locations” on page 13.

To remove the server cover and access the inside of the server, see “Removing the server cover” on page 85.

The chassis configuration varies by model. The following illustrations show the three main chassis configurations based on the supported hard disk drives.

- Server models with up to eight 3.5-inch hot-swap SATA or SAS hard disk drives
- Server models with up to sixteen 2.5-inch hot-swap SAS hard disk drives
- Server models with up to four 3.5-inch non-hot-swap SATA hard disk drives

### Notes:

- Depending on the model, your server might look slightly different from the illustrations in this topic.



- The EMI integrity and cooling of the server are protected by having all drive bays covered or occupied. The number of the installed hard disk drives in your server varies by model. The vacant hard disk drive bays are occupied by dummy hard disk drive trays.

The following illustration shows the components of server models with up to eight 3.5-inch hot-swap SATA or SAS hard disk drives.

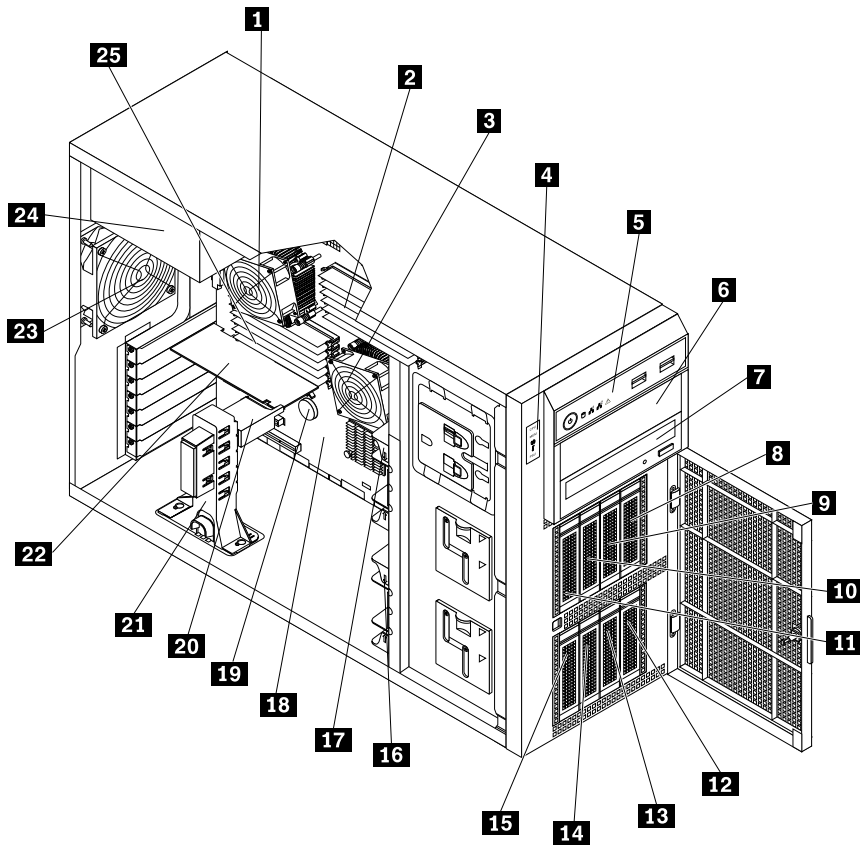


Figure 12. Components of server models with up to eight 3.5-inch hot-swap SATA or SAS hard disk drives

<b>1</b> Heat sink and fan assembly 2	<b>14</b> Hard disk drive bay 1
<b>2</b> CPU1 DIMMs (vary by model)	<b>15</b> Hard disk drive bay 0
<b>3</b> Heat sink and fan assembly 1	<b>16</b> Front system fan 1
<b>4</b> Intelligent Diagnostics Module (available in some models)	<b>17</b> Front system fan 2
<b>5</b> Front panel	<b>18</b> System board
<b>6</b> Optical drive bay 2 (with an optical drive installed in some models)	<b>19</b> System board battery
<b>7</b> Optical drive bay 1 (with an optical drive installed)	<b>20</b> Low-profile PCI card bracket
<b>8</b> Hard disk drive bay 7	<b>21</b> Main PCI card bracket
<b>9</b> Hard disk drive bay 6	<b>22</b> Expansion card
<b>10</b> Hard disk drive bay 5	<b>23</b> Rear system fan 3
<b>11</b> Hard disk drive bay 4	<b>24</b> Power supply

<b>12</b> Hard disk drive bay 3	<b>25</b> CPU2 DIMMs (vary by model)
<b>13</b> Hard disk drive bay 2	

**Notes:**

- The low-profile PCI card bracket **20** and main PCI card bracket **21** are available in server models that come with a RAID card.
- If your server has up to four 3.5-inch hot-swap SATA or SAS hard disk drives, the hot-swap SATA or SAS hard disk drives need to be installed into the hard disk drive bays 0, 1, 2, and 3.

The following illustration shows the components of server models with up to sixteen 2.5-inch hot-swap SAS hard disk drives.

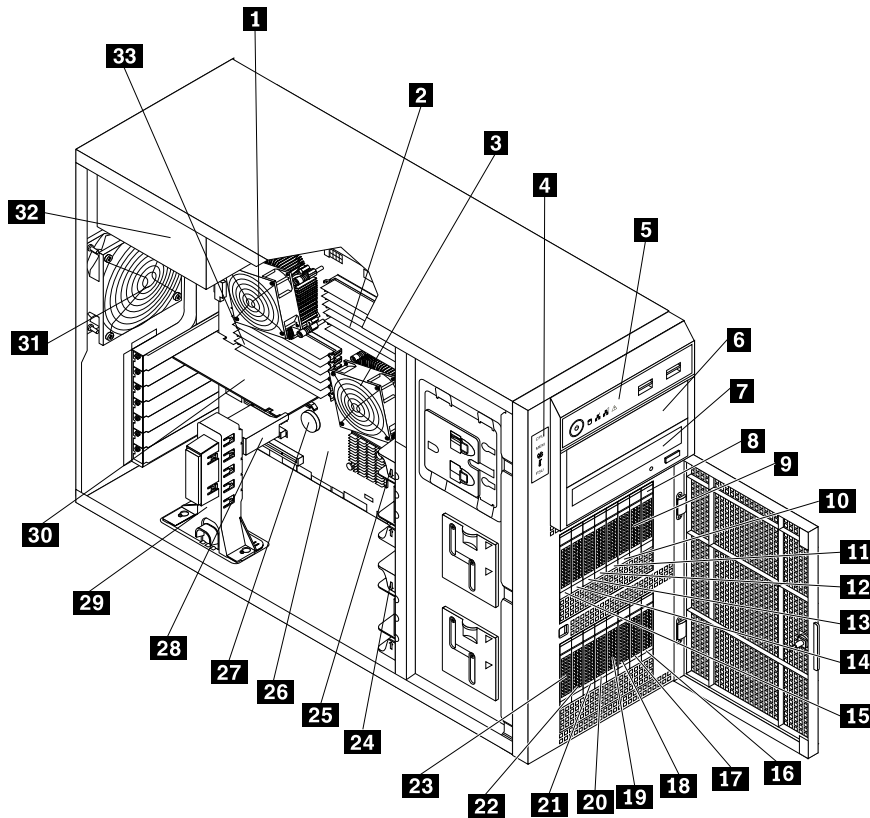


Figure 13. Components of server models with up to sixteen 2.5-inch hot-swap SAS hard disk drives

<b>1</b> Heat sink and fan assembly 2	<b>18</b> Hard disk drive bay 5
<b>2</b> CPU1 DIMMs (vary by model)	<b>19</b> Hard disk drive bay 4
<b>3</b> Heat sink and fan assembly 1	<b>20</b> Hard disk drive bay 3
<b>4</b> Intelligent Diagnostics Module (available in some models)	<b>21</b> Hard disk drive bay 2
<b>5</b> Front panel	<b>22</b> Hard disk drive bay 1
<b>6</b> Optical drive bay 2 (with an optical drive installed in some models)	<b>23</b> Hard disk drive bay 0
<b>7</b> Optical drive bay 1 (with an optical drive installed)	<b>24</b> Front system fan 1

<b>8</b> Hard disk drive bay 15	<b>25</b> Front system fan 2
<b>9</b> Hard disk drive bay 14	<b>26</b> System board
<b>10</b> Hard disk drive bay 13	<b>27</b> System board battery
<b>11</b> Hard disk drive bay 12	<b>28</b> Low-profile PCI card bracket
<b>12</b> Hard disk drive bay 11	<b>29</b> Main PCI card bracket
<b>13</b> Hard disk drive bay 10	<b>30</b> Expansion card
<b>14</b> Hard disk drive bay 9	<b>31</b> Rear system fan 3
<b>15</b> Hard disk drive bay 8	<b>32</b> Power supply
<b>16</b> Hard disk drive bay 7	<b>33</b> CPU2 DIMMs (vary by model)
<b>17</b> Hard disk drive bay 6	

**Notes:**

- The low-profile PCI card bracket **28** and main PCI card bracket **29** are available in server models that come with a RAID card.
- If your server has up to eight 2.5-inch hot-swap SAS hard disk drives, the hot-swap SAS hard disk drives need to be installed into the hard disk drive bays 0, 1, 2, 3, 4, 5, 6, and 7.

The following illustration shows the components of server models with up to four 3.5-inch non-hot-swap SATA hard disk drives.

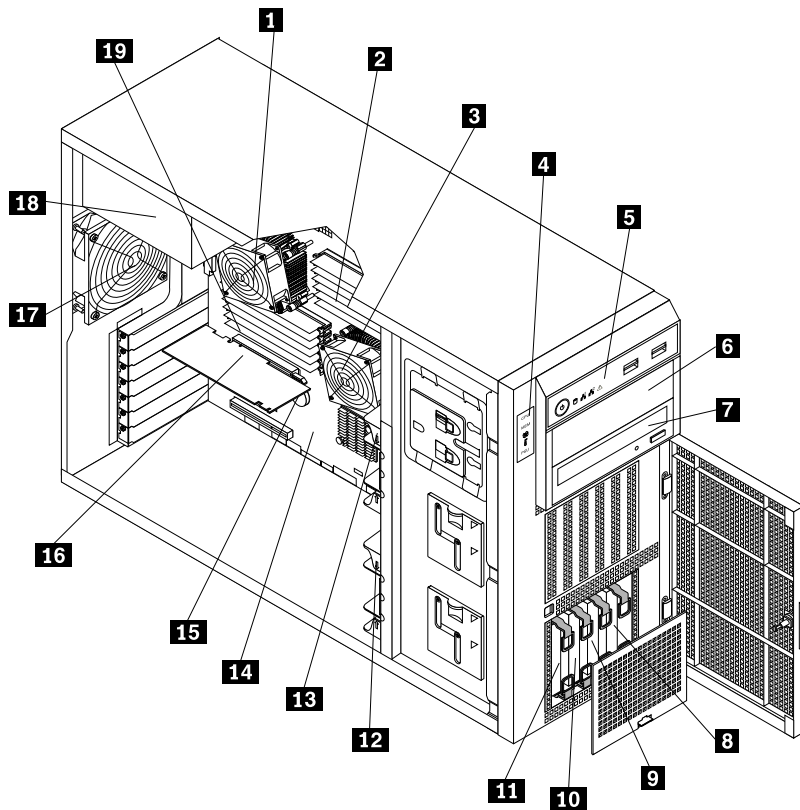


Figure 14. Components of server models with up to four 3.5-inch non-hot-swap SATA hard disk drives

<b>1</b> Heat sink and fan assembly 2	<b>11</b> Hard disk drive bay 0
<b>2</b> CPU1 DIMMs (vary by model)	<b>12</b> Front system fan 1
<b>3</b> Heat sink and fan assembly 1	<b>13</b> Front system fan 2
<b>4</b> Intelligent Diagnostics Module (available in some models)	<b>14</b> System board
<b>5</b> Front panel	<b>15</b> System board battery
<b>6</b> Optical drive bay 2 (with an optical drive installed in some models)	<b>16</b> Expansion card (varies by model)
<b>7</b> Optical drive bay 1 (with an optical drive installed)	<b>17</b> Rear system fan 3
<b>8</b> Hard disk drive bay 3	<b>18</b> Power supply
<b>9</b> Hard disk drive bay 2	<b>19</b> CPU2 DIMMs (vary by model)
<b>10</b> Hard disk drive bay 1	

## CRU identification

CRUs are parts that can be upgraded or replaced by the customer. If a CRU is determined to be defective during the warranty period, a replacement CRU will be provided to the customer. Customers are responsible for installing the self-service CRUs for this product. Customers also can install optional-service CRUs, which might require some technical skills or tools, or request that a technician install the optional-service CRU under the terms of the applicable warranty service type for your country or region.

Non-CRUs must be replaced only by trained service technicians.

The following table lists the major FRUs in your server and the CRU identification information. For a complete listing of FRU information, such as FRU part numbers and supported server models, go to:  
<http://www.lenovo.com/serviceparts-lookup>

### Notes:

- Before servicing a Lenovo product, ensure that you read and understand “Safety information” on page iii.
- Use only parts provided by Lenovo.

Description	Self-service CRU	Optional-service CRU
Front system fan	Yes	No
Front panel board assembly	No	Yes
Hard disk drive	Yes	No
Heat sink and fan assembly	Yes	No
Hot-swap hard-disk-drive backplane (available in some models)	No	Yes
Hot-swap redundant power supply (available in some models)	Yes	No
Intelligent diagnostic module (available in some models)	No	Yes
Keyboard	Yes	No
Memory module	Yes	No
Microprocessor	No	Yes
Mouse	Yes	No
Non-hot-swap power supply assembly (available in some models)	No	Yes
Optical drive	Yes	No

Description	Self-service CRU	Optional-service CRU
Peripheral Component Interconnect (PCI) card (available in some models)	Yes	No
Power distribution board and cage assembly (available in models with hot-swap redundant power supplies)	No	Yes
Rear system fan	Yes	No
System board	No	No
System board battery	Yes	No
ThinkServer Management Module Premium (available as an option)	Yes	No
ThinkServer RAID 100 Upgrade Key for Advanced RAID (available as an option)	Yes	No
ThinkServer RAID 500 Upgrade Key for Advanced RAID (available as an option)	Yes	No
ThinkServer RAID 700 Battery (available as an option)	No	Yes
ThinkServer Trusted Platform Module (available as an option)	Yes	No

## Hot-swap hard disk drive status LEDs

This topic applies only to server models with hot-swap hard disk drives.

**Note:** Depending on the model, your server might look slightly different from the illustrations in this topic.

Each hot-swap hard disk drive has two status LEDs on the front. Unlock and open the front door to access the hard disk drives and view the status LEDs.

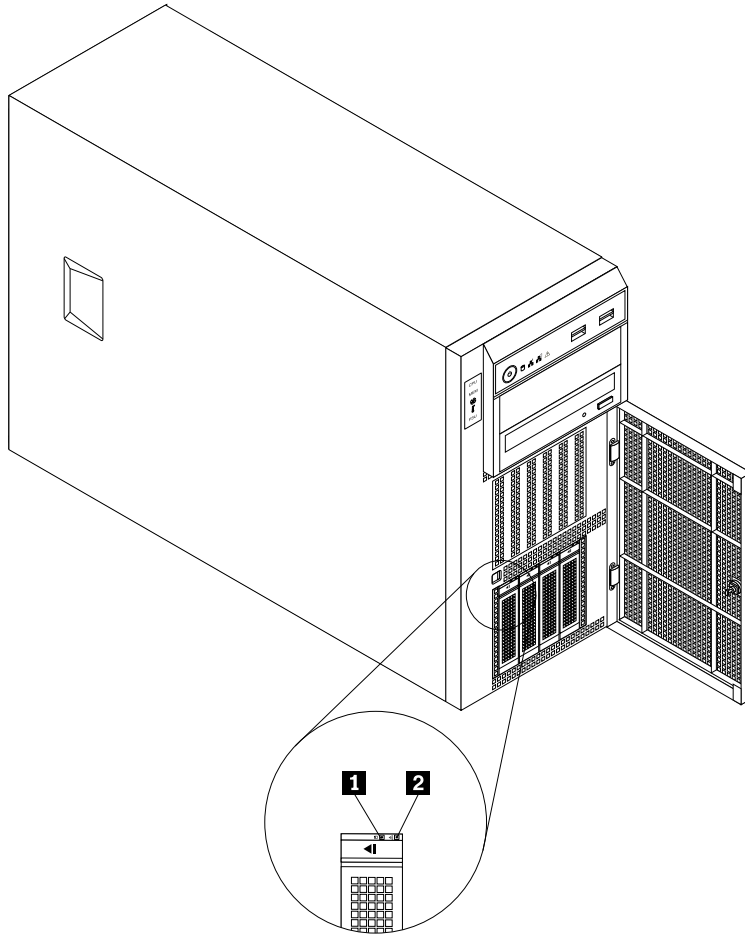


Figure 15. 3.5-inch hot-swap hard disk drive status LEDs

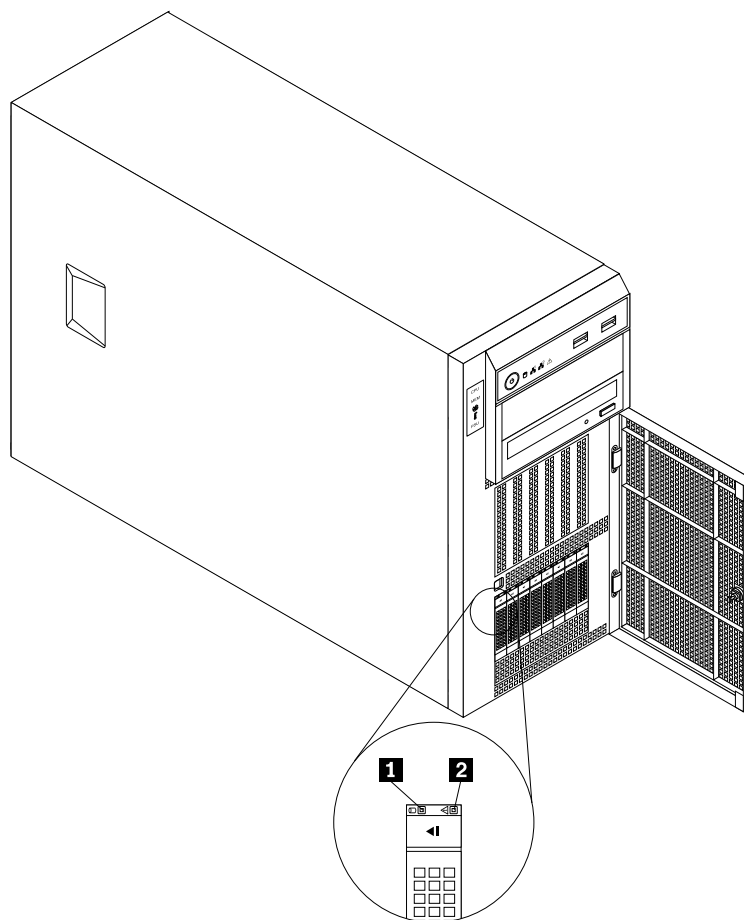


Figure 16. 2.5-inch hot-swap hard disk drive status LEDs

<b>1</b> Hard disk drive activity LED	<b>2</b> Hard disk drive RAID status LED	Description
Off	Off	The hard disk drive has failed or is not present.
On, green	Off	The hard disk drive is present but not in use.
Blinking, green	Off	The hard disk drive is active and data is being transferred.
On, green	Blinking rapidly (about four flashes per second), amber	The RAID controller is identifying the hard disk drive.
On, green	On, amber	The RAID array has failed and cannot be recovered. You need to recreate a new array.
Blinking, green	Blinking slowly (about one flash per second), amber	The hard disk drive is being rebuilt.

## RAID card

This topic provides information to help you locate the connectors on a RAID card.

Some server models come with a required RAID card to provide advanced SATA/SAS hardware RAID functions. If your server does not come with a RAID card, you can purchase one from Lenovo.

**Note:** The option kit for the RAID card is designed for different types of servers and might contain additional cables that are not required for your server.

If your server has one microprocessor installed, it is recommended that the RAID card be installed into the PCI-E slot 5 or PCI-E slot 2. If your server has two microprocessors installed, it is recommended that the RAID card be installed into the PCI-E slot 4. See “Installing or removing the RAID card” on page 104 and “System board components” on page 48.

Your server supports the following RAID cards:

- ThinkServer RAID 500 Adapter (also known as ThinkServer 9240-8i RAID 0/1 Adapter)
- ThinkServer RAID 700 Adapter (also known as ThinkServer 9260-8i SAS RAID Adapter)
- ThinkServer RAID 710 Adapter (also known as 9270CV-8i RAID adapter)

**ThinkServer RAID 500 Adapter (also known as ThinkServer 9240-8i RAID 0/1 Adapter)**

The following illustration shows the connectors on the ThinkServer RAID 500 Adapter.

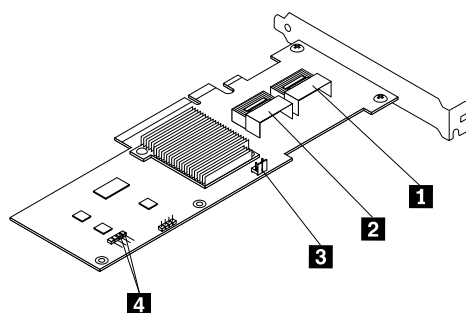


Figure 17. ThinkServer RAID 500 Adapter

<b>1</b> Port 0	<b>3</b> ThinkServer RAID 500 Upgrade Key for Advanced RAID connector
<b>2</b> Port 1	<b>4</b> External connector

**1 Port 0**

Used to connect a mini-SAS signal cable. See “Connecting the cables” on page 43.

**2 Port 1**

Used to connect a mini-SAS signal cable. See “Connecting the cables” on page 43.

**3 ThinkServer RAID 500 Upgrade Key for Advanced RAID connector**

Used to connect a ThinkServer RAID 500 Upgrade Key for Advanced RAID. See “Installing or removing the ThinkServer RAID 500 Upgrade Key for Advanced RAID” on page 107.



#### 4 External connector

Used to attach the cable that connects a RAID card to the system board hard disk drive LED connector. See “Connecting the cables” on page 43.

#### ThinkServer RAID 700 Adapter (also known as ThinkServer 9260-8i SAS RAID Adapter)

The following illustration shows the connectors on the ThinkServer RAID 700 Adapter.

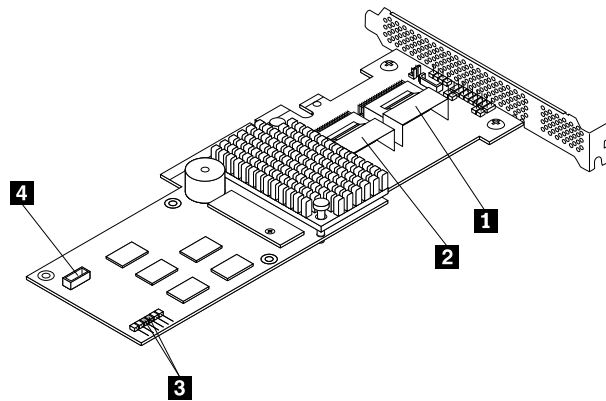


Figure 18. ThinkServer RAID 700 Adapter

1 Ports 7-4	3 External connector
2 Ports 3-0	4 ThinkServer RAID 700 Battery connector

#### 1 Ports 7-4

Used to connect a mini-SAS signal cable. See “Connecting the cables” on page 43.

#### 2 Ports 3-0

Used to connect a mini-SAS signal cable. See “Connecting the cables” on page 43.

#### 3 External connector

Used to attach the cable that connects a RAID card to the system board hard disk drive LED connector. See “Connecting the cables” on page 43.

#### 4 ThinkServer RAID 700 Battery connector

Used to connect a ThinkServer RAID 700 Battery. See “Installing or removing the ThinkServer RAID 700 Battery” on page 109.

## ThinkServer RAID 710 Adapter (also known as 9270CV-8i RAID adapter)

The following illustration shows the connectors on the ThinkServer RAID 710 Adapter.

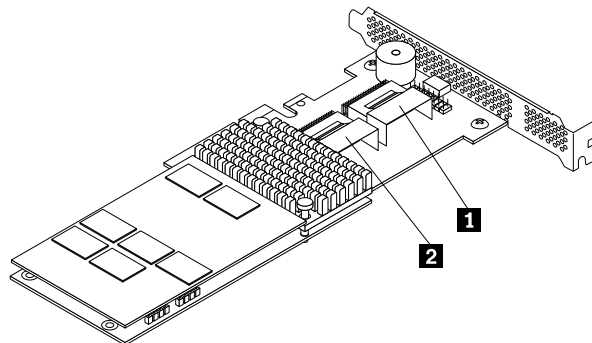


Figure 19. ThinkServer RAID 710 Adapter

<b>1</b> Port 1	<b>2</b> Port 2
-----------------	-----------------

### **1** Port 1

### **2** Port 2

Used to connect a mini-SAS signal cable. See “Connecting the cables” on page 43.

## Expander card

This topic provides information to help you locate the connectors on the expander card if your server has one installed in the shorter slot of the riser card assembly 1.

The expander card works together with the RAID card by expanding the ports on the RAID card so that the server can support up to 16 hard disk drives.

**Note:** The server must have a RAID card and an expander card installed to support more than eight hard disk drives.

The following illustration shows the connectors on the expander card. Each connector on the expander card is used to connect a mini-SAS to mini-SAS signal cable. For detailed information, see “Connecting the cables” on page 43.

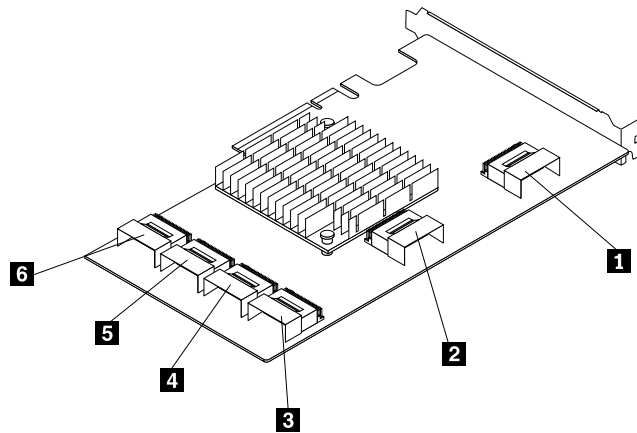


Figure 20. Expander card

<b>1</b> Connector 1	<b>4</b> Connector 4
<b>2</b> Connector 2	<b>5</b> Connector 5
<b>3</b> Connector 3	<b>6</b> Connector 6

## Hot-swap hard-disk-drive backplane

Your server comes with one of the following hot-swap hard disk drive and backplane configurations:

- Up to four 3.5-inch hot-swap SATA or SAS hard disk drives with one backplane
- Five to eight 3.5-inch hot-swap SATA or SAS hard disk drives with two backplanes
- Up to eight 2.5-inch hot-swap SAS hard disk drives or SATA solid-state drives with one backplane
- Nine to sixteen 2.5-inch hot-swap SAS hard disk drives or SATA solid-state drives with two backplanes

The following illustration shows the locations of the hot-swap hard-disk-drive backplanes. You need to open the server cover and remove the front system fans to access the backplanes. See “Removing the server cover” on page 85 and “Replacing the front system fan 1” on page 183.

**Notes:**

1. Depending on the model, your server might look slightly different from the following illustration.
2. The following illustration is based on server models that have five to eight 3.5-inch hot-swap SATA or SAS hard disk drives with two backplanes **1**.

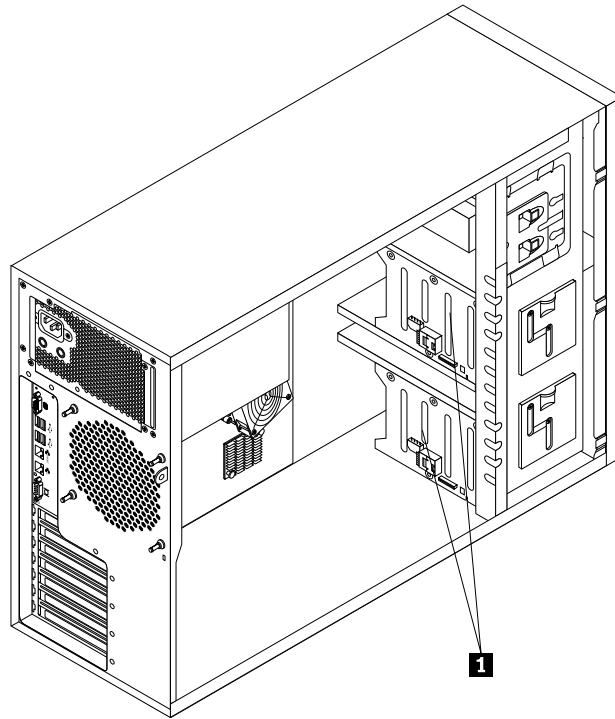


Figure 21. Backplane locations

### 3.5-inch hot-swap hard-disk-drive backplane

This topic provides information to help you locate the connectors on a 3.5-inch hot-swap hard-disk-drive backplane.

The following illustrations show the connectors on a 3.5-inch hot-swap hard-disk-drive backplane.

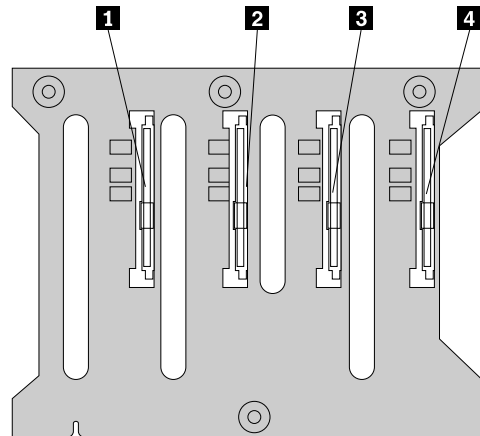


Figure 22. Front view of the 3.5-inch hot-swap hard-disk-drive backplane

<p><b>1</b> Slot 0 for a 3.5-inch SATA or SAS hot-swap hard disk drive</p>	<p><b>3</b> Slot 2 for a 3.5-inch SATA or SAS hot-swap hard disk drive</p>
<p><b>2</b> Slot 1 for a 3.5-inch SATA or SAS hot-swap hard disk drive</p>	<p><b>4</b> Slot 3 for a 3.5-inch SATA or SAS hot-swap hard disk drive</p>

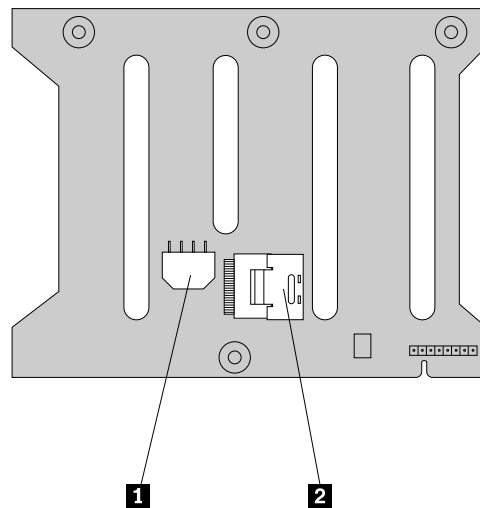


Figure 23. Rear view of the 3.5-inch hot-swap hard-disk-drive backplane

**1 8-pin power connector**

- For the 3.5-inch hot-swap hard-disk-drive backplane on the lower hard-disk-drive cage, connect the P5 power connector of the power supply to the 8-pin power connector on the backplane.
- For the 3.5-inch hot-swap hard-disk-drive backplane on the upper hard-disk-drive cage, connect the P4 power connector of the power supply to the 8-pin power connector on the backplane.

**2 Mini-SAS signal cable connector 0**

Used to connect the mini-SAS connector on one end of the mini-SAS signal cable.

## 2.5-inch hot-swap hard-disk-drive backplane

This topic provides information to help you locate the connectors on the 2.5-inch hot-swap hard-disk-drive backplane.

The following illustrations show the connectors on the 2.5-inch hot-swap hard-disk-drive backplane.

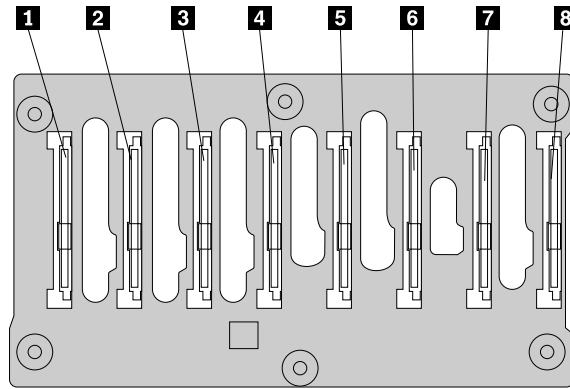


Figure 24. Front view of the 2.5-inch hot-swap hard-disk-drive backplane

<b>1</b> Slot 0 for a 2.5-inch SAS hot-swap hard disk drive	<b>5</b> Slot 4 for a 2.5-inch SAS hot-swap hard disk drive
<b>2</b> Slot 1 for a 2.5-inch SAS hot-swap hard disk drive	<b>6</b> Slot 5 for a 2.5-inch SAS hot-swap hard disk drive
<b>3</b> Slot 2 for a 2.5-inch SAS hot-swap hard disk drive	<b>7</b> Slot 6 for a 2.5-inch SAS hot-swap hard disk drive
<b>4</b> Slot 3 for a 2.5-inch SAS hot-swap hard disk drive	<b>8</b> Slot 7 for a 2.5-inch SAS hot-swap hard disk drive

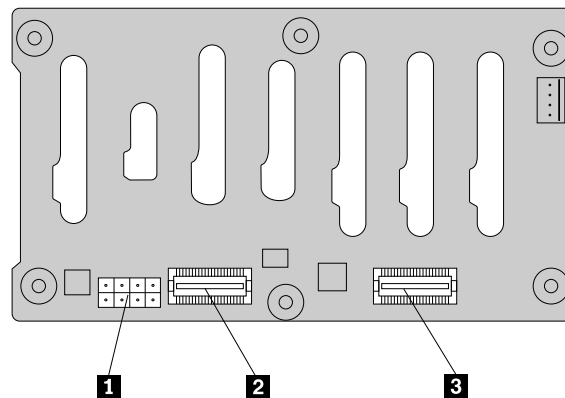


Figure 25. Rear view of the 2.5-inch hot-swap hard-disk-drive backplane

### **1** 8-pin power connector

Used to connect the P5 power connector of the power supply.

## 2 Mini-SAS signal cable connector 1

Used to connect the mini-SAS connector on one end of the mini-SAS signal cable.

## 3 Mini-SAS signal cable connector 0

Used to connect the mini-SAS connector on one end of the mini-SAS signal cable.

## Connecting the cables

This topic provides instructions on the following cable connections:

- Connecting the mini-SAS signal cables from the system board to the hot-swap hard-disk-drive backplanes. See “Connecting the mini-SAS signal cables from the system board to the hot-swap hard-disk-drive backplanes” on page 43.
- Connecting the mini-SAS signal cables from the RAID card to the hot-swap hard-disk-drive backplanes. See “Connecting the mini-SAS signal cables from the RAID card to the hot-swap hard-disk-drive backplanes” on page 44.
- Connecting cables from the RAID card to the expander card, and then from the expander card to the hot-swap hard-disk-drive backplanes. See “Connecting cables from the RAID card to the expander card, and then from the expander card to the hot-swap hard-disk-drive backplanes” on page 45.
- Connecting the SATA signal cables from the system board to the non-hot-swap hard disk drives. See “Connecting the SATA signal cables from the system board to the non-hot-swap hard disk drives” on page 47.

## Connecting the mini-SAS signal cables from the system board to the hot-swap hard-disk-drive backplanes

To connect the mini-SAS signal cables from the system board to the backplanes, do the following:

1. Use one mini-SAS to mini-SAS signal cable. Connect one connector of the mini-SAS signal cable to the SAS connector 0-3 on the system board. Then, connect the other connector of the mini-SAS signal cable to the mini-SAS signal cable connector 0 on the 2.5-inch hot-swap hard-disk-drive backplane or on the 3.5-inch hot-swap hard-disk-drive backplane. The 3.5-inch hot-swap hard-disk-drive backplane is installed on the lower hard-disk-drive cage.
2. If you have up to four 3.5-inch SATA hot-swap hard disk drives installed, you also can use the mini-SAS signal cable that has four SATA ports and one Serial General Purpose Input/Output (SGPIO) port.
  - a. Connect the mini-SAS connector **1** to the mini-SAS signal cable connector 0 on the 3.5-inch hot-swap hard-disk-drive backplane. The backplane is installed on the lower hard-disk-drive cage.
  - b. Connect the four SATA ports **3** - **6** to the SATA connectors 0-3 on the system board.
  - c. Connect the SGPIO port **2** to the SATA SGPIO connector on the system board.

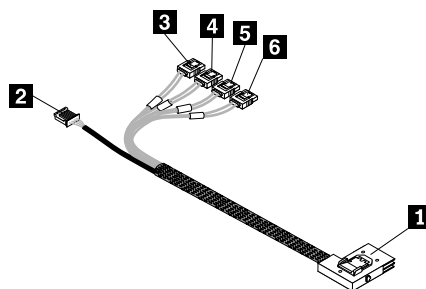


Figure 26. Mini-SAS signal cable with four SATA ports and one SATA SGPIO port

**Notes:**

- The number on the label for each of the four SATA signal cables indicates the sequence to follow when you are connecting the cables to the corresponding SATA connectors (0-3) on the system board.

SATA signal cable label	System board SATA connector
P0	SATA connector 0
P1	SATA connector 1
P2	SATA connector 2
P3	SATA connector 3

- For information about configuring RAID using the configuration utility for the ThinkServer RAID 100 or RAID 300, see “Configuring the ThinkServer RAID 100 or RAID 300” on page 74.
3. If you have more than four hard disk drives installed, use the other mini-SAS to mini-SAS signal cable. Connect one connector of the mini-SAS signal cable to the SAS connector 4-7 on the system board. Then, connect the other connector of the mini-SAS signal cable to the mini-SAS signal cable connector 1 on the 2.5-inch hot-swap hard-disk-drive backplane or to the mini-SAS signal cable connector 0 on the 3.5-inch hot-swap hard-disk-drive backplane. The 3.5-inch hot-swap hard-disk-drive backplane is installed on the upper hard-disk-drive cage.

**Note:** If you connect the mini-SAS to mini-SAS signal cables from the system board to the backplanes, you can configure RAID using the configuration utility for the ThinkServer RAID 100 or RAID 300. See “Configuring the ThinkServer RAID 100 or RAID 300” on page 74.

### Connecting the mini-SAS signal cables from the RAID card to the hot-swap hard-disk-drive backplanes

If your server has a supported RAID card installed, you can connect the mini-SAS signal cables from the RAID card to the backplanes to support up to eight hard disk drives. In this case, you can configure RAID for the hard disk drives using the advanced hardware RAID functions.

**Note:** The option package for the RAID card is designed for different types of servers and might contain additional cables that are not required for installation.

To connect the mini-SAS signal cables from the RAID card to the backplanes, do the following:

- If you are using a ThinkServer RAID 500 Adapter, do the following:
  1. Use one mini-SAS to mini-SAS signal cable. Connect the mini-SAS connector **1** on one end of the cable to the port 0 on the RAID card. Then, connect the mini-SAS connector **2** on the other end of the cable to the mini-SAS signal cable connector 0 on the 2.5-inch hot-swap hard-disk-drive backplane or on the 3.5-inch hot-swap hard-disk-drive backplane. The 3.5-inch hot-swap hard-disk-drive backplane is installed on the lower hard-disk-drive cage.
  2. If your server has more than four hard disk drives installed, use the other mini-SAS to mini-SAS signal cable. Connect the mini-SAS connector **3** on one end of the cable to the port 1 on the RAID card. Then, connect the mini-SAS connector **4** on the other end of the cable to the mini-SAS signal cable connector 1 on the 2.5-inch hot-swap hard-disk-drive backplane or to the mini-SAS signal cable connector 0 on the 3.5-inch hot-swap hard-disk-drive backplane. The 3.5-inch hot-swap hard-disk-drive backplane is installed on the upper hard-disk-drive cage.
- If you are using a ThinkServer RAID 700 Adapter, do the following:
  1. Use one mini-SAS to mini-SAS signal cable. Connect the mini-SAS connector **3** on one end of the cable to the ports 3-0 on the RAID card. Then, connect the mini-SAS connector **4** on the other end of the cable to the mini-SAS signal cable connector 0 on the 2.5-inch hot-swap hard-disk-drive backplane or on the 3.5-inch hot-swap hard-disk-drive backplane. The 3.5-inch hot-swap hard-disk-drive backplane is installed on the lower hard-disk-drive cage.



2. If your server has more than four hard disk drives installed, use the other mini-SAS to mini-SAS signal cable. Connect the mini-SAS connector **1** on one end of the cable to the ports 7-4 on the RAID card. Then, connect the mini-SAS connector **2** on the other end of the cable to the mini-SAS signal cable connector 1 on the 2.5-inch hot-swap hard-disk-drive backplane or to the mini-SAS signal cable connector 0 on the 3.5-inch hot-swap hard-disk-drive backplane. The 3.5-inch hot-swap hard-disk-drive backplane is installed on the upper hard-disk-drive cage.
- If you are using a ThinkServer RAID 710 Adapter, do the following:
    1. Use one mini-SAS to mini-SAS signal cable. Connect the mini-SAS connector **1** on one end of the cable to the port 1 on the RAID card. Then, connect the mini-SAS connector **2** on the other end of the cable to the mini-SAS signal cable connector 0 on the 2.5-inch hot-swap hard-disk-drive backplane or on the 3.5-inch hot-swap hard-disk-drive backplane. The 3.5-inch hot-swap hard-disk-drive backplane is installed on the lower hard-disk-drive cage.
    2. If your server has more than four hard disk drives installed, use the other mini-SAS to mini-SAS signal cable. Connect the mini-SAS connector **3** on one end of the cable to the port 2 on the RAID card. Then, connect the mini-SAS connector **4** on the other end of the cable to the mini-SAS signal cable connector 1 on the 2.5-inch hot-swap hard-disk-drive backplane or to the mini-SAS signal cable connector 0 on the 3.5-inch hot-swap hard-disk-drive backplane. The 3.5-inch hot-swap hard-disk-drive backplane is installed on the upper hard-disk-drive cage.

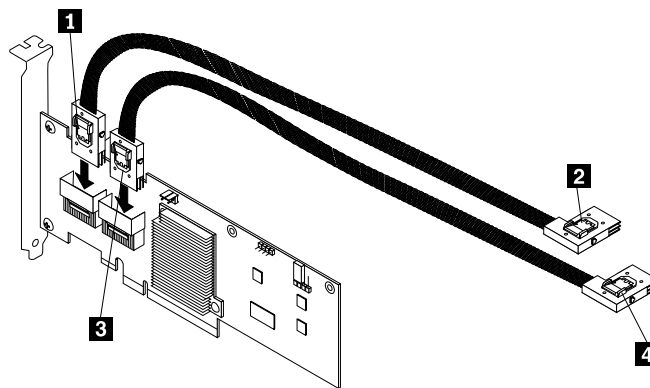


Figure 27. Connecting the mini-SAS signal cables from the RAID card to the backplanes

For the connector location information about the RAID card, backplane, and system board, refer to the related topics in “Locations” on page 13.

For information about connecting the appropriate power connector of the power supply to the backplane, see “Hot-swap hard-disk-drive backplane” on page 39.

### Connecting cables from the RAID card to the expander card, and then from the expander card to the hot-swap hard-disk-drive backplanes

To support more than eight and up to sixteen 2.5-inch hard disk drives, your server must have a supported RAID card and an expander card installed. You need to connect cables from the RAID card to the expander card, and then from the expander card to the backplanes.

Use the following instructions to connect cables from the RAID card to the expander card first:

- If you are using a ThinkServer RAID 500 Adapter, do the following:
  1. Use a mini-SAS to mini-SAS signal cable and connect the mini-SAS connector on one end of the cable to the port 0 on the ThinkServer RAID 500 Adapter. Then, connect the mini-SAS connector on the other end of the cable to the connector 1 on the expander card.

2. Use another mini-SAS to mini-SAS signal cable and connect the mini-SAS connector on one end of the cable to the port 1 on the ThinkServer RAID 500 Adapter. Then, connect the mini-SAS connector on the other end of the cable to the connector 2 on the expander card.
- If you are using a ThinkServer RAID 700 Adapter, do the following:
    1. Use a mini-SAS to mini-SAS signal cable and connect the mini-SAS connector on one end of the cable to the ports 3-0 on the ThinkServer RAID 700 Adapter. Then, connect the mini-SAS connector on the other end of the cable to the connector 1 on the expander card.
    2. Use another mini-SAS to mini-SAS signal cable and connect the mini-SAS connector on one end of the cable to the ports 7-4 on the ThinkServer RAID 700 Adapter. Then, connect the mini-SAS connector on the other end of the cable to the connector 2 on the expander card.
  - If you are using a ThinkServer RAID 710 Adapter, do the following:
    1. Use a mini-SAS to mini-SAS signal cable and connect the mini-SAS connector on one end of the cable to the port 1 on the ThinkServer RAID 710 Adapter. Then, connect the mini-SAS connector on the other end of the cable to the connector 1 on the expander card.
    2. Use another mini-SAS to mini-SAS signal cable and connect the mini-SAS connector on one end of the cable to the port 2 on the ThinkServer RAID 710 Adapter. Then, connect the mini-SAS connector on the other end of the cable to the connector 2 on the expander card.

Refer to the following topics for information about the connector locations on the RAID card and expander card:

- “RAID card” on page 35
- “Expander card” on page 38

Use the following instructions to connect cables from the expander card to the 2.5-inch hot-swap hard-disk-drive backplanes:

1. For hard disk drive 0 to hard disk drive 3, use a mini-SAS to mini-SAS signal cable and connect the mini-SAS connector **1** on one end of the cable to the connector 3 on the expander card. Then, connect the mini-SAS connector on the other end of the cable to the mini-SAS connector 0 on the backplane installed on the lower hard-disk-drive cage.
2. For hard disk drive 4 to hard disk drive 7, use a mini-SAS to mini-SAS signal cable and connect the mini-SAS connector **2** on one end of the cable to the connector 4 on the expander card. Then, connect the mini-SAS connector on the other end of the cable to the mini-SAS connector 1 on the backplane installed on the lower hard-disk-drive cage.
3. For hard disk drive 8 to hard disk drive 11, use a mini-SAS to mini-SAS signal cable and connect the mini-SAS connector **3** on one end of the cable to the connector 5 on the expander card. Then, connect the mini-SAS connector on the other end of the cable to the mini-SAS connector 0 on the backplane installed on the upper hard-disk-drive cage.
4. For hard disk drive 12 to hard disk drive 15, use a mini-SAS to mini-SAS signal cable and connect the mini-SAS connector **4** on one end of the cable to the connector 6 on the expander card. Then, connect the mini-SAS connector on the other end of the cable to the mini-SAS connector 1 on the backplane installed on the upper hard-disk-drive cage.

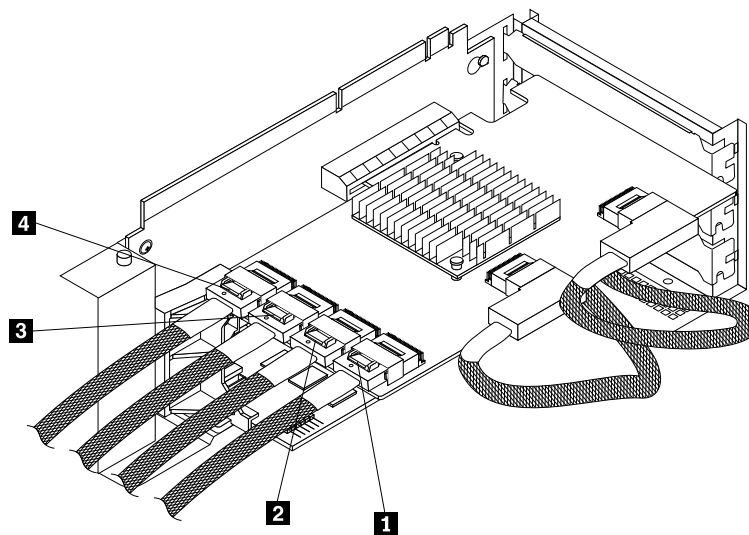


Figure 28. Connecting cables from the expander card to the 2.5-inch hot-swap hard-disk-drive backplanes

Refer to the following topics for information about the connector locations and the power cable connections:

- “Hot-swap hard-disk-drive backplane” on page 39
- “Expander card” on page 38
- “System board components” on page 48

### Connecting the SATA signal cables from the system board to the non-hot-swap hard disk drives

For server models with up to four 3.5-inch non-hot-swap hard disk drives, connect one end of the SATA signal cable to the rear of the non-hot-swap hard disk drive. Then, connect the other end of the SATA signal cable to the appropriate SATA connector on the system board. You also need to connect the appropriate power connector to the rear of the non-hot-swap hard disk drives.

The following table provides information about the recommended power connector and system board SATA connector for the non-hot-swap hard disk drive installed in each drive bay. See “Server components” on page 28 and “System board components” on page 48 for the location information about the hard disk drive bays and SATA connectors on the system board.

Non-hot-swap hard disk drive	Power connector	System board SATA connector
Installed in bay 0	P9 power connector	SATA connector 0
Installed in bay 1	P10 power connector	SATA connector 1
Installed in bay 2	P7 power connector	SATA connector 2
Installed in bay 3	P8 power connector	SATA connector 3

## System board components

The following illustration shows the component locations on the system board.

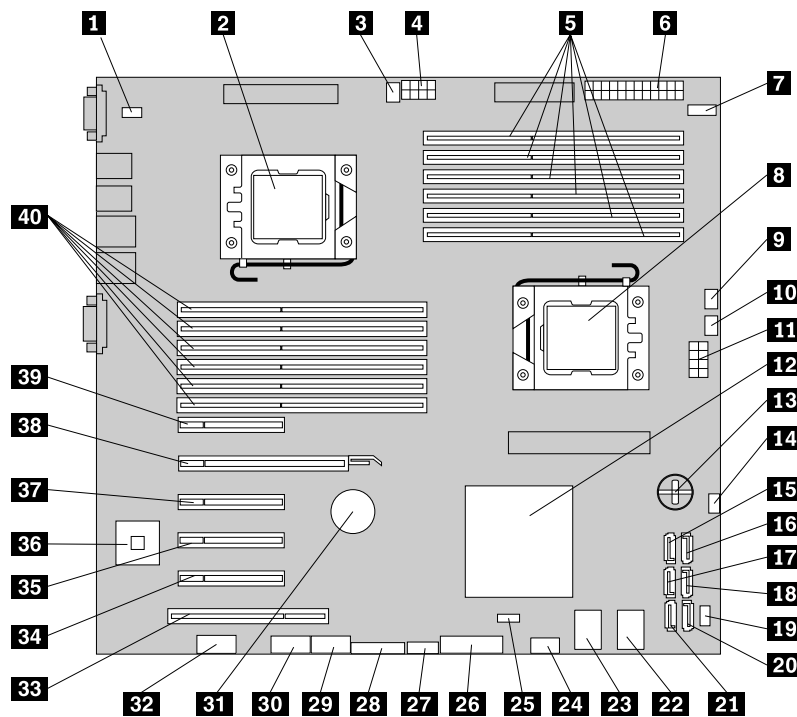


Figure 29. System board components

<b>1</b> System fan 3 connector	<b>21</b> SATA connector 4
<b>2</b> Microprocessor socket 2	<b>22</b> SAS connector 4-7
<b>3</b> Microprocessor 2 fan connector	<b>23</b> SAS connector 0-3
<b>4</b> Microprocessor 2 power connector	<b>24</b> Internal USB Type A connector
<b>5</b> Memory slots (6)	<b>25</b> TMM Premium connector
<b>6</b> Main power connector	<b>26</b> TPM connector
<b>7</b> Power Management Bus (PMBus) connector	<b>27</b> Intelligent Diagnostics Module connector
<b>8</b> Microprocessor socket 1	<b>28</b> Front panel connector

<b>9</b> System fan 2 connector	<b>29</b> Internal USB connector 5-6
<b>10</b> Microprocessor 1 fan connector	<b>30</b> Internal USB connector 7-8
<b>11</b> Microprocessor 1 power connector	<b>31</b> System board battery
<b>12</b> Platform Controller Hub (PCH)	<b>32</b> Internal serial connector
<b>13</b> iButton socket	<b>33</b> PCI card slot (PCI slot 1)
<b>14</b> System fan 1 connector	<b>34</b> PCI Express x8 card slot (PCI-E slot 2)
<b>15</b> SATA connector 0	<b>35</b> PCI Express x8 card slot (PCI-E slot 3)
<b>16</b> SATA connector 1	<b>36</b> ThinkServer Management Module
<b>17</b> SATA connector 2	<b>37</b> PCI Express x8 card slot (PCI-E slot 4)
<b>18</b> SATA connector 3	<b>38</b> PCI Express x16 card slot (PCI-E slot 5)
<b>19</b> SATA SGPIO connector	<b>39</b> PCI Express x8 card slot (PCI-E slot 6)
<b>20</b> SATA connector 5	<b>40</b> Memory slots (6)

### **1 System fan 3 connector**

Used to connect the rear system fan cable.

### **2 Microprocessor socket 2**

### **8 Microprocessor socket 1**

If the server has two microprocessors, each of the microprocessor is secured in the microprocessor socket on the system board and a heat sink and fan assembly is installed above the microprocessor to provide cooling. If the server has only one microprocessor, the microprocessor socket 2 is protected by a microprocessor socket cover.

### **3 Microprocessor 2 fan connector**

Used to connect the heat sink and fan assembly 2 cable.

### **4 Microprocessor 2 power connector**

Used to connect the power connector of the power supply to provide power to the microprocessor installed in the microprocessor socket 2.

### **5 Memory slots (6)**

### **40 Memory slots (6)**

Your server system board provides 12 memory slots to support up to 12 memory modules. For more information, see “Memory module installation rules” on page 93.

### **6 Main power connector**

Used to connect the power connector of the power supply to provide main power to your server.

## **7 Power Management Bus (PMBus) connector**

The ThinkServer Management Module can read the power supply status registered through PMBus. You do not need to connect any device to the PMBus connector. This connector is kept for power management in models with redundant power supplies. The function of the PMBus connector is not available for models with a screw-secured non-hot-swap power supply assembly.

## **9 System fan 2 connector**

Used to connect the cable of the upper front system fan (front system fan 2).

## **10 Microprocessor 1 fan connector**

Used to connect the heat sink and fan assembly 1 cable.

## **11 Microprocessor 1 power connector**

Used to connect the power connector of the power supply to provide power to the microprocessor installed in the microprocessor socket 1.

## **12 Platform Controller Hub (PCH)**

This chip provides the data buffering and interface arbitration required to ensure that system interfaces operate efficiently and provides the bandwidth necessary for the system to achieve peak performance. The chip also supports and provides many other features, including the onboard SATA/SAS software RAID.

## **13 iButton socket**

By default, your server supports onboard SATA/SAS software RAID levels 0, 1, and 10. However, you can activate onboard SATA/SAS software RAID 5 by installing a ThinkServer RAID 100 or RAID 300 upgrade key for Advanced RAID in the iButton socket. For more information, see “Installing or removing the ThinkServer RAID 100 or RAID 300 upgrade key for Advanced RAID” on page 112.

## **14 System fan 1 connector**

Used to connect the cable of the lower front system fan (front system fan 1).

## **15-18 20 21 SATA connectors**

Used to connect SATA signal cables for the SATA hard disk drives or SATA optical drives.

## **19 SATA SGPIO connector**

Used to connect the SGPIO port of the mini-SAS signal cable that has four SATA ports and one SGPIO port to enable the RAID status LEDs for hot-swap hard disk drives.

## **22 SAS connector 4-7**

Used to connect the mini-SAS connector on one end of a mini-SAS to mini-SAS signal cable to support the hard disk drive 4 to hard disk drive 7.

## **23 SAS connector 0-3**

Used to connect the mini-SAS connector on one end of a mini-SAS to mini-SAS signal cable to support the hard disk drive 0 to hard disk drive 3.

#### **24 Internal USB Type A connector**

Used to connect a device that uses a USB Type A connector. For example, in some situations, you might want to connect a USB key directly to the system board. In this case, you can connect it to an internal USB Type A connector.

#### **25 TMM Premium connector**

Used to connect a server option named ThinkServer Management Module Premium (TMM Premium) to enable advanced remote management functions on your server. See “Installing or removing the ThinkServer Management Module Premium” on page 116.

#### **26 TPM connector**

Used to connect a ThinkServer Trusted Platform Module (TPM), which is a security chip, to enhance server security. See “Installing or removing the ThinkServer Trusted Platform Module” on page 119.

#### **27 Intelligent Diagnostics Module connector**

Used to connect the cable of the Intelligent Diagnostics Module.

#### **28 Front panel connector**

Used to connect the front panel cable.

#### **29 Internal USB connector 5-6**

#### **30 Internal USB connector 7-8**

Used to connect the front panel USB cables.

#### **31 System board battery**

Your server has a special type of memory that maintains the date, time, and configuration information for built-in features. The system board battery keeps the information active when you turn off the server.

#### **33 PCI card slot (PCI slot 1)**

Used to install a standard 32-bit 33 MHz PCI card with 167 mm (6.57 inches) in length.

#### **34 PCI Express x8 card slot (PCI-E slot 2)**

This PCI card slot supports a PCI Express x8 card (negotiable link width x4) with 167 mm (6.57 inches) in length, such as an Ethernet card.

#### **35 PCI Express x8 card slot (PCI-E slot 3)**

This PCI card slot supports a PCI Express x8 card with 167 mm (6.57 inches) in length, such as an Ethernet card.

### **36 ThinkServer Management Module**

With the integrated ThinkServer Management Module (hereinafter referred to as the TMM), no matter what condition the server operating system is in and no matter if the server is on or off, as long as the server is connected to network and an ac power source, the interaction with the TMM controlled servers can be achieved through system network. The user can obtain the server hardware health information and SEL, and is able to conduct the operations including turning on or off the server, restarting the server, and so on. This part of the server management is independent of the operating system and is called out-of-band management.

### **37 PCI Express x8 card slot (PCI-E slot 4)**

This PCI card slot supports a PCI Express x8 card with 167 mm (6.57 inches) in length, such as an Ethernet card.

### **38 PCI Express x16 card slot (PCI-E slot 5)**

This PCI card slot supports a PCI Express x16 card with 167 mm (6.57 inches) in length, such as a RAID card.

### **39 PCI Express x8 card slot (PCI-E slot 6)**


This PCI card slot supports a PCI Express x8 card with 167 mm (6.57 inches) in length, such as an Ethernet card.

## **System board jumpers and switches**

This topic provides information about the jumpers and switches on the system board.

A jumper is a short length of conductor used to set up or adjust printed circuit boards, such as the system board of a computer. A jumper usually is encased in a non-conductive block of plastic for convenient use and to avoid any possible damage to a live circuit. Jumper pins arranged in groups on the system board are called jumper blocks. When two or more jumper pins are capped with a jumper, an electrical connection is made between them and the equipment is thus instructed to activate certain settings accordingly.

The following illustration shows a jumper in the default setting position (pin 1 and pin 2). This is the correct position for normal operation.

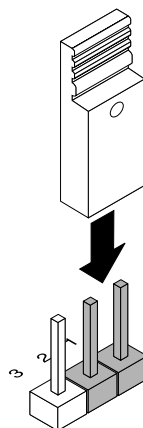

*Figure 30. Default jumper setting*



The following illustration shows the status of the jumpers and switches on the system board of your server. You can configure, recover, enable, or disable some specific features of the system board by setting the jumpers or moving the switches.

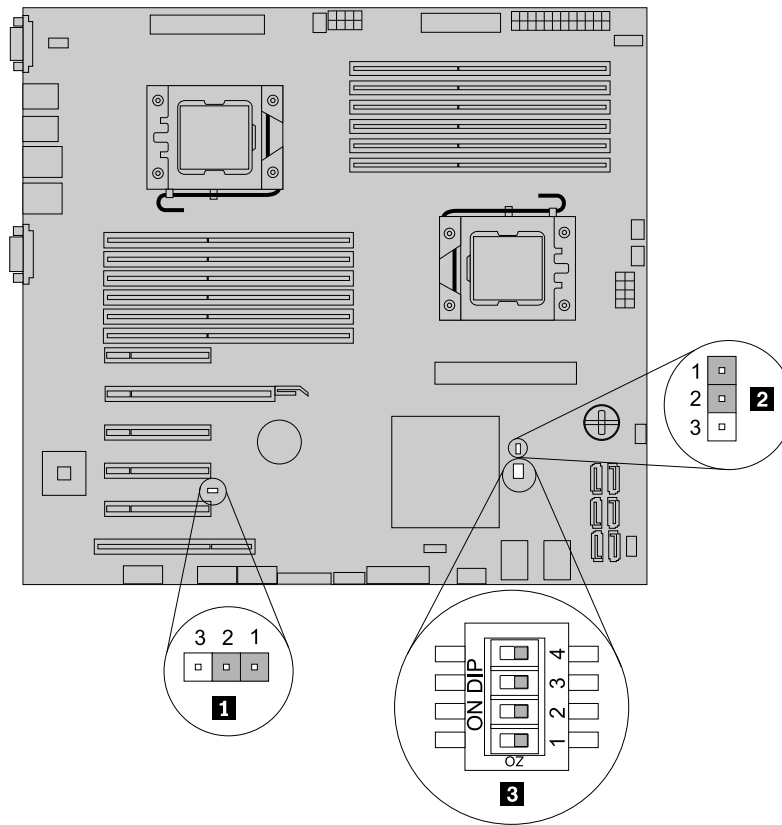


Figure 31. System board jumpers and switches

Table 2. System jumpers

<b>1</b> ThinkServer Management Module Enable/Disable jumper	<b>3</b> Switches
<b>2</b> Clear CMOS (Complementary Metal Oxide Semiconductor) jumper	

**Attention:** To set the jumpers or move switches, you need to remove the server cover to access the system board. Do not open your server or attempt any repair before reading and understanding “Safety information” on page iii and “Guidelines” on page 83.

### **1** ThinkServer Management Module Enable/Disable jumper

When the ThinkServer Management Module Enable/Disable jumper (hereinafter referred to as the TMM Enable/Disable jumper) is in the default normal position (pin 1 and pin 2), the server needs about 30 seconds for the TMM to initialize whenever you connect the server to an ac power source. If you press the power switch on the front panel during this period, the server will not start immediately; it will start after the TMM initialization finishes. The TMM function is available in this situation.

If you move the TMM Enable/Disable jumper to pin 2 and pin 3, the TMM function is not available and the server is turned on directly when you press the power switch without waiting for the TMM to be ready.

## **2** Clear CMOS jumper

Used to clear CMOS and recover your server to the factory default settings.

**Note:** After clearing CMOS, your BIOS recovers to the factory default settings.

To clear CMOS, do the following:

1. Remove all media from the drives and turn off all attached devices and the server. Then, disconnect all power cords from electrical outlets and disconnect all cables that are connected to the server.
2. If the server is installed in a rack cabinet, remove the server from the rack cabinet and place it on a flat, clean, and static-protective surface. See the *Rack Installation Instructions* that comes with the server.
3. Remove the server cover. See “Removing the server cover” on page 85.
4. Locate the Clear CMOS jumper on the system board. Then, remove any parts and disconnect any cables that might impede your access to the jumper.
5. Move the clear CMOS jumper from the default normal position (pin 1 and pin 2) to the short-circuited position (pin 2 and pin 3).
6. Wait more than five seconds and then move the Clear CMOS jumper back to the normal position (pin 1 and pin 2).
7. Reinstall any parts and reconnect any cables. Then, reinstall the server cover. See “Completing the parts replacement” on page 200.
8. Connect the server to an ac power source and wait about 30 seconds. Then, turn on the server. The BIOS recovers to the factory default settings.

### 3 Switches

There are four switches on the system board of your server.

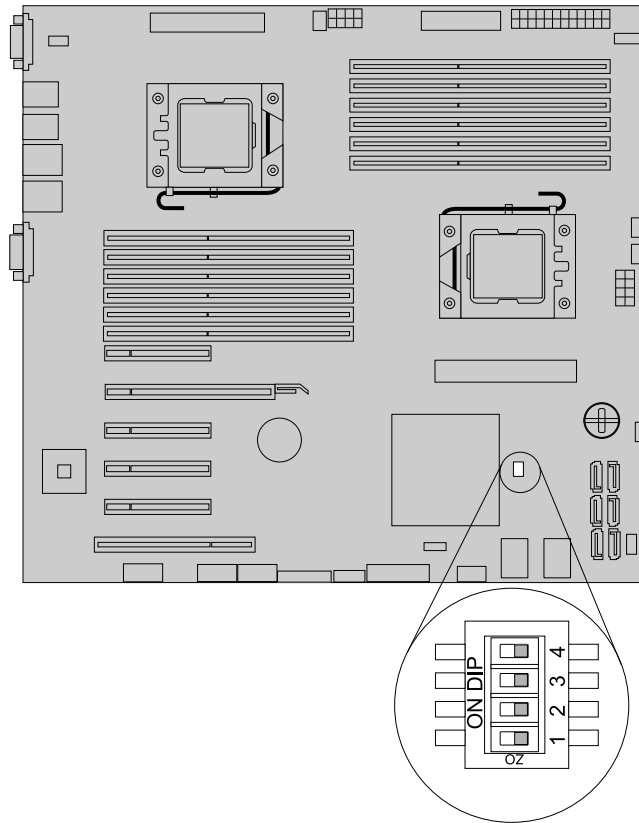


Figure 32. Switches

Table 3. Switches

<b>1</b> BIOS recovery switch	<b>3</b> Management Engine (ME) in force update switch
<b>2</b> Clear password switch	<b>4</b> Reserved for the manufacturer

#### 1 BIOS recovery switch

Used to recover the BIOS if the power to your server is interrupted while the BIOS is being updated and your server cannot start correctly.

To recover the BIOS, see “Recovering from a BIOS update failure” on page 68.

#### 2 Clear password switch

Used to erase forgotten passwords, such as an administrator password and a user password.

To clear passwords, do the following:

1. Remove all media from the drives and turn off all attached devices and the server. Then, disconnect all power cords from electrical outlets and disconnect all cables that are connected to the server.

2. If the server is installed in a rack cabinet, remove the server from the rack cabinet and place it on a flat, clean, and static-protective surface. See the *Rack Installation Instructions* that comes with the server.
3. Remove the server cover. See “Removing the server cover” on page 85.
4. Locate the Clear password switch on the system board. Then, remove any parts and disconnect any cables that might impede your access to the switch.
5. Move the clear password switch from the default off position to the on position.
6. Wait more than five seconds and then move the clear password switch back to the off position.
7. Reinstall any parts and reconnect any cables. Then, reinstall the server cover. See “Completing the parts replacement” on page 200.
8. Connect the server to an ac power source and wait about 30 seconds. Then, turn on the server. The BIOS passwords are erased, including the administrator password and user password.
9. To set new passwords, see “Using passwords” on page 65.

### **3 ME in force update switch**

Used to update (flash) the ME.

The ME updating process usually is contained in the BIOS updating (flashing) process.

**Note:** Only some BIOS versions contain the parameters for updating the ME. If you want to update the ME, ensure that your BIOS version contains the required parameters.

To update the ME, do the following:

1. Remove all media from the drives and turn off all attached devices and the server. Then, disconnect all power cords from electrical outlets and disconnect all cables that are connected to the server.
2. If the server is installed in a rack cabinet, remove the server from the rack cabinet and place it on a flat, clean, and static-protective surface. See the *Rack Installation Instructions* that comes with the server.
3. Remove the server cover. See “Removing the server cover” on page 85.
4. Locate the ME in force update switch on the system board. Then, remove any parts and disconnect any cables that might impede your access to the switch.
5. Move the ME in force update switch from the default off position to the on position.
6. Reinstall any parts and reconnect any cables. Then, reinstall the server cover. See “Completing the parts replacement” on page 200.
7. Connect the server to an ac power source. Then, update the BIOS. See “Updating (flashing) the BIOS” on page 67.
8. Repeat step 1 through step 4.
9. Move the ME in force update switch back to the off position.
10. Reinstall any parts and reconnect any cables. Then, reinstall the server cover. See “Completing the parts replacement” on page 200.
11. Connect the server to an ac power source and turn on the server. The BIOS and ME have been updated. You need to check and configure the BIOS settings for your specific needs. See “Using the Setup Utility program” on page 61.

## **System board LEDs**

This topic helps you locate the LEDs on the system board.

The server is designed so that LEDs remain lit when the server is connected to an ac power source but is not turned on, if the power supply is operating correctly. This helps you isolate problems when the server is not

turned on. Many errors are first indicated by a lit error LED on the diagnostic panel of the server. If an LED is lit, one or more LEDs elsewhere in the server might also be lit to direct you to the source of the error.

The following illustration shows the ThinkServer Management Module status LED and system fan error LEDs on the system board.

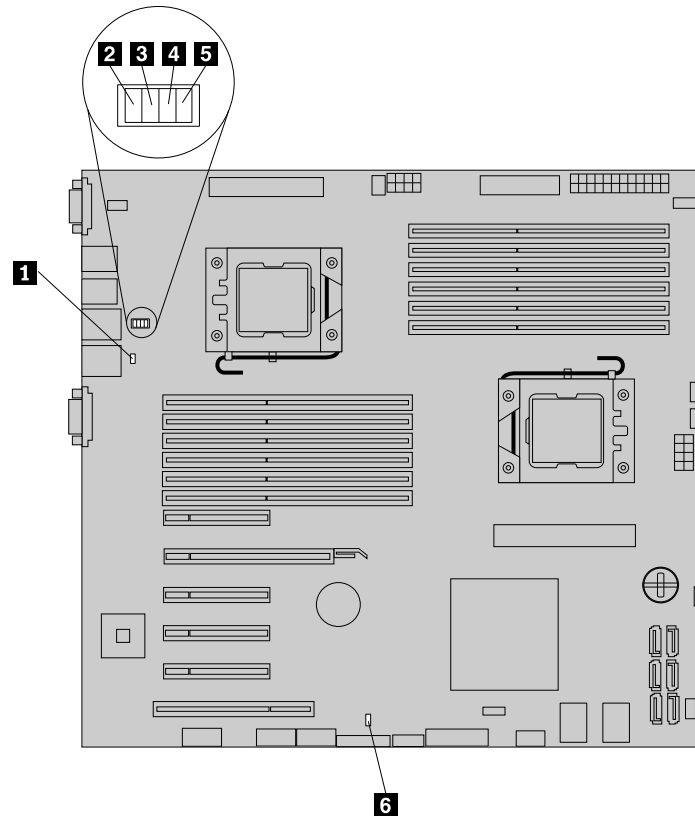


Figure 33. System board LEDs

<b>1</b> System fan 3 error LED	<b>4</b> Microprocessor 2 fan error LED
<b>2</b> System fan 1 error LED	<b>5</b> Microprocessor 1 fan error LED
<b>3</b> System fan 2 error LED	<b>6</b> ThinkServer Management Module status LED

### **1-3 System fan error LEDs**

When a system fan error LED on the system board is lit, it indicates that the corresponding system fan is operating too slowly or has failed. To solve the problem, you might need to reinstall or replace the system fan. See “Replacing the front system fan 1” on page 183 or “Replacing the rear system fan” on page 185. If it is a system board problem, contact the Lenovo Customer Support Center.

### **4-5 Microprocessor fan error LEDs**

When a microprocessor fan error LED on the system board is lit, it indicates that the corresponding microprocessor fan is operating too slowly or has failed. To solve the problem, you might need to reinstall or replace the microprocessor fan. See “Replacing the heat sink and fan assembly 1” on page 188. If it is a system board problem, contact the Lenovo Customer Support Center.

## 6 ThinkServer Management Module status LED

This LED indicates the ThinkServer Management Module (TMM) status of your server.

ThinkServer Management Module status LED	Color	Description
On	Green	The TMM is not ready.
Off	None	The TMM has no power or has failed.
Blinking	Green	The TMM is working.

---

## Chapter 4. Turning on and turning off the server

This chapter provides information about turning on and turning off the server.

---

### Turning on the server


The server can be turned on in one of the following ways:

- After you finish unpacking and setting up the server, connect it to an ac power source. Press the power switch on the front panel to turn on the server. See “Front panel” on page 17. The server needs about 30 seconds for the TMM to initialize whenever you connect the server to an ac power source. If you press the power switch on the front panel during this period, the server will not start immediately; it will start after the TMM initialization finishes.
  - When the Wake on LAN feature is enabled on the server that is connected to an ac power source and a LAN, a network administrator can remotely turn on or wake up the server from a management console using remote network management software.
  - You also can use the related TMM feature to remotely turn on the server through the management LAN. For more information about the TMM, refer to the *ThinkServer Management Module User Guide*, which is available for download at:  
<http://www.lenovo.com/UserManuals>
- 

### Turning off the server

#### CAUTION:

**The power control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.**

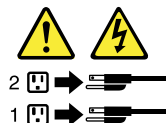

The server can be turned off in one of the following ways:

- Turn off the server from the operating system if your operating system supports this feature. After an orderly shutdown of the operating system, the server will turn off automatically. For instructions on how to shut down your specific operating system, refer to the related documentation or help system for the operating system.
- Press the power switch on the front panel to start an orderly shutdown of the operating system and turn off the server, if your operating system supports this feature.
- If your server stops responding and you cannot turn it off, press and hold the power switch on the front panel for four seconds or more. If you still cannot turn off the server, disconnect all power cords from the server.
- If the server is connected to a LAN, a network administrator can remotely turn off the server from a management console using remote network management software.
- You also can use the related TMM feature to remotely turn off the server through the management LAN. For more information about the TMM, refer to the *ThinkServer Management Module User Guide*, which is available for download at:  
<http://www.lenovo.com/UserManuals>

- The server might be turned off as an automatic response to a critical system failure.

**Notes:**

1. When you turn off the server and leave it connected to an ac power source, the server also can respond to a remote request to turn on the server. To remove all power from the server, you must disconnect the server from the ac power source.
2. For information about your specific operating system, refer to the related documentation or help system for the operating system.



---

## Chapter 5. Configuring the server

This chapter provides the following information to help you configure the server:

- “Using the Setup Utility program” on page 61
- “Using the ThinkServer EasyStartup program” on page 69
- “Configuring RAID” on page 72
- “Configuring the Ethernet controllers” on page 80
- “Updating the firmware” on page 80
- “Using the Lenovo ThinkServer EasyManage program” on page 80

---

### Using the Setup Utility program

This topic provides information about using the Setup Utility program.

The Setup Utility program is part of the server firmware. You can use the Setup Utility program to view and change the configuration settings of your server, regardless of which operating system you are using. However, the operating system settings might override any similar settings in the Setup Utility program.

### Starting the Setup Utility program

This topic provides instructions on how to start the Setup Utility program.

To start the Setup Utility program, do the following:

1. Connect the server to an ac power source and press the power switch on the front panel to turn on the server. See “Turning on the server” on page 59.
2. Press the F1 key as soon as you see the logo screen. Then, wait for several seconds, and the Setup Utility program opens. If you have set a password, you need to type the correct password to enter the Setup Utility program. For password information, see “Using passwords” on page 65.

### Viewing information in the Setup Utility program

The Setup Utility program menu lists various items about the system configuration. Select a desired item to view information or change settings.

When working with the Setup Utility program, you must use the keyboard. The keys used to perform various tasks are displayed on the right bottom pane of each screen. You also can press the F1 key for general help about the keys. For most items, the corresponding help message is displayed on the right top pane of the screen when the item is selected. If the item has submenus, you can display the submenus by pressing Enter.

You can view the following information about your specific server model in the Setup Utility program:

- The **Main** menu lists information about the BIOS and BMC, total memory size, and system date and time.
- On the **Advanced** menu:
  - Select **Processor Configuration** and follow the instructions on the screen to view information about the installed microprocessor and its supported technologies.
  - Select **Memory Configuration** and follow the instructions on the screen to view information about the installed memory modules.

- Select **SATA/SAS Configuration** and follow the instructions on the screen to view information about the installed SATA or SAS devices, such as a hard disk drive or an optical drive.
- On the **Server Management** menu, select **System Information** to view information about your system.

## Setup Utility program interface

This topic provides general information about the menus and items in the Setup Utility program.

Depending on the BIOS version of your server, some menu or item information might differ slightly from the information in this topic.

### Notes:

- The default settings already are optimized for you. Use the default value for any item you are not familiar with. Do not change the value of unfamiliar items to avoid unexpected problems. If you consider changing the server configuration, proceed with extreme caution. Setting the configuration incorrectly might cause unexpected results. If you cannot turn on the server because of incorrect BIOS settings, use the Clear CMOS jumper to restore the BIOS settings to the factory default settings. See “System board jumpers and switches” on page 52.
- If you have changed any hardware in the server, you might need to reflash the BIOS, the BMC firmware, and the FRU/Sensor Data Records (SDR).

The Setup Utility program main interface consists of the following menus:

- “Main menu” on page 62
- “Advanced menu” on page 62
- “Security menu” on page 63
- “Server Management menu” on page 63
- “Boot Options menu” on page 64
- “Boot Manager menu” on page 64
- “Save & Exit menu” on page 64

Lenovo provides the BIOS update utility on the Lenovo Support Web site. You can download the BIOS update utility to update the BIOS if the newer BIOS version specifically solves a problem you have. See “Updating or recovering the BIOS” on page 67.

If the power to your server is interrupted while the BIOS is being updated and your server cannot start correctly, use the BIOS recovery switch to recover from a BIOS update failure. See “System board jumpers and switches” on page 52.

### Main menu

After entering the Setup Utility program, you can see the **Main** menu, which lists basic information about the BIOS, total memory size, and system date and time.

To set the system date and time on the **Main** menu, see “Setting the system date and time” on page 64.

### Advanced menu

You can view or change various server component settings on the **Advanced** menu in the Setup Utility program. The **Advanced** menu contains various configuration submenus and items. On each submenu, press Enter to show selectable options and select a desired option by using the up and down arrow keys or type desired values from the keyboard. Some items are displayed on the menu only if the server supports the corresponding features.

## Notes:

- **Enabled** means that the function is configured.
- **Disabled** means that the function is not configured.

The **Advanced** menu contains the following submenus. For more information, enter the corresponding submenu and refer to the instructions on the screen.

- **Chipset Configuration:** View and set chipset configuration parameters.
- **Processor Configuration:** View information about the installed microprocessors and set microprocessor configuration parameters.
- **Memory Configuration:** View information about the installed memory modules and set memory configuration parameters.
- **ACPI Configuration:** View and set ACPI configuration parameters.
- **SATA/SAS Configuration:** View information about the installed SATA or SAS devices and set SATA or SAS configuration parameters.
- **PCI/PCIE Configuration:** View and set PCI or PCI Express configuration parameters.
- **USB Configuration:** View and set USB configuration parameters, such as enabling or disabling USB devices.
- **Serial Configuration:** View and set configuration parameters for the serial connector and serial connector console redirection.
- **Network Setup:** View and set configuration parameters for the UEFI network boot function.

## Security menu

You can set passwords and configure the TPM function on the **Security** menu in the Setup Utility program. For each menu item, press Enter to show selectable options and select a desired option by using the up and down arrow keys or type desired values from the keyboard. Some items are displayed on the menu only if the server supports the corresponding features.

## Notes:

- **Enabled** means that the function is configured.
- **Disabled** means that the function is not configured.

The **Security** menu contains the following items:

- **Administrator Password:** Set an administrator password to protect against unauthorized access to your server. See “Using passwords” on page 65.
- **User Password:** Set a user password to protect against unauthorized access to your server. See “Using passwords” on page 65.
- **TPM/TCM:** Configure the TPM function if your server has a TPM installed in the TPM connector on the system board. See “Configuring the TPM function” on page 66.

## Server Management menu

You can view system information and view or change event log and BMC settings on the **Server Management** menu in the Setup Utility program. On each submenu, press Enter to view the information or show selectable options and select a desired option by using the up and down arrow keys. Some items are displayed on the menu only if the server supports the corresponding features.

The **Server Management** menu contains the following submenus. For more information, enter the corresponding submenu and refer to the instructions on the screen.

- **BMC Firmware Revision:** View the BMC version.

- **BMC Status:** View the BMC status.
- **Erase SEL:** Erase system event log (SEL).
- **System Information:** View basic information about your server.
- **BMC Network Configuration:** Set BMC configuration parameters.

## Boot Options menu

The **Boot Options** menu in the Setup Utility program provides an interface to help you view or change the server startup options, including the startup sequence and boot priority for various devices. Changes in the startup options take effect when the server starts.

The startup sequence specifies the order in which the server checks devices to find a boot record. The server starts from the first boot record that it finds. For example, you can define a startup sequence that checks a disc in the optical drive, then checks the hard disk drive, and then checks a network device. For information about setting the startup sequence or selecting a startup device, see “Selecting a startup device” on page 66.

## Boot Manager menu

The **Boot Manager** menu in the Setup Utility program lists all the bootable devices installed in your server and the listed items vary depending on your server configuration. If you select a desired device listed on this menu, the server will start from the device you select.

You can press F12 when turning on the server and select a temporary startup device from the boot device selection window. See “Selecting a startup device” on page 66.

## Save & Exit menu

After you finish viewing or changing settings in the Setup Utility program, you can choose a desired action from the **Save & Exit** menu to save changes, discard changes, or load default values, and exit the program. Press Enter to select the item on the **Save & Exit** menu, and then select **Yes** when prompted to confirm the action. For information about exiting the Setup Utility program, see “Exiting the Setup Utility program” on page 67.

The **Save & Exit** menu contains the following items:

- **Save Changes and Exit:** Save changes and exit the Setup Utility program.
- **Save Changes and Reset:** Save changes and then continue with further configuration in the Setup Utility program.
- **Discard Changes and Exit:** Discard changes, load previous values, and then exit the Setup Utility program.
- **Discard Changes:** Discard changes and load previous values.
- **Restore Defaults:** Return to the optimized default settings.
- **Save as User Defaults:** Save the current settings as user default values.
- **Restore User Defaults:** Restore the user default values for all the items.

## Setting the system date and time

This topic provides instructions on how to set the system date and time in the Setup Utility program.

To set the system date and time in the Setup Utility program, do the following:

1. Start the Setup Utility program. See “Starting the Setup Utility program” on page 61.
2. On the **Main** menu, select **System Date** or **System Time**.

3. Use the Tab key to switch between data elements and type the numbers from the keyboard to set the system date and time.
4. Press F10 to save settings and exit the Setup Utility program.

## Using passwords

By using the Setup Utility program, you can set a password to prevent unauthorized access to your server.

You do not have to set a password to use your server. However, using a password improves computing security. If you decide to set a password, read the following topics.

### Setup Utility program password types

The following types of passwords are available in the Setup Utility program:

- **Administrator password**

Setting an administrator password deters unauthorized users from changing configuration settings. If you are responsible for maintaining the configuration settings of several computers, you might want to set an administrator password. When an administrator password is set, you are prompted to type a valid password each time you try to access the Setup Utility program. The Setup Utility program cannot be accessed until a valid password is typed in.

- **User password**

When a user password is set, the server cannot be used until a valid password is typed in.

**Note:** If both the administrator password and user password are set, you can type either password to use the server. However, you must use your administrator password to change any configuration settings.

### Password considerations

For security reasons, it is recommended to use a strong password that cannot be easily compromised.

#### Notes:

- The Setup Utility program passwords are not case sensitive.
- The server supports Setup Utility program passwords that consist of three to 20 characters.

To set a strong password, use the following guidelines:

- Have at least eight characters in length
- Contain at least one alphabetic character and one numeric character
- Not be your name or your user name
- Not be a common word or a common name
- Be significantly different from your previous passwords

Besides the alphabetic characters (a-z) and numeric characters (0-9), the server also supports characters typed using special keys on the keyboard for a password. Refer to the help message on the screen when setting a password to determine the valid special characters.

### Setting, changing, or deleting a password

This topic provides instructions on how to set, change, or delete a password in the Setup Utility program.

To set, change, or delete a password in the Setup Utility program, do the following:

1. Start the Setup Utility program. See “Starting the Setup Utility program” on page 61.

2. On the **Security** menu, select **Administrator Password** to set an administrator password or select **User Password** to set a user password.
  3. See “Password considerations” on page 65. Then, follow the instructions on the screen to set or change a password.
  4. If you want to delete a password, type your current password. Press Enter when you are prompted to type a new password. Then, press Enter to confirm the new password. The previous password will be cleared.
- Note:** For security reasons, it is recommended that you always set a password for your server.
5. Press F10 to save settings and exit the Setup Utility program.

If you have forgotten the password, you can use the Clear password switch on the system board to erase the password. See “System board jumpers and switches” on page 52. Then, set a new password for the server.

## Selecting a startup device

If your server does not start up from a desired device such as the disc or hard disk drive as expected, do one of the following to select the startup device you want.

**Note:** Not all discs, hard disk drives, or other removable devices are bootable.

- To select a temporary startup device, do the following:

**Note:** Selecting a startup device using the following method does not permanently change the startup sequence.

1. Turn on or restart your server.
  2. When you see the logo screen, press F10 if your server is connected to a network and you want to start up the server from the network. Otherwise, press F12 to display the boot menu. The boot device selection window opens.
  3. In the boot device selection window, use the up and down arrow keys on the keyboard to switch between the selections. Press Enter to select the device of your choice. Then, the server will start up from the selected device.
- To view or permanently change the configured startup device sequence, do the following:
    1. Start the Setup Utility program. See “Starting the Setup Utility program” on page 61.
    2. On the **Boot Options** menu, follow the instructions on the screen to set the startup device for **Boot Option #1** to **Boot Option #5** depending on your needs. You also can set the boot priority for various devices. See “Boot Options menu” on page 64.
    3. Press F10 to save settings and exit the Setup Utility program. The server will follow the startup device sequence you have set each time you turn on the server.

## Configuring the TPM function

The TPM works as a hardware security solution to help you to encrypt data and protect the server. The TPM function is only available when there is a TPM installed in your server. See “Installing the ThinkServer Trusted Platform Module” on page 119. You can purchase a TPM from Lenovo.

After installing a TPM, you need to check if the TPM function is enabled in the Setup Utility program.

To enable the TPM function in the Setup Utility program, do the following:

1. Start the Setup Utility program. See “Starting the Setup Utility program” on page 61.
2. On the **Security** menu, select **TPM/TCM → TPM Support**. Ensure that **TPM Support** is set to **Enabled**.
3. When **TPM Support** is set to **Enabled**, the **TPM State** item is displayed. Set **TPM State** to **Enabled**.

4. Press F10 to save settings and exit the Setup Utility program. The server will restart to enable the TPM function.

## Exiting the Setup Utility program

After you finish viewing or changing settings, press Esc to return to the Setup Utility program main interface. If you are on a nested submenu, press Esc repeatedly until you reach the main interface. Then, you can do one of the following to exit the Setup Utility program:

- If you want to save the new settings and exit the Setup Utility program, press F10 or select **Save & Exit → Save Changes and Exit**. Otherwise, your changes will not be saved.
- If you do not want to save the new settings, select **Save & Exit → Discard Changes and Exit**.
- If you want to return to the default settings, press F9 or select **Save & Exit → Restore Defaults**.

For more information about the **Save & Exit** menu in the Setup Utility program, see “Save & Exit menu” on page 64.

## Updating or recovering the BIOS

This topic provides instructions on how to update the BIOS and how to recover from a POST and BIOS update failure.

System programs are the basic layer of software built into your server. System programs include the POST, the UEFI BIOS, the Setup Utility program, and the TMM firmware. The POST is a set of tests and procedures that are performed each time you turn on your server. The UEFI BIOS is a layer of software that translates instructions from other layers of software into electrical signals that the server hardware can execute. You can use the Setup Utility program to view or change the configuration settings of your server. See “Using the Setup Utility program” on page 61. The TMM firmware provides remote management features.

Lenovo might make changes and enhancements to the BIOS and TMM firmware. When updates are released, they are available for download on the Lenovo Web site at <http://www.lenovo.com/drivers>. You can update the server firmware by downloading an update package and following the instructions on the Web page.

You also can use the Firmware Updater program to help you keep the server firmware up-to-date. See “Updating the firmware” on page 80.

## Updating (flashing) the BIOS

This topic provides instructions on how to update (flash) the BIOS.

### Notes:

- Update the BIOS on your server only if the newer BIOS version specifically solves a problem you have. We do not recommend BIOS updates for servers that do not need them. You can view the updated information for the new BIOS version in the installation instructions for the BIOS update package.
- Downgrading the BIOS to an earlier version is not recommended and might not be supported. An earlier BIOS version might not support the latest system configurations.
- If the power to your server is interrupted while the POST and BIOS are being updated, your server might not restart correctly. Ensure that you perform the BIOS update procedure in an environment with a steady power supply. Besides, ensure that your server can restart successfully without encountering hardware problems.
- If you have updated the BIOS firmware, all the BIOS settings become the default settings of the updated BIOS version. You need to check and reconfigure the BIOS settings for your specific needs. You can select **Save as User Defaults** on the **Save & Exit** menu in the Setup Utility program to save your current BIOS settings as user default values before updating the BIOS. Then, you can select **Restore User**

**Defaults** on the **Save & Exit** menu in the Setup Utility program to restore the user default values after updating the BIOS. In this case, you can keep your previous BIOS settings and do not need to reconfigure the settings after updating the BIOS. You also can record your specific BIOS settings before updating the BIOS for an easier reconfiguration in the new BIOS version.

To update (flash) the BIOS, do the following:

1. Go to <http://www.lenovo.com/drivers> and follow the instructions on the Web page to locate the BIOS update package.
2. Download the BIOS update package and the TXT file that contains installation instructions.
3. Print the TXT file and follow the instructions to update (flash) the BIOS.
4. Check and reconfigure the BIOS settings for your specific needs based on your note or refer to “Using the Setup Utility program” on page 61 after the BIOS update process is completed.

### Recovering from a BIOS update failure

If the power to your server is interrupted while the BIOS is being updated, your server might not restart correctly. If this happens, perform the following procedure to recover from the BIOS update failure.

**Note:** If the operating system of your server is installed under EFI mode, you need to reinstall the operating system after recovering the BIOS.

To recover from a BIOS update failure, do the following:

1. Go to <http://www.lenovo.com/drivers> and follow the instructions on the Web page to download a BIOS update package. Then, put the `amiboot.rom` file contained in the package into the root directory of a bootable USB key.
2. Remove all media from the drives and turn off all attached devices and the server. Then, disconnect all power cords from electrical outlets and disconnect all cables that are connected to the server.
3. Remove the server cover. See “Removing the server cover” on page 85.
4. Locate the BIOS recovery switch on the system board. See “System board jumpers and switches” on page 52. Then, remove any parts and disconnect any cables that might impede your access to the switch.
5. Move the BIOS recovery switch from the default off position to the on position.
6. Reinstall any parts and reconnect any cables. Then, reinstall the server cover. See “Completing the parts replacement” on page 200.
7. Connect the server to an ac power source, and then start the server from the bootable USB key that contains the `amiboot.rom` file. The recovery process starts. After the recovery process is completed, your server will automatically turn off.
8. Repeat step 2 through step 4.
9. Move the BIOS recovery switch back to the off position.
10. Repeat step 6.
11. Connect the server to an ac power source and turn on the server. The BIOS settings recover to the factory default settings. You need to check and configure the BIOS settings for your specific needs. See “Using the Setup Utility program” on page 61.

**Note:** If you cannot recover the BIOS after using the instructions in this topic, the BIOS read-only memory (ROM) might be damaged and you need to replace the system board. Contact the Lenovo Customer Support Center.



---

## Using the ThinkServer EasyStartup program

This topic provides instructions on how to use the ThinkServer EasyStartup program to set up and configure your server.

The ThinkServer EasyStartup program simplifies the process of configuring RAID and installing supported Windows and Linux operating systems and device drivers on your server. The program works in conjunction with your Windows or Linux operating system installation disc to automate the process of installing the operating system and associated device drivers. This program is provided with your server on a self-starting (bootable) *ThinkServer EasyStartup* DVD. The user guide for the program also is on the DVD and can be accessed directly from the program interface.

If you do not have a *ThinkServer EasyStartup* DVD, you also can download an ISO image from the Lenovo Support Web site and make a disc by yourself.

To download the ThinkServer EasyStartup program image and burn it into a disc, do the following:

1. Go to <http://www.lenovo.com/drivers> and follow the instructions on the Web page to locate the ThinkServer EasyStartup program.
2. Download the ISO image for the ThinkServer EasyStartup program and the readme file. The readme file contains important information about the ThinkServer EasyStartup program.
3. Print the readme file and read it carefully.
4. Use an optical drive and any DVD burning software to create a bootable disc with the ISO image.

## Features of the ThinkServer EasyStartup program

This topic lists the features of the ThinkServer EasyStartup program.

The ThinkServer EasyStartup program has the following features:

- Contained in a self-starting (bootable) DVD
- Easy-to-use, language-selectable interface
- Integrated help system and user guide
- Automatic hardware detection
- Contains the RAID configuration utility
- Provides device drivers based on the server model and detected devices
- Downloads device drivers from the *ThinkServer EasyStartup* DVD according to the operating system
- Selectable partition size and file system type
- Support for multiple operating systems
- Ability to install the operating system and device drivers in an unattended mode to save time
- Ability to create a reuseable response file that can be used with similarly configured Lenovo servers to make future installations even faster

## Starting the ThinkServer EasyStartup program

This topic provides instructions on how to start the ThinkServer EasyStartup program. After you start the program and enter the main interface, click **User Guide** for detailed information about how to use this program to help you configure the server and install an operating system.

To start the ThinkServer EasyStartup program, do the following:

1. Insert the *ThinkServer EasyStartup* DVD into an optical drive, set the optical drive as the first startup device, and start your server from the DVD in the optical drive. See “Selecting a startup device” on page 66.
2. Wait for the program to load. Then, you will be prompted for the following selections:
  - The language in which you want to view the program
  - The language of the keyboard layout you will be using with the program

**Note:** The supported languages and keyboard layouts for the ThinkServer EasyStartup program are Dutch, English, French, German, Italian, Japanese, Russian, Spanish, and Turkish. Your *ThinkServer EasyStartup* DVD might be English only. In this case, the keyboard layout should be English.

3. After selecting the language and keyboard layout, click **OK**. Then, you will see one or more messages about configuring storage devices. Click **Next** until you are presented with the Lenovo License Agreement. Read the Lenovo License Agreement carefully. In order to continue, you must accept the terms by clicking **Agree**. Then, the Date and time window opens.
4. Set the current date and time and click **OK**. The Start option window opens.
5. The Start option window provides the following selections:
  - Continue to the main interface.
  - Install the operating system using a pre-existing response file.
  - Configure RAID using a pre-existing response file.

Read the explanations on the screen and select a desired option. Then, follow the instructions on the screen. If this is the first time you are using the ThinkServer EasyStartup program, select the option to continue to the main interface and view the compatibility notes and user guide.

#### Notes:

- Functionality and supported operating systems vary depending on the version of the ThinkServer EasyStartup program. From the main interface of the program, click **Compatibility notes** to view the information about the RAID controllers, operating systems, and server configurations supported by the specific version of the program; and click **User Guide** to view the various functions and learn how to use the program.
- Before using the ThinkServer EasyStartup program to install an operating system, ensure that any external storage devices and fiber channels are configured correctly.

The ThinkServer EasyStartup program main interface provides the following menus on the left pane of the screen:

- **Home**

This menu is the welcome page that contains some general descriptions about the program and the Lenovo copyright and trademark statements.
- **Compatibility notes**

This menu provides information about the RAID controllers, operating systems, and server configurations supported by the version of the program you are using.
- **User Guide**

This menu provides information about the features of the program and instructions on how to use the program.
- **Hardware list**

This menu displays a list of hardware devices detected by the program.
- **Configure RAID**

This menu provides instructions on how to configure RAID or view the current RAID configuration and make changes if needed.

- **Install operating system**

This menu displays a series of choices and prompts to collect information required for operating system installation, prepares the hard disk drive for installation, and then initiates the installation process using your operating system installation disc.

- **Download drivers**

This menu helps you download the required device drivers from the *ThinkServer EasyStartup* DVD to a removable storage device so that you can easily get the drivers for server configuration when you need them.

**Note:** The most up-to-date device drivers for various server models are always available for download on the Lenovo Support Web site at:  
<http://www.lenovo.com/drivers>

- **About**

This menu provides the version information and legal notices.

## Using the ThinkServer EasyStartup program on a Windows operating system

You can run the *ThinkServer EasyStartup* DVD on a Windows operating system with the Internet Explorer® 6.0 Web browser or a later version installed. Enter the operating system and insert the *ThinkServer EasyStartup* DVD into an internal or external optical drive. The DVD starts automatically in most environments. If the DVD fails to start, open the launch.exe file located in the root directory of the DVD.

### Notes:

- To use the program, read and accept the Lenovo License Agreement when prompted.
- You might need to add the Uniform Resource Locator (URL) for the ThinkServer EasyStartup program Web page to the trusted Web site list so that the page can open correctly.

You can do the following when using the ThinkServer EasyStartup program on a Windows operating system. For detailed information, refer to the help system.

- View a general introduction to your ThinkServer server model and the specific server configuration information.
- View general guidance on how to use the *ThinkServer EasyStartup* DVD.
- Download the required device drivers to a removable storage device so that you can easily get the drivers for server configuration when you need them, especially when you finish installing an operating system without using the *ThinkServer EasyStartup* DVD and need appropriate device drivers to configure your server.
- Install the required device drivers directly on the server on which you are running the *ThinkServer EasyStartup* DVD.
- View information about all server models supported by the ThinkServer EasyStartup program and information about the device drivers for each server model, including the driver versions and driver locations in the root directory of the *ThinkServer EasyStartup* DVD.

**Note:** The most up-to-date device drivers for various server models are always available for download on the Lenovo Support Web site at:  
<http://www.lenovo.com/drivers>

---

## Configuring RAID

This topic provides information about RAID and the utility programs that are available for you to configure RAID.

This topic contains the following items:

- “About RAID” on page 72
- “Configuring RAID using the ThinkServer EasyStartup program” on page 73
- “Configuring the ThinkServer RAID 100 or RAID 300” on page 74
- “Configuring the advanced SATA/SAS hardware RAID” on page 79

### About RAID

RAID, an acronym for Redundant Array of Independent Disks, is a technology that provides increased storage functions and reliability through redundancy. This is achieved by combining multiple hard disk drives into a logical unit, where data is distributed across the drives in one of several ways called RAID levels.

When a group of independent physical hard disk drives are set up to use RAID technology, they are in a RAID array. This array distributes data across multiple hard disk drives, but the array appears to the host server as one single storage unit. Creating and using RAID arrays provides high performance, such as the expedited I/O performance, because several drives can be accessed simultaneously.

RAID drive groups also improve data storage reliability and fault tolerance compared with single-drive storage systems. Data loss resulting from a drive failure can be prevented by reconstructing missing data from the remaining drives.

The following list describes some of the most commonly used RAID levels:

- **RAID 0:** block-level striping without parity or mirroring  
Simple stripe sets are normally referred to as RAID 0. RAID 0 uses striping to provide high data throughput, especially for large files in an environment that does not require fault tolerance. RAID 0 has no redundancy and it provides improved performance and additional storage without fault tolerance. Any drive failure destroys the array and the likelihood of failure increases with more drives in the array. RAID 0 does not implement error checking, so any error is uncorrectable. More drives in the array means higher bandwidth, but greater risk of data loss.  
RAID 0 requires a minimum number of two hard disk drives.
- **RAID 1:** mirroring without parity or striping  
RAID 1 uses mirroring so that data written to one drive is simultaneously written to another drive. This is good for small databases or other applications that require small capacity but complete data redundancy. RAID 1 provides fault tolerance from disk errors or failures and continues to operate as long as at least one drive in the mirrored set is functioning. With appropriate operating system support, there can be increased read performance and only a minimal write performance reduction.  
RAID 1 requires a minimum number of two hard disk drives.

- **RAID 5:** block-level striping with distributed parity

RAID 5 uses disk striping and parity data across all drives (distributed parity) to provide high data throughput, especially for small random access. RAID 5 distributes parity along with the data and requires all drives but one to be present to operate; drive failure requires replacement, but the array is not destroyed by a single drive failure. Upon drive failure, any subsequent read operations can be calculated from the distributed parity so that the drive failure is masked from the end user. The array will have data loss in the event of a second drive failure and is vulnerable until the data that was on the failing drive is rebuilt onto a replacement drive. A single drive failure in the set will result in reduced performance of the entire set until the failing drive has been replaced and rebuilt.

RAID 5 requires a minimum number of three hard disk drives.

- **RAID 10:** a combination of RAID 0 and RAID 1

RAID 10 consists of striped data across mirrored spans. A RAID 10 drive group is a spanned drive group that creates a striped set from a series of mirrored drives. RAID 10 allows a maximum of eight spans. You must use an even number of drives in each RAID virtual drive in the span. The RAID 1 virtual drives must have the same stripe size. RAID 10 provides high data throughput and complete data redundancy but uses a larger number of spans.

RAID 10 requires a minimum number of four hard disk drives and also requires an even number of drives, for example, six hard disk drives or eight hard disk drives.

- **RAID 50:** a combination of RAID 0 and RAID 5

RAID 50 uses distributed parity and disk striping. A RAID 50 drive group is a spanned drive group in which data is striped across multiple RAID 5 drive groups. RAID 50 works best with data that requires high reliability, high request rates, high data transfers, and medium-to-large capacity.

**Note:** Having virtual drives of different RAID levels, such as RAID 0 and RAID 5, in the same drive group is not allowed. For example, if an existing RAID 5 virtual drive is created out of partial space in an array, the next virtual drive in the array has to be RAID 5 only.

RAID 50 requires a minimum number of six hard disk drives.

For detailed information about RAID, refer to “Introduction to RAID” in the *MegaRAID SAS Software User Guide* on the documentation DVD that comes with your server.

## Configuring RAID using the ThinkServer EasyStartup program

The ThinkServer EasyStartup program simplifies the process of configuring supported RAID and installing supported Windows and Linux operating systems and device drivers on your server. The user guide for the program can be accessed directly from the program interface.

The ThinkServer EasyStartup program has the following features for RAID configuration:

- For use with all supported RAID controllers
- Automatically detects hardware and lists all supported RAID configurations
- Configures one or more disk arrays per controller depending on the number of drives attached to the controller and the RAID level selected
- Supports hot-spare drives
- Creates a RAID response file that can be used to configure RAID controllers on similarly configured Lenovo servers

See “Using the ThinkServer EasyStartup program” on page 69 and view the user guide from the main interface of the program.

Some RAID management software also is provided on the *ThinkServer EasyStartup* DVD to help you manage RAID arrays and RAID controllers in an operating system environment. After you enter the operating system,

insert the *ThinkServer EasyStartup* DVD into the optical drive. The installation packages for the programs are located in the Utilities and Others folder in the root directory of the DVD. The *ThinkServer EasyStartup* DVD is designed for different types of servers and the Utilities and Others folder might contain additional installation packages that are not required to be installed on your server.

## Configuring the ThinkServer RAID 100 or RAID 300

The ThinkServer RAID 100 or RAID 300 (also known as onboard SATA/SAS software RAID) is integrated in the PCH on the system board. If you connect the signal cables from the system board to the hard disk drives or backplane, you can configure RAID for the hard disk drives using the LSI Software RAID Configuration Utility program, independently of the operating system. The ThinkServer RAID 100 or RAID 300 supports RAID levels 0, 1, and 10 by default. You also can activate RAID 5 by installing a ThinkServer RAID 100 or RAID 300 Upgrade Key for Advanced RAID. See “Installing or removing the ThinkServer RAID 100 or RAID 300 upgrade key for Advanced RAID” on page 112.

You can install and use the MegaRAID Storage Manager program to manage the RAID array and RAID controller in an operating system environment.

Before configuring RAID for your server, observe the following precautions:

- Use hard disk drives that are of the same type (SATA or SAS) and have the same capacity within a single RAID array.
- The total drive capacity of the primary RAID array is limited to 2 TB.

### RAID array status

When you turn on the server, the RAID controller ROM version, the RAID array status, and the list of available hard disk drives will be displayed during the POST.

The RAID array status can be one of the following:

- **Online**

This is the normal status, which indicates that the RAID array is working correctly.

- **Degrade**

This status indicates that more than one hard disk drive in the RAID array cannot be synchronized or have failed. You need to replace the failing hard disk drives and rebuild the data. See “Installing or replacing a hot-swap hard disk drive” on page 130 and “Rebuilding a physical drive” on page 77.

- **Offline**

This status indicates that the RAID array has failed and cannot be rebuilt. You need to create a new RAID array. See “Creating, adding, or deleting a RAID array” on page 76.

## Starting the LSI Software RAID Configuration Utility program

This topic provides instructions on how to start the LSI Software RAID Configuration Utility program.

To start the LSI Software RAID Configuration Utility program, do the following:

1. Turn on the server.
2. During the POST, when you see the message “Press Ctrl-M or Enter to run LSI Software RAID Setup Utility,” immediately press Ctrl+M to start the LSI Software RAID Configuration Utility program.

### LSI Software RAID Configuration Utility program interface

This topic provides information about the menus and items in the LSI Software RAID Configuration Utility program. Depending on the version of the program, some menu or item information might differ slightly from the information in this topic.

When working with the LSI Software RAID Configuration Utility program, you must use the keyboard. The keys used to perform various tasks are displayed on the bottom of each screen. Use up and down arrow keys to navigate between items. For most items, the corresponding help message is displayed on the bottom of the screen when the item is selected. If the item has submenus, you can display the submenus by pressing Enter.

After entering the LSI Software RAID Configuration Utility program, you can see the **Management Menu** on the screen. The **Management Menu** contains the following menu items:

- **Configure**

This menu contains items to help you create a RAID array, view the current RAID configuration, add a new RAID array, delete an existing RAID array, and select a boot virtual drive.

- **Initialize**

This menu helps you initialize virtual drives.

**Note:** Initializing a virtual drive erases all data on the virtual drive. Back up any data you want to keep and ensure that the operating system is not installed on the virtual drive before the initialization.

- **Objects**

This menu helps you configure parameters for the RAID controller, the virtual drives, and the physical drives.

- **Rebuild**

This menu helps you rebuild a physical drive in a RAID array in the event of a physical drive failure. You can choose to rebuild the data on the failing drive if the drive is still operational. If the drive is not operational, it must be replaced and the data on the failing drive must be rebuilt on a new drive to restore the system to fault tolerance. If hot-spare drives are available, the failing drive might be rebuilt automatically without any user intervention.

- **Check Consistency**

This menu helps you do consistency check for the virtual drives. The consistency check verifies the correctness of the data on virtual drives that use RAID 1, 5, and 10.

The following table shows the various menus and items in the LSI Software RAID Configuration Utility program. On each menu, press the Enter key to show selectable options and select a desired option by using up and down arrow keys or type desired values from the keyboard directly.

Table 4. LSI Software RAID Configuration Utility program menu items

Menu item	Submenu item	Comments
<b>Configure</b>	<b>Easy Configuration</b>	Create physical arrays. An array will automatically become a virtual drive.
	<b>New Configuration</b>	Clear the existing configuration and start a new configuration.
	<b>View/Add Configuration</b>	View the existing configuration or add a new configuration.
	<b>Clear Configuration</b>	Clear the existing configuration.
	<b>Select Boot Drive</b>	Select a boot virtual drive.
<b>Initialize</b>	Varies by configuration.	Initialize virtual drives.

Table 4. LSI Software RAID Configuration Utility program menu items (continued)

Menu item	Submenu item	Comments
<b>Objects</b>	<b>Adapter</b>	Set adapter-related parameters, such as rebuild rate, consistency check rate, and so on.
	<b>Virtual Drive</b>	Set virtual drive parameters.
	<b>Physical Drive</b>	Set physical drive parameters, such as creating a hot-spare drive for the virtual drive, making a failing drive as online, changing a drive state, and viewing the specifications of a physical drive.
<b>Rebuild</b>	Varies by configuration.	Rebuild physical drives.
<b>Check Consistency</b>	Varies by configuration.	Check consistency of virtual drives.

## Creating, adding, or deleting a RAID array

This topic provides instructions on how to create, add, or delete a RAID array using the LSI Software RAID Configuration Utility program.

**Note:** Before you create a RAID array using the LSI Software RAID Configuration Utility program, ensure that the server meets the required hardware configuration. For example, the server needs to have the required number of hard disk drives installed and connected to the system board. See “About RAID” on page 72 for information about the required number of hard disk drives for each RAID level. If you want to create a RAID 5 array using the LSI Software RAID Configuration Utility program, the server also needs to have a ThinkServer RAID 100 or RAID 300 Upgrade Key for Advanced RAID. See “Installing or removing the ThinkServer RAID 100 or RAID 300 upgrade key for Advanced RAID” on page 112.

To create, add, or delete a RAID array using the LSI Software RAID Configuration Utility program, do the following:

1. Start the LSI Software RAID Configuration Utility program. See “Starting the LSI Software RAID Configuration Utility program” on page 74.
2. On the main interface of the program, do one of the following depending on your needs:
  - If you want to create a RAID array, select **Easy Configuration**, and then follow the instructions on the screen.
  - If you want to add a secondary RAID array (if supported by your server), select **View/Add Configuration**, and then follow the instructions on the screen to view the current configuration and add a new RAID array.
  - If you want to delete the existing RAID array, exit the program and back up all your data on the hard disk drives. After backing up all your data, enter the program main interface and select **Clear Configuration**. Select **Yes** when prompted and follow the instructions on the screen.

**Attention:** Deleting an existing RAID array erases all data on the array. Ensure that you back up all data before deleting the RAID array. If the operating system is installed on the RAID array you want to delete, you need to reinstall the operating system after deleting the RAID array.

- If you want to delete the existing RAID array and create a new RAID array, exit the program and back up all your data on the hard disk drives. After backing up all your data, enter the program main interface and select **New Configuration**. Select **Yes** when prompted to proceed, and then follow the instructions on the screen.

**Attention:** Deleting an existing RAID array erases all data on the array. Ensure that you back up all data before deleting the RAID array. If the operating system is installed on the RAID array you want to delete, you need to reinstall the operating system after deleting the RAID array.



## Initializing a virtual drive

This topic provides instructions on how to initialize a virtual drive using the LSI Software RAID Configuration Utility program after completing the configuration process.

Virtual drive initialization is the process of writing zeros to the data fields of a virtual drive and, in fault-tolerant RAID levels, generating the corresponding parity to put the virtual drive in a ready state. Initialization erases all data on the virtual drive. Drive groups will work without being initialized, but they can fail a consistency check because the parity fields have not been generated.

### Notes:

- Ensure that you back up any data you want to keep before initializing a virtual drive.
- Ensure that the operating system is not installed on the virtual drive you are initializing. Otherwise, you need to reinstall the operating system after initializing the virtual drive.

To initialize a virtual drive using the LSI Software RAID Configuration Utility program, do the following:

1. Start the LSI Software RAID Configuration Utility program. See “Starting the LSI Software RAID Configuration Utility program” on page 74.
2. On the main interface of the program, select **Initialize** and follow the instructions on the screen.

## Setting a hot-spare drive

This topic provides instructions on how to set a hard disk drive as a hot-spare drive using the LSI Software RAID Configuration Utility program.

A hot-spare drive is an extra, unused drive that is part of the disk subsystem. It is usually in standby mode and ready for service if a hard disk drive fails. For detailed information about hot-spare drives, refer to “Introduction to RAID” in the *MegaRAID SAS Software User Guide* on the documentation DVD that comes with your server.

To set a hard disk drive as a hot-spare drive using the LSI Software RAID Configuration Utility program, do the following:

1. Start the LSI Software RAID Configuration Utility program. See “Starting the LSI Software RAID Configuration Utility program” on page 74.
2. Do one of the following:
  - If you want to create or add a new RAID array, you can set a hot-spare drive during the configuration process by following the instructions on the screen.
  - If you want to set a hot-spare drive right after the configuration, select **Objects → Physical Drive** from the program main interface. Then, select the hard disk drive that you want to set as a hot-spare drive and press Enter. A submenu is displayed. Select **Make Hot Spare** from the submenu, and then select **Yes** when prompted to set the hard disk drive as a hot-spare drive.

## Rebuilding a physical drive

This topic provides instructions on how to rebuild a physical drive using the LSI Software RAID Configuration Utility program when a physical drive in a RAID array fails.

When a physical drive in a RAID array fails, you can rebuild the drive by recreating the data that was stored on the drive before it fails. If the drive is not operational, it must be replaced and the data on the failing drive must be rebuilt on a new drive to restore the system to fault tolerance. If hot-spare drives are available, the failing drive might be rebuilt automatically without any user intervention.

The RAID controller recreates the data using the data stored on other drives in the drive group. Rebuilding can be done only in drive groups with data redundancy, such as RAID 1, RAID 5, and RAID 10 arrays. For

detailed information about disk rebuild, refer to “Introduction to RAID” in the *MegaRAID SAS Software User Guide* on the documentation DVD that comes with your server.

To rebuild a physical drive using the LSI Software RAID Configuration Utility program when a physical drive in a RAID array fails, do the following:

1. Start the LSI Software RAID Configuration Utility program. See “Starting the LSI Software RAID Configuration Utility program” on page 74.
2. On the main interface of the program, select **Rebuild** and follow the instructions on the screen.

**Note:** Run a consistency check immediately after the rebuild completes to ensure data integrity for the virtual drives. See “Running a consistency check” on page 78.

The rebuild rate is the percentage of the computing cycles dedicated to rebuilding failing drives. The rebuild rate can be configured between 0 percent and 100 percent. At 0 percent, the rebuild operation is done only if the system is not doing anything else. At 100 percent, the rebuild operation has a higher priority than any other system activity.

To configure the rebuild rate using the LSI Software RAID Configuration Utility program, do the following:

**Note:** Using a rebuild rate of 0 or 100 percent is not recommended. The default value is 30 percent.

1. Start the LSI Software RAID Configuration Utility program. See “Starting the LSI Software RAID Configuration Utility program” on page 74.
2. On the main interface of the program, select **Objects → Adapter → Rebuild Rate**.
3. Set the rebuild rate by typing a desired value from the keyboard directly.

## Running a consistency check

This topic provides instructions on how to run a consistency check for virtual drives using the LSI Software RAID Configuration Utility program.

The consistency check operation verifies that all stripes on a virtual drive with a redundant RAID level (RAID 1, RAID 5, and RAID 10) are consistent and the date on the virtual drive is correct. For example, in a system with parity, checking consistency means computing the data on one drive and comparing the results to the contents of the parity drive.

You should run a consistency check on fault-tolerant virtual drives periodically. It is recommended that you run a consistency check at least once a month. You must run a consistency check if you suspect that the virtual drive data might be corrupted. Ensure that you back up the data before running a consistency check if you suspect that the data might be corrupted.

To run a consistency check using the LSI Software RAID Configuration Utility program, do the following:

1. Start the LSI Software RAID Configuration Utility program. See “Starting the LSI Software RAID Configuration Utility program” on page 74.
2. On the main interface of the program, select **Check Consistency** and follow the instructions on the screen.

The consistency check rate is the rate at which consistency check operations are run on a system. The consistency check rate can be configured between 0 percent and 100 percent. At 0 percent, the consistency check is done only if the system is not doing anything else. At 100 percent, the consistency check has a higher priority than any other system activity.

To configure the consistency check rate using the LSI Software RAID Configuration Utility program, do the following:

**Note:** Using a consistency check rate of 0 or 100 percent is not recommended. The default value is 30 percent.

1. Start the LSI Software RAID Configuration Utility program. See “Starting the LSI Software RAID Configuration Utility program” on page 74.
2. On the main interface of the program, select **Objects → Adapter → Chk Const Rate**.
3. Set the consistency check rate by typing a desired value from the keyboard directly.

## Installing and using the MegaRAID Storage Manager program

You can install and use the MegaRAID Storage Manager program to manage the RAID array and RAID controller in an operating system environment after configuring RAID.

The installation package for the MegaRAID Storage Manager program is on the *ThinkServer EasyStartup* DVD. After you enter the operating system, insert the *ThinkServer EasyStartup* DVD into the optical drive. The installation package for the MegaRAID Storage Manager program is located in the Utilities and Others folder in the root directory of the DVD.

To install and use the MegaRAID Storage Manager program, refer to the following chapters in the *MegaRAID SAS Software User Guide* on the documentation DVD that comes with your server:

**Note:** Some information in these chapters might be intended for the advanced SATA/SAS hardware RAID configurations and might not apply to the ThinkServer RAID 100 or RAID 300 configurations.

- “MegaRAID Storage Manager Overview and Installation”
- “MegaRAID Storage Manager Window and Menus”
- “Monitoring System Events and Storage Devices”
- “Maintaining and Managing Storage Configurations”

The *MegaRAID SAS Software User Guide* also is available on the Lenovo Web site at: <http://www.lenovo.com/UserManuals>

## Configuring the advanced SATA/SAS hardware RAID

Before configuring RAID for your server, observe the following precautions:

- Use hard disk drives that are of the same type (SATA or SAS) and have the same capacity within a single RAID array.
- The total drive capacity of the primary RAID array is limited to 2 TB.

Some server models come with a RAID card to provide advanced SATA/SAS hardware RAID functions. You also can purchase a supported RAID card from Lenovo and install it into the server. See “RAID card” on page 35.

The RAID card provides the WebBIOS Configuration Utility program to help you configure RAID independently of the operating system. You also can install the MegaRAID Storage Manager program and the MegaCLI Configuration Utility program to help you manage the RAID array and RAID controller in an operating system environment.

The installation packages for the MegaRAID Storage Manager program and the MegaCLI Configuration Utility program are on the *ThinkServer EasyStartup* DVD. After you enter the operating system, insert the *ThinkServer EasyStartup* DVD into the optical drive. The installation packages for the programs are located in the Utilities and Others folder in the root directory of the DVD.

**Note:** The *ThinkServer EasyStartup* DVD is designed for different types of servers and the Utilities and Others folder might contain additional installation packages that are not required to be installed on your server.

For instructions on how to configure and manage the advanced SATA/SAS hardware RAID, refer to the *MegaRAID SAS Software User Guide* on the documentation DVD that comes with your server. This document also is available on the Lenovo Web site at:  
<http://www.lenovo.com/UserManuals>

---

## Configuring the Ethernet controllers

The Ethernet controllers are integrated on the system board. They provide an interface for connecting to a 10 Mbps, 100 Mbps, or 1000 Mbps network and provide full-duplex (FDX) capability, which enables simultaneous transmission and reception of data on the network.

You do not have to set any jumpers or configure the Ethernet controllers. However, you must install a device driver to enable the operating system to recognize the controllers.

The ThinkServer EasyStartup program simplifies the process of configuring RAID and installing supported operating systems and device drivers on your server. See “Using the ThinkServer EasyStartup program” on page 69.

The device drivers for onboard Ethernet controllers also are available for download at:  
<http://www.lenovo.com/drivers>

---

## Updating the firmware

The firmware in the server is periodically updated and is available for download on the Lenovo Web site.

Go to <http://www.lenovo.com/drivers> and follow the instructions on the Web page to check for the latest level of firmware, such as the BIOS updates and device drivers.

When you replace a device in the server, you might have to either update the server with the latest version of the firmware that is stored in memory on the device or reflash the BIOS, the TMM firmware, and the FRU/SDR.

## Using the Firmware Updater program

The Firmware Updater program enables you to maintain your system firmware up-to-date and helps you avoid unnecessary outages.

To update your system firmware using the Firmware Updater program, do the following:

**Note:** Before distributing the firmware updates to a server, ensure that your server can restart successfully without encountering hardware problems.

1. Go to <http://www.lenovo.com/drivers> and follow the instructions on the Web page to locate the Firmware Updater program.
  2. Download the ISO image for the Firmware Updater program and the TXT file that contains the instructions.
  3. Use any CD or DVD burning software to create a bootable disc with the ISO image.
  4. Print the TXT file and follow the instructions to use the Firmware Updater program to update your system firmware.
- 

## Using the Lenovo ThinkServer EasyManage program

The Lenovo ThinkServer EasyManage program enables enterprise users to remotely control and monitor multiple Lenovo servers within a LAN. The program provides an interface to display all servers being managed, which enables the administrator to conveniently search for, monitor, and manage servers.

To download the Lenovo ThinkServer EasyManage program, go to <http://www.lenovo.com/drivers> and follow the instructions on the Web page.

For detailed information about using the Lenovo ThinkServer EasyManage program, refer to the help system for the program.



---

## Chapter 6. Installing, removing, or replacing hardware

This chapter provides instructions on how to install, remove, or replace hardware for your server.

This chapter contains the following items:

- “Guidelines” on page 83
- “Removing the server cover” on page 85
- “Removing and reinstalling the front bezel” on page 87
- “Removing and reinstalling the PCI card bracket assembly” on page 89
- “Installing, removing, or replacing hardware” on page 92
- “Completing the parts replacement” on page 200

For a list of ThinkServer options, go to:  
<http://www.lenovo.com/thinkserver>

---

### Guidelines

This topic provides some guidelines that you should read and understand before using your server.

### Precautions

Before you use the server, ensure that you read and understand the following precautions:

- Before using the product, ensure that you read and understand the multilingual safety instructions and the Lenovo Limited Warranty (LLW) on the documentation DVD that comes with the product. Reading and understanding the safety instructions reduces the risk of personal injury and damage to your product.
- When you install your new server, take the opportunity to download and apply the most recent firmware updates. This step will help to ensure that any known issues are addressed and that your server is ready to function at maximum levels of performance. To download firmware updates for your server, go to <http://www.lenovo.com/drivers> and follow the instructions on the Web page. See “Updating the firmware” on page 80 for more information.
- Before you install optional hardware devices, ensure that the server is working correctly. If the server is not working correctly, see Chapter 7 “Troubleshooting and diagnostics” on page 203 to do basic troubleshooting. If the problem cannot be solved, see Chapter 8 “Getting information, help, and service” on page 209.
- Observe good housekeeping in the area where you are working. Put removed covers and other parts in a safe place.
- If you must turn on the server while the server cover is removed, ensure that no one is near the server and that no tools or other objects have been left inside the server.
- Do not attempt to lift an object that you think is too heavy for you. If you have to lift a heavy object, observe the following precautions:
  - Ensure that you can stand safely without slipping.
  - Distribute the weight of the object equally between your feet.
  - Use a slow lifting force. Never move suddenly or twist when you lift a heavy object.
  - To avoid straining the muscles in your back, lift by standing or by pushing up with your leg muscles.
- Ensure that you have an adequate number of properly grounded electrical outlets for the server, monitor, and other devices.

- Back up all important data before you make changes to drives.
- Have a small flat-blade screwdriver available.
- You do not have to turn off the server to install or replace a hot-swap redundant power supply, a hot-swap hard disk drive, or a hot-plug USB device. However, you must turn off the server and remove the ac power sources, such as hot-swap redundant power supplies, from the server before performing any step that involves installing, removing, or replacing adapter cables or non-hot-swap devices or components.
- To view the LEDs on the system board and internal components, leave the server connected to power.
- When you are finished working on the server, reinstall all safety shields, guards, labels, and ground wires.
- When working inside the server, you might find some tasks easier if you lay the server on its side.

## Handling static-sensitive devices

**Attention:** Do not open the static-protective package that contains the new part until the defective part has been removed from the server and you are ready to install the new part. Static electricity, although harmless to you, can seriously damage server components and parts.

Any server part containing transistors or integrated circuits (ICs) should be considered sensitive to electrostatic discharge (ESD). ESD damage can occur when there is a difference in charge between objects. Protect against ESD damage by equalizing the charge so that the machine, the part, the work mat, and the person handling the part are all at the same charge.

### Notes:

- Use product-specific ESD procedures when they exceed the requirements noted in this topic.
- Ensure that the ESD protective devices you use have been certified (ISO 9000) as fully effective.

When you handle server parts and components, take these precautions to avoid static-electricity damage:

- Limit your movement. Movement can cause static electricity to build up around you.
- Always carefully handle the parts and other components (such as PCI Express cards, memory modules, system boards, and microprocessors) by edges or frame. Do not touch solder joints, pins, or exposed circuitry.
- Do not leave the device where others can handle and possibly damage the device.
- Before you replace a new part, touch the static-protective package containing the new part to an unpainted metal part of the server for at least two seconds. This reduces static electricity from the package and your body.
- Remove the new part from the static-protective package and directly install it in the server without placing it on any other surface. If it is hard for you to do this in your specific situation, place the static-protective package of the new part on a smooth, level surface, and then place the new part on the static-protective package.
- Do not place the part on the server cover or other metal surface.
- Take additional care when handling devices during cold weather. Heating reduces indoor humidity and increases static electricity.
- Use a grounded work mat to provide a static-free work surface. The mat is especially useful when handling ESD-sensitive devices.
- Prevent the part from touching your clothing. Most clothing is insulative and retains a charge even when you are wearing a wrist strap.
- The use of a grounding system is recommended. For example, it is recommended to wear an electrostatic discharge (ESD) wrist strap, if one is available. Ensure that you work in an ESD-safe area. Select a grounding system, such as those listed below, to provide protection that meets the specific service requirement.



**Note:** The use of a grounding system to guard against ESD damage is desirable but not necessary.

- Attach the ESD ground clip to any frame ground, ground braid, or green-wire ground.
- When working on a double-insulated or battery-operated system, use an ESD common ground or reference point. You can use coax or connector-outside shells on these systems.
- Use the ground prong of the ac plug on ac-operated servers.

## System reliability guidelines

To help ensure proper cooling and system reliability, strictly follow these guidelines:

- Each of the drive bays has a drive or a dummy tray installed; or there is an electromagnetic interface (EMI) protective panel or EMI shield installed to protect the drive cage.
- If the server supports hot-swap redundant power supplies, each of the power supply bay has a redundant power supply installed, or one bay has a redundant power supply installed while the other bay is covered by a shield.
- Leave adequate space around the server to ensure that the server cooling system works well. Leave approximately 50 mm (2 inches) of open space around the front and rear of the server. Do not place objects in front of the fans. For proper cooling and airflow, install the server cover before you turn on the server. Operating the server for extended periods of time (more than 30 minutes) with the server cover removed might damage server components.
- Properly route the cables. For some options, such as PCI Express cards, follow the cabling instructions that come with the options in addition to the instructions in this manual.
- Ensure that you replace a failing fan within 48 hours.
- When replacing a hot-swap drive, install the new hot-swap drive within two minutes of removal.
- If your server has air ducts or air baffles, do not remove them while the server is running. Operating the server without the air ducts or air baffles might cause the microprocessors to overheat.
- For servers that support up to two microprocessors, ensure that the second microprocessor socket always contains a microprocessor or is protected by a microprocessor socket cover.

## Working inside the server with the power on

**Attention:** Static electricity that is released to internal server components when the server is turned on might cause the server to halt, which might result in the loss of data. To avoid this potential problem, always use an ESD wrist strap or other grounding system when you work inside the server with the power on.

The server supports hot-swap devices and is designed to operate safely while it is turned on and the cover is removed. Follow these guidelines when you work inside the server with the power on:

- Avoid wearing loose-fitting clothing on your forearms. Button long-sleeved shirts before working inside the server; do not wear cuff links while you are working inside the server.
- Do not allow your necktie or scarf to hang inside the server.
- Remove jewelry, such as bracelets, necklaces, rings, and loose-fitting wrist watches.
- Remove items from your shirt pocket, such as pens and pencils. These items might fall into the server as you lean over it.
- Avoid dropping any metallic objects into the server, such as paper clips, hairpins, and screws.

---

## Removing the server cover

**Attention:** Do not open your server or attempt any repair before reading and understanding “Safety information” on page iii and “Guidelines” on page 83.

This topic provides instructions on how to remove the server cover.

Before you begin, print all the related instructions or ensure that you can view the PDF version on another computer for reference.

**Note:** Depending on the model, your server might look slightly different from the illustrations in this topic.

To remove the server cover, do the following:

1. Remove all media from the drives. Then, turn off all attached devices and the server.
2. Disconnect all power cords from electrical outlets.
3. Disconnect the power cords, Input/Output (I/O) cables, and all other cables that are connected to the server.
4. Remove any locking device that secures the server cover, such as a padlock or an integrated cable lock. See “Server locks” on page 25.
5. Loosen the thumbscrew that secures the server cover, and then slide the server cover to the rear until it is stopped.

**Notes:**

- a. The server cover is securely installed and you need to use a tool, such as a screwdriver, to loosen the thumbscrew that secures the server cover. The thumbscrew is an integrated part of the server cover. Do not try to remove the thumbscrew from the server cover.
- b. It is recommended that you wait three to five minutes to let the server cool before removing the server cover.

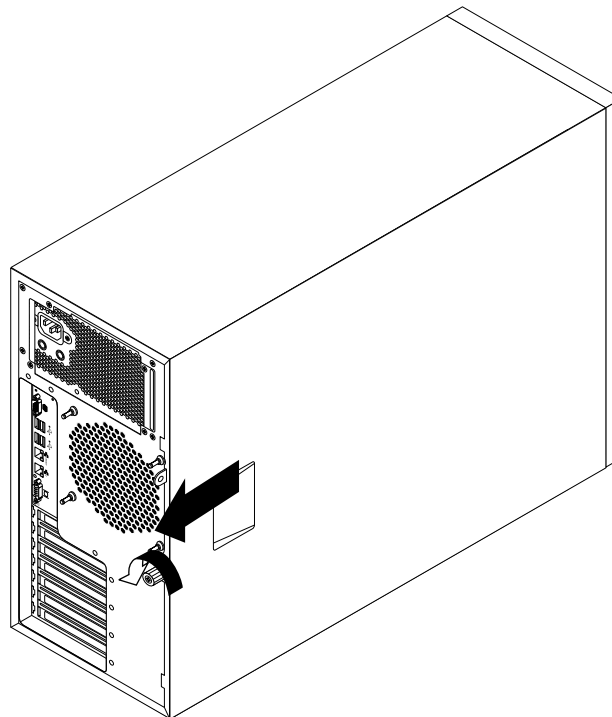


Figure 34. Sliding the server cover to the rear

- Pivot the server cover outward to completely remove it.

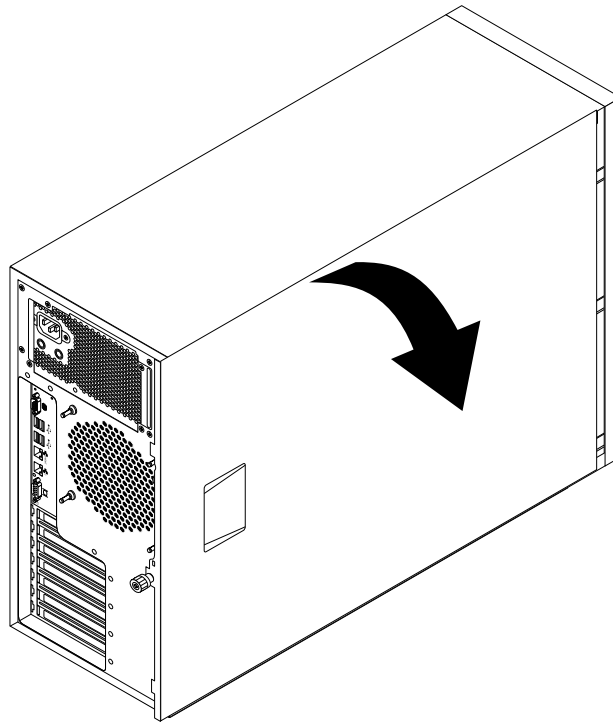


Figure 35. Removing the server cover

**Attention:** For proper cooling and airflow, install the server cover before turning on the server. Operating the server for more than 30 minutes with the server cover removed might damage server components.

To reinstall the server cover, see “Reinstalling the server cover and reconnecting cables” on page 200.

---

## Removing and reinstalling the front bezel

**Attention:** Do not open your server or attempt any repair before reading and understanding “Safety information” on page iii and “Guidelines” on page 83.

This topic provides instructions on how to remove and reinstall the front bezel.

Before you begin, print all the related instructions or ensure that you can view the PDF version on another computer for reference.

**Note:** Depending on the model, your server might look slightly different from the illustrations in this topic.

To remove and reinstall the front bezel, do the following:

- Remove all media from the drives and turn off all attached devices and the server. Then, disconnect all power cords from electrical outlets and disconnect all cables that are connected to the server.
- Remove the server cover. See “Removing the server cover” on page 85.

3. Remove the front bezel by releasing the three plastic tabs on the left side and pivoting the front bezel outward.

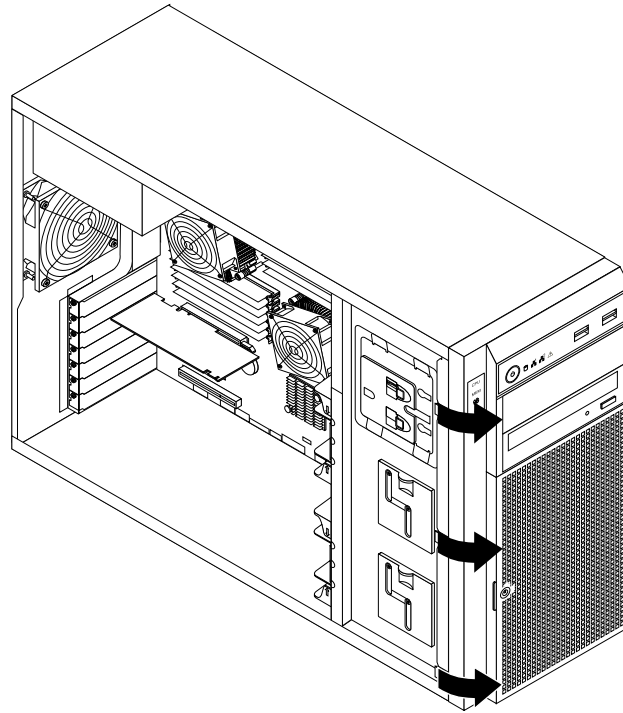


Figure 36. Removing the front bezel

4. To reinstall the front bezel, align the other three plastic tabs on the right side of the front bezel with the corresponding holes in the chassis, then pivot the front bezel inward until it snaps into position on the left side.

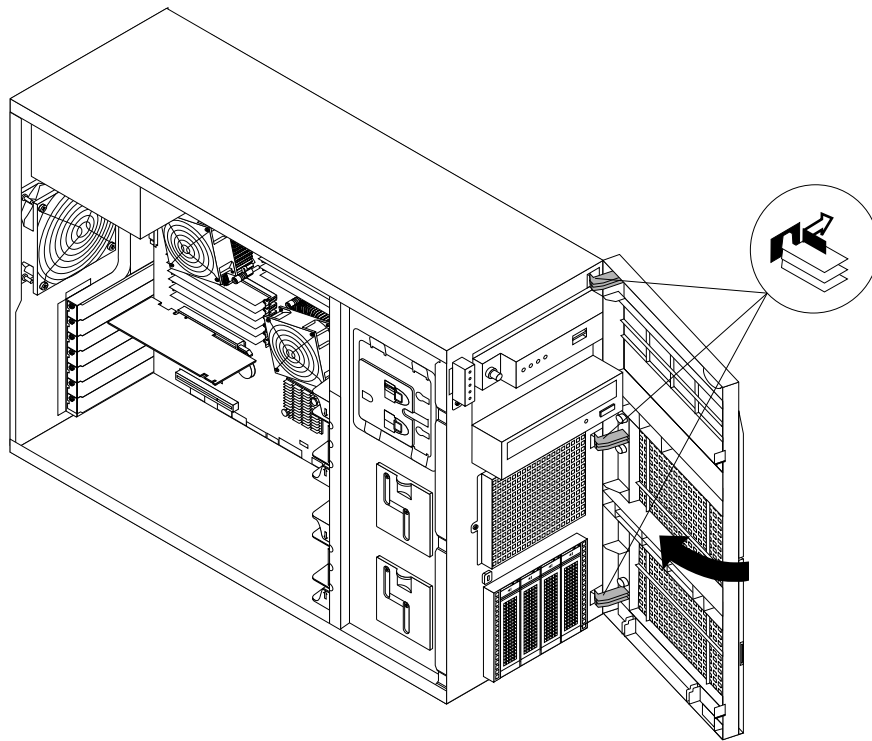


Figure 37. Installing the front bezel

5. Go to “Completing the parts replacement” on page 200.

---

## Removing and reinstalling the PCI card bracket assembly

**Attention:** Do not open your server or attempt any repair before reading and understanding “Safety information” on page iii and “Guidelines” on page 83.

This topic provides instructions on how to remove and reinstall the PCI card bracket assembly. This topic applies only to server models that have a RAID card installed.

Before you begin, print all the related instructions or ensure that you can view the PDF version on another computer for reference.

To remove and reinstall the PCI card bracket assembly, do the following:

1. Remove all media from the drives and turn off all attached devices and the server. Then, disconnect all power cords from electrical outlets and disconnect all cables that are connected to the server.
2. Remove the server cover. See “Removing the server cover” on page 85.
3. Lay the server on its side for easier operation.
4. Remove the PCI card bracket assembly by doing the following:

- a. Press the release tab **1** in the direction as shown, and then carefully lift the PCI card bracket assembly slightly upward until the two mounting studs **2** on the chassis are in the central position of the corresponding holes in the PCI card bracket assembly.

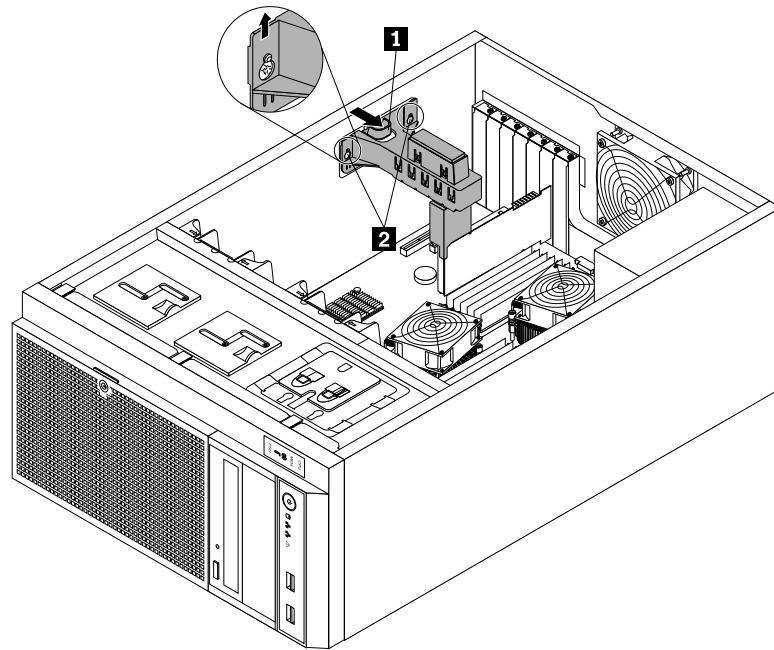


Figure 38. Releasing the PCI card bracket assembly

- b. Carefully move the PCI card bracket assembly to the top side of the chassis until the PCI card bracket assembly is released from the mounting studs on the chassis. Then, lift the PCI card bracket assembly out of the chassis.


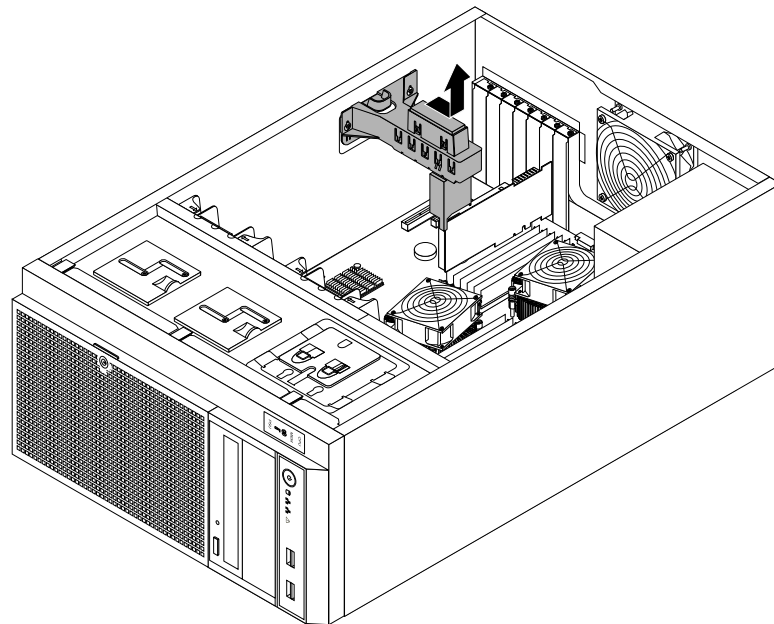



Figure 39. Removing the PCI card bracket assembly

5. Reinstall the PCI card bracket assembly by doing the following:
  - a. Install the small low-profile PCI card bracket into the main PCI card bracket.
    - To secure the PCI card seated in the PCI-E slot 5, install the small low-profile PCI card bracket into the third slot (from top to bottom) of the main PCI card bracket.

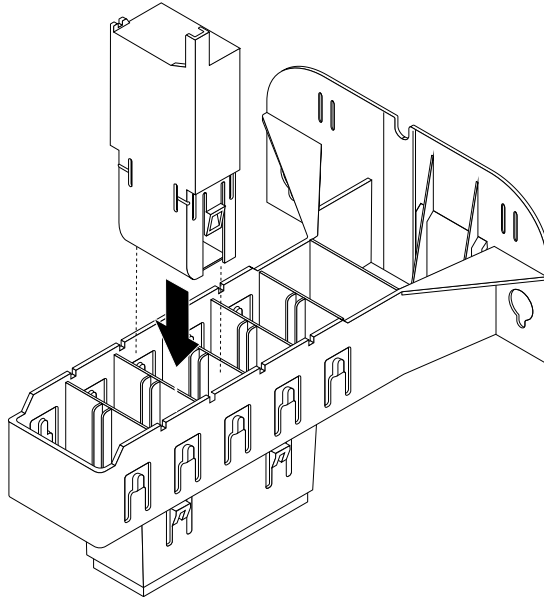

*Figure 40. Installing the small bracket into the third slot of the main bracket*

- To secure the PCI card seated in the PCI-E slot 4, install the small low-profile PCI card bracket into the fourth slot (from top to bottom) of the main PCI card bracket.

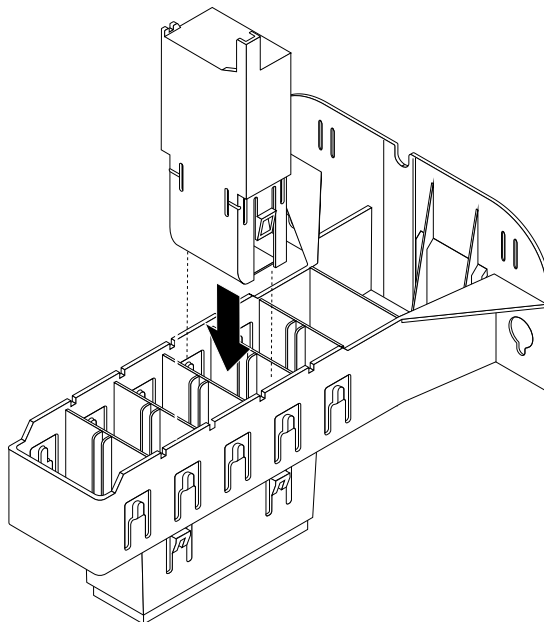

*Figure 41. Installing the small bracket into the fourth slot of the main bracket*

- b. Place the PCI card bracket assembly into the chassis so that the two mounting studs **2** on the bottom of the chassis are inserted into the corresponding holes in the PCI card bracket assembly. Ensure that the edge of the RAID card can be smoothly inserted into the slot **1** in the small low-profile PCI card bracket. Then, carefully press the PCI card bracket assembly down until it is securely installed and locked into position by the two mounting studs.

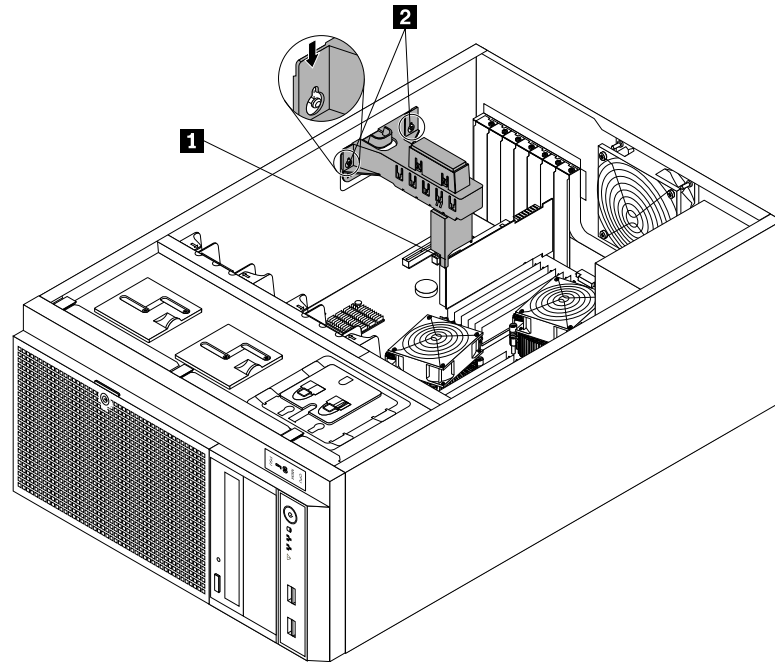


Figure 42. Reinstalling the PCI card bracket assembly

6. Go to “Completing the parts replacement” on page 200.

---

## Installing, removing, or replacing hardware

This topic provides instructions on how to install, remove, or replace hardware for your server. You can expand the capabilities of your server by adding new hardware devices, such as memory modules or other server options, and maintain your server by replacing the failing hardware devices.

If you are handling a server option, refer to the appropriate installation and or removal instructions in this topic along with the instructions that come with the option.

### Notes:

1. Use only parts provided by Lenovo.
2. Depending on the model, your server might look slightly different from the illustrations in this topic.

The EMI integrity and cooling of the server are protected by having all drive bays and PCI Express card slots covered or occupied. When you install an internal drive or a PCI Express card, save the EMI shield or dummy tray from the drive bay or save the PCI Express card slot bracket in the event that you later remove the device.

**Attention:** An unoccupied drive bay or PCI Express card slot without a cover, shield, dummy tray, filler, or any other protection might impact the EMI integrity and cooling of the server, which might result in overheating or component damage.



## Installing or removing a memory module

This topic provides instructions on how to install or remove a memory module.

**Note:** The memory modules are sensitive to ESD. Ensure that you read and understand “Handling static-sensitive devices” on page 84 first and carefully perform the operation.

### Memory module installation rules

Your server has 12 memory slots and it has the following features:

- Each slot supports 2 GB, 4 GB, 8 GB, and 16 GB double data rate 3 low-voltage registered dual inline memory modules (DDR3 LV RDIMMs).
- Each slot supports 2 GB, 4 GB, 8 GB, and 16 GB DDR3 RDIMMs.
- Each slot supports 2 GB and 4 GB DDR3 unbuffered dual inline memory modules (UDIMMs) with Error Checking and Correcting (ECC) technology.
- Your server supports up to six memory modules when one microprocessor is installed and up to 12 memory modules when two microprocessors are installed.
- The minimum system memory for UDIMMs, RDIMMs or LV RDIMMs is 2 GB (only one microprocessor installed and only one 2 GB UDIMM, RDIMM or LV RDIMM installed in the CPU1 DIMMA1 slot).
- The maximum system memory for RDIMMs or LV RDIMMs is 192 GB (two microprocessors installed and one 16 GB RDIMM or LV RDIMM installed in each of the 12 memory slots).
- The maximum system memory for UDIMMs is 48 GB (two microprocessors installed and one 4 GB UDIMM installed in each of the 12 memory slots).

For more information about the memory modules in your specific server model, use the Setup Utility program. See “Viewing information in the Setup Utility program” on page 61.

For a list of supported ThinkServer memory module options, go to:  
<http://www.lenovo.com/thinkserver>

Before installing a memory module, ensure that you observe the following guidelines:

- All memory modules to be installed must be the same type (LV RDIMM, RDIMM, or UDIMM).
- When you install memory modules with different ranks in one channel, start from the farthest memory slot in the channel and install the memory module that has the most ranks first.
- If you install 1.35 V memory modules and 1.50 V memory modules into the memory slots for the same microprocessor, you must configure the working voltage in the BIOS so that all the memory modules run at 1.50 V.
- When you install memory modules with different frequencies into the memory slots for the same microprocessor, all the memory modules run at the lowest frequency.
- It is recommended that you install the low-voltage memory modules into the memory slots for the same microprocessor to ensure low power consumption.
- It is recommended that you install the high-frequency memory modules into the memory slots for the same microprocessor to ensure high performance.

The following illustration shows the locations of all memory slots on a system board that has two microprocessors (also known as CPUs) installed.

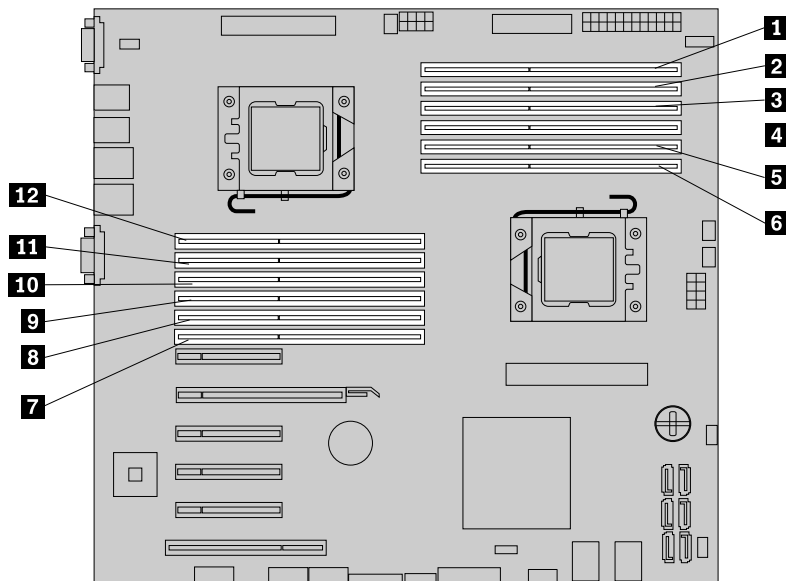


Figure 43. Memory slots on the system board

<b>1</b> Memory slot (CPU1 DIMMA1)	<b>7</b> Memory slot (CPU2 DIMMD1)
<b>2</b> Memory slot (CPU1 DIMMA2)	<b>8</b> Memory slot (CPU2 DIMMD2)
<b>3</b> Memory slot (CPU1 DIMMB1)	<b>9</b> Memory slot (CPU2 DIMME1)
<b>4</b> Memory slot (CPU1 DIMMB2)	<b>10</b> Memory slot (CPU2 DIMME2)
<b>5</b> Memory slot (CPU1 DIMMC1)	<b>11</b> Memory slot (CPU2 DIMMF1)
<b>6</b> Memory slot (CPU1 DIMMC2)	<b>12</b> Memory slot (CPU2 DIMMF2)

The following table explains the memory module installation rules for servers that have only one microprocessor (CPU1) installed. The “X” mark indicates the memory slots into which the memory modules should be installed in different situations.

**Note:** Ensure that you observe the installation guidelines at the beginning of this topic.

CPU1 DIMMA1
CPU1 DIMMA2
CPU1 DIMMB1
CPU1 DIMMB2
CPU1 DIMMC1
CPU1 DIMMC2
<b>CPU1</b>

Figure 44. CPU1 DIMMs

Table 5. Memory module installation rules for servers with one microprocessor

CPU1 DIMM	A1	A2	B1	B2	C1	C2
One DIMM	X					
Two DIMMs	X		X			
Three DIMMs	X		X		X	
Four DIMMs	X	X	X		X	
Six DIMMs	X	X	X	X	X	X

The following table explains the memory module installation rules for servers that have two microprocessors (CPU1 and CPU2) installed. The “X” mark indicates the memory slots into which the memory modules should be installed in different situations.

**Note:** Ensure that you observe the installation guidelines at the beginning of this topic.

CPU2
CPU2 DIMMF2
CPU2 DIMMF1
CPU2 DIMME2
CPU2 DIMME1
CPU2 DIMMD2
CPU2 DIMMD1

CPU1 DIMMA1
CPU1 DIMMA2
CPU1 DIMMB1
CPU1 DIMMB2
CPU1 DIMMC1
CPU1 DIMMC2
CPU1

Figure 45. CPU1 DIMMs and CPU2 DIMMs

Table 6. Memory module installation rules for servers with two microprocessors

	CPU1 DIMM						CPU2 DIMM					
	A1	A2	B1	B2	C1	C2	D1	D2	E1	E2	F1	F2
Two DIMMs	X						X					
Four DIMMs	X		X				X		X			
Six DIMMs	X		X		X		X		X		X	
Eight DIMMs	X	X	X		X		X	X	X		X	
Twelve DIMMs	X	X	X	X	X	X	X	X	X	X	X	X

The following section explains the memory module installation rules in independent mode, mirroring mode, sparing mode, and lockstep mode.

## Memory module installation order in independent mode

This section explains the memory module installation order in independent mode. In this mode, the RAS features are not available. For more information about the RAS features, refer to the related section in “Features” on page 7.

**Note:** All memory modules to be installed must be the same type (LV RDIMM, RDIMM, or UDIMM). It is also recommended that all memory modules have the same frequency, voltage, and number of ranks.

The following table explains the memory module installation order for servers that have only one microprocessor (CPU1) installed.

Table 7. Memory module installation order in independent mode for servers with one microprocessor

CPU1 DIMM	A1	A2	B1	B2	C1	C2
DIMM installation order	1	4	2	5	3	6

The following table explains the memory module installation order for servers that have two microprocessors (CPU1 and CPU2) installed.

Table 8. Memory module installation order in independent mode for servers with two microprocessors

	CPU1 DIMM						CPU2 DIMM					
	A1	A2	B1	B2	C1	C2	D1	D2	E1	E2	F1	F2
DIMM installation order	1	7	3	9	5	11	2	8	4	10	6	12

## Memory module installation order in mirroring mode

This section explains the memory module installation order in mirroring mode. In this mode, the server maintains two identical copies of all data in memory and the RAS features are available. For more information about the RAS features, refer to the related section in “Features” on page 7.

### Notes:

- In this mode, slots A1 and A2 cannot be populated.
- All memory modules to be installed must be the same type (LV RDIMM, RDIMM, or UDIMM) with the same capacity, frequency, voltage, and number of ranks.

The following table explains the memory module installation order for servers that have only one microprocessor (CPU1) installed.

Table 9. Memory module installation order in mirroring mode for servers with one microprocessor

CPU1 DIMM	A1	A2	B1	B2	C1	C2
DIMM installation order			1	3	2	4

The following table explains the memory module installation order for servers that have two microprocessors (CPU1 and CPU2) installed.

Table 10. Memory module installation order in mirroring mode for servers with two microprocessors

	CPU1 DIMM						CPU2 DIMM					
	A1	A2	B1	B2	C1	C2	D1	D2	E1	E2	F1	F2
DIMM installation order			1	5	2	6			3	7	4	8

## Memory module installation order in sparing mode

This section explains the memory module installation order in sparing mode. The sparing mode provides memory redundancy. In this mode, the RAS features are available. For more information about the RAS features, refer to the related section in “Features” on page 7.

**Note:** It is recommended that all memory modules to be installed must be the same type (LV RDIMM, RDIMM, or UDIMM) with the same capacity, frequency, voltage, and number of ranks.

Your server supports rank sparing mode. In rank sparing mode, one rank of a memory module works as the spare rank for the other ranks on the same channel. The spare rank is not available as system memory. To enable rank sparing mode, ensure that:

- At least three ranks are available in one channel.
- The capacity of the spare rank must be the same with or larger than the capacity of other ranks within the same channel.

The following table explains the memory module installation order for servers that have only one microprocessor (CPU1) installed.

Table 11. Memory module installation order in sparing mode for servers with one microprocessor

CPU1 DIMM	A1	A2	B1	B2	C1	C2
DIMM installation order	1	2	3	4	5	6

The following table explains the memory module installation order for servers that have two microprocessors (CPU1 and CPU2) installed.

Table 12. Memory module installation order in sparing mode for servers with two microprocessors

	CPU1 DIMM						CPU2 DIMM					
	A1	A2	B1	B2	C1	C2	D1	D2	E1	E2	F1	F2
DIMM installation order	1	2	5	6	9	10	3	4	7	8	11	12

## Memory module installation order in lockstep mode

This section explains the memory module installation order in lockstep mode. In this mode, the RAS features are available. For more information about the RAS features, refer to the related section in “Features” on page 7.

### Notes:

- In this mode, slots A1 and A2 cannot be populated.
- In this mode, slots B1 and B2 must be populated identically as slots C1 and C2.
- All memory modules to be installed on a server must be the same type (LV RDIMM, RDIMM, or UDIMM) with the same capacity, frequency, voltage, and number of ranks.

The following table explains the memory module installation order for servers that have only one microprocessor (CPU1) installed.

Table 13. Memory module installation order in lockstep mode for servers with one microprocessor

CPU1 DIMM	A1	A2	B1	B2	C1	C2
DIMM installation order			1	3	2	4

The following table explains the memory module installation order for servers that have two microprocessors (CPU1 and CPU2) installed.

Table 14. Memory module installation order in lockstep mode for servers with two microprocessors

	CPU1 DIMM						CPU2 DIMM					
	A1	A2	B1	B2	C1	C2	D1	D2	E1	E2	F1	F2
DIMM installation order			1	5	2	6			3	7	4	8

## Installing a memory module

**Attention:** Do not open your server or attempt any repair before reading and understanding “Safety information” on page iii and “Guidelines” on page 83.

This topic provides instructions on how to install a memory module.

Before you begin, print all the related instructions or ensure that you can view the PDF version on another computer for reference.

### Notes:

- To optimize system performance, ensure that you consider and follow the memory module installation rules when performing the operation. See “Memory module installation rules” on page 93.
- Use any documentation that comes with the memory module and follow those instructions in addition to the instructions in this topic.

To install a memory module, do the following:

1. Remove all media from the drives and turn off all attached devices and the server. Then, disconnect all power cords from electrical outlets and disconnect all cables that are connected to the server.
2. Remove the server cover. See “Removing the server cover” on page 85.
3. Lay the server on its side for easier operation.
4. Locate the memory slots on the system board. See “System board components” on page 48.
5. Remove any parts or disconnect any cables that might prevent your access to the memory slots.
6. Open the retaining clips of the appropriate memory slot. See “Memory module installation rules” on page 93 for the installation sequence information.

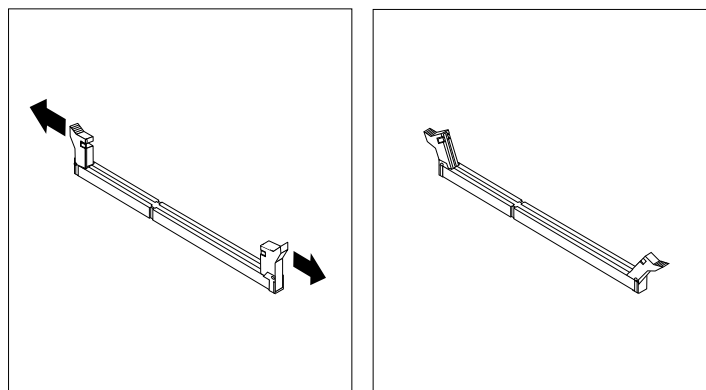


Figure 46. Opening the retaining clips of the memory slots

7. Touch the static-protective package that contains the new memory module to any unpainted surface on the outside of the server. Then, take the new memory module out of the package.

**Note:** Carefully handle the memory module by its edges.

8. Position the new memory module over the memory slot. Ensure that the notch **1** on the new memory module is aligned with the key **2** in the memory slot. Then, press the new memory module straight down into the memory slot until the retaining clips close and the new memory module snaps into position.

**Note:** If there is a gap between the memory module and the retaining clips, the memory module has not been installed correctly. Open the retaining clips, remove the memory module, and then reinstall it into the memory slot until the retaining clips are completely closed.

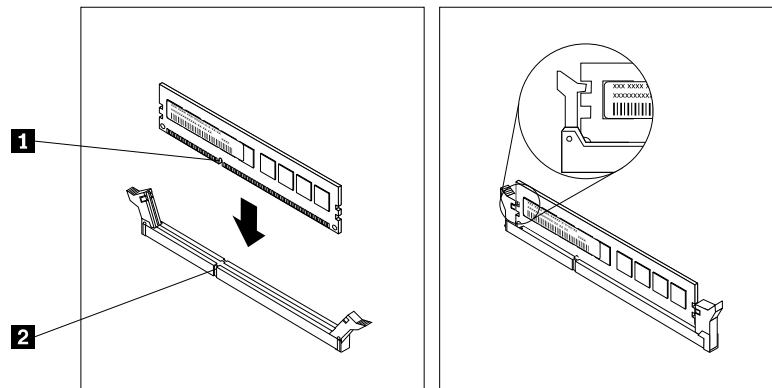


Figure 47. Installing a memory module

9. Reinstall any parts or reconnect any cables that you have removed.

#### What to do next:

- To work with another piece of hardware, go to the appropriate section.
- To complete the installation, go to “Completing the parts replacement” on page 200.

### Removing a memory module

**Attention:** Do not open your server or attempt any repair before reading and understanding “Safety information” on page iii and “Guidelines” on page 83.

This topic provides instructions on how to remove a memory module.

Before you begin, print all the related instructions or ensure that you can view the PDF version on another computer for reference.

**Note:** To optimize system performance, ensure that you consider and follow the memory module installation rules when performing the operation. See “Memory module installation rules” on page 93.

To remove a memory module, do the following:

1. Remove all media from the drives and turn off all attached devices and the server. Then, disconnect all power cords from electrical outlets and disconnect all cables that are connected to the server.
2. Remove the server cover. See “Removing the server cover” on page 85.
3. Lay the server on its side for easier operation.
4. Locate the memory slots on the system board. See “System board components” on page 48.

5. Remove any parts or disconnect any cables that might prevent your access to the memory slots.
6. Locate the memory module that you want to remove and open the retaining clips on both ends of the memory slot. Then, grasp the memory module by its edges and carefully pull it straight up to remove it from the memory slot.

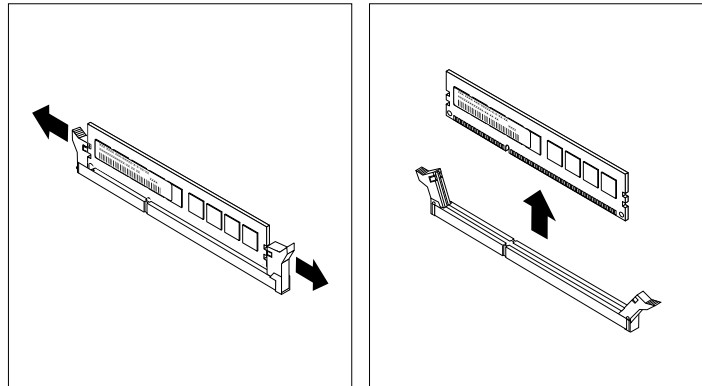


Figure 48. Removing a memory module

7. Reinstall any parts or reconnect any cables that you have removed.
8. If you are instructed to return the old memory module, follow all packaging instructions and use any packaging materials that are supplied to you for shipping.

#### What to do next:

- To work with another piece of hardware, go to the appropriate section.
- To complete the removal procedure, go to “Completing the parts replacement” on page 200.

## Installing or removing the Ethernet card

This topic provides instructions on how to install or remove the Ethernet card. If you are installing or removing any other types of supported PCI Express cards, the procedure is similar.

**Note:** The Ethernet card is sensitive to ESD. Ensure that you read and understand “Handling static-sensitive devices” on page 84 first and carefully perform the operation.

### Installing the Ethernet card

**Attention:** Do not open your server or attempt any repair before reading and understanding “Safety information” on page iii and “Guidelines” on page 83.

This topic provides instructions on how to install the Ethernet card.

Before you begin, print all the related instructions or ensure that you can view the PDF version on another computer for reference.

#### Notes:

- Depending on the specific type, the Ethernet card might look slightly different from the illustrations in this topic.
- Use any documentation that comes with the Ethernet card and follow those instructions in addition to the instructions in this topic.



- If your server has one microprocessor installed, the Ethernet card can be installed into the PCI-E slot 2 or PCI-E slot 5. If your server has two microprocessors installed, the Ethernet card can be installed into the PCI-E slot 2, PCI-E slot 3, PCI-E slot 4, PCI-E slot 5, or PCI-E slot 6.

To install the Ethernet card, do the following:

1. Remove all media from the drives and turn off all attached devices and the server. Then, disconnect all power cords from electrical outlets and disconnect all cables that are connected to the server.
2. Remove the server cover. See “Removing the server cover” on page 85.
3. Lay the server on its side for easier operation.
4. If a PCI card bracket assembly is installed in your server, remove the PCI card bracket assembly. See “Removing and reinstalling the PCI card bracket assembly” on page 89.
5. Locate a PCI Express card slot on the system board for installing the Ethernet card. See “System board components” on page 48 to identify the different types of PCI Express card slots in your server.
6. Remove any parts or disconnect any cables that might impede your operation.
7. Remove the PCI Express card slot bracket by removing the screw that secures the metal bracket and then lifting the bracket out of the chassis. Store the PCI Express card slot bracket in the event that you later remove the Ethernet card and need the bracket to cover the place.

**Note:** Carefully place the removed screw aside. You will need the screw later to secure the Ethernet card in place.

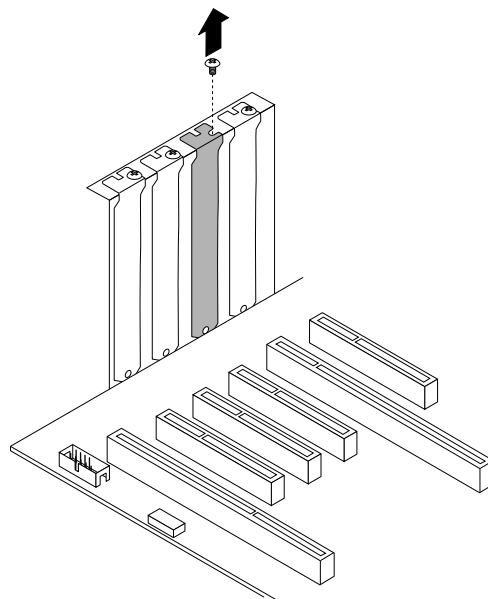


Figure 49. Removing a PCI Express card slot bracket

8. Touch the static-protective package that contains the Ethernet card to any unpainted surface on the outside of the server. Then, take the Ethernet card out of the package.

**Note:** Carefully handle the Ethernet card by its edges.

9. Position the new Ethernet card over the PCI Express card slot for which you have removed the slot bracket, and then carefully press the Ethernet card straight down until it is securely seated in the slot. Install the screw to secure the Ethernet card in place.

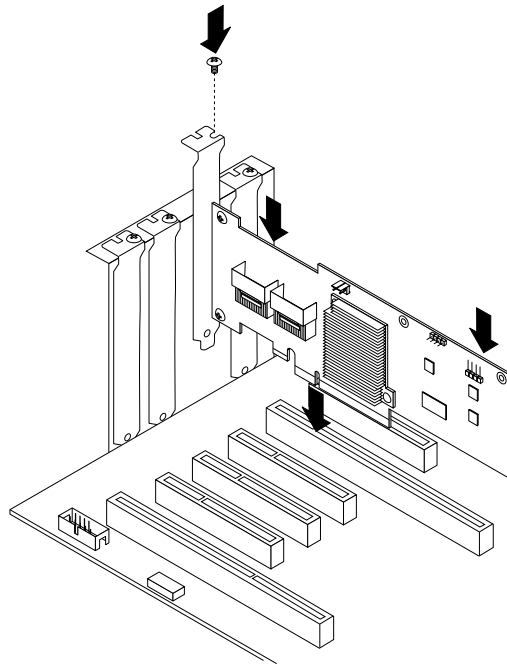


Figure 50. Installing the Ethernet card

10. Depending on the type of the Ethernet card, you might need to connect any required cables. Refer to the documentation that comes with the Ethernet card for specific information.
11. Install the PCI card bracket assembly if a RAID card is installed in your server. See “Removing and reinstalling the PCI card bracket assembly” on page 89.

#### What to do next:

- To work with another piece of hardware, go to the appropriate section.
- To complete the installation, go to “Completing the parts replacement” on page 200. Then, continue with the following procedure to install the Ethernet card driver if required.

To install the required device driver for the Ethernet card, do one of the following:

**Note:** You do not need to use the driver disc that might come with the Ethernet card.

- If you are using a Windows operating system, run the *ThinkServer EasyStartup* DVD that comes with your server and follow the instructions on the screen to download and install the required Ethernet card driver to the server. For more information, see “Using the ThinkServer EasyStartup program on a Windows operating system” on page 71.
- If you are using a Linux operating system, run the *ThinkServer EasyStartup* DVD that comes with your server on a computer with a Windows operating system and download the required Ethernet card driver to a removable storage device. Then, transfer the Ethernet card driver from the removable storage device to your server and run the driver file to install the driver.

The most up-to-date device drivers for various server models are always available for download on the Lenovo Support Web site at:  
<http://www.lenovo.com/drivers>

## Removing the Ethernet card

**Attention:** Do not open your server or attempt any repair before reading and understanding “Safety information” on page iii and “Guidelines” on page 83.

This topic provides instructions on how to remove the Ethernet card.

Before you begin, print all the related instructions or ensure that you can view the PDF version on another computer for reference.

### Notes:

- Use any documentation that comes with the Ethernet card and follow those instructions in addition to the instructions in this topic.
- Depending on the specific type, the Ethernet card might look different from the illustration in this topic.
- If your server has one microprocessor installed, the Ethernet card is installed in the PCI-E slot 2 or PCI-E slot 5. If your server has two microprocessors installed, the Ethernet card is installed in the PCI-E slot 2, PCI-E slot 3, PCI-E slot 4, PCI-E slot 5, or PCI-E slot 6.

To remove the Ethernet card, do the following:

1. Remove all media from the drives and turn off all attached devices and the server. Then, disconnect all power cords from electrical outlets and disconnect all cables that are connected to the server.
2. Remove the server cover. See “Removing the server cover” on page 85.
3. Lay the server on its side for easier operation.
4. If a PCI card bracket assembly is installed in your server, remove the PCI card bracket assembly. See “Removing and reinstalling the PCI card bracket assembly” on page 89.
5. Locate the Ethernet card. See “System board components” on page 48.
6. Depending on the type of the Ethernet card, you might also need to disconnect all cables from the Ethernet card, the system board, and or the hot-swap hard-disk-drive backplane.

7. Remove the screw that secures the Ethernet card. Then, grasp the Ethernet card by its edges and carefully pull it out of the PCI Express card slot.

**Note:** The Ethernet card fits tightly into the PCI Express card slot. If necessary, alternate moving each side of the Ethernet card a small and equal amount until it is completely removed from the slot.

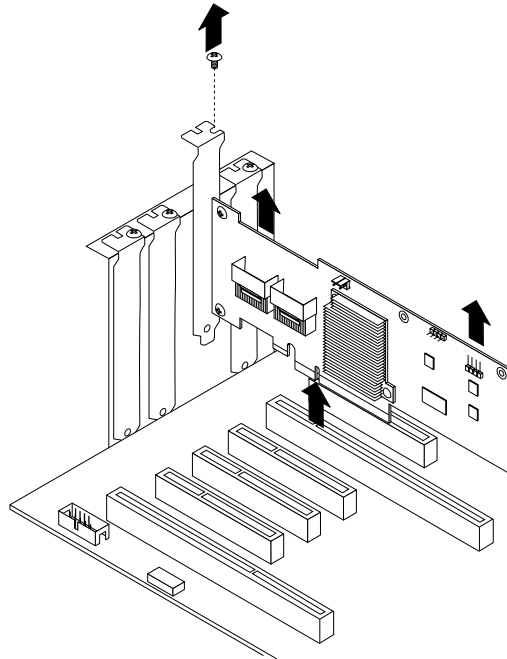


Figure 51. Removing the Ethernet card

8. Install a new Ethernet card to replace the old one or install a PCI Express card slot bracket to cover the place. See “Installing the Ethernet card” on page 100.
9. Install the PCI card bracket assembly if a RAID card is installed in your server. See “Removing and reinstalling the PCI card bracket assembly” on page 89.
10. If you are instructed to return the old Ethernet card, follow all packaging instructions and use any packaging materials that are supplied to you for shipping.

#### What to do next:

- To work with another piece of hardware, go to the appropriate section.
- To complete the removal procedure, go to “Completing the parts replacement” on page 200.

## Installing or removing the RAID card

This topic provides instructions on how to install or remove the RAID card.

Some server models come with a required RAID card to provide advanced SATA/SAS hardware RAID functions to the server. You also can purchase a supported RAID card from Lenovo and install it into the server. For more information, see “RAID card” on page 35 and “Configuring RAID” on page 72.

**Note:** The RAID card is sensitive to ESD. Ensure that you read and understand “Handling static-sensitive devices” on page 84 first and carefully perform the operation.

## Installing the RAID card

**Attention:** Do not open your server or attempt any repair before reading and understanding “Safety information” on page iii and “Guidelines” on page 83.

This topic provides instructions on how to install the RAID card.

Before you begin, print all the related instructions or ensure that you can view the PDF version on another computer for reference.

### Notes:

- Use any documentation that comes with the RAID card and follow those instructions in addition to the instructions in this topic.
- Ensure that you back up your data before installing the RAID card because you might need to reconfigure RAID and reinstall the operating system after installing the RAID card.
- If your server has one microprocessor installed, it is recommended that the RAID card be installed into the PCI-E slot 5 or PCI-E slot 2. If your server has two microprocessors installed, it is recommended that the RAID card be installed into the PCI-E slot 4.

To install the RAID card, do the following:

1. Remove all media from the drives and turn off all attached devices and the server. Then, disconnect all power cords from electrical outlets and disconnect all cables that are connected to the server.
2. Remove the server cover. See “Removing the server cover” on page 85.
3. Lay the server on its side for easier operation.
4. Locate the appropriate PCI-E slot on the system board. See “System board components” on page 48.
5. Remove any parts or disconnect any cables that might impede your operation.
6. Touch the static-protective package that contains the RAID card to any unpainted surface on the outside of the server. Then, take the RAID card out of the package.

**Note:** Carefully handle the RAID card by its edges.

7. Install the RAID card. The procedure is similar to that of the Ethernet card. See “Installing the Ethernet card” on page 100.
8. Connect signal cables to the connectors on the new RAID card and the connectors on the hot-swap hard-disk-drive backplanes. See “Connecting the cables” on page 43.
9. Install the PCI card bracket assembly that comes with the RAID card. See “Removing and reinstalling the PCI card bracket assembly” on page 89.

### What to do next:

- To work with another piece of hardware, go to the appropriate section.
- To complete the installation, go to “Completing the parts replacement” on page 200. Then, configure RAID for your server. See “Configuring RAID” on page 72.
- After a Lenovo RAID card is installed, do the following:
  1. Check the version of the new RAID card firmware by pressing Ctrl+H when starting the Setup Utility program.
  2. Go to <http://www.lenovo.com/drivers> and follow the instructions on the Web page to download the latest version of firmware. Then, install the firmware to your server.

**Note:** If you want to use the Firmware Updater program, ensure that it is the latest version. To get the latest version of the Firmware Updater program, go to <http://www.lenovo.com/drivers>, locate different versions of the program, and then identify the latest version by comparing readme files. If the latest

version of the Firmware Updater program does not contain the latest version of the driver you need, download that driver separately from the Web page and install it individually to your server.

## Removing the RAID card

**Attention:** Do not open your server or attempt any repair before reading and understanding “Safety information” on page iii and “Guidelines” on page 83.

This topic provides instructions on how to remove the RAID card. This topic applies only to models that have a RAID card installed.

Before you begin, print all the related instructions or ensure that you can view the PDF version on another computer for reference.

### Notes:

- Ensure that you back up your data before removing the RAID card because you might need to reconfigure RAID and reinstall the operating system after removing the RAID card.
- If you remove the RAID card, you will lose the advanced SATA/SAS hardware RAID functions.
- If your server has one microprocessor installed, it is recommended that the RAID card be installed into the PCI-E slot 5 or PCI-E slot 2. If your server has two microprocessors installed, it is recommended that the RAID card be installed into the PCI-E slot 4.
- Use any documentation that comes with the RAID card and follow those instructions in addition to the instructions in this topic.

To remove the RAID card, do the following:

1. Remove all media from the drives and turn off all attached devices and the server. Then, disconnect all power cords from electrical outlets and disconnect all cables that are connected to the server.
2. Remove the server cover. See “Removing the server cover” on page 85.
3. Lay the server on its side for easier operation.
4. Remove the PCI card bracket assembly. See “Removing and reinstalling the PCI card bracket assembly” on page 89.
5. Locate the RAID card. See “System board components” on page 48.
6. Remove any parts or disconnect any cables that might impede your operation.
7. Disconnect all cables from the RAID card and any other related parts.

**Note:** If you want to install a new RAID card after removing the old one, record the cable connections before disconnecting the cables.

8. Remove the RAID card. The procedure is similar to that of the Ethernet card. See “Removing the Ethernet card” on page 103 .

**Note:** Carefully handle the RAID card by its edges.

9. Depending on your needs, do one of the following:
  - Install a new RAID card to replace the old one and reconnect cables. See “Installing the RAID card” on page 105.
  - Install a PCI Express card slot bracket to cover the place and connect related cables to the system board and the backplane. See “Connecting the cables” on page 43.
10. If you are instructed to return the old RAID card, follow all packaging instructions and use any packaging materials that are supplied to you for shipping.

### What to do next:

- To work with another piece of hardware, go to the appropriate section.
- To complete the removal procedure, go to “Completing the parts replacement” on page 200. Then, you need to reconfigure RAID for your server. See “Configuring RAID” on page 72.

## Installing or removing the ThinkServer RAID 500 Upgrade Key for Advanced RAID

This topic provides instructions on how to install or remove the ThinkServer RAID 500 Upgrade Key for Advanced RAID (hereinafter referred to as the TR 500 Key).

The TR 500 Key expands the capability of the installed ThinkServer RAID 500 Adapter by activating RAID 5 and RAID 50 levels for advanced SATA/SAS hardware RAID. You can purchase a TR 500 Key from Lenovo.

### Installing the TR 500 Key

<p><b>Attention:</b> Do not open your server or attempt any repair before reading and understanding “Safety information” on page iii and “Guidelines” on page 83.</p>
-----------------------------------------------------------------------------------------------------------------------------------------------------------------------

This topic provides instructions on how to install the TR 500 Key on a ThinkServer RAID 500 Adapter if your server has one installed.

**Attention:** Back up your data before you begin if you want to reconfigure RAID and reinstall the operating system after installing the TR 500 Key.

Before you begin, print all the related instructions or ensure that you can view the PDF version on another computer for reference.

**Note:** Use any documentation that comes with the TR 500 Key and follow those instructions in addition to the instructions in this topic.

To install the TR 500 Key, do the following:

1. Remove all media from the drives and turn off all attached devices and the server. Then, disconnect all power cords from electrical outlets and disconnect all cables that are connected to the server.
2. Remove the server cover. See “Removing the server cover” on page 85.
3. Lay the server on its side for easier operation.
4. Locate the ThinkServer RAID 500 Adapter and remove any parts or disconnect any cables that might impede your operation.
5. Touch the static-protective package that contains the TR 500 Key to any unpainted surface on the outside of the server. Then, take the TR 500 Key out of the package.

**Note:** Carefully handle the TR 500 Key by its edges.

6. Locate the TR 500 Key connector on the ThinkServer RAID 500 Adapter, and then insert the TR 500 Key into the connector. You might need to remove the ThinkServer RAID 500 Adapter first, install the TR 500 Key on it, and then reinstall the ThinkServer RAID 500 Adapter. See “Installing or removing the RAID card” on page 104.

**Note:** Ensure that the TR 500 Key is securely seated on the ThinkServer RAID 500 Adapter.

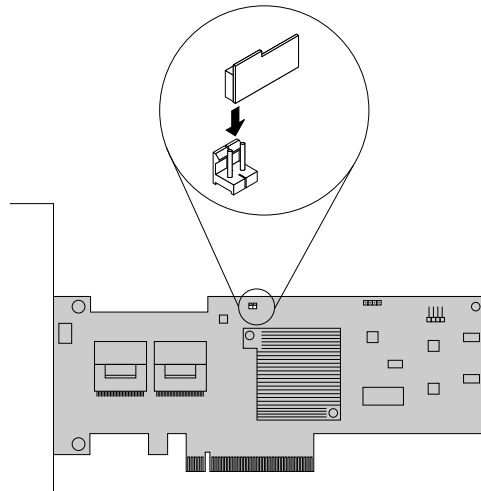


Figure 52. Installing the TR 500 Key

7. Reinstall any parts or reconnect any cables that you have removed.

#### What to do next:

- To work with another piece of hardware, go to the appropriate section.
- To complete the installation, go to “Completing the parts replacement” on page 200. Then, the hardware RAID 5 and RAID 50 levels are available for your server if your server has the required number of hard disk drives installed. For information about how to configure the hardware RAID, refer to the *MegaRAID SAS Software User Guide* on the documentation DVD that comes with your server.

#### Removing the TR 500 Key

**Attention:** Do not open your server or attempt any repair before reading and understanding “Safety information” on page iii and “Guidelines” on page 83.

This topic provides instructions on how to remove the TR 500 Key if your server has a ThinkServer RAID 500 Adapter with a TR 500 Key option installed.

**Attention:** Back up your data before you begin if you need to reconfigure RAID and reinstall the operating system after removing the TR 500 Key.

Before you begin, print all the related instructions or ensure that you can view the PDF version on another computer for reference.

#### Notes:

- If you remove the TR 500 Key from the ThinkServer RAID 500 Adapter, the hardware RAID 5 and RAID 50 levels will be disabled.
- Use any documentation that comes with the TR 500 Key and follow those instructions in addition to the instructions in this topic.



To remove the TR 500 Key from the RAID card, do the following:

1. Remove all media from the drives and turn off all attached devices and the server. Then, disconnect all power cords from electrical outlets and disconnect all cables that are connected to the server.
2. Remove the server cover. See “Removing the server cover” on page 85.
3. Lay the server on its side for easier operation.
4. Locate the ThinkServer RAID 500 Adapter and remove any parts or disconnect any cables that might impede your operation.
5. Remove the TR 500 Key from the ThinkServer RAID 500 Adapter. If necessary, you can remove the ThinkServer RAID 500 Adapter first, remove the TR 500 Key from it, and then reinstall the ThinkServer RAID 500 Adapter. See “Installing or removing the RAID card” on page 104.

**Note:** Carefully handle the TR 500 Key by its edges.

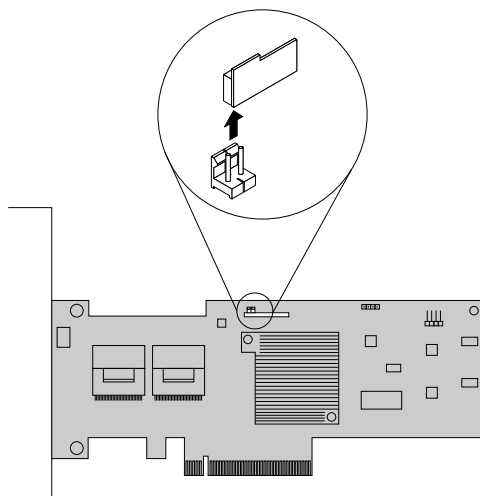


Figure 53. Removing the TR 500 Key

6. Reinstall any parts or reconnect any cables that you have removed.
7. If you are instructed to return the old TR 500 Key, follow all packaging instructions and use any packaging materials that are supplied to you for shipping.

#### **What to do next:**

- To work with another piece of hardware, go to the appropriate section.
- To complete the removal procedure, go to “Completing the parts replacement” on page 200. Because the hardware RAID 5 and 50 levels are not available without the TR 500 Key, you might need to reconfigure RAID for your server. For information about how to configure the hardware RAID, refer to the *MegaRAID SAS Software User Guide* on the documentation DVD that comes with your server.

## **Installing or removing the ThinkServer RAID 700 Battery**

This topic provides instructions on how to install or remove the ThinkServer RAID 700 Battery (hereinafter referred to as the TR 700 Battery) if your server has a ThinkServer RAID 700 Adapter installed.

The TR 700 Battery protects the integrity of the cached data on the ThinkServer RAID 700 Adapter by providing backup power up to 72 hours in the case of a complete ac power failure or a brief power outage. It has built-in functionality to automatically charge the battery pack and to communicate battery status information (such as voltage, temperature, and current) to your server. It also provides an inexpensive

alternative to using an uninterruptible power supply, and a second level of fault tolerance when used in conjunction with an uninterruptible power supply.

The temperature of the TR 700 Battery is generally 15-20°C (59-68°F) higher than the ambient temperature during fast charge. Therefore, to complete a recharge cycle, the ambient temperature should be lower than 55°C (131°F). If the ambient temperature exceeds 55°C (131°F), the recharge cycle will terminate prematurely, thus preventing the TR 700 Battery from reaching a fully charged state. A recharge cycle lasts at least six hours under normal operating conditions.

**Attention:** It is recommended that you replace the TR 700 Battery annually or after 500 recharging cycles, whichever comes first.

## Installing the TR 700 Battery

**Attention:** Do not open your server or attempt any repair before reading and understanding “Safety information” on page iii and “Guidelines” on page 83.

This topic provides instructions on how to install the TR 700 Battery on a ThinkServer RAID 700 Adapter if your server has one installed.

Before you begin, print all the related instructions or ensure that you can view the PDF version on another computer for reference.

**Note:** Use any documentation that comes with the TR 700 Battery and follow those instructions in addition to the instructions in this topic.

To install the TR 700 Battery, do the following:

1. Remove all media from the drives and turn off all attached devices and the server. Then, disconnect all power cords from electrical outlets and disconnect all cables that are connected to the server.
2. Remove the server cover. See “Removing the server cover” on page 85.
3. Lay the server on its side for easier operation.
4. If a PCI card bracket assembly is installed in your server, remove the PCI card bracket assembly. See “Removing and reinstalling the PCI card bracket assembly” on page 89.
5. Locate and remove the ThinkServer RAID 700 Adapter, which is a kind of RAID card. See “Installing or removing the RAID card” on page 104.

**Note:** Carefully handle the ThinkServer RAID 700 Adapter by its edges and place it on a flat, clean, and static-protective surface after you remove it.

6. Touch the static-protective package that contains the TR 700 Battery to any unpainted surface on the outside of the server. Then, take the TR 700 Battery out of the package.

- Position the TR 700 Battery above the ThinkServer RAID 700 Adapter so that the board-to-board connector **1** on the bottom of the TR 700 Battery is aligned with the connector **2** on the ThinkServer RAID 700 Adapter; and the three mounting studs on the bottom of the TR 700 Battery are aligned with the corresponding holes in the ThinkServer RAID 700 Adapter. Carefully press the TR 700 Battery onto the ThinkServer RAID 700 Adapter until the two connectors (**1** and **2**) are firmly joined. Then, install the three screws that come with the TR 700 Battery option kit to secure the TR 700 Battery in place.

**Notes:**

- Center the screwdriver when you install the screws and do not over-tighten the screws to avoid possible damage to any parts.
- Do not touch the board on the bottom of the TR 700 Battery.

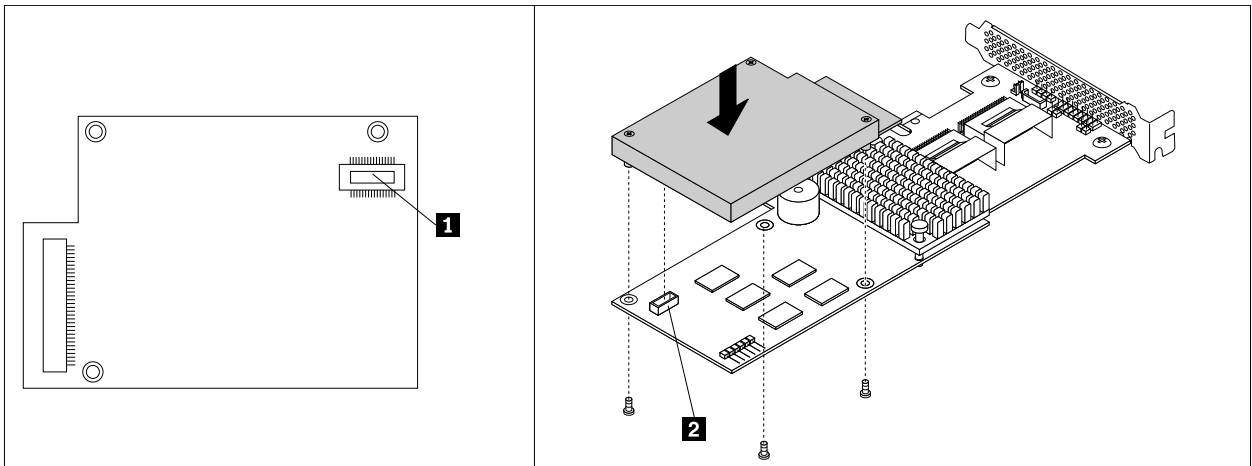


Figure 54. Installing the TR 700 Battery

- Reinstall the ThinkServer RAID 700 Adapter with the TR 700 Battery. See “Installing or removing the RAID card” on page 104.
- Reinstall the PCI card bracket assembly. See “Removing and reinstalling the PCI card bracket assembly” on page 89.

**What to do next:**

- To work with another piece of hardware, go to the appropriate section.
- To complete the installation, go to “Completing the parts replacement” on page 200.

### Removing the TR 700 Battery

**Attention:** Do not open your server or attempt any repair before reading and understanding “Safety information” on page iii and “Guidelines” on page 83.

This topic provides instructions on how to remove the TR 700 Battery if your server has a ThinkServer RAID 700 Adapter with a TR 700 Battery option installed.

Before you begin, print all the related instructions or ensure that you can view the PDF version on another computer for reference.

**Notes:**

- If you remove the TR 700 Battery, you will lose the backup power for the ThinkServer RAID 700 Adapter.

- Use any documentation that comes with the TR 700 Battery and follow those instructions in addition to the instructions in this topic.

To remove the TR 700 Battery, do the following:

1. Remove all media from the drives and turn off all attached devices and the server. Then, disconnect all power cords from electrical outlets and disconnect all cables that are connected to the server.
2. Remove the server cover. See “Removing the server cover” on page 85.
3. Lay the server on its side for easier operation.
4. If a PCI card bracket assembly is installed in your server, remove the PCI card bracket assembly. See “Removing and reinstalling the PCI card bracket assembly” on page 89.
5. Locate and remove the ThinkServer RAID 700 Adapter, which is a kind of RAID card. See “Installing or removing the RAID card” on page 104.
6. Carefully remove the three screws that secure the TR 700 Battery, and then lift the TR 700 Battery up from the ThinkServer RAID 700 Adapter.

**Note:** Center the screwdriver when you remove the screws to avoid possible damage to any parts.

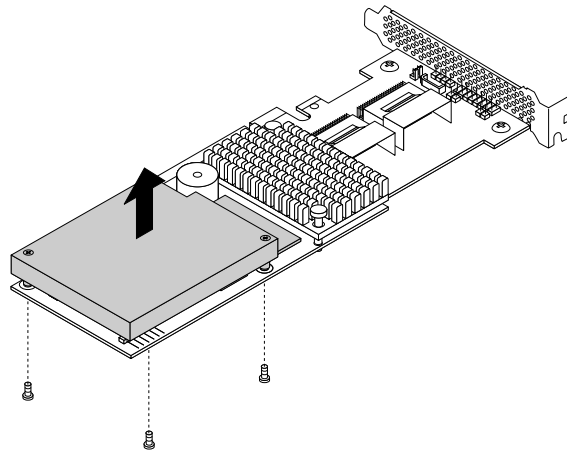


Figure 55. Removing the TR 700 Battery

7. If you want to install a new TR 700 Battery, see “Installing the TR 700 Battery” on page 110.
8. Reinstall the ThinkServer RAID 700 Adapter with a new TR 700 Battery or without a TR 700 Battery. See “Installing or removing the RAID card” on page 104.
9. Reinstall the PCI card bracket assembly. See “Removing and reinstalling the PCI card bracket assembly” on page 89.

**What to do next:**

- To work with another piece of hardware, go to the appropriate section.
- To complete the removal procedure, go to “Completing the parts replacement” on page 200.

## Installing or removing the ThinkServer RAID 100 or RAID 300 upgrade key for Advanced RAID

Your server supports both the ThinkServer RAID 100 upgrade key for Advanced RAID (hereinafter referred to as the TR 100 Key) and the ThinkServer RAID 300 upgrade key for Advanced RAID (hereinafter referred to as the TR 300 Key). The TR 100 or TR 300 Key expands the capability of the system board by activating RAID 5

for the onboard SATA or SAS software RAID correspondingly. You can purchase a TR 100 or TR 300 Key from Lenovo and install it to the iButton socket on the system board.

This topic provides instructions on how to install or remove the TR 100 or TR 300 Key.

## Installing the TR 100 or TR 300 Key

**Attention:** Do not open your server or attempt any repair before reading and understanding “Safety information” on page iii and “Guidelines” on page 83.

This topic provides instructions on how to install the TR 100 or TR 300 Key.

Before you begin, print all the related instructions or ensure that you can view the PDF version on another computer for reference.

### Notes:

- Use any documentation that comes with the TR 100 or TR 300 Key and follow those instructions in addition to the instructions in this topic.
- Depending on the model, your server might look slightly different from the illustration in this topic.

To install the TR 100 or TR 300 Key, do the following:

1. Remove all media from the drives and turn off all attached devices and the server. Then, disconnect all power cords from electrical outlets and disconnect all cables that are connected to the server.
2. Remove the server cover. See “Removing the server cover” on page 85.
3. Lay the server on its side for easier operation.
4. Locate the iButton socket on the system board.
5. Touch the static-protective package that contains the TR 100 or TR 300 Key to any unpainted surface on the outside of the server. Then, take the TR 100 or TR 300 Key out of the package.

6. Insert one side of the TR 100 or TR 300 Key under one of the retaining clips on the iButton socket. Then, carefully press the other side of the TR 100 or TR 300 Key straight down until the key snaps into position and is secured by the two retaining clips on the iButton socket.

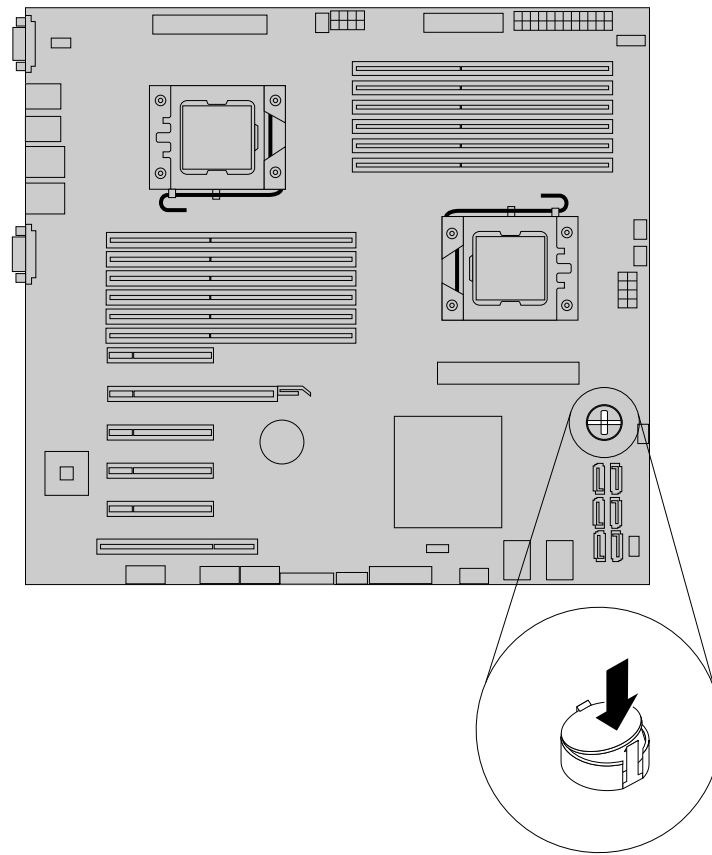


Figure 56. Installing the TR 100 or TR 300 Key

#### What to do next:

- To work with another piece of hardware, go to the appropriate section.
- To complete the installation, go to “Completing the parts replacement” on page 200. Then, the onboard SATA or SAS software RAID 5 is available for your server if your server has the required number of hard disk drives installed. To configure RAID, see “Configuring RAID” on page 72.

#### Removing the TR 100 or TR 300 Key

**Attention:** Do not open your server or attempt any repair before reading and understanding “Safety information” on page iii and “Guidelines” on page 83.

This topic provides instructions on how to remove the TR 100 or TR 300 Key if your server has one installed.

**Notes:**

- If you remove the TR 100 or TR 300 Key, the onboard SATA or SAS software RAID 5 will be disabled correspondingly.
- Use any documentation that comes with the TR 100 or TR 300 Key and follow those instructions in addition to the instructions in this topic.
- Depending on the model, your server might look slightly different from the illustration in this topic.

Before you begin, print all the related instructions or ensure that you can view the PDF version on another computer for reference.

To remove the TR 100 or TR 300 Key, do the following:

1. Remove all media from the drives and turn off all attached devices and the server. Then, disconnect all power cords from electrical outlets and disconnect all cables that are connected to the server.
2. Remove the server cover. See “Removing the server cover” on page 85.
3. Lay the server on its side for easier operation.
4. Locate the iButton socket on the system board.
5. Open the retaining clip **1** on the iButton socket to release the TR 100 or TR 300 Key, and then completely remove the key from the iButton socket.

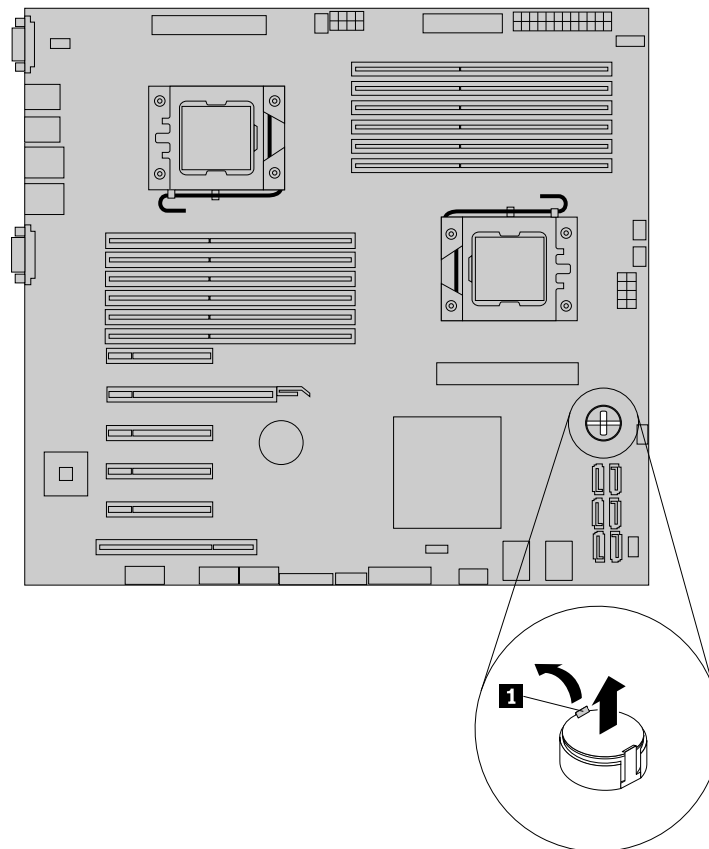


Figure 57. Removing the TR 100 or TR 300 Key

6. If you are instructed to return the old TR 100 or TR 300 Key, follow all packaging instructions and use any packaging materials that are supplied to you for shipping.

**What to do next:**

- To work with another piece of hardware, go to the appropriate section.
- To complete the removal procedure, go to “Completing the parts replacement” on page 200. As the onboard SATA or SAS software RAID 5 is not available without the TR 100 or TR 300 Key, you might need to reconfigure RAID for your server. See “Configuring RAID” on page 72.

## Installing or removing the ThinkServer Management Module Premium

This topic provides instructions on how to install or remove the ThinkServer Management Module Premium (hereinafter referred to as the TMM Premium).

The TMM Premium offers convenient, remote KVM access and control through the LAN or Internet. You can use the TMM Premium to gain location-independent remote access to respond to critical incidents and to undertake necessary maintenance. Therefore, working as an integrated solution in your server, the TMM Premium provides an increased level of manageability over the basic server management available. You can purchase a TMM Premium from Lenovo.

### Installing the TMM Premium

**Attention:** Do not open your server or attempt any repair before reading and understanding “Safety information” on page iii and “Guidelines” on page 83.

This topic provides instructions on how to install the TMM Premium.

Before you begin, print all the related instructions or ensure that you can view the PDF version on another computer for reference.

**Notes:**

- Use any documentation that comes with the TMM Premium and follow those instructions in addition to the instructions in this topic.
- Depending on the model, your server might look slightly different from the illustration in this topic.

To install the TMM Premium, do the following:

1. Remove all media from the drives and turn off all attached devices and the server. Then, disconnect all power cords from electrical outlets and disconnect all cables that are connected to the server.
2. Remove the server cover. See “Removing the server cover” on page 85.
3. Lay the server on its side for easier operation.
4. Touch the static-protective package that contains the TMM Premium to any unpainted surface on the outside of the server. Then, take the TMM Premium out of the package.



5. Locate the TMM Premium connector on the system board, and then insert the TMM Premium into the TMM Premium connector.

**Note:** Ensure that the TMM Premium is securely seated on the system board.

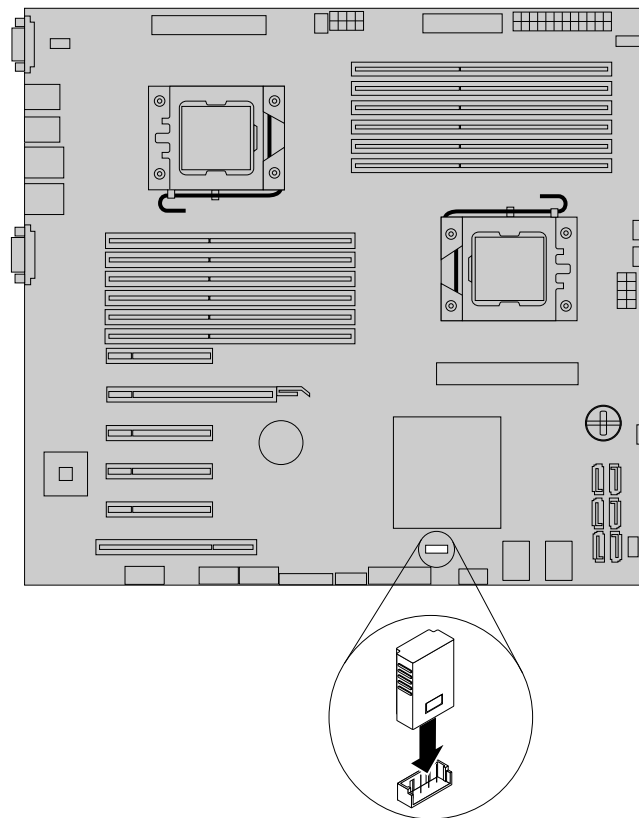


Figure 58. Installing the TMM Premium

#### What to do next:

- To work with another piece of hardware, go to the appropriate section.
- To complete the installation, go to “Completing the parts replacement” on page 200. Then, refer to the *ThinkServer Management Module User Guide*, which is available for download at <http://www.lenovo.com/UserManuals>, for more information about server remote management.

#### Removing the TMM Premium

**Attention:** Do not open your server or attempt any repair before reading and understanding “Safety information” on page iii and “Guidelines” on page 83.

This topic provides instructions on how to remove the TMM Premium if your server has one installed.

Before you begin, print all the related instructions or ensure that you can view the PDF version on another computer for reference.

**Notes:**

- If you remove the TMM Premium, the iKVM function for server remote management will be unavailable.
- Use any documentation that comes with the TMM Premium and follow those instructions in addition to the instructions in this topic.
- Depending on the model, your server might look slightly different from the illustration in this topic.

To remove the TMM Premium, do the following:

1. Remove all media from the drives and turn off all attached devices and the server. Then, disconnect all power cords from electrical outlets and disconnect all cables that are connected to the server.
2. Remove the server cover. See “Removing the server cover” on page 85.
3. Lay the server on its side for easier operation.
4. Locate the TMM Premium on the system board, and then lift the TMM Premium straight up to remove it from the connector.

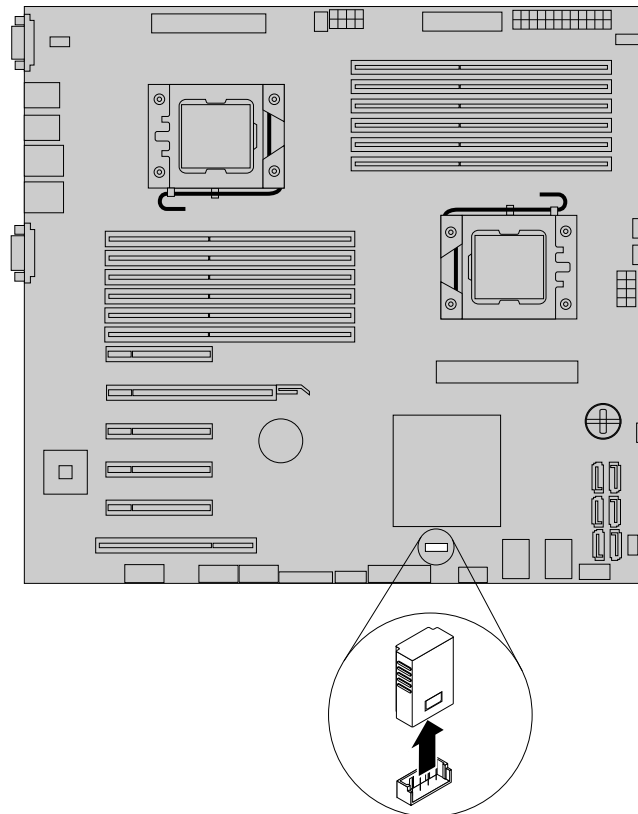


Figure 59. Removing the TMM Premium

5. If you are instructed to return the old TMM Premium, follow all packaging instructions and use any packaging materials that are supplied to you for shipping.

**What to do next:**

- To work with another piece of hardware, go to the appropriate section.
- To complete the removal procedure, go to “Completing the parts replacement” on page 200.

## Installing or removing the ThinkServer Trusted Platform Module

This topic provides instructions on how to install or remove the ThinkServer Trusted Platform Module (hereinafter referred to as the TPM).

The TPM is a security chip designed by the Trusted Computing Group (TCG) to provide a hardware method of data encryption. It stores passwords, encryption keys, and digital certificates to help provide security solutions and protect the computer. You can purchase a TPM option from Lenovo.

### Installing the ThinkServer Trusted Platform Module

**Attention:** Do not open your server or attempt any repair before reading and understanding “Safety information” on page iii and “Guidelines” on page 83.

This topic provides instructions on how to install the TPM.

Before you begin, print all the related instructions or ensure that you can view the PDF version on another computer for reference.

#### Notes:

- Use any documentation that comes with the TPM and follow those instructions in addition to the instructions in this topic.
- Depending on the model, your server might look slightly different from the illustration in this topic.

To install the TPM, do the following:

1. Remove all media from the drives and turn off all attached devices and the server. Then, disconnect all power cords from electrical outlets and disconnect all cables that are connected to the server.
2. Remove the server cover. See “Removing the server cover” on page 85.
3. Lay the server on its side for easier operation.
4. Touch the static-protective package that contains the TPM to any unpainted surface on the outside of the server. Then, take the TPM out of the package.

**Note:** Carefully handle the TPM by its edges.

5. Locate the TPM connector on the system board, and then insert the TPM into the TPM connector.

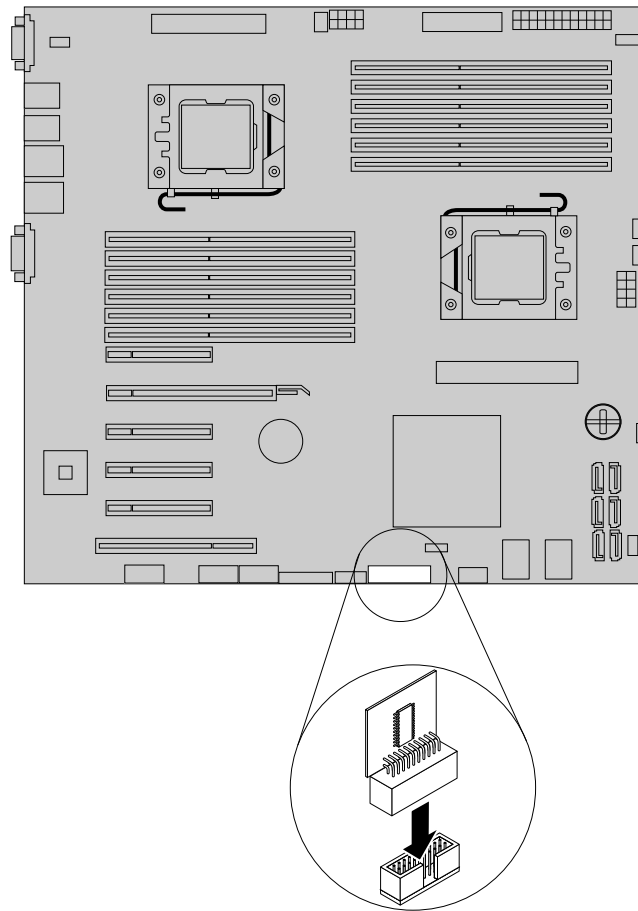


Figure 60. Installing the TPM

**What to do next:**

- To work with another piece of hardware, go to the appropriate section.
- To complete the installation, go to “Completing the parts replacement” on page 200. Then, you can configure the TPM function in the Setup Utility program. See “Configuring the TPM function” on page 66.

### Removing the ThinkServer Trusted Platform Module

**Attention:** Do not open your server or attempt any repair before reading and understanding “Safety information” on page iii and “Guidelines” on page 83.

This topic provides instructions on how to remove the TPM if your server has one installed.

Before you begin, print all the related instructions or ensure that you can view the PDF version on another computer for reference.

**Notes:**

- If you remove the TPM, the TPM function will be unavailable.
- Use any documentation that comes with the TPM and follow those instructions in addition to the instructions in this topic.

- Depending on the model, your server might look slightly different from the illustration in this topic.

To remove the TPM, do the following:

1. Remove all media from the drives and turn off all attached devices and the server. Then, disconnect all power cords from electrical outlets and disconnect all cables that are connected to the server.
2. Remove the server cover. See “Removing the server cover” on page 85.
3. Lay the server on its side for easier operation.
4. Locate the TPM on the system board, and then remove the TPM from the TPM connector by lifting it straight up.

**Note:** Carefully handle the TPM by its edges.

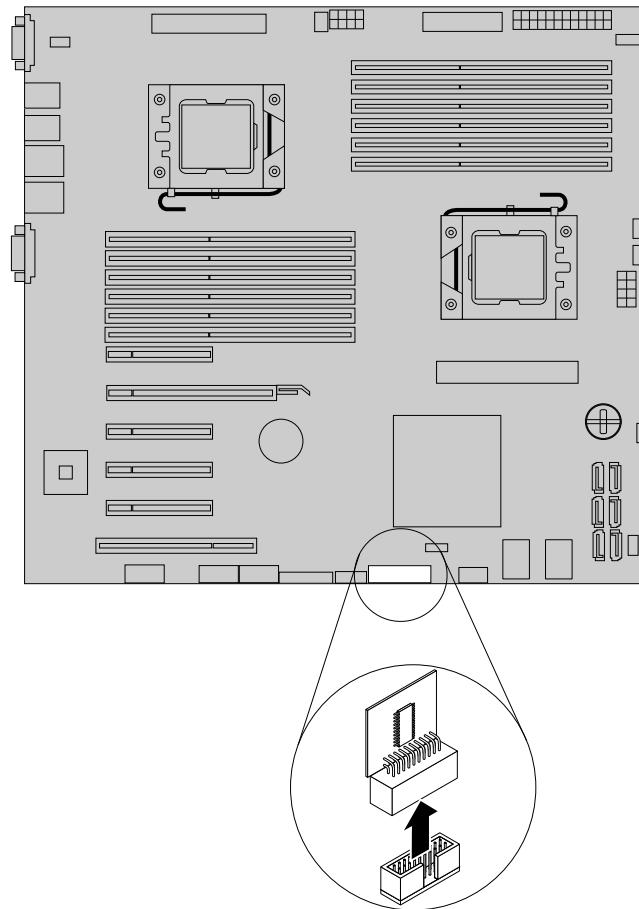


Figure 61. Removing the TPM

5. If you are instructed to return the old TPM, follow all packaging instructions and use any packaging materials that are supplied to you for shipping.

**What to do next:**

- To work with another piece of hardware, go to the appropriate section.
- To complete the removal procedure, go to “Completing the parts replacement” on page 200.

## Installing or removing the intelligent diagnostics module

This topic provides instructions on how to install or remove the intelligent diagnostics module (hereinafter referred to as the IDM).

The IDM, which is only available in some models, provides diagnostic LEDs through the IDM panel to help you easily identify a problem. The diagnostic LEDs on the IDM panel also vary depending on the installed power supply. For more information, see “Intelligent diagnostics module” on page 19.

### Installing the intelligent diagnostics module

**Attention:** Do not open your server or attempt any repair before reading and understanding “Safety information” on page iii and “Guidelines” on page 83.

This topic provides instructions on how to install the IDM.

Before you begin, print all the related instructions or ensure that you can view the PDF version on another computer for reference.

**Note:** Depending on the model, your server might look slightly different from the illustrations in this topic.

To install the IDM, do the following:

1. Remove all media from the drives and turn off all attached devices and the server. Then, disconnect all power cords from electrical outlets and disconnect all cables that are connected to the server.
2. Remove the server cover. See “Removing the server cover” on page 85.
3. Remove the front bezel. See “Removing and reinstalling the front bezel” on page 87.
4. Touch the static-protective package that contains the IDM to any unpainted surface on the outside of the server. Then, take the IDM out of the package.
5. Connect the signal cable to the rear of the IDM.

6. Route the signal cable of the IDM through the corresponding hole in the chassis and position the IDM on the chassis so that the screw hole in the IDM is aligned with the corresponding screw hole **1** in the chassis. Then, install the screw to secure the IDM in place.

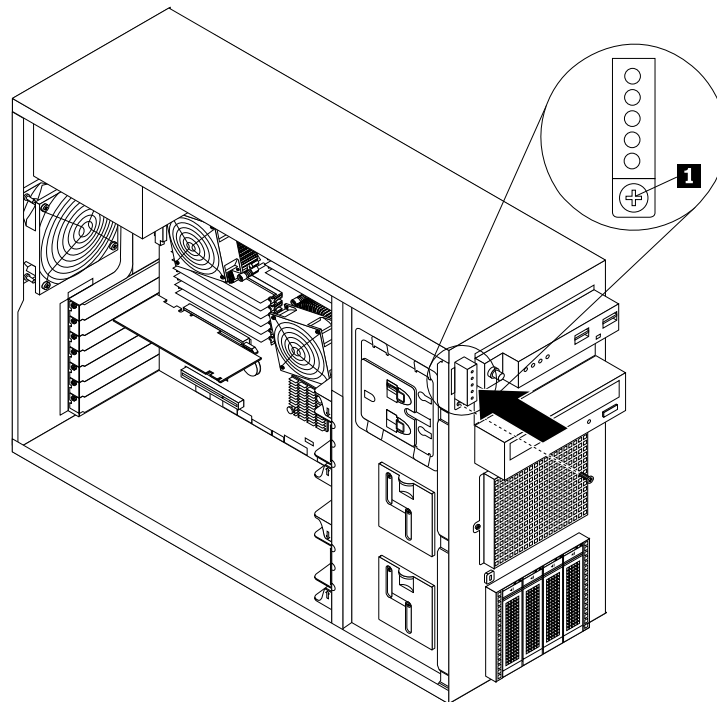


Figure 62. Installing the IDM

7. Remove the front system fans. See “Replacing the front system fan 1” on page 183.

8. Connect the other end of the signal cable to the IDM connector on the system board. See “System board components” on page 48. Then, properly route the signal cable of the IDM. You might need to secure the signal cable with cable clips or ties in the chassis.

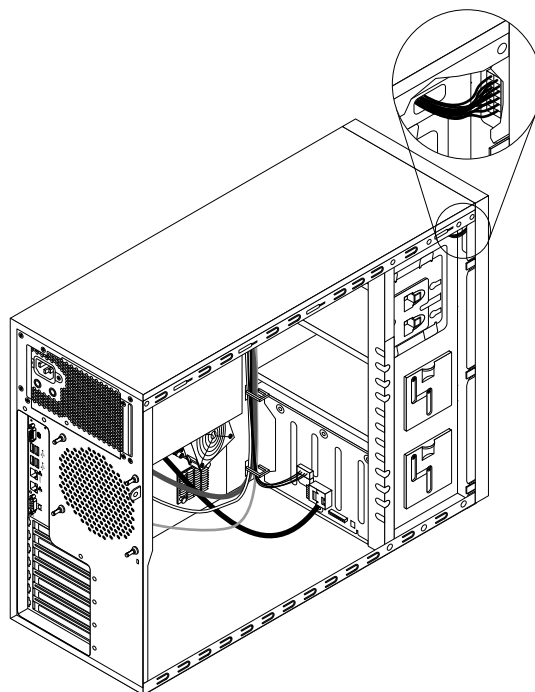


Figure 63. Cable routing

9. Reinstall the front system fans. See “Replacing the front system fan 1” on page 183.
10. Reinstall the front bezel. See “Removing and reinstalling the front bezel” on page 87.

#### What to do next:

- To work with another piece of hardware, go to the appropriate section.
- To complete the installation, go to “Completing the parts replacement” on page 200.

### Removing the intelligent diagnostics module

**Attention:** Do not open your server or attempt any repair before reading and understanding “Safety information” on page iii and “Guidelines” on page 83.

This topic provides instructions on how to remove the IDM if your server has an IDM installed.

Before you begin, print all the related instructions or ensure that you can view the PDF version on another computer for reference.

#### Notes:

- If you remove the IDM, the server will lose the diagnostic LEDs on the IDM panel.
- Depending on the model, your server might look slightly different from the illustration in this topic.

To remove the IDM, do the following:



1. Remove all media from the drives and turn off all attached devices and the server. Then, disconnect all power cords from electrical outlets and disconnect all cables that are connected to the server.
2. Remove the server cover. See “Removing the server cover” on page 85.
3. Remove the front bezel. See “Removing and reinstalling the front bezel” on page 87.
4. Locate the IDM. See “Intelligent diagnostics module” on page 19.
5. Remove the front system fans. See “Replacing the front system fan 1” on page 183.
6. Disconnect the signal cable of the IDM from the IDM connector on the system board. See “System board components” on page 48.
7. If necessary, remove any parts or disconnect any cables that might impede your access to the signal cable of the IDM. Note the cable routing, and then release the signal cable of the IDM from any cable clips or ties in the chassis.
8. Remove the screw **1** on the chassis that secures the IDM. Then, carefully remove the IDM from the chassis and pull the signal cable of the IDM out of the hole in the chassis.

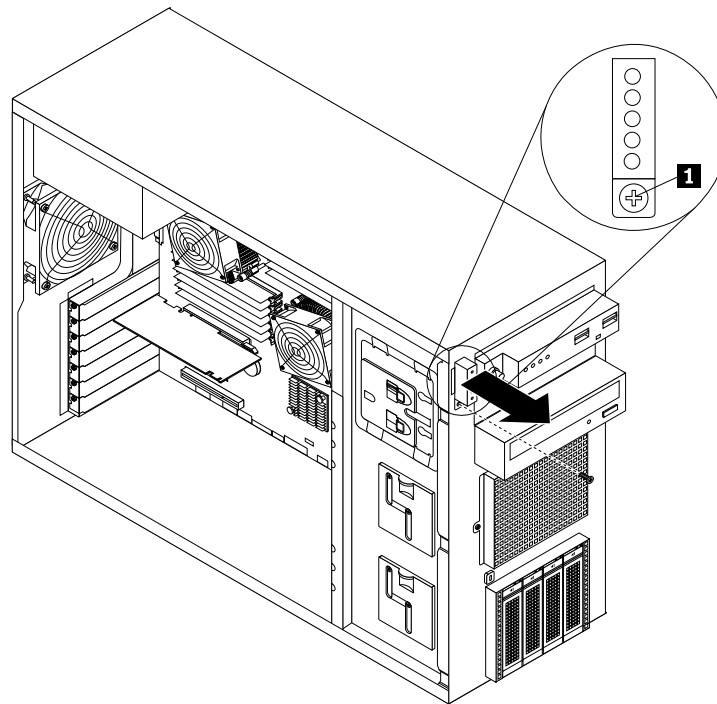


Figure 64. Removing the IDM

9. Disconnect the signal cable from the rear of the IDM.
10. Reinstall the front system fans. See “Replacing the front system fan 1” on page 183.
11. Reinstall the front bezel. See “Removing and reinstalling the front bezel” on page 87.
12. If you are instructed to return the old IDM, follow all packaging instructions and use any packaging materials that are supplied to you for shipping.

**What to do next:**

- To work with another piece of hardware, go to the appropriate section.
- To complete the removal procedure, go to “Completing the parts replacement” on page 200.

## Installing or replacing an optical drive

**Attention:** Do not open your server or attempt any repair before reading and understanding “Safety information” on page iii and “Guidelines” on page 83.

This topic provides instructions on how to install or replace an optical drive.

The EMI integrity and cooling of the server are protected by having all drive bays covered or occupied. Your server has two optical drive bays. If only one optical drive is installed in the lower bay, the upper bay is covered by a metal EMI shield on the chassis and also a plastic shield on the front bezel. When you install a secondary optical drive, save the removed EMI shield from the chassis and plastic shield from the front bezel in the event that you later remove the drive and need the shields to cover the drive bay.

**Attention:** An unoccupied drive bay without any other protection might impact the EMI integrity and cooling of the server, which might result in overheating or component damage. To maintain the EMI integrity and cooling of the server, install a new optical drive as soon as you remove the failing one or the protective shields.

### CAUTION:

**When laser products (such as CD-ROMs, DVD drives, fiber optic devices, or transmitters) are installed, note the following:**

- **Do not remove the covers. Removing the covers of the laser product could result in exposure to hazardous laser radiation. There are no serviceable parts inside the device.**
- **Use of controls or adjustments or performance of procedures other than those specified herein might result in hazardous radiation exposure.**



**DANGER**

**Some laser products contain an embedded Class 3A or Class 3B laser diode. Note the following:**

**Laser radiation when open. Do not stare into the beam, do not view directly with optical instruments, and avoid direct exposure to the beam.**

Before you begin, review the following optical drive installation rules:

- The server has two optical drive bays. If your server has only one optical drive installed, ensure that the optical drive is installed in the lower bay (optical drive bay 1). The upper bay is for a secondary optical drive.
- The following table provides information about the recommended power connector and connector on the system board for the installed optical drive. See “Server components” on page 28 for the locations of the optical drive bays and “System board components” on page 48 for the locations of the connectors on the system board.

Drive bay	Drive	Power connector	Connector on the system board
Optical drive bay 1 (lower bay)	An optical drive installed	P11	SATA 5 connector
Optical drive bay 2 (upper bay)	An optical drive installed in some models	P12	SATA 4 connector

Before you begin, print all the related instructions or ensure that you can view the PDF version on another computer for reference.

**Notes:**

- Depending on the model, your server might look slightly different from the illustrations in this topic.
- Use any documentation that comes with the optical drive and follow those instructions in addition to the instructions in this topic.

To install or replace an optical drive, do the following:

1. Remove all media from the drives and turn off all attached devices and the server. Then, disconnect all power cords from electrical outlets and disconnect all cables that are connected to the server.
2. Remove the server cover. See “Removing the server cover” on page 85.
3. Locate the optical drive bays. See “Server components” on page 28.
4. Depending on whether you are installing or replacing an optical drive, do one of the following:
  - If you are installing a secondary optical drive in the upper optical drive bay, remove the front bezel. See “Removing and reinstalling the front bezel” on page 87. Then, remove the plastic shield for the bay from the front panel. Remove the screw **1** that secures the metal EMI shield covered on the upper optical drive bay. Insert a finger into the hole in the EMI shield and carefully pull the EMI shield out of the front of the chassis.

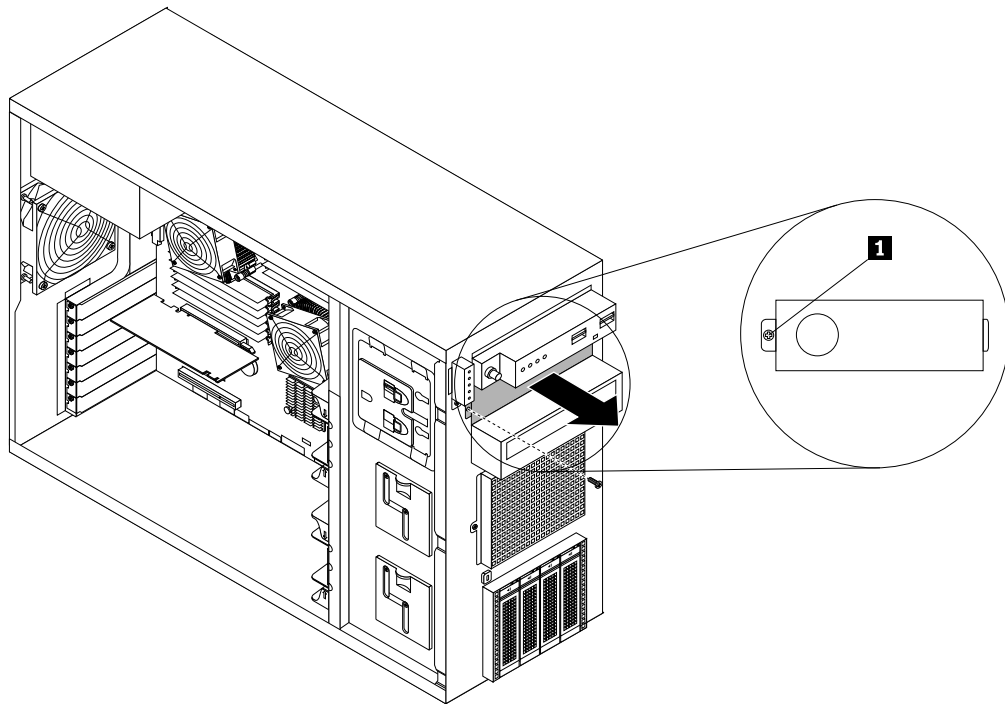


Figure 65. Removing the EMI shield for the upper optical drive bay

- If you are replacing an optical drive, disconnect the signal cable and the power cable from the rear of the optical drive. Press the release button **1** in the direction as shown and push the optical drive from the rear until it is projected from the front of the chassis. Then, hold the optical drive from the front and completely slide it out of the chassis.

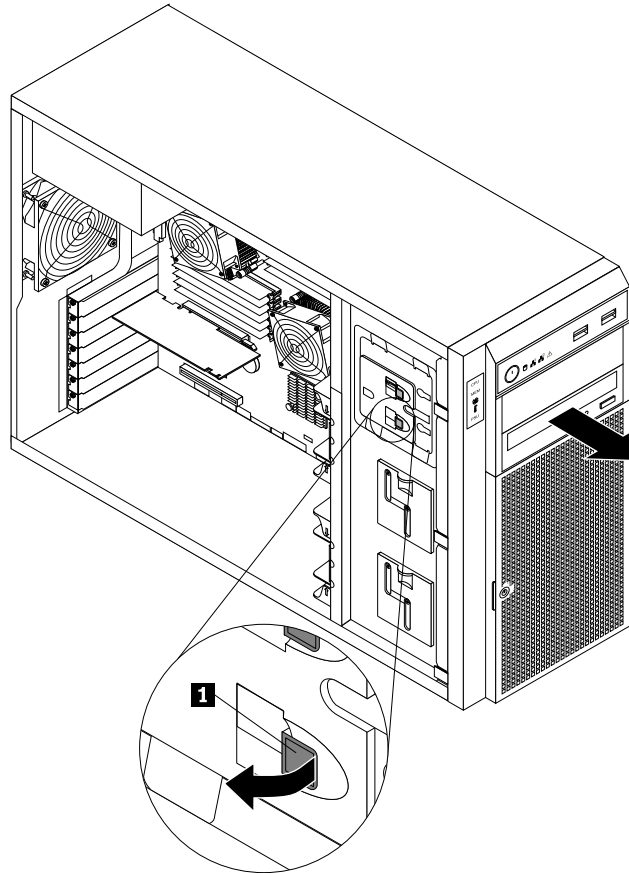


Figure 66. Removing the optical drive

5. Touch the static-protective package that contains the new optical drive to any unpainted surface on the outside of the server. Then, take the new optical drive and the signal cable out of the package.

- Slide the new optical drive into the drive bay from the front until it snaps into position.

**Note:** You do not need to remove the front bezel when replacing an optical drive. However, if you are adding a secondary optical drive in the upper optical drive bay, you need to remove the front bezel first, and then gain access to the protective shields to remove them. The following illustration shows only the situation in which the front bezel has not been removed.

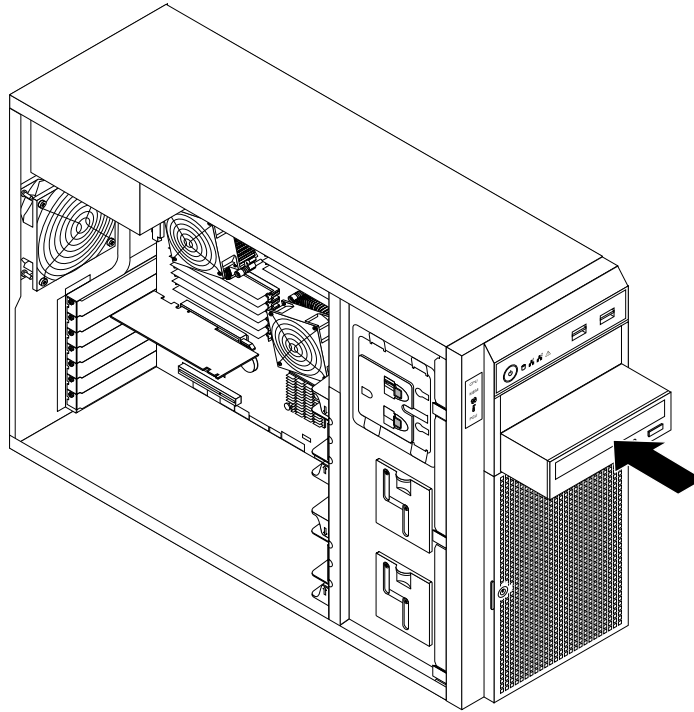


Figure 67. Installing the optical drive

- Connect the power cable **1** and the signal cable **2** to the rear of the new optical drive.

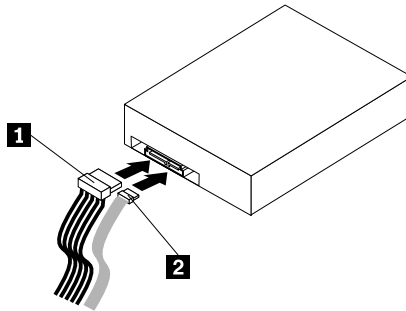


Figure 68. Connecting cables to the rear of the optical drive

- If necessary, connect the other end of the signal cable to the appropriate SATA connector on the system board. See “System board components” on page 48.
- Reinstall the front bezel if you have removed it. See “Removing and reinstalling the front bezel” on page 87.
- Do one of the following:

- If you are installing an optical drive, save the removed EMI-protective shield from the chassis and plastic shield from the front bezel in the event that you later remove the drive and need the shields to cover the drive bay.
- If you are replacing an optical drive and are instructed to return the old optical drive, follow all packaging instructions and use any packaging materials that are supplied to you for shipping.

**What to do next:**

- To work with another piece of hardware, go to the appropriate section.
- To complete the installation or replacement, go to “Completing the parts replacement” on page 200.

## Installing or replacing a hot-swap hard disk drive

**Attention:** Do not open your server or attempt any repair before reading and understanding “Safety information” on page iii and “Guidelines” on page 83.

This topic provides instructions on how to install or replace a hot-swap hard disk drive.

This topic applies only to server models that have hot-swap hard disk drives installed. See “Features” on page 7 for more information about the supported hot-swap hard disk drives.

For a list of ThinkServer hard disk drive options, go to:  
<http://www.lenovo.com/thinkserver>

You can install or replace a hot-swap hard disk drive without turning off the server, which helps you avoid significant interruption to the operation of the system.

The EMI integrity and cooling of the server are protected by having all drive bays covered or occupied. The number of the installed hard disk drives in your server varies depending on the server model. The vacant bays are either covered by an EMI-protective panel or occupied by dummy hard disk drive trays. When you install a hot-swap hard disk drive, save the removed dummy hard disk drive tray from the drive bay in the event that you later remove the hot-swap hard disk drive and need the dummy tray to cover the place.

**Attention:** An unoccupied drive bay without any other protection might impact the EMI integrity and cooling of the server, which might result in overheating or component damage. To maintain the EMI integrity and cooling of the server, install a new hot-swap hard disk drive as soon as you remove the failing one or the dummy tray.

Before you begin, review the following hard disk drive installation rules:

- Follow the order of the hard disk drive bays when installing a hard disk drive. See “Server components” on page 28 to locate the hard disk drive bays in your server.
- For RAID configuration, the hard disk drives must be the same type with the same capacity if they are within a single RAID array. For more information, see “Configuring RAID” on page 72.
- For hard disk drives with different capacities, install the hard disk drive by following the order of the hard disk drive bays as well as the order from the lowest capacity to the highest capacity.

Before you begin, print all the related instructions or ensure that you can view the PDF version on another computer for reference.


**Notes:**

- Depending on the model, your server might come with 3.5-inch hot-swap hard disk drives or 2.5-inch hot-swap hard disk drives. The illustrations in this topic are based on server models with four 3.5-inch hot-swap SATA or SAS hard disk drives. For other models, the replacement procedure is similar.

- Depending on the model, your server might look slightly different from the illustrations in this topic.
- Use any documentation that comes with the hot-swap hard disk drive and follow those instructions in addition to the instructions in this topic.

To install or replace a hot-swap hard disk drive, do the following:

1. Use the front door key to unlock the front door, and then use the front door handle **1** to pivot the front door to the open position.

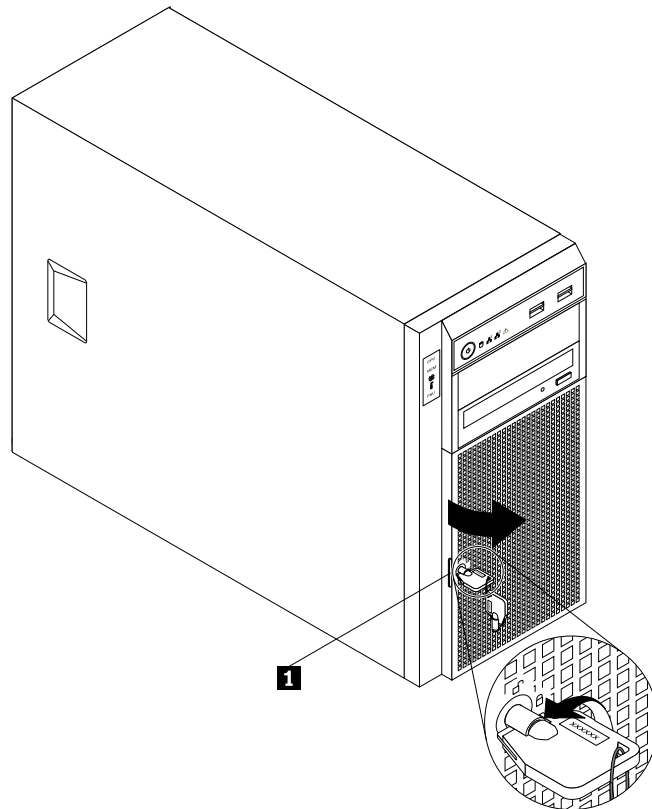

*Figure 69. Opening the front door of the server*

2. Locate the appropriate hard disk drive bay. See “Server components” on page 28.

3. Press the release button **1** to open the handle of the hot-swap hard disk drive or the dummy tray.


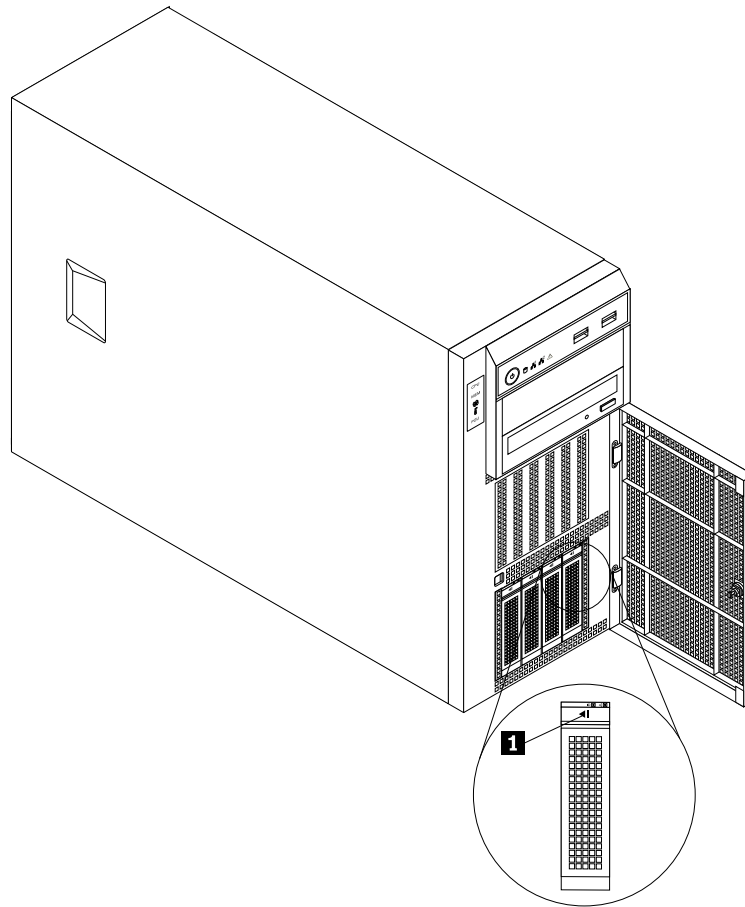


Figure 70. Opening the handle of the hot-swap hard disk drive or the dummy tray



4. Pull the handle and carefully slide the hot-swap hard disk drive or the dummy tray out of the front of the chassis.

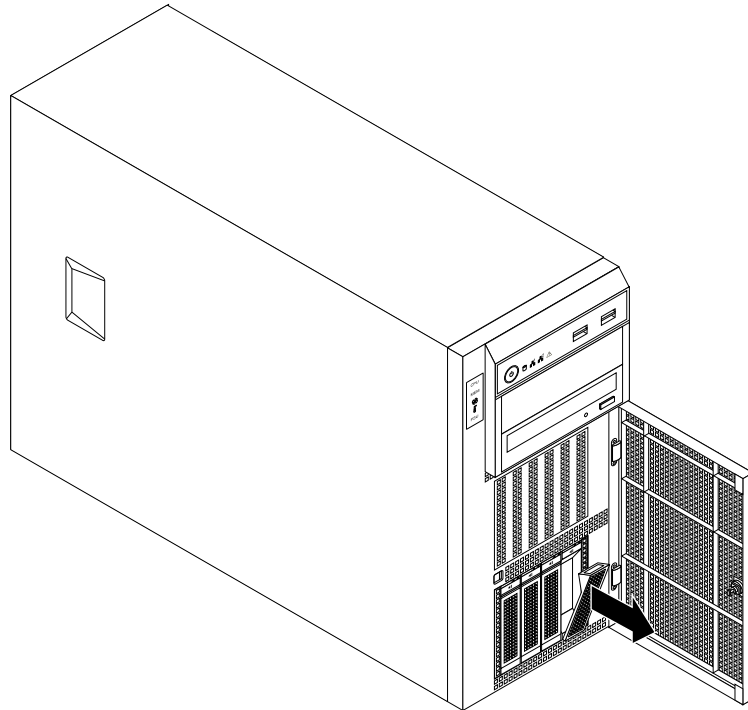

*Figure 71. Removing the hot-swap hard disk drive or the dummy tray*

5. Touch the static-protective package that contains the new hot-swap hard disk drive to any unpainted surface on the outside of the server. Then, take the new hot-swap hard disk drive out of the package.

**Note:** Do not touch the circuit board on the hard disk drive.

- Slide the new hot-swap hard disk drive into the drive bay from the front until it snaps into position, and then completely close the handle.

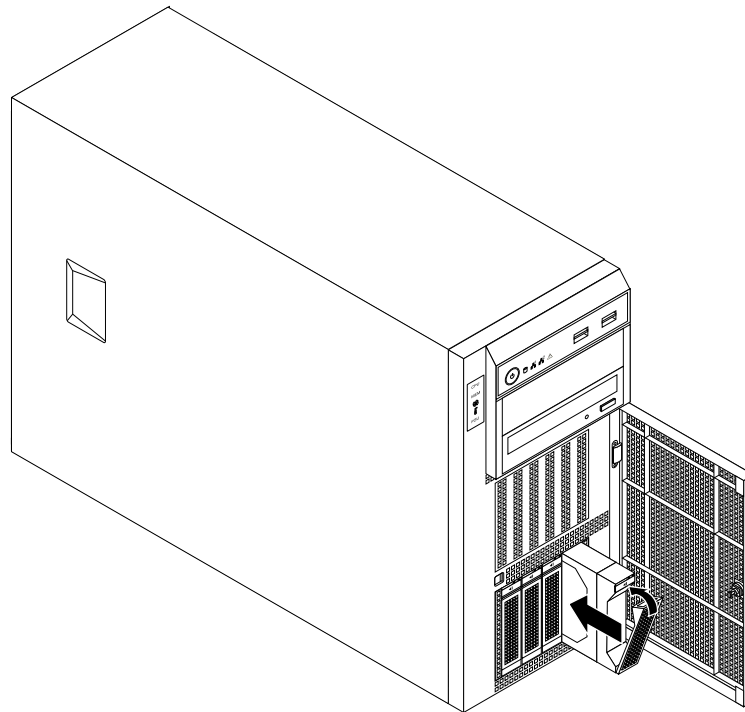


Figure 72. Installing the hot-swap hard disk drive

- Check the hot-swap hard disk drive status LEDs to ensure that the hard disk drive is operating correctly. You might have to restart the server for the newly installed hard disk drive to be recognized. See “Hot-swap hard disk drive status LEDs” on page 33. If the hard disk drive is faulty, you need to reinstall or replace it until it is operating correctly.
- Close and lock the front door.
- Do one of the following:
  - If you are installing a hot-swap hard disk drive, save the removed hard disk drive dummy tray in the event that you later remove the hot-swap hard disk drive and need a dummy tray to cover the drive bay.
  - If you are replacing a hot-swap hard disk drive and are instructed to return the old hot-swap hard disk drive, follow all packaging instructions and use any packaging materials that are supplied to you for shipping.

**What to do next:**

- To work with another piece of hardware, go to the appropriate section.
- To configure RAID, go to “Configuring RAID” on page 72.

## Installing or removing a non-hot-swap hard disk drive

This topic provides instructions on how to install or remove a non-hot-swap hard disk drive.

This topic applies only to server models that support non-hot-swap hard disk drives. See “Features” on page 7 for more information about the supported non-hot-swap hard disk drives.

For a list of ThinkServer hard disk drive options, go to:  
<http://www.lenovo.com/thinkserver>

The EMI integrity and cooling of the server are protected by having all drive bays covered or occupied. The number of the installed hard disk drives in your server varies depending on the server model. The vacant bays are covered by an EMI-protective panel.

**Attention:** An unoccupied drive bay without any other protection might impact the EMI integrity and cooling of the server, which might result in overheating or component damage. To maintain the EMI integrity and cooling of the server, install a new non-hot-swap hard disk drive as soon as you remove the failing one.

## Installing a non-hot-swap hard disk drive

**Attention:** Do not open your server or attempt any repair before reading and understanding “Safety information” on page iii and “Guidelines” on page 83.

This topic provides instructions on how to install a non-hot-swap hard disk drive.

Before you begin, review the following hard disk drive installation rules:

- Follow the order of the hard disk drive bays when installing a hard disk drive. See “Server components” on page 28 to locate the hard disk drive bays in your server.
- For RAID configuration, the hard disk drives must be the same type with the same capacity if they are within a single RAID array. For more information, see “Configuring RAID” on page 72.
- For hard disk drives with different capacities, install the hard disk drive by following the order of the hard disk drive bays as well as the order from the lowest capacity to the highest capacity.

Before you begin, print all the related instructions or ensure that you can view the PDF version on another computer for reference.


### Notes:

- Depending on the model, your server might look slightly different from the illustrations in this topic.
- Use any documentation that comes with the hard disk drive and follow those instructions in addition to the instructions in this topic.

To install a non-hot-swap hard disk drive, do the following:

1. Remove all media from the drives and turn off all attached devices and the server. Then, disconnect all power cords from electrical outlets and disconnect all cables that are connected to the server.

2. Use the front door key to unlock the front door, and then use the front door handle **1** to pivot the front door to the open position.

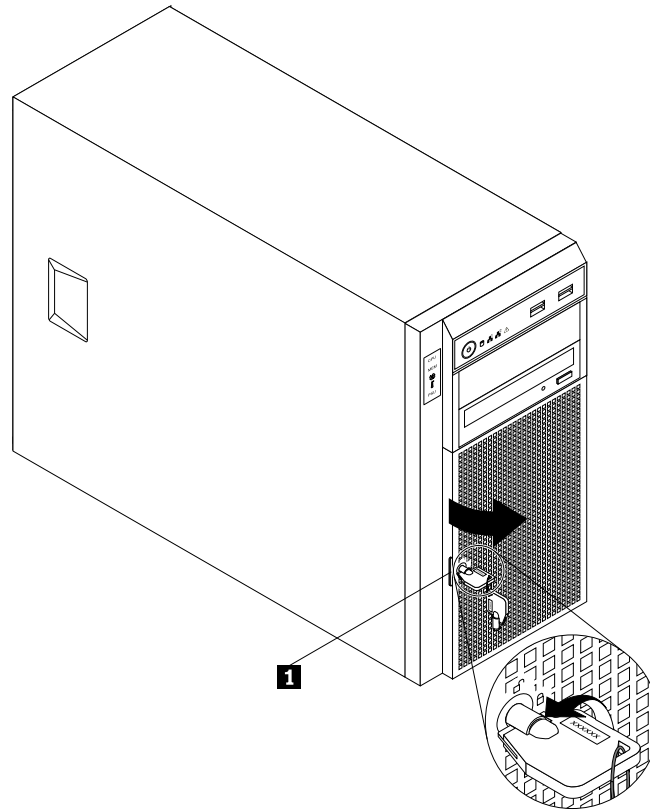

*Figure 73. Opening the front door of the server*

3. Remove the server cover. See “Removing the server cover” on page 85.

4. The non-hot-swap hard disk drives are installed in the lower hard-disk-drive cage and are protected by an EMI-protective panel. Press the small tab **1** on the EMI-protective panel from the bottom, and then pivot the EMI-protective panel upward to remove it from the chassis and gain access to the non-hot-swap hard disk drive bays.

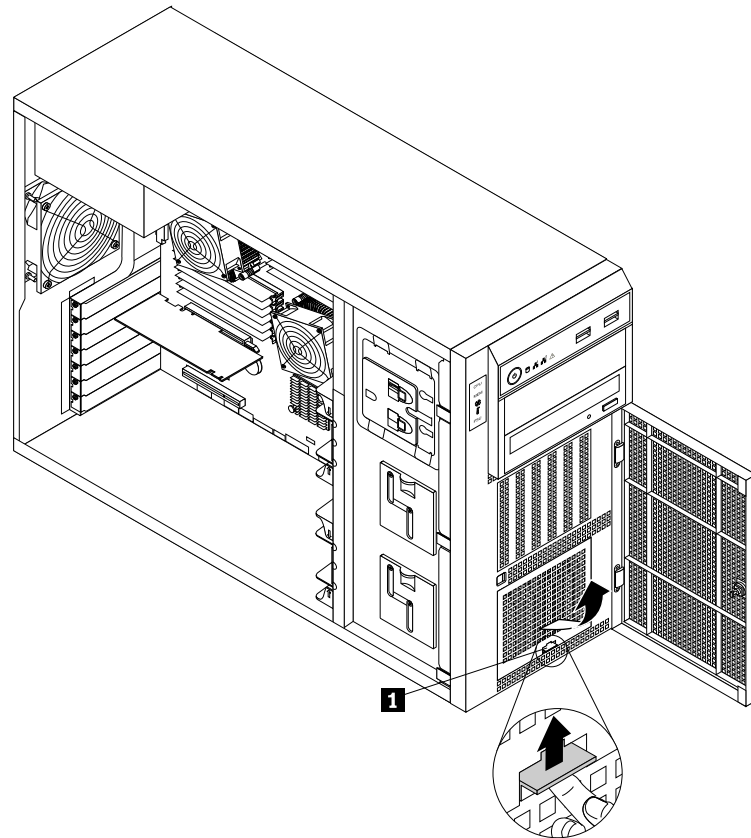


Figure 74. Removing the EMI-protective panel

5. Remove the front system fan 1. See “Replacing the front system fan 1” on page 183.
6. Locate the appropriate non-hot-swap hard disk drive bay. See “Server components” on page 28.
7. Touch the static-protective package that contains the new non-hot-swap hard disk drive to any unpainted surface on the outside of the server. Then, take the new non-hot-swap hard disk drive and the signal cable out of the package.

**Note:** Do not touch the circuit board on the hard disk drive.

8. Install the new non-hot-swap hard disk drive into a blue bracket by flexing the sides of the bracket and aligning pin **1**, pin **2**, pin **4**, and pin **5** on the bracket with the corresponding holes in the hard disk drive so that the hard disk drive can be seated in the bracket.

**Note:** Do not touch the circuit board **3** on the bottom of the hard disk drive.

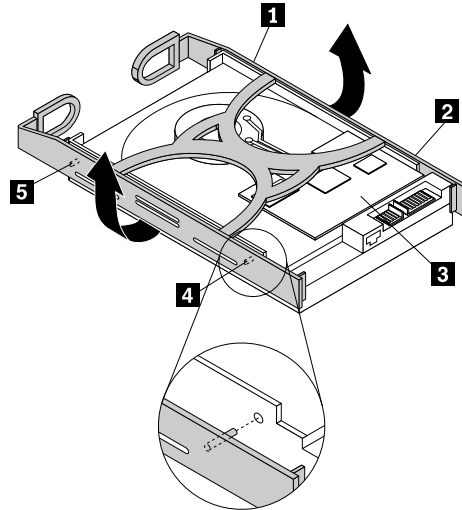


Figure 75. Installing the non-hot-swap hard disk drive into the bracket

9. Slide the new non-hot-swap hard disk drive with bracket into the drive bay until it snaps into position.
10. Connect the appropriate power cable **1** and the SATA signal cable **2** to the rear of the non-hot-swap hard disk drive. See “Connecting the cables” on page 43.

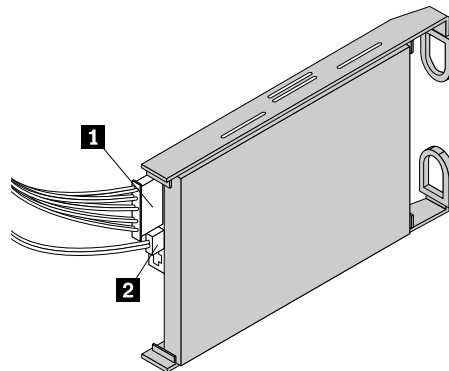


Figure 76. Connecting cables to the rear of the non-hot-swap hard disk drive

11. Connect the other end of the SATA signal cable to the appropriate SATA connector on the system board. See “System board components” on page 48 and “Connecting the cables” on page 43.
12. Reinstall the front system fan 1. See “Replacing the front system fan 1” on page 183.

- Align the top edge of the EMI-protective panel with the top side of the hard-disk-drive cage, and then pivot the EMI-protective panel down until it snaps into position.

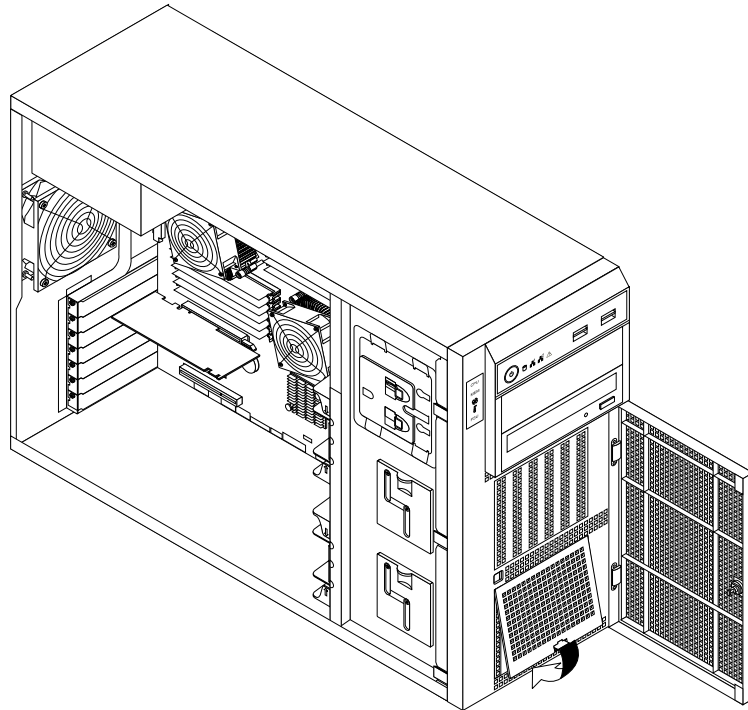


Figure 77. Installing the EMI-protective panel

- Close and lock the front door.

#### What to do next:

- To work with another piece of hardware, go to the appropriate section.
- To complete the installation, go to “Completing the parts replacement” on page 200. Then, you might need to reconfigure RAID for your server. See “Configuring RAID” on page 72.

### Removing a non-hot-swap hard disk drive

**Attention:** Do not open your server or attempt any repair before reading and understanding “Safety information” on page iii and “Guidelines” on page 83.

This topic provides instructions on how to remove a non-hot-swap hard disk drive.

This topic applies only to server models that have non-hot-swap hard disk drives installed. See “Features” on page 7 for more information about the supported non-hot-swap hard disk drives.

Before you begin, consider the following hard disk drive installation rules:

- Follow the order of the hard disk drive bays when installing a hard disk drive. See “Server components” on page 28 to locate the hard disk drive bays in your server.
- For RAID configuration, the hard disk drives must be the same type with the same capacity if they are within a single RAID array. For more information, see “Configuring RAID” on page 72.
- For hard disk drives with different capacities, install the hard disk drive by following the order of the hard disk drive bays as well as the order from the lowest capacity to the highest capacity.


Before you begin, print all the related instructions or ensure that you can view the PDF version on another computer for reference.

**Notes:**

- Depending on the model, your server might look slightly different from the illustrations in this topic.
- Use any documentation that comes with the non-hot-swap hard disk drive and follow those instructions in addition to the instructions in this topic.

To remove a non-hot-swap hard disk drive, do the following:

1. Remove all media from the drives and turn off all attached devices and the server. Then, disconnect all power cords from electrical outlets and disconnect all cables that are connected to the server.
2. Use the front door key to unlock the front door, and then use the front door handle **1** to pivot the front door to the open position.

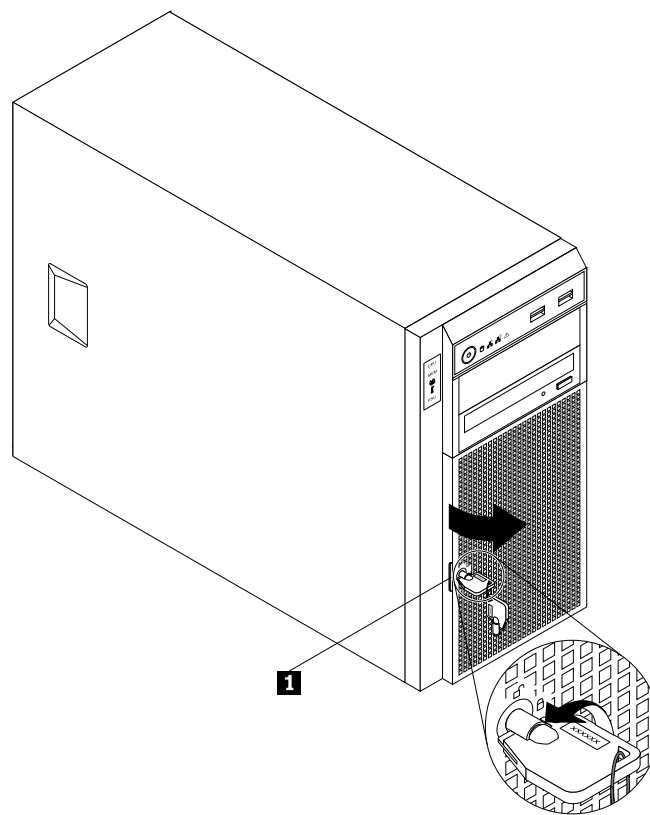

*Figure 78. Opening the front door of the server*

3. Remove the server cover. See “Removing the server cover” on page 85.



4. The non-hot-swap hard disk drives are installed in the lower hard-disk-drive cage and are protected by an EMI-protective panel. Press the small tab **1** on the EMI-protective panel from the bottom, and then pivot the EMI-protective panel upward to remove it from the chassis and gain access to the non-hot-swap hard disk drives.


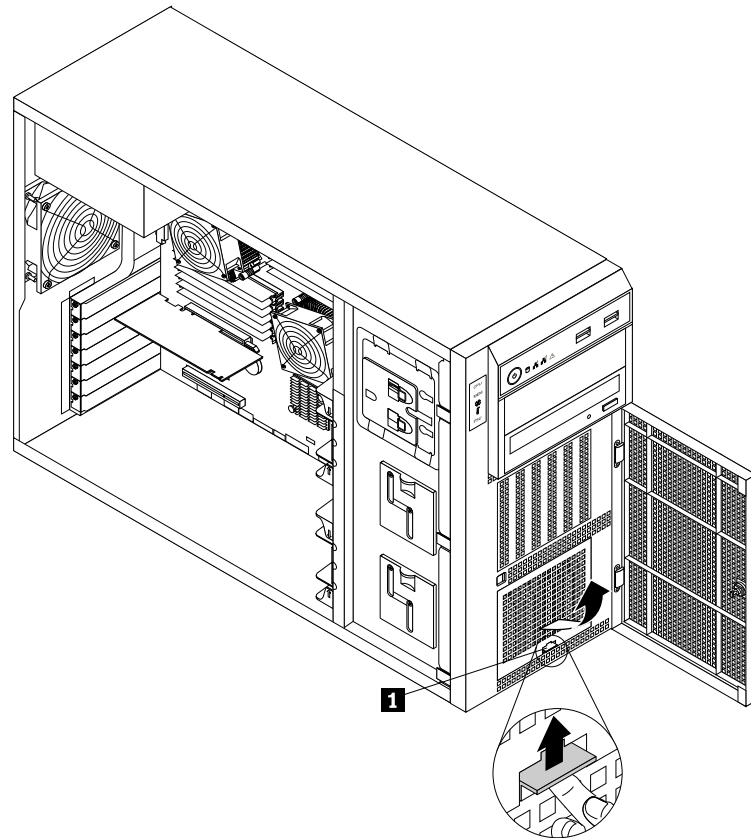


Figure 79. Removing the EMI-protective panel

5. Remove the front system fan 1. See “Replacing the front system fan 1” on page 183.
6. Locate the appropriate non-hot-swap hard disk drive. See “Server components” on page 28. Then, disconnect the SATA signal cable and the power cable from the rear of the non-hot-swap hard disk drive.

7. Insert two fingers into the holes in the two tabs on the front of the blue bracket. Then, press the tabs towards each other and carefully slide the non-hot-swap hard disk drive out of the front of the chassis.

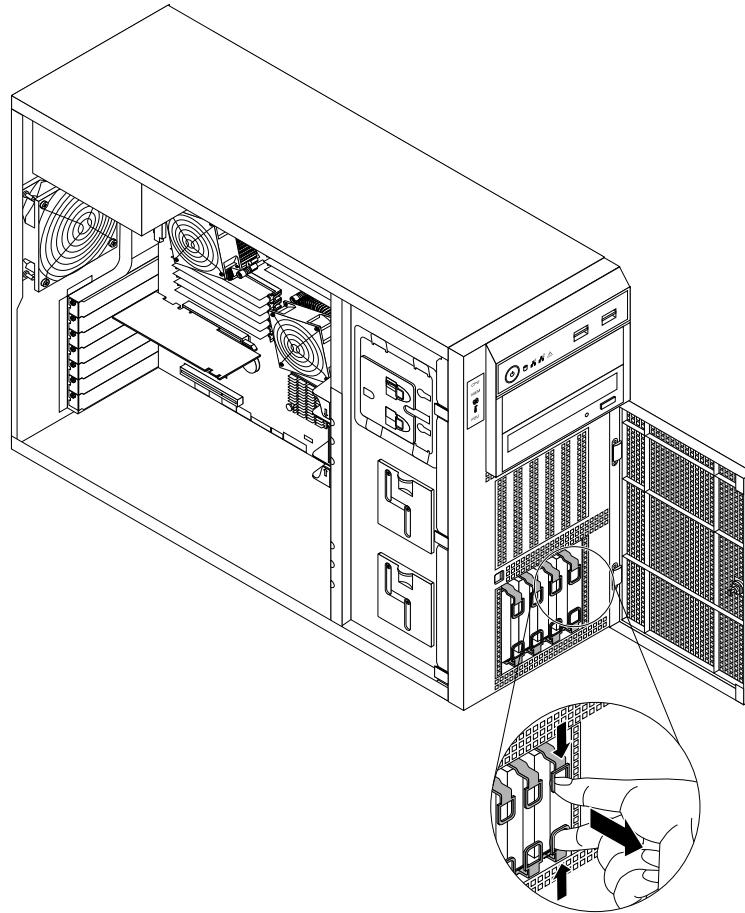

*Figure 80. Sliding the non-hot-swap hard disk drive out of the bay*

8. Flex the sides of the blue bracket to remove the non-hot-swap hard disk drive from the bracket. Save the bracket for future use.

**Note:** Do not touch the circuit board on the hard disk drive.

9. Reinstall the front system fan 1. See “Replacing the front system fan 1” on page 183.

- Align the top edge of the EMI-protective panel with the top side of the hard-disk-drive cage, and then pivot the EMI-protective panel down until it snaps into position.

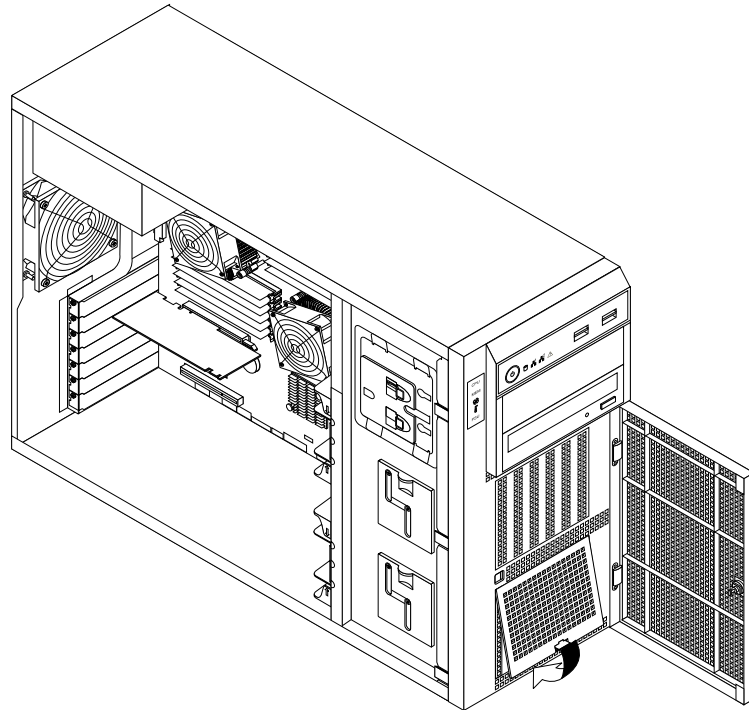


Figure 81. Installing the EMI-protective panel

- Disconnect the SATA cable for the removed non-hot-swap hard disk drive from the system board and save the cable for future use.
- Close and lock the front door.
- If you are instructed to return the old non-hot-swap hard disk drive, follow all packaging instructions and use any packaging materials that are supplied to you for shipping.

**What to do next:**

- To work with another piece of hardware, go to the appropriate section.
- To complete the removal procedure, go to “Completing the parts replacement” on page 200. Then, you might need to reconfigure RAID for your server. See “Configuring RAID” on page 72.

## Installing or replacing a 2.5-inch solid-state drive

This topic contains the following items:

- “Installing a 2.5-inch solid-state drive into a 3.5-inch hard-disk-drive bay” on page 144
- “Replacing a 2.5-inch solid-state drive from a 3.5-inch hard-disk-drive bay” on page 149

For a list of ThinkServer solid-state drive options, go to:  
<http://www.lenovo.com/thinkserver>

You can install or replace a hot-swap solid-state drive without turning off the server, which helps you avoid significant interruption to the operation of the system.

The EMI integrity and cooling of the server are protected by having all drive bays covered or occupied. The number of the installed hard disk drives or solid-state drives in your server varies depending on the server model. The vacant bays are occupied by dummy hard-disk-drive trays. When you install a hot-swap hard disk drive or solid-state drive, save the removed dummy hard-disk-drive tray from the drive bay in the event that you later remove the hot-swap hard disk drive or solid-state drive and need the dummy tray to cover the place.

**Attention:** An unoccupied drive bay without any other protection might impact the EMI integrity and cooling of the server, which might result in overheating or component damage. To maintain the EMI integrity and cooling of the server, install a new hot-swap hard disk drive or solid-state drive as soon as you remove the failing one or the dummy tray.

Before you begin, review the following solid-state drive installation rules:

- Follow the order of the hard-disk-drive bays when installing a solid-state drive. See “Server components” on page 28 to locate the hard-disk-drive bays in your server.
- For RAID configuration, the solid-state drives must be the same type with the same capacity if they are within a single RAID array. For more information, see “Configuring RAID” on page 72.
- For solid-state drives with different capacities, install the solid-state drive by following the order of the hard-disk-drive bays as well as the order from the lowest capacity to the highest capacity.

Before you begin, print all the related instructions or ensure that you can view the PDF version on another computer for reference.

**Notes:**

- Depending on the model, your server might come with 3.5-inch hot-swap hard disk drives or 2.5-inch hot-swap hard disk drives. The illustrations in this topic are based on server models with 3.5-inch hot-swap hard disk drives. For other models, the replacement procedure is similar.
- Depending on the model, your server might look slightly different from the illustrations in this topic.
- Use any documentation that comes with the solid-state drive and follow those instructions in addition to the instructions in this topic.

### **Installing a 2.5-inch solid-state drive into a 3.5-inch hard-disk-drive bay**

**Attention:** Do not open your server or attempt any repair before reading and understanding “Safety information” on page iii and “Guidelines” on page 83.

This topic provides instructions on how to install a 2.5-inch solid-state drive into a 3.5-inch hard-disk-drive bay.

Before you begin, print all the related instructions or ensure that you can view the PDF version on another computer for reference.

**Note:** Ensure that you have a 3.5-inch to 2.5-inch drive adapter and a 3.5-inch drive bracket available before the installation.

To install a 2.5-inch solid-state drive into a 3.5-inch hard-disk-drive bay, do the following:

1. Locate the appropriate hard-disk-drive bay. See “Server components” on page 28.

2. Press the release button **1** to open the handle of the dummy tray.


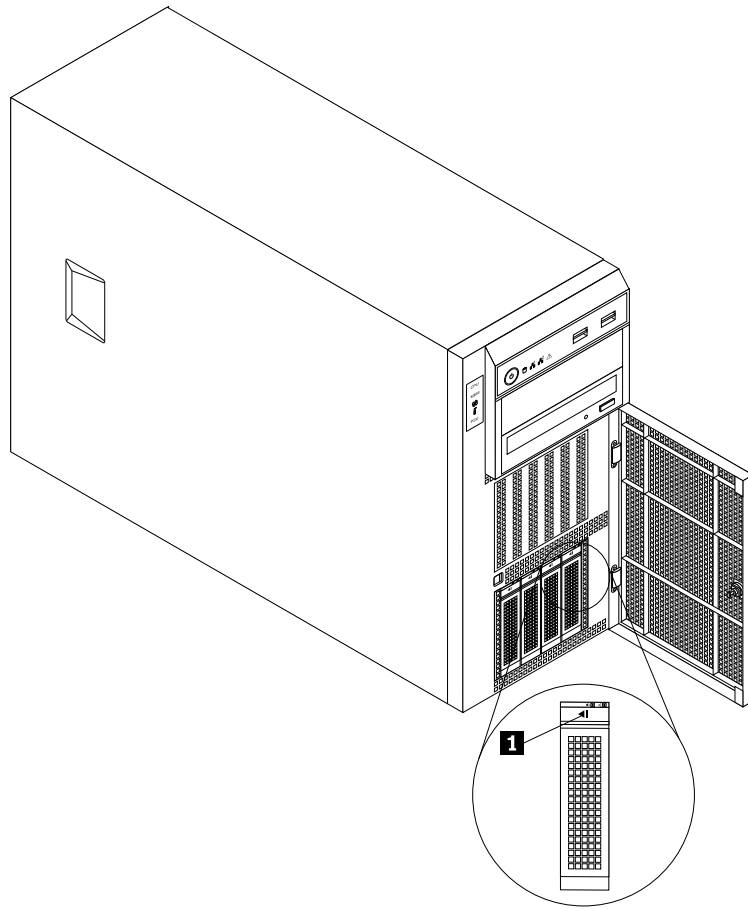


Figure 82. Opening the handle of the dummy tray

3. Pull the handle and carefully slide the dummy tray out of the front of the chassis.

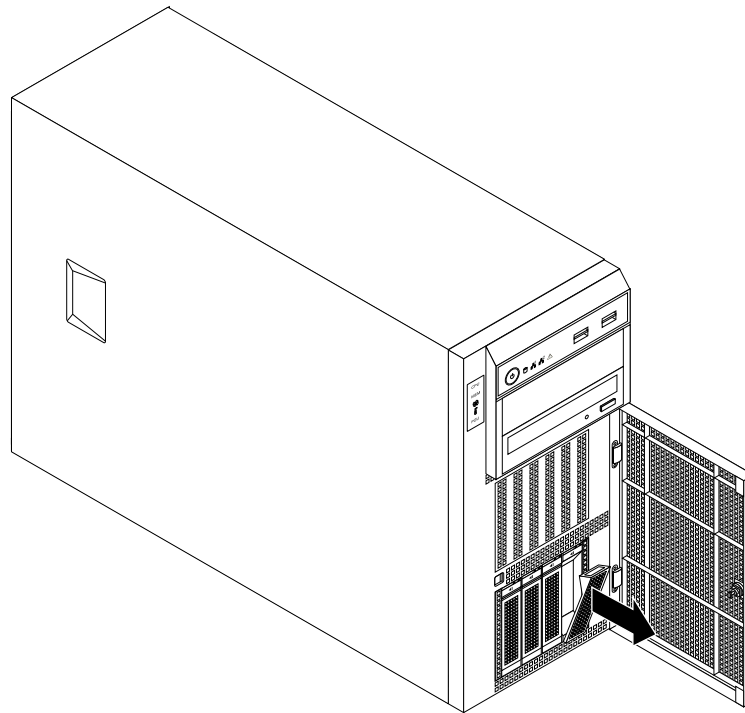


*Figure 83. Removing the dummy tray*

4. Touch the static-protective package that contains the 2.5-inch solid-state drive to any unpainted surface on the outside of the server. Then, take the solid-state drive out of the package.


**Note:** Do not touch the circuit board on the solid-state drive.

5. Position the 2.5-inch solid-state drive into the 3.5-inch to 2.5-inch drive adapter as shown in the following illustration.

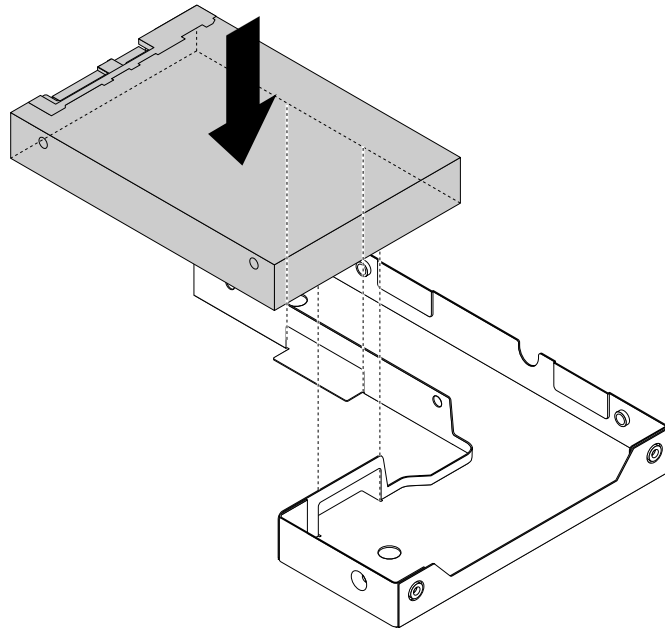

*Figure 84. Positioning the 2.5-inch solid-state drive into the drive adapter*

6. Align the two screw holes in the solid-state drive with the corresponding holes in the drive adapter. Then, install the two screws to secure the solid-state drive to the drive adapter.

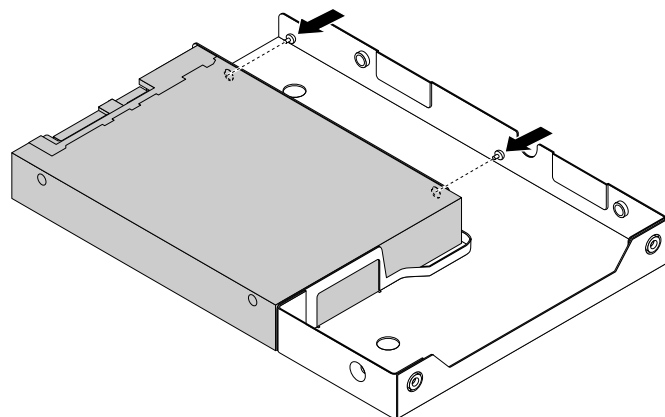

*Figure 85. Installing the screws to secure the solid-state drive to the drive adapter*

7. Position the drive adapter and the solid-state drive into the 3.5-inch drive bracket. Align the screw holes in the drive adapter and the solid-state drive with the corresponding holes in the bracket. Then, install the five screws to secure the drive adapter and the solid-state drive into the bracket.

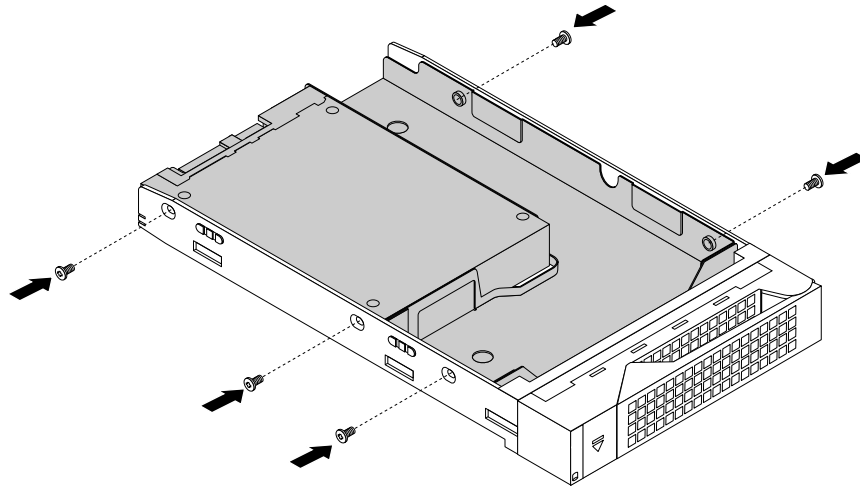


Figure 86. Installing the screws to secure the drive adapter and the solid-state drive to the bracket

8. Slide the solid-state drive into the drive bay from the front until it snaps into position, and then completely close the handle.

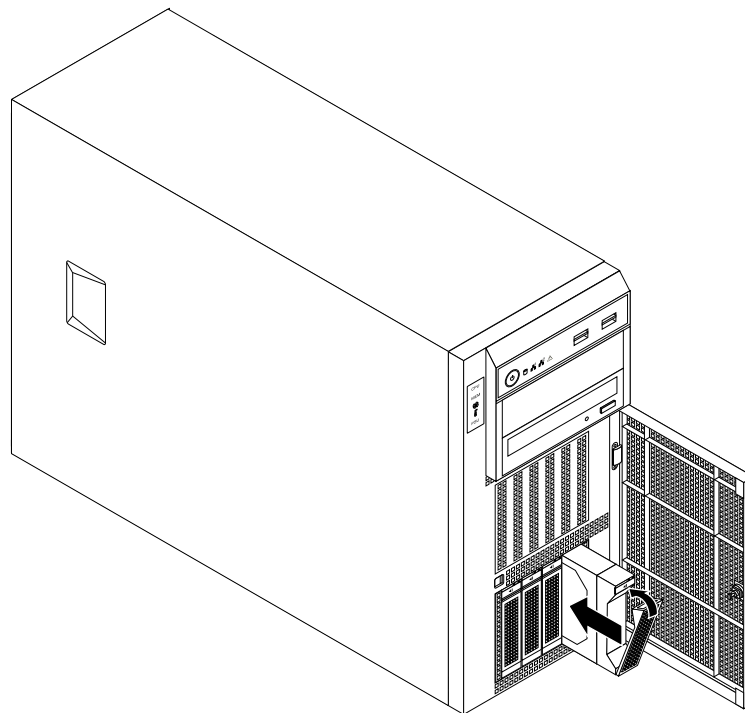


Figure 87. Installing the solid-state drive

9. Check the hard-disk-drive status LEDs to ensure that the solid-state drive is operating correctly. You might have to restart the server for the newly installed solid-state drive to be recognized. See “Hot-swap



hard disk drive status LEDs” on page 33. If the solid-state drive is faulty, reinstall or replace it until it is operating correctly.

10. Close and lock the front door.
11. Save the removed dummy hard-disk-drive tray in the event that you later remove the solid-state drive and need a dummy tray to cover the drive bay.

**What to do next:**

- To work with another piece of hardware, go to the appropriate section.
- To configure RAID, go to “Configuring RAID” on page 72.
- To complete the installation, go to “Completing the parts replacement” on page 200.

**Replacing a 2.5-inch solid-state drive from a 3.5-inch hard-disk-drive bay**

**Attention:** Do not open your server or attempt any repair before reading and understanding “Safety information” on page iii and “Guidelines” on page 83.

This topic provides instructions on how to replace a 2.5-inch solid-state drive from a 3.5-inch hard-disk-drive bay.

Before you begin, print all the related instructions or ensure that you can view the PDF version on another computer for reference.

To replace a 2.5-inch solid-state drive, do the following:

1. Locate the appropriate hard-disk-drive bay. See “Server components” on page 28.

2. Press the release button **1** to open the handle of the 3.5-inch drive bracket.

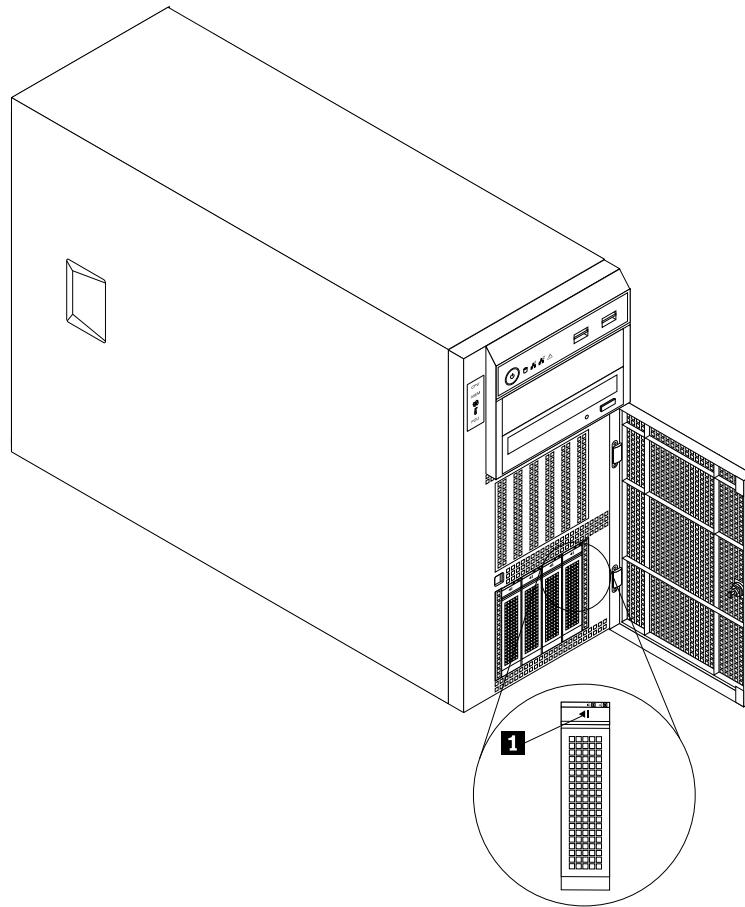


Figure 88. Opening the handle of the 3.5-inch drive bracket

3. Pull the handle and carefully slide the bracket with the solid-state drive out of the front of the chassis.

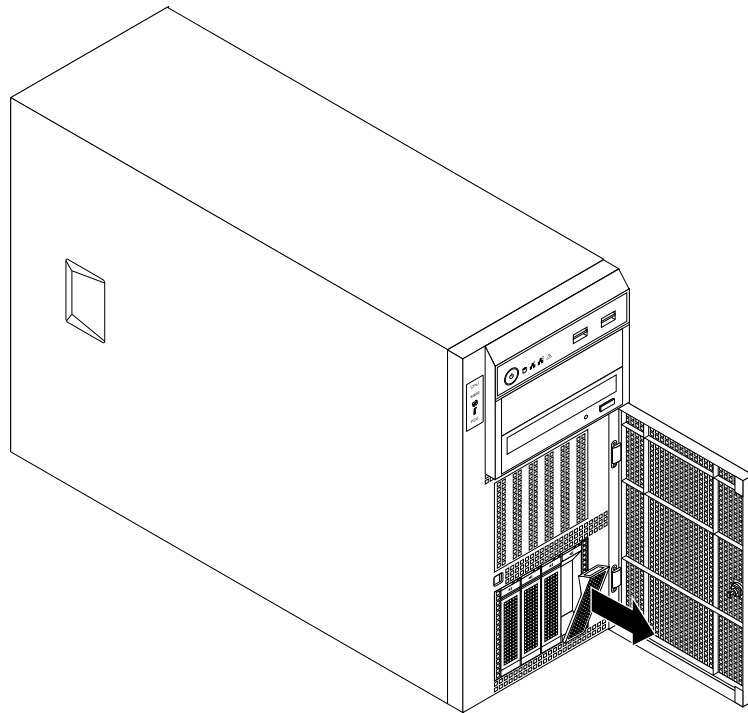


Figure 89. Removing the bracket with the solid-state drive

4. Remove the five screws that secure the solid-state drive and the drive adapter. Then, remove the solid-state drive and the drive adapter from the bracket.

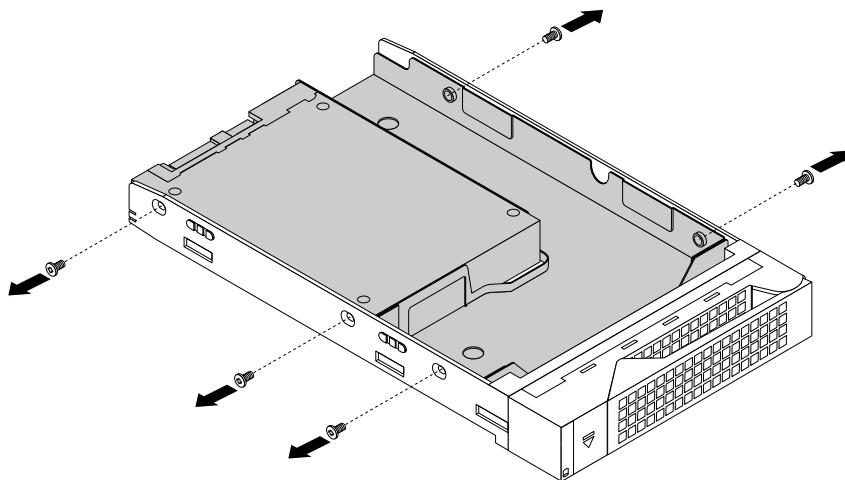


Figure 90. Removing the screws that secure the solid-state drive and the drive adapter

5. Remove the two screws that secure the solid-state drive.

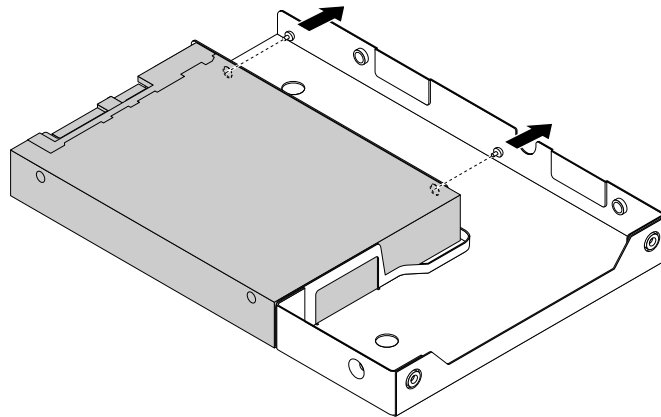


Figure 91. Removing the screws that secure the solid-state drive

6. Lift the solid-state drive up to remove it from the drive adapter.

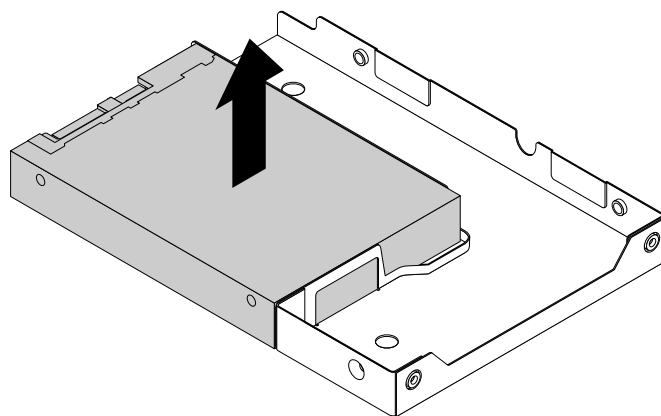


Figure 92. Removing the solid-state drive from the drive adapter

7. Install a new solid-state drive. See “Installing a 2.5-inch solid-state drive into a 3.5-inch hard-disk-drive bay” on page 144.
8. If you are instructed to return the old solid-state drive, follow all packaging instructions and use any packaging materials that are supplied to you for shipping.

**What to do next:**

- To work with another piece of hardware, go to the appropriate section.
- To configure RAID, go to “Configuring RAID” on page 72.
- To complete the installation, go to “Completing the parts replacement” on page 200.

## Installing or replacing a tape drive

This topic contains the following items:

- “Installing or replacing an internal RDX drive” on page 153

- “Connecting an external tape drive” on page 157

For a list of ThinkServer tape drive options, go to:  
<http://www.lenovo.com/thinkserver>

## Installing or replacing an internal RDX drive

**Attention:** Do not open your server or attempt any repair before reading and understanding “Safety information” on page iii and “Guidelines” on page 83.

Before you begin, print all the related instructions or ensure that you can view the PDF version on another computer for reference.

### Notes:

- The internal RDX drive must be installed in the upper optical drive bay.
- Depending on the model, your server might look slightly different from the illustrations in this topic.
- Use any documentation that comes with the RDX drive and follow those instructions in addition to the instructions in this topic.

To install or replace an internal RDX drive, do the following:

1. Remove all media from the drives and turn off all attached devices and the server. Then, disconnect all power cords from electrical outlets and disconnect all cables that are connected to the server.
2. Remove the server cover. See “Removing the server cover” on page 85.
3. Locate the optical drive bay where you want to install or replace the RDX drive. See “Server components” on page 28.
4. Depending on whether you are installing or replacing an RDX drive, do one of the following:

- If you are installing an RDX drive, remove the front bezel. See “Removing and reinstalling the front bezel” on page 87. Then, remove the plastic shield for the bay from the front panel. Remove the screw **1** that secures the metal EMI shield covered on the optical drive bay. Insert a finger into the hole in the EMI shield and carefully pull the EMI shield out of the front of the chassis.

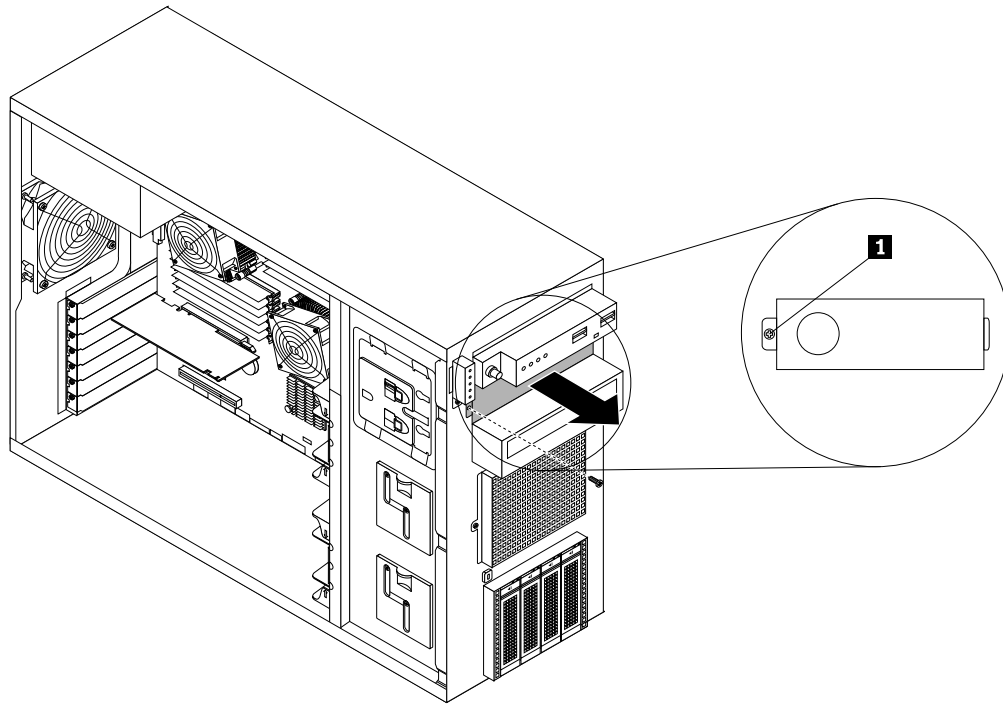


Figure 93. Removing the EMI shield for the optical drive bay

- If you are replacing an RDX drive, disconnect the signal cable and the power cable from the rear of the RDX drive. Press the release button **1** in the direction as shown and push the RDX drive from the rear until it is projected from the front of the chassis. Then, hold the RDX drive from the front and completely slide it out of the chassis.

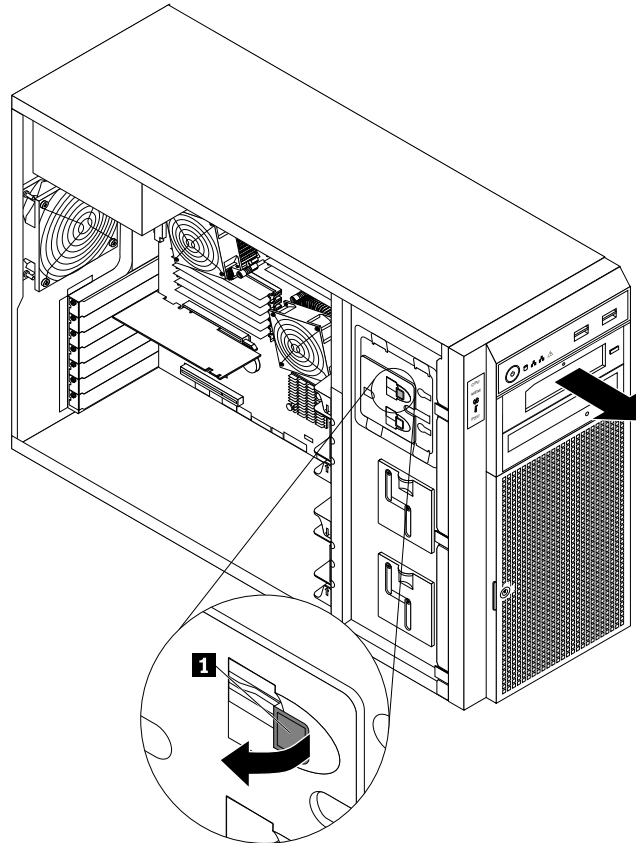


Figure 94. Removing the RDX drive

5. Touch the static-protective package that contains the new RDX drive to any unpainted surface on the outside of the server. Then, take the new RDX drive and the signal cable out of the package.

- Slide the new RDX drive into the optical drive bay from the front until it snaps into position.

**Note:** You do not need to remove the front bezel when replacing an RDX drive. However, if you are installing an RDX drive, you need to remove the front bezel first, and then gain access to the protective shields to remove them. The following illustration shows only the situation in which the front bezel has been removed.

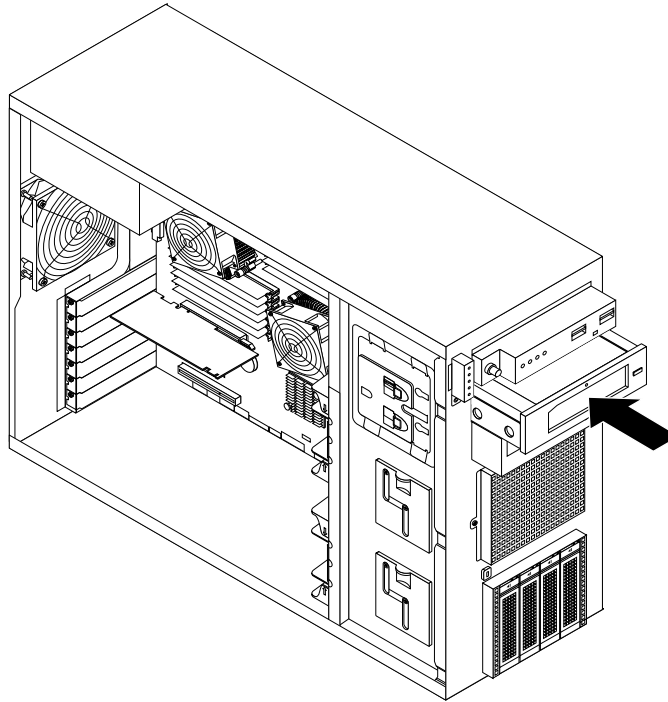


Figure 95. Installing the RDX drive

- Connect the 4-pin power cable **1** and the signal cable **2** to the rear of the RDX drive.

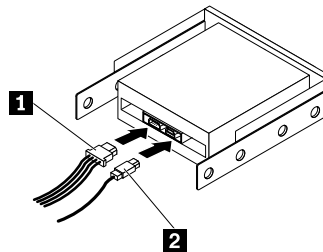


Figure 96. Connecting cables to the rear of the RDX drive

- If necessary, connect the USB connector on the other end of the signal cable **2** to the internal USB Type A connector on the system board. See “System board components” on page 48.
- Do one of the following:
  - If you are installing an RDX drive, save the removed EMI-protective shield from the chassis and plastic shield from the front bezel in the event that you later remove the drive and need the shields to cover the drive bay.



- If you are replacing an RDX drive and are instructed to return the old RDX drive, follow all packaging instructions and use any packaging materials that are supplied to you for shipping.

**What to do next:**

- To work with another piece of hardware, go to the appropriate section.
- To complete the installation or replacement, go to “Completing the parts replacement” on page 200.

**Connecting an external tape drive**

**Attention:** Do not open your server or attempt any repair before reading and understanding “Safety information” on page iii and “Guidelines” on page 83.

Before you begin, print all the related instructions or ensure that you can view the PDF version on another computer for reference.

**Notes:**

- Depending on the model, your tape drive might look slightly different from the illustrations in this topic.
- Use any documentation that comes with the tape drive and follow those instructions in addition to the instructions in this topic.

To connect an external tape drive, do the following:

1. Turn off the server and disconnect the server from the ac power source.
2. Connect one end of a mini-SAS signal cable to the mini-SAS connector **1** on the rear of the external tape drive.

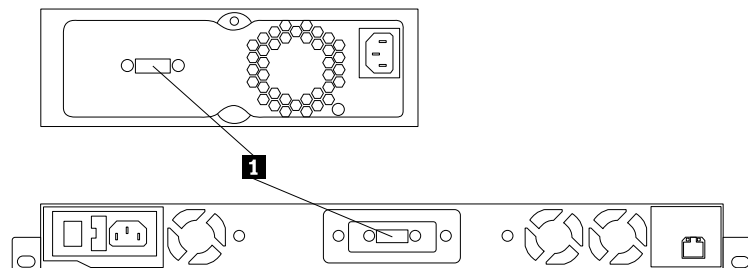


Figure 97. Mini-SAS connector **1** on the external tape drive

3. Connect the other end of the mini-SAS signal cable to an available mini-SAS connector provided by the Host Bus Adapter installed in your server.
4. Connect the external tape drive to an ac power source. Then, turn on the tape drive if necessary.
5. Connect the server to an ac power source and turn on the server to verify if the tape drive works correctly.

**Installing or replacing the microprocessor**

This topic provides instructions on how to install or replace the microprocessor.

**Installing the second microprocessor**

**Attention:** Do not open your server or attempt any repair before reading and understanding “Safety information” on page iii and “Guidelines” on page 83.

This topic provides instructions on how to install the second microprocessor.

Depending on the model, your server might come with one or two microprocessors. For server models with one microprocessor, the microprocessor is installed in the microprocessor socket 1 and the microprocessor socket 2 is protected by a plastic socket cover. You can purchase a microprocessor option kit from Lenovo and install the second microprocessor to expand system capabilities.

**CAUTION:**



**Turn off the server and wait three to five minutes to let the server cool before removing the server cover.**

Before you begin, print all the related instructions or ensure that you can view the PDF version on another computer for reference.

**Notes:**

- Ensure that you install the correct type of microprocessor option your server supports. See “Memory module installation rules” on page 93. When two microprocessors are installed, both must have the same core voltage and core speed.
- Use any documentation that comes with the microprocessor option kit and follow those instructions in addition to the instructions in this topic.
- Your microprocessor, socket, and socket cover might look slightly different from the illustrations in this topic.

To install the second microprocessor, do the following:

1. Remove all media from the drives and turn off all attached devices and the server. Then, disconnect all power cords from electrical outlets and disconnect all cables that are connected to the server.
2. Remove the server cover. See “Removing the server cover” on page 85.
3. Lay the server on its side for easier operation.
4. Locate the microprocessor socket 2 on the system board. See “System board components” on page 48.

5. Press down the small handle on the microprocessor socket, and then pull the handle a little bit outward to release it from the secured position. Then, gently press the microprocessor retainer to open it. Ensure that the small handle and the microprocessor retainer are in the fully open position.

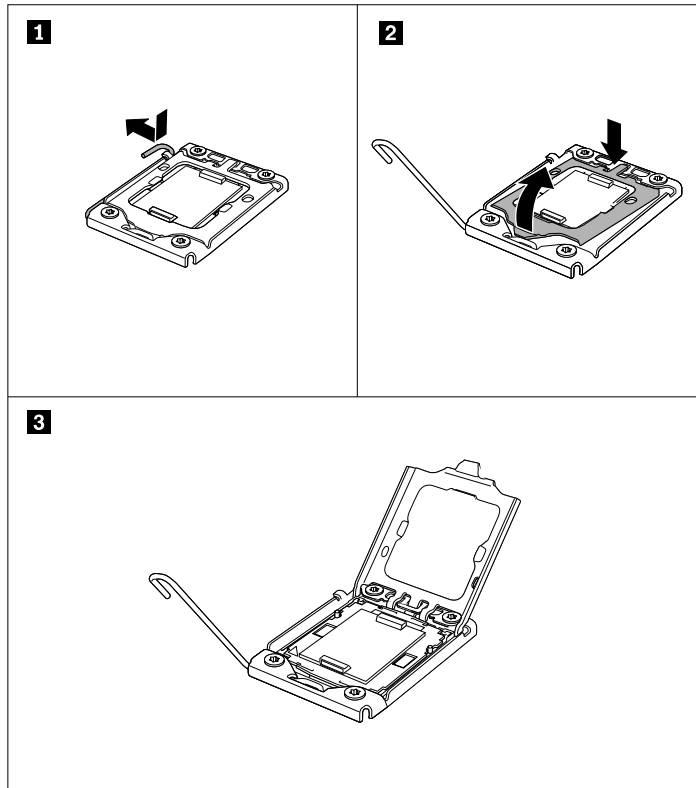


Figure 98. Opening the handle and microprocessor retainer

6. Remove the plastic microprocessor socket cover. Store the microprocessor socket cover in the event that you later remove the microprocessor and need the socket cover to protect the pins on the socket.

**Note:** Do not drop anything onto the microprocessor socket while it is exposed. The socket pins must be kept as clean as possible.

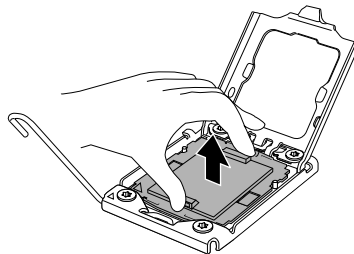


Figure 99. Removing the microprocessor socket cover

7. Touch the static-protective package that contains the new microprocessor to any unpainted surface on the outside of the server. Then, remove the new microprocessor from the package.

- Remove the protective cover that protects the gold contacts on the bottom of the new microprocessor. Do not touch the pins on the microprocessor socket and the gold contacts on the bottom of the new microprocessor.

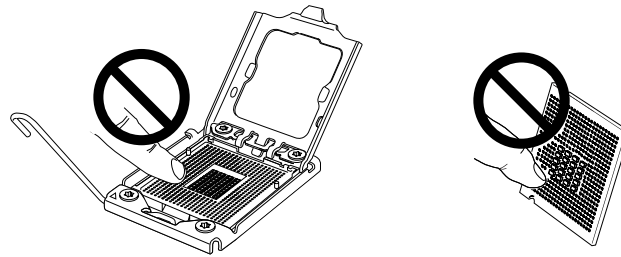


Figure 100. Do not touch the pins

- Note the orientation of the new microprocessor. Hold the new microprocessor by its edges and align the notches **1** on it with the tabs **2** in the microprocessor socket. Then, carefully lower the new microprocessor straight down into the microprocessor socket.

**Note:** The small triangle **3** on one corner of the new microprocessor is the microprocessor orientation indicator. The new microprocessor is in the correct orientation when this indicator faces the beveled corner **4** of the microprocessor socket.

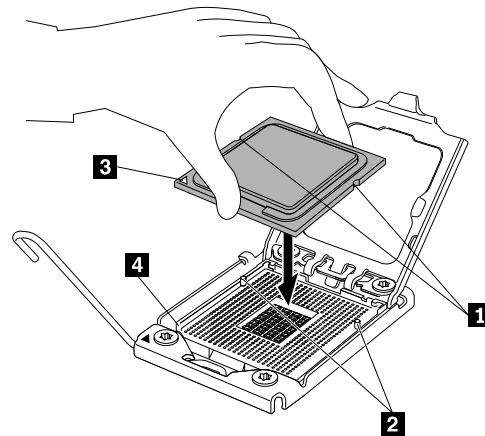


Figure 101. Installing the microprocessor

10. Gently close the microprocessor retainer, press down the small handle, and then push the handle inward to lock the retainer into position and secure the new microprocessor in the socket.

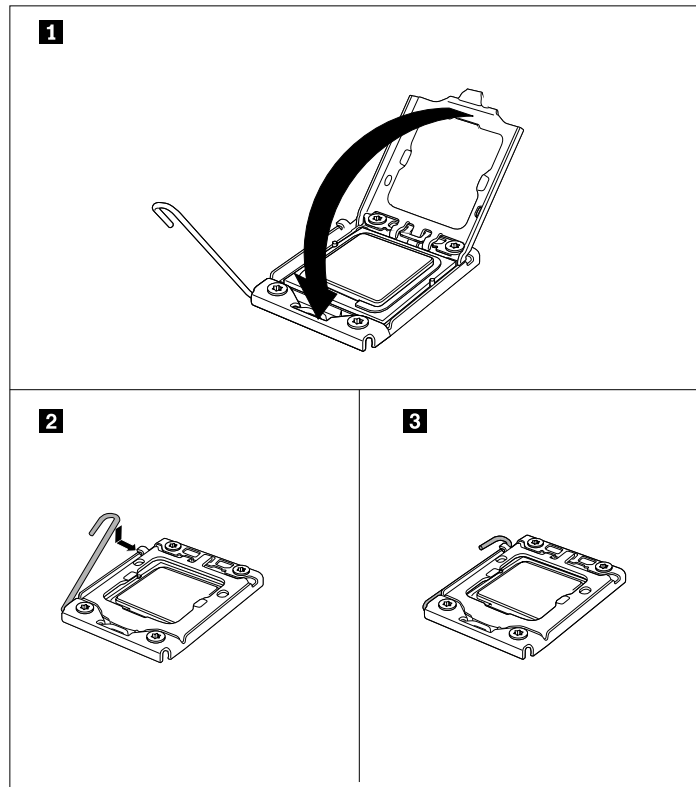


Figure 102. Securing the microprocessor in the socket

11. Install the new heat sink and fan assembly that comes with the microprocessor option kit. See “Replacing the heat sink and fan assembly 1” on page 188.

#### What to do next:

- To work with another piece of hardware, go to the appropriate section.
- To complete the installation, go to “Completing the parts replacement” on page 200.

### Replacing the microprocessor

**Attention:** Do not open your server or attempt any repair before reading and understanding “Safety information” on page iii and “Guidelines” on page 83.

This topic provides instructions on how to replace the microprocessor.

#### CAUTION:



**The heat sink and fan assembly and the microprocessor might be very hot. Turn off the server and wait three to five minutes to let the server cool before removing the server cover.**

Before you begin, print all the related instructions or ensure that you can view the PDF version on another computer for reference.

**Notes:**

- Ensure that the new microprocessor is the correct type your server supports. See “Memory module installation rules” on page 93. When two microprocessors are installed, both must have the same core voltage and core speed.
- Use any documentation that comes with the microprocessor option kit and follow those instructions in addition to the instructions in this topic.
- Your microprocessor, socket, and socket cover might look slightly different from the illustrations in this topic.

To replace the microprocessor, do the following:

1. Remove all media from the drives and turn off all attached devices and the server. Then, disconnect all power cords from electrical outlets and disconnect all cables that are connected to the server.
2. Remove the server cover. See “Removing the server cover” on page 85.
3. Lay the server on its side for easier operation.
4. Remove the heat sink and fan assembly. See “Replacing the heat sink and fan assembly 1” on page 188.
5. Locate the microprocessor socket, press down the small handle on the microprocessor socket, and then pull the handle a little bit outward to release it from the secured position. Then, gently press the microprocessor retainer to open it. Ensure that the small handle and the microprocessor retainer are in the fully open position.

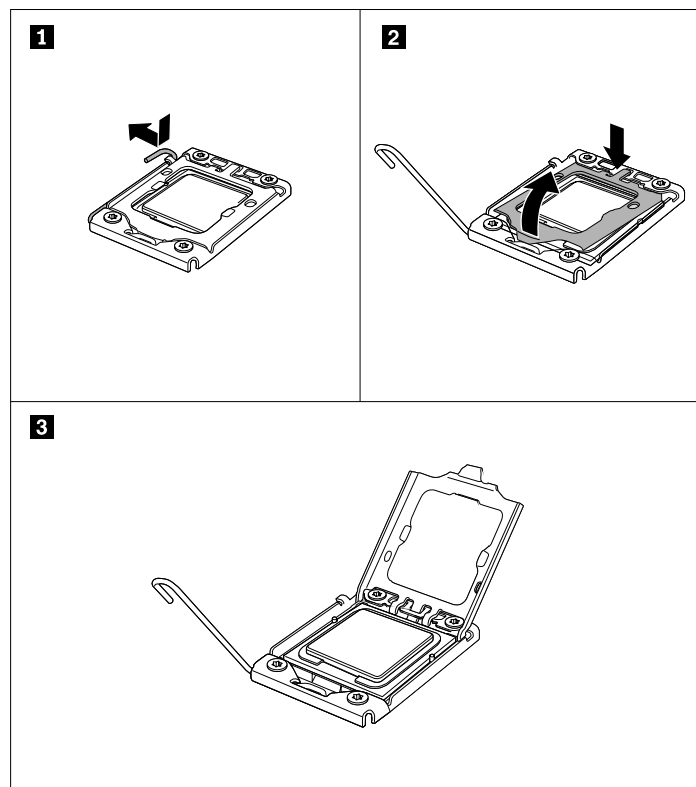


Figure 103. Opening the handle and microprocessor retainer

6. Touch only the edges of the microprocessor and carefully lift it straight up and out of the microprocessor socket. Place the old microprocessor on a static-protective surface.

**Notes:**

- Do not touch the gold contacts on the bottom of the microprocessor.
- Do not drop anything onto the microprocessor socket while it is exposed. The socket pins must be kept as clean as possible.

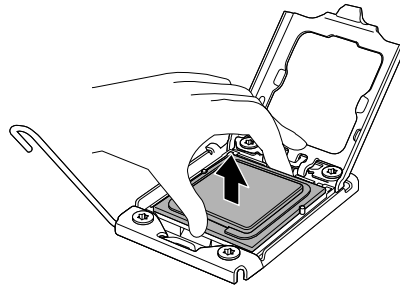


Figure 104. Removing the microprocessor

7. Touch the static-protective package that contains the new microprocessor to any unpainted surface on the outside of the server. Then, remove the new microprocessor from the package.
8. Remove the protective cover that protects the gold contacts on the bottom of the new microprocessor. Do not touch the pins on the microprocessor socket and the gold contacts on the bottom of the new microprocessor.

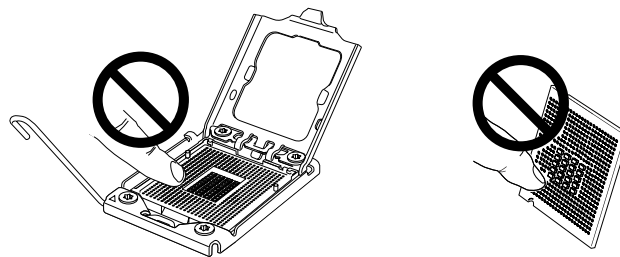


Figure 105. Do not touch the pins

- Note the orientation of the new microprocessor. Hold the new microprocessor by its edges and align the notches **1** on it with the tabs **2** in the microprocessor socket. Then, carefully lower the new microprocessor straight down into the microprocessor socket.

**Note:** The small triangle **3** on one corner of the new microprocessor is the microprocessor orientation indicator. The new microprocessor is in the correct orientation when this indicator faces the beveled corner **4** of the microprocessor socket.

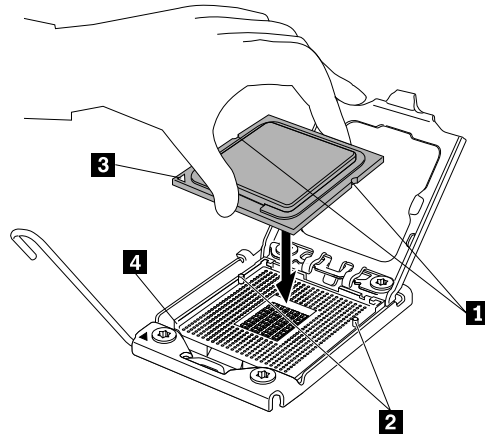


Figure 106. Installing the microprocessor



10. Gently close the microprocessor retainer, press down the small handle, and then push the handle inward to lock the retainer into position and secure the new microprocessor in the socket.

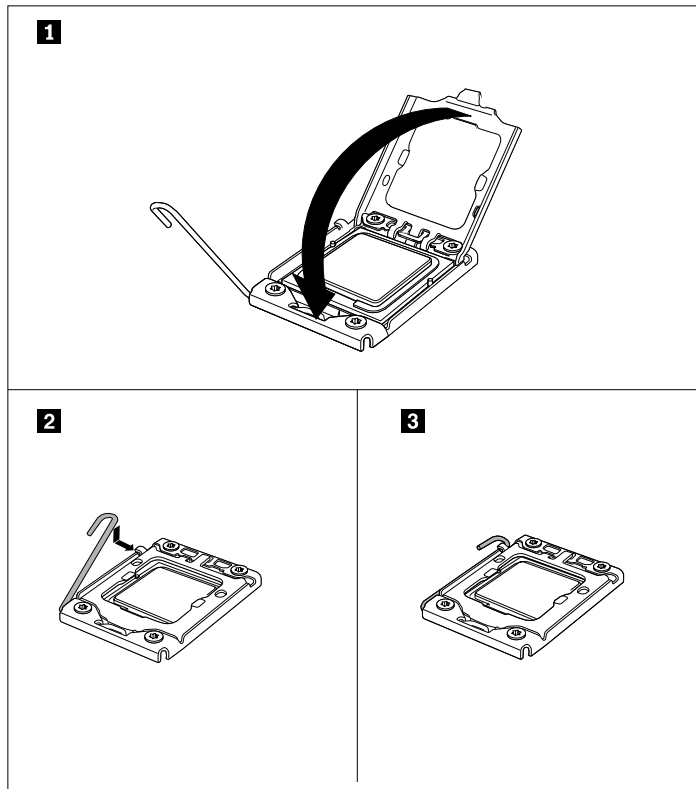


Figure 107. Securing the microprocessor in the socket

11. Reinstall the heat sink and fan assembly. See “Replacing the heat sink and fan assembly 1” on page 188.
12. If you are instructed to return the old microprocessor, follow all packaging instructions and use any packaging materials that are supplied to you for shipping.

**What to do next:**

- To work with another piece of hardware, go to the appropriate section.
- To complete the replacement, go to “Completing the parts replacement” on page 200.

## Installing or replacing a hot-swap redundant power supply

**Attention:** Do not open your server or attempt any repair before reading and understanding the “Safety information” on page iii and “Guidelines” on page 83.


This topic provides instructions on how to install or replace a hot-swap redundant power supply. This topic applies only to server models that come with one or two hot-swap redundant power supplies.

The hot-swap redundant power supply adds a second source of power to the server. When the server is populated with two hot-swap redundant power supplies, it can withstand a power loss from either power supply. This helps you avoid significant interruption to the operation of the server when a power supply fails. You can replace the failing hot-swap redundant power supply without turning off the server.

Some server models come with only one power supply. You can purchase a hot-swap redundant power supply option from Lenovo.

**CAUTION:**

**Hazardous moving parts. Keep fingers and other body parts away.**

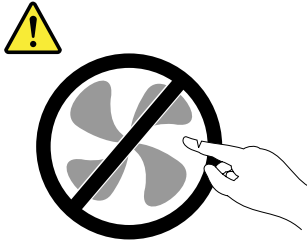

**CAUTION:**

**Never remove the cover on a power supply or any part that has the following label attached.**



**Hazardous voltage, current, and energy levels are present inside any component that has this label attached. There are no serviceable parts inside these components. If you suspect a problem with one of these parts, contact a service technician.**

Before you begin, print all the related instructions or ensure that you can view the PDF version on another computer for reference.

**Notes:**

- To maintain the EMI integrity and cooling of the server, install a new hot-swap redundant power supply as soon as you remove the failing one or cover the other bay with a shield if you just use one power supply to provide power.
- Your hot-swap redundant power supply might look slightly different from the illustrations in this topic.
- Use any documentation that comes with the new hot-swap redundant power supply and follow those instructions in addition to the instructions in this topic.

To install or replace a hot-swap redundant power supply, do the following:

1. Do one of the following:

- If you are installing a hot-swap redundant power supply, locate the bay for the power supply in the rear of your server. Insert a finger into the hole in the metal shield that protects the bay, press the tab **1** in the direction as shown, and then pull the shield out of the chassis. Store the shield in the event that you later remove the power supply and need the shield to cover the bay.

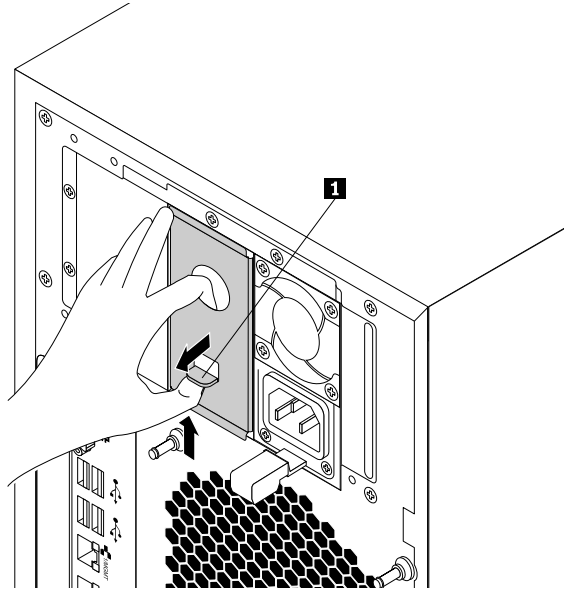


Figure 108. Removing the protective shield for the power supply bay

- If you are replacing a hot-swap redundant power supply, locate the failing power supply in the rear of your server, and then disconnect the power cord from the failing hot-swap redundant power supply.

**Note:** On each hot-swap redundant power supply, there is a status LED near the power cord connector. When the LED is lit in green, it indicates that the hot-swap redundant power supply is working correctly. When the LED is lit in amber, it indicates that the hot-swap redundant power supply is likely to fail or has failed.

2. If you are replacing a hot-swap redundant power supply, press the release tab **1** in the direction as shown and carefully pull the handle **2** at the same time to slide the failing hot-swap redundant power supply out of the chassis.

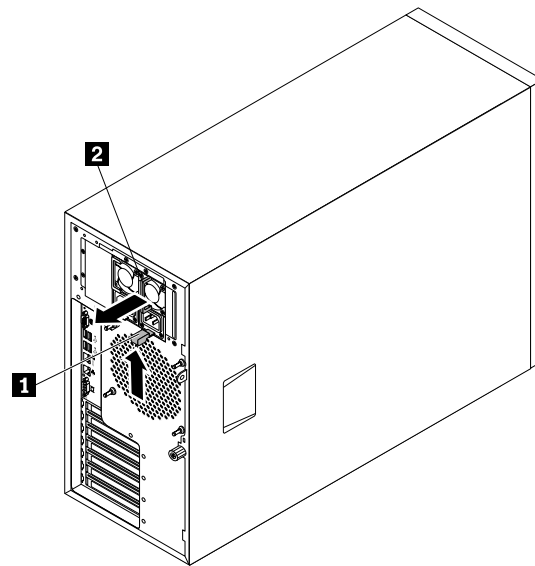


Figure 109. Removing a hot-swap redundant power supply

3. Touch the static-protective package that contains the new hot-swap redundant power supply to any unpainted surface on the outside of the server. Then, remove the new hot-swap redundant power supply from the package.
4. Note the orientation of the new hot-swap redundant power supply, and then slide it into the chassis until it snaps into position.

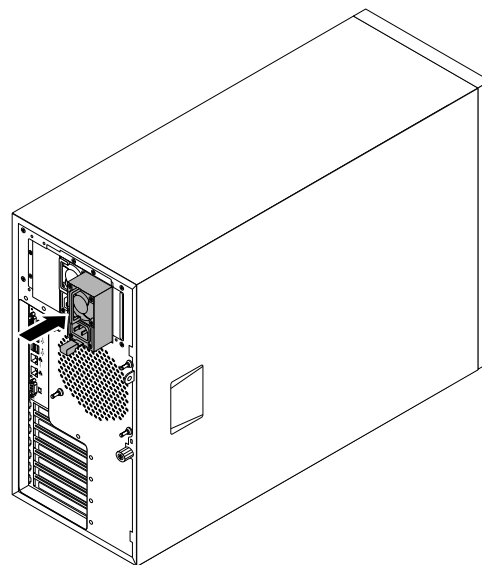


Figure 110. Installing a hot-swap redundant power supply

5. Connect the power cord to the power cord connector on the new hot-swap redundant power supply. Then, check the status LED near the power cord connector. When the LED is lit in green, it indicates that the hot-swap redundant power supply is working correctly. When the LED is lit in amber, it indicates that the hot-swap redundant power supply is likely to fail or has failed. Reinstall the new hot-swap redundant power supply to see if the problem can be solved. If the new hot-swap redundant power supply still does not work correctly, contact your place of purchase or a service representative for help.
6. If you are instructed to return the old hot-swap redundant power supply, follow all packaging instructions and use any packaging materials that are supplied to you for shipping.

## Replacing the PCI Express solid-state drive

**Attention:** Do not open your server or attempt any repair before reading and understanding “Safety information” on page iii and “Guidelines” on page 83.

This topic provides instructions on how to replace the PCI Express solid-state drive.

Before you begin, print all the related instructions or ensure that you can view the PDF version on another computer for reference.

### Notes:

- The PCI Express solid-state drive is extremely sensitive to ESD. Ensure that you read and understand “Handling static-sensitive devices” on page 84 first and carefully perform the operation.
- Use any documentation that comes with the PCI Express solid-state drive and follow those instructions in addition to the instructions in this topic.
- Depending on the specific type, the PCI Express solid-state drive might look different from the illustrations in this topic.
- If your server has one microprocessor installed, the PCI Express solid-state drive is installed in the PCI-E slot 2. If your server has two microprocessors installed, the PCI Express solid-state drive is installed in the PCI-E slot 2, PCI-E slot 3, or PCI-E slot 6.

To replace the PCI Express solid-state drive, do the following:

1. Remove all media from the drives and turn off all attached devices and the server. Then, disconnect all power cords from electrical outlets and disconnect all cables that are connected to the server.
2. Remove the server cover. See “Removing the server cover” on page 85.
3. Lay the server on its side for easier operation.
4. If a PCI card bracket assembly is installed in your server, remove the PCI card bracket assembly. See “Removing and reinstalling the PCI card bracket assembly” on page 89.
5. Locate the PCI Express solid-state drive. See “System board components” on page 48.
6. Remove any parts or disconnect any cables that might impede your operation.
7. Remove the PCI Express solid-state drive. The procedure is similar to that of the Ethernet card. See “Removing the Ethernet card” on page 103.

**Note:** Carefully handle the PCI Express solid-state drive by its edges.

8. Touch the static-protective package that contains the new PCI Express solid-state drive to any unpainted surface on the outside of the server. Then, take the new PCI Express solid-state drive out of the package.

**Note:** Carefully handle the PCI Express solid-state drive by its edges.

9. Install the PCI Express solid-state drive. The procedure is similar to that of the Ethernet card. See “Installing the Ethernet card” on page 100.

10. If you are instructed to return the old PCI Express solid-state drive, follow all packaging instructions and use any packaging materials that are supplied to you for shipping.

**What to do next:**

- To work with another piece of hardware, go to the appropriate section.
- To complete the replacement, go to “Completing the parts replacement” on page 200.


## Replacing the non-hot-swap power supply assembly

**Attention:** Do not open your server or attempt any repair before reading and understanding “Safety information” on page iii and “Guidelines” on page 83.

This topic provides instructions on how to replace the non-hot-swap power supply assembly. This topic applies only to server models that come with a non-hot-swap power supply assembly.

**CAUTION:**

**Hazardous moving parts. Keep fingers and other body parts away.**

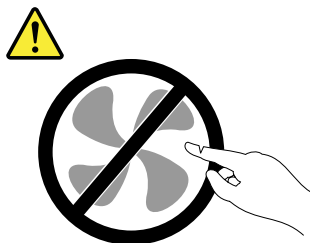

**CAUTION:**

**Never remove the cover on a power supply or any part that has the following label attached.**



**Hazardous voltage, current, and energy levels are present inside any component that has this label attached. There are no serviceable parts inside these components. If you suspect a problem with one of these parts, contact a service technician.**

Before you begin, print all the related instructions or ensure that you can view the PDF version on another computer for reference.

**Notes:**

- Depending on the model, your server might look slightly different from the illustrations in this topic.
- Use any documentation that comes with the new non-hot-swap power supply assembly and follow those instructions in addition to the instructions in this topic.

To replace the non-hot-swap power supply assembly, do the following:

1. Remove all media from the drives and turn off all attached devices and the server. Then, disconnect all power cords from electrical outlets and disconnect all cables that are connected to the server.
2. Remove the server cover. See “Removing the server cover” on page 85.

3. Lay the server on its side for easier operation.
4. Remove the front system fans. See “Replacing the front system fan 1” on page 183.
5. Record the cable routing and connection. Then, disconnect the power supply assembly cables from the system board and all drives. For server models with hot-swap hard disk drives, you also need to disconnect the power cables from the hot-swap hard-disk-drive backplanes.
6. Release the power supply assembly cables from the cable clips and ties in the chassis.
7. Remove the four screws **1** at the rear of the chassis that secure the power supply assembly, and then push the power supply assembly from the rear until it is released from the metal retaining tab **2**. Then, carefully lift it out of the chassis.

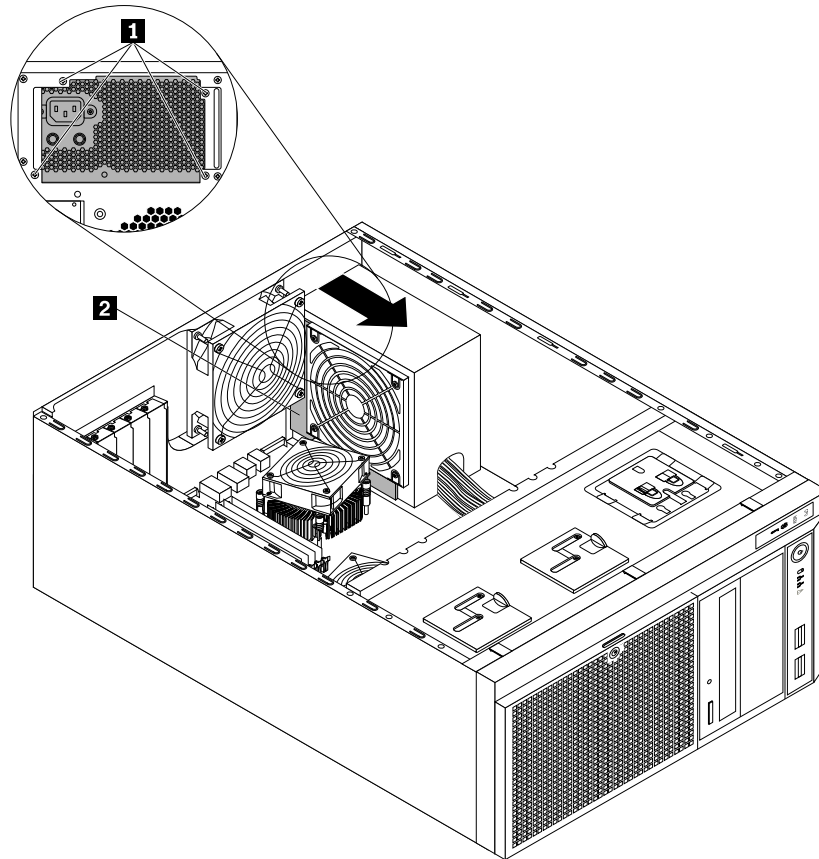


Figure 111. Removing the non-hot-swap power supply assembly

8. Touch the static-protective package that contains the new power supply assembly to any unpainted surface on the outside of the server. Then, remove the new power supply assembly from the package and ensure that the new power supply assembly is the correct replacement. See “Features” on page 7 for information about the supported power supply assembly.

9. Install the new power supply assembly into the chassis so that the four screw holes in the new power supply assembly are aligned with the corresponding holes marked with A in the rear of the chassis. Then, install the four screws **1** to secure the new power supply assembly in place.

**Note:** Use only screws provided by Lenovo.

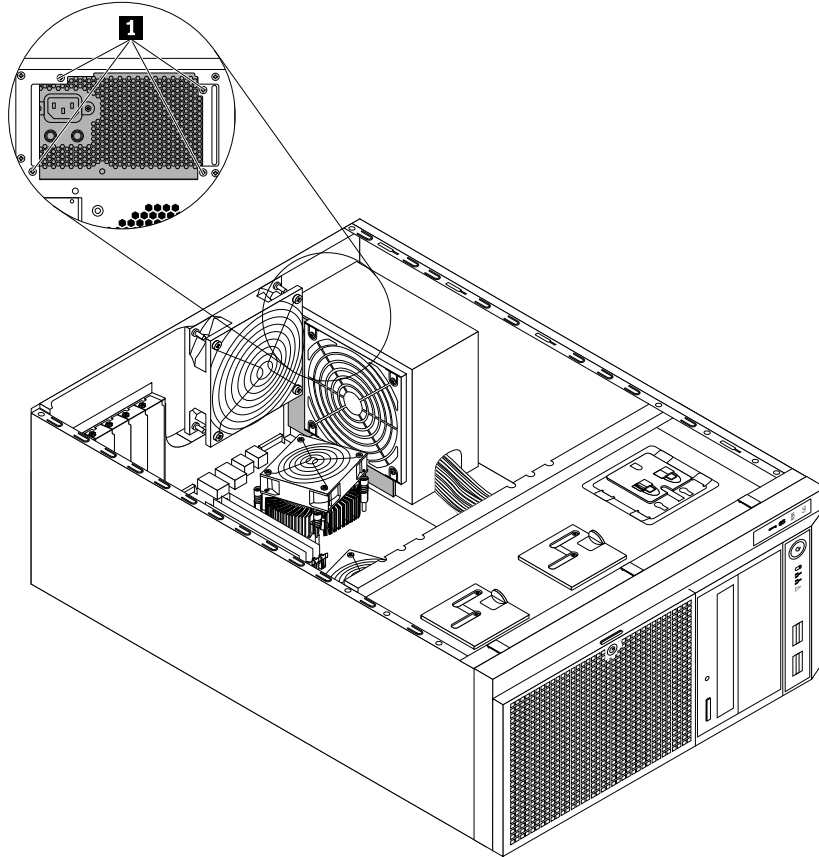


Figure 112. Installing the non-hot-swap power supply assembly

10. Refer to your note to connect the new power supply assembly cables to the system board, all drives, and or hot-swap hard-disk-drive backplanes, depending on the model. Then, properly route the cables and secure the cables with the cable clips and ties in the chassis.
11. Reinstall the front system fans. See “Replacing the front system fan 1” on page 183.
12. If you are instructed to return the old non-hot-swap power supply assembly, follow all packaging instructions and use any packaging materials that are supplied to you for shipping.

**What to do next:**

- To work with another piece of hardware, go to the appropriate section.
- To complete the replacement, go to “Completing the parts replacement” on page 200.

## Replacing the hot-swap hard-disk-drive backplane

**Attention:** Do not open your server or attempt any repair before reading and understanding “Safety information” on page iii and “Guidelines” on page 83.



This topic provides instructions on how to replace the hot-swap hard-disk-drive backplane. This topic applies only to server models that have hot-swap hard disk drives installed.

Before you begin, print all the related instructions or ensure that you can view the PDF version on another computer for reference.

**Notes:**

- The hot-swap hard-disk-drive backplane is sensitive to ESD. Ensure that you read and understand “Handling static-sensitive devices” on page 84 first and carefully perform the operation.
- Depending on the model, your server might look slightly different from the illustrations in this topic.
- Use any documentation that comes with the new hot-swap hard-disk-drive backplane and follow those instructions in addition to the instructions in this topic.

To replace the hot-swap hard-disk-drive backplane, do the following:

1. Remove all media from the drives and turn off all attached devices and the server. Then, disconnect all power cords from electrical outlets and disconnect all cables that are connected to the server.
2. Remove the server cover. See “Removing the server cover” on page 85.
3. Remove the front bezel. See “Removing and reinstalling the front bezel” on page 87.
4. Locate the backplanes. See “Hot-swap hard-disk-drive backplane” on page 39.
5. Remove the front system fan 1. See “Replacing the front system fan 1” on page 183.
6. Remove all the installed hot-swap hard disk drives and dummy trays (if any) from the hard-disk-drive cage. See “Installing or replacing a hot-swap hard disk drive” on page 130.
7. Record the cable connections on the backplane, and then disconnect all the cables from the backplane.

- Lift the release latch **1** and slide the hard-disk-drive cage out of the front of the chassis.

**Note:** The following illustration shows the 3.5-inch hard-disk-drive cage. For the 2.5-inch hard-disk-drive cage, the removal procedure is the same.

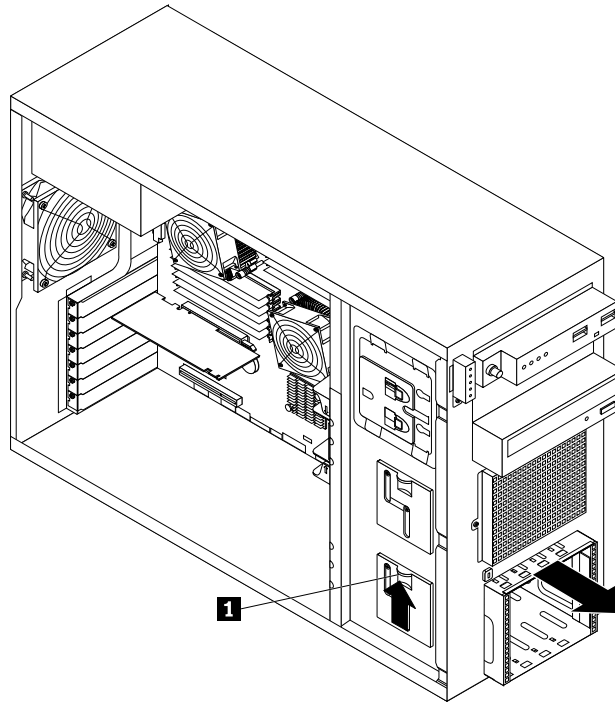


Figure 113. Removing the hard-disk-drive cage

- Depending on whether your server has 2.5-inch hot-swap hard-disk-drive cages with backplanes or 3.5-inch hot-swap hard-disk-drive cages with backplanes, do one of the following:
  - For the 3.5-inch hot-swap hard-disk-drive backplane, remove the four screws that secure the backplane, and then remove the backplane from the hard-disk-drive cage.

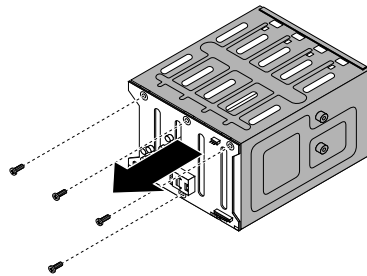


Figure 114. Removing the 3.5-inch hot-swap hard-disk-drive backplane

- For the 2.5-inch hot-swap hard-disk-drive backplane, remove the six screws or three screws that secure the backplane depending on the type of the backplane. Then, remove the backplane from the hard-disk-drive cage.

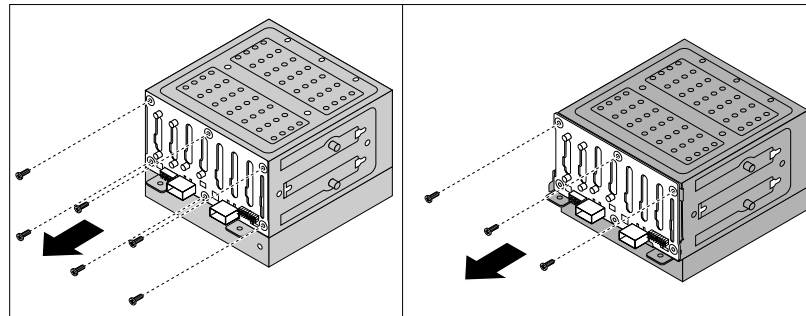


Figure 115. Removing the 2.5-inch hot-swap hard-disk-drive backplane

10. Touch the static-protective package that contains the new backplane to any unpainted surface on the outside of the server. Then, remove the new backplane from the package.

**Note:** Carefully handle the backplane by its edges.

11. Position the new backplane on the hard-disk-drive cage so that the screw holes in the new backplane are aligned with the corresponding holes in the hard-disk-drive cage. Then, do one of the following depending on the hard-disk-drive cage:
  - For the 3.5-inch hot-swap hard-disk-drive cage, install the four screws to secure the backplane on the cage.

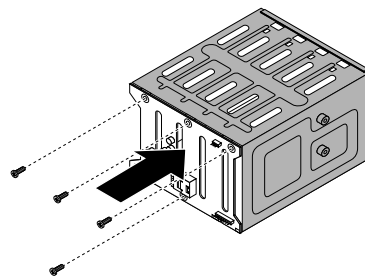


Figure 116. Installing the 3.5-inch hot-swap hard-disk-drive backplane

- For the 2.5-inch hot-swap hard-disk-drive cage, install the six screws to secure the backplane on the cage.

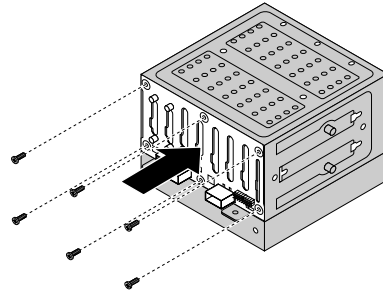


Figure 117. Installing the 2.5-inch hot-swap hard-disk-drive backplane

**Note:** If you want to install the following backplane for the 2.5-inch hot-swap hard-disk-drive cage, ensure that the backplane is secured by the two tabs **1**. Then, install the three screws to secure the backplane on the cage.

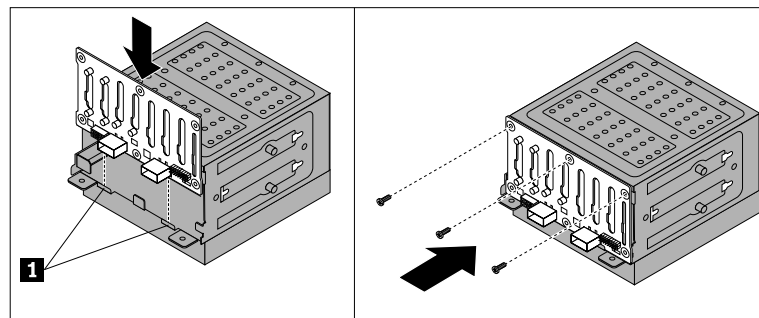


Figure 118. Installing the 2.5-inch hot-swap hard-disk-drive backplane

- Slide the hard-disk-drive cage into the chassis from the front until it snaps into position.

**Note:** The following illustration shows the 3.5-inch hard-disk-drive cage. For the 2.5-inch hard-disk-drive cage, the installation procedure is the same.

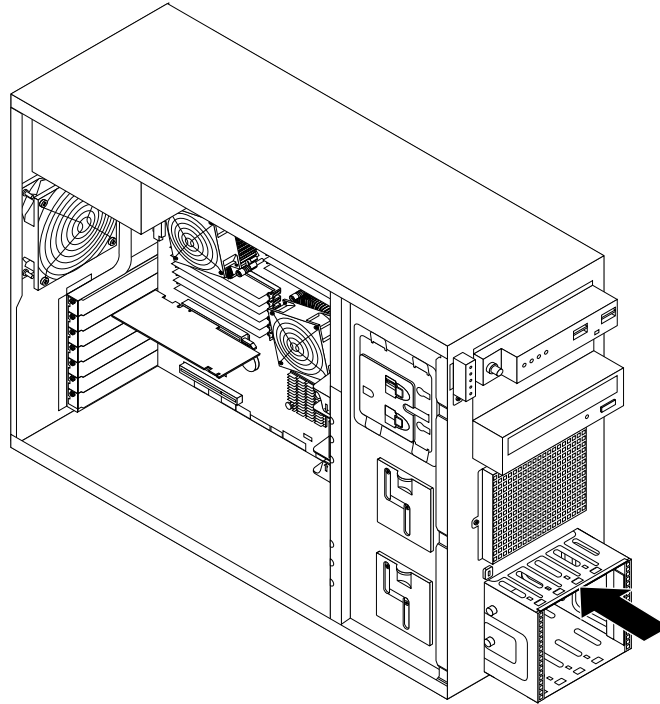


Figure 119. Installing the hard-disk-drive cage

- Reinstall all the hot-swap hard disk drives and dummy trays (if any) in the hard-disk-drive cage. See “Installing or replacing a hot-swap hard disk drive” on page 130.
- Refer to your note to reconnect the cables to the backplane.
- Reinstall the front system fan 1. See “Replacing the front system fan 1” on page 183.
- Reinstall the front bezel. See “Removing and reinstalling the front bezel” on page 87.
- If you are instructed to return the old backplane, follow all packaging instructions and use any packaging materials that are supplied to you for shipping.

**What to do next:**

- To work with another piece of hardware, go to the appropriate section.
- To complete the replacement, go to “Completing the parts replacement” on page 200.


## Replacing the power distribution board and cage assembly

**Attention:** Do not open your server or attempt any repair before reading and understanding “Safety information” on page iii and “Guidelines” on page 83.

This topic provides instructions on how to replace the power distribution board and cage assembly. This topic applies only to server models that come with hot-swap redundant power supplies.

**CAUTION:**

**Hazardous moving parts. Keep fingers and other body parts away.**

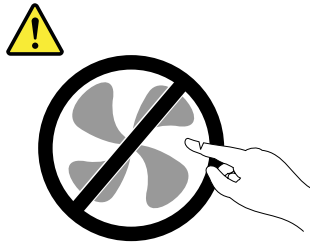

**CAUTION:**

**Never remove the cover on a power supply or any part that has the following label attached.**



**Hazardous voltage, current, and energy levels are present inside any component that has this label attached. There are no serviceable parts inside these components. If you suspect a problem with one of these parts, contact a service technician.**

Before you begin, print all the related instructions or ensure that you can view the PDF version on another computer for reference.

**Notes:**

- Depending on the model, your server might look slightly different from the illustrations in this topic.
- Use any documentation that comes with the new power distribution board and cage assembly and follow those instructions in addition to the instructions in this topic.


To replace the power distribution board and cage assembly, do the following:

1. Remove all media from the drives and turn off all attached devices and the server. Then, disconnect all power cords from electrical outlets and disconnect all cables that are connected to the server.
2. Remove the hot-swap redundant power supplies. See “Installing or replacing a hot-swap redundant power supply” on page 165.

**Note:** If your server comes with one hot-swap redundant power supply installed in the redundant power supply bay 1 (the bay number is marked on the rear of the chassis), there is a shield installed on bay 2 to protect the empty bay. Remove the shield and save it for future use.

3. Remove the server cover. See “Removing the server cover” on page 85.
4. Lay the server on its side for easier operation.
5. Remove the front system fans. See “Replacing the front system fan 1” on page 183.
6. Record the cable routing and connection. Then, disconnect the power cables of the power distribution board and cage assembly from the system board and all drives. For server models with hot-swap hard disk drives, you also need to disconnect the power cables from the hot-swap hard-disk-drive backplanes.
7. Release the power cables of the power distribution board and cage assembly from the cable clips and ties in the chassis.

8. Remove the two screws at the rear of the chassis and the two screws on the metal clip at the front of the power distribution board and cage assembly. Then, push the power distribution board and cage assembly to the rear, and then carefully slide it out of the chassis.

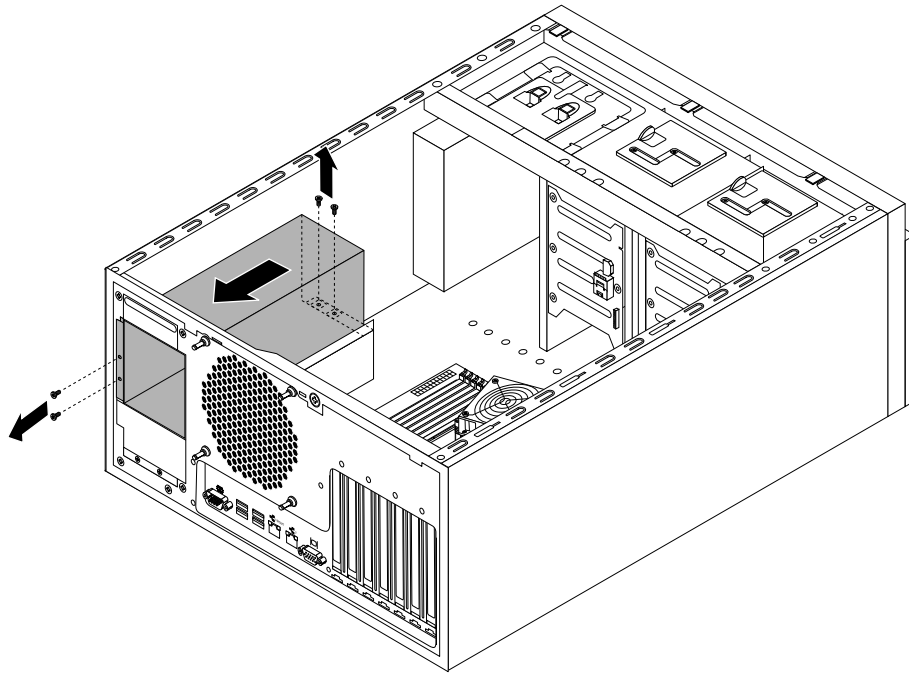

*Figure 120. Removing the power distribution board and cage assembly*

9. Touch the static-protective package that contains the new power distribution board and cage assembly to any unpainted surface on the outside of the server. Then, remove the new power distribution board and cage assembly from the package.

10. Install the new power distribution board and cage assembly into the chassis so that the two screw holes in the rear of the new power distribution board and cage assembly are aligned with the corresponding holes marked with R in the rear of the chassis. Meanwhile, ensure that the two screw holes in the metal clip at the front of the new power distribution board and cage assembly are aligned with the corresponding holes in the chassis. Then, install the four screws to secure the new power distribution board and cage assembly in place.

**Note:** Use only screws provided by Lenovo.

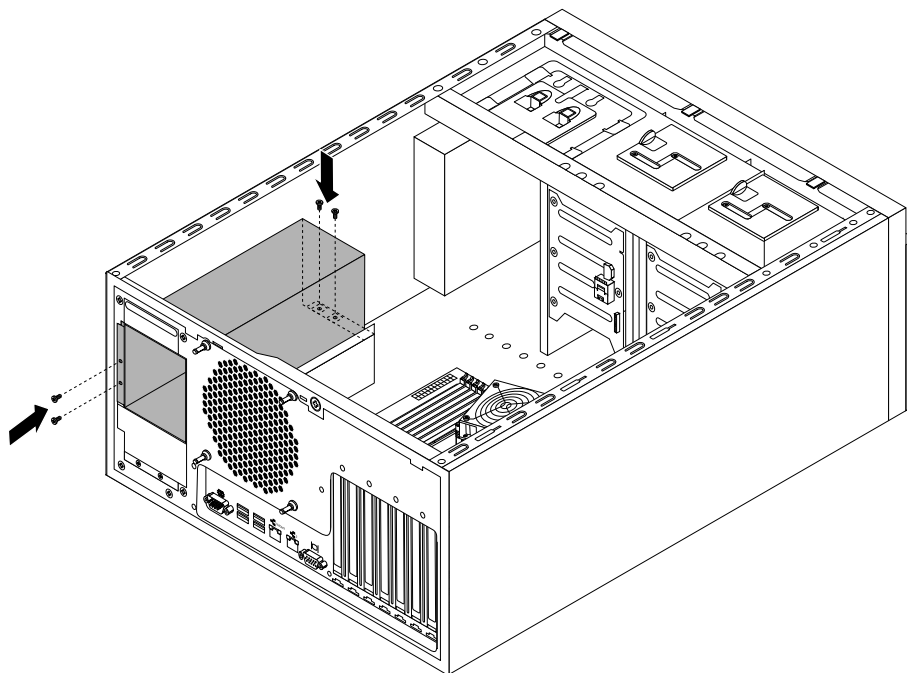


Figure 121. Installing the power distribution board and cage assembly

11. Refer to your note to connect the power cables of the new power distribution board and cage assembly to the system board, all drives, and or hot-swap hard-disk-drive backplanes, depending on the model. Then, properly route the cables and secure the cables with the cable clips and ties in the chassis.
12. Reinstall the front system fans. See “Replacing the front system fan 1” on page 183.
13. Reinstall the hot-swap redundant power supply and the protective shield for the redundant power supply bay 2. See “Installing or replacing a hot-swap redundant power supply” on page 165.
14. If you are instructed to return the old power distribution board and cage assembly, follow all packaging instructions and use any packaging materials that are supplied to you for shipping.

#### What to do next:

- To work with another piece of hardware, go to the appropriate section.
- To complete the replacement, go to “Completing the parts replacement” on page 200.

## Replacing the front panel board assembly

**Attention:** Do not open your server or attempt any repair before reading and understanding “Safety information” on page iii and “Guidelines” on page 83.

This topic provides instructions on how to replace the front panel board assembly.



Before you begin, print all the related instructions or ensure that you can view the PDF version on another computer for reference.

**Notes:**

- Depending on the model, your server might look slightly different from the illustrations in this topic.
- Use any documentation that comes with the new front panel board assembly and follow those instructions in addition to the instructions in this topic.
- The front panel board assembly is sensitive to ESD. Ensure that you read and understand “Handling static-sensitive devices” on page 84 first and carefully perform the operation.

To replace the front panel board assembly, do the following:

1. Remove all media from the drives and turn off all attached devices and the server. Then, disconnect all power cords from electrical outlets and disconnect all cables that are connected to the server.
2. Remove the server cover. See “Removing the server cover” on page 85.
3. Remove the front bezel. See “Removing and reinstalling the front bezel” on page 87.
4. Locate the front panel. See “Front panel” on page 17.
5. Remove the front system fans. See “Replacing the front system fan 1” on page 183.
6. Disconnect the signal cables of the front panel board assembly from the internal USB connector 1 and the front panel connector on the system board. See “System board components” on page 48.
7. If necessary, remove any parts or disconnect any cables that might impede your access to the signal cables of the front panel board assembly. Record the cable routing, and then release the signal cables of the front panel board assembly from any cable clips or ties in the chassis.

8. Remove the screw **1** on the chassis that secures the front panel board assembly. Then, carefully remove the front panel board assembly from the chassis and pull the signal cables of the front panel board assembly out of the chassis.

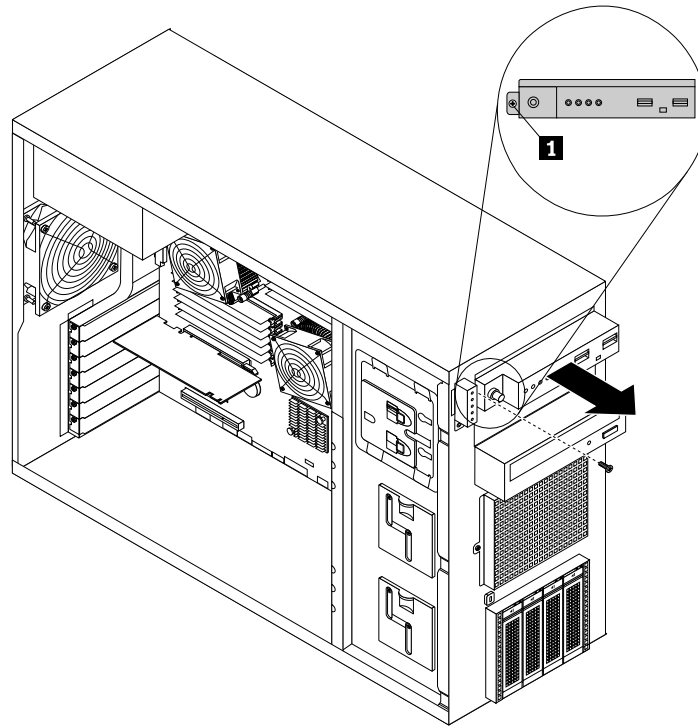


Figure 122. Removing the front panel board assembly

9. Touch the static-protective package that contains the new front panel board assembly to any unpainted surface on the outside of the server. Then, take the new front panel board assembly out of the package.
10. Note the cable connection. Then, disconnect the signal cables from the rear of the old front panel board assembly and connect them to the rear of the new one.

11. Route the signal cables of the new front panel board assembly through the corresponding hole in the chassis and position the new front panel board assembly on the chassis so that the screw hole in it is aligned with the corresponding screw hole **1** in the chassis. Then, install the screw to secure the front panel board assembly in place.

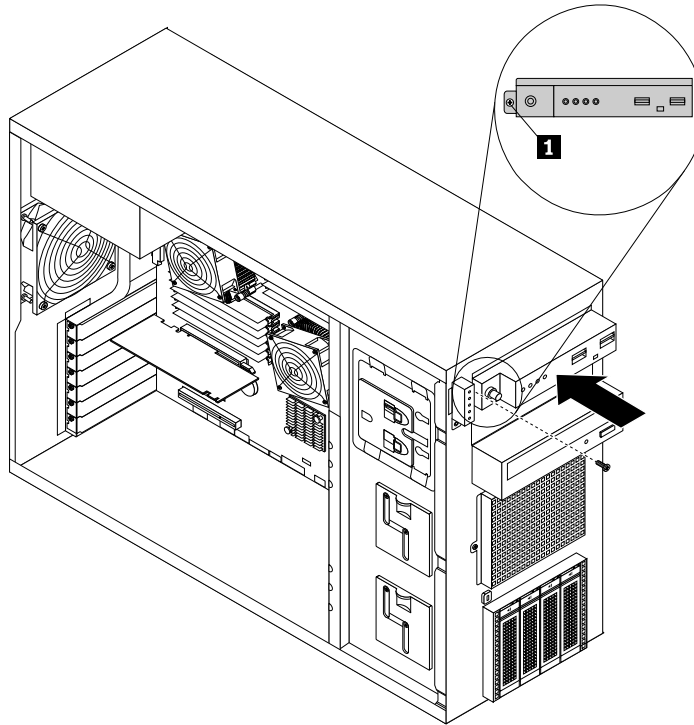


Figure 123. Installing the front panel board assembly

12. Connect the front panel USB cable to the internal USB connector 1 on the system board. Then, connect the front panel cable to the front panel connector on the system board. See “System board components” on page 48.
13. Refer to your note to properly route the signal cables of the new front panel board assembly. If necessary, secure the signal cables with cable clips or ties in the chassis.
14. Reinstall the front system fans. See “Replacing the front system fan 1” on page 183.
15. Reinstall the front bezel. See “Removing and reinstalling the front bezel” on page 87.
16. If you are instructed to return the old front panel board assembly, follow all packaging instructions and use any packaging materials that are supplied to you for shipping.

#### What to do next:

- To work with another piece of hardware, go to the appropriate section.
- To complete the replacement, go to “Completing the parts replacement” on page 200.


## Replacing the front system fan 1

**Attention:** Do not open your server or attempt any repair before reading and understanding “Safety information” on page iii and “Guidelines” on page 83.

This topic provides instructions on how to replace the front system fan 1. See “Server components” on page 28 to locate the front system fan 1 installed in your server model.

**CAUTION:**

**Hazardous moving parts. Keep fingers and other body parts away.**

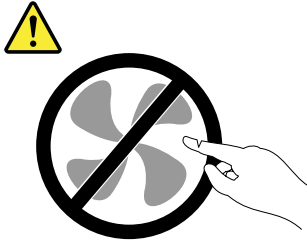

Before you begin, print all the related instructions or ensure that you can view the PDF version on another computer for reference.

**Notes:**

- Depending on the model, your server might look slightly different from the illustrations in this topic.
- Use any documentation that comes with the new front system fan 1 and follow those instructions in addition to the instructions in this topic.

To replace the front system fan 1, do the following:

1. Remove all media from the drives and turn off all attached devices and the server. Then, disconnect all power cords from electrical outlets and disconnect all cables that are connected to the server.
2. Remove the server cover. See “Removing the server cover” on page 85.
3. Locate the front system fan 1. See “Server components” on page 28.
4. Disconnect the front system fan 1 cable from the system fan 1 connector on the system board. See “System board components” on page 48.
5. Press the two tabs of the front system fan 1 towards each other until the two tips **1** are aligned with the corresponding holes in the chassis. Then, carefully slide the front system fan 1 out of the chassis.

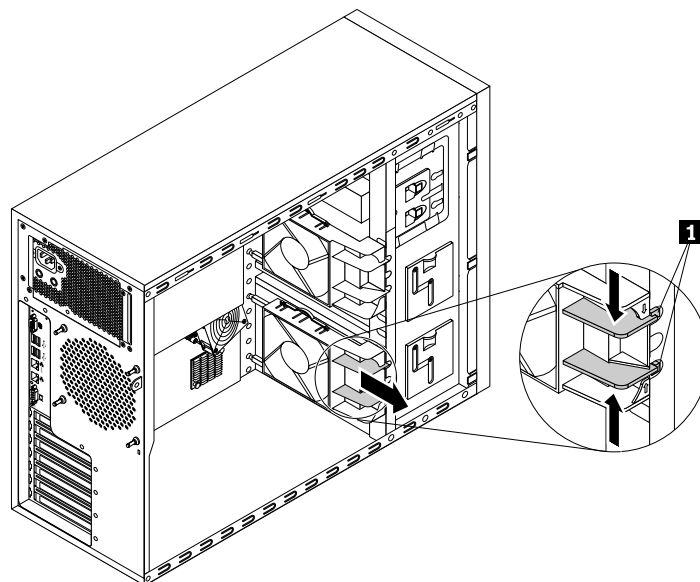


Figure 124. Removing the front system fan 1

6. Touch the static-protective package that contains the new front system fan 1 to any unpainted surface on the outside of the server. Then, remove the new front system fan 1 from the package.
7. Position the new front system fan 1 on the system fan 1 mounting area of the chassis so that the three tips **1** on the bottom of the front system fan 1 are aligned with the corresponding holes in the mounting area. Meanwhile, ensure that the two posts **2** of the front system fan 1 are aligned with the corresponding holes in the inner side of the chassis. Then, carefully slide the front system fan 1 into the chassis until it snaps into position.

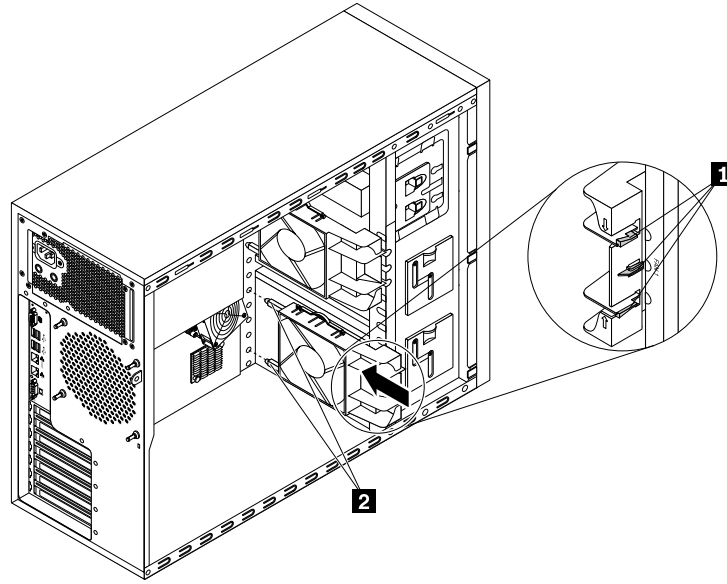


Figure 125. Installing the front system fan 1

8. Connect the new front system fan 1 cable to the system fan 1 connector on the system board. See “System board components” on page 48.
9. If you are instructed to return the old front system fan 1, follow all packaging instructions and use any packaging materials that are supplied to you for shipping.

**What to do next:**

- To work with another piece of hardware, go to the appropriate section.
- To complete the replacement, go to “Completing the parts replacement” on page 200.


## Replacing the rear system fan

**Attention:** Do not open your server or attempt any repair before reading and understanding “Safety information” on page iii and “Guidelines” on page 83.

This topic provides instructions on how to replace the rear system fan.

**CAUTION:**

**Hazardous moving parts. Keep fingers and other body parts away.**

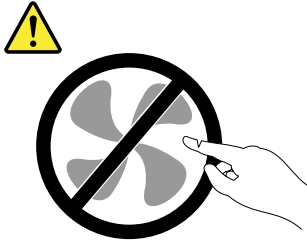

Before you begin, print all the related instructions or ensure that you can view the PDF version on another computer for reference.


**Notes:**

- Depending on the model, your server might look slightly different from the illustrations in this topic.
- Use any documentation that comes with the new rear system fan and follow those instructions in addition to the instructions in this topic.

To replace the rear system fan, do the following:

1. Remove all media from the drives and turn off all attached devices and the server. Then, disconnect all power cords from electrical outlets and disconnect all cables that are connected to the server.
2. Remove the server cover. See “Removing the server cover” on page 85.
3. Locate the rear system fan. See “Server components” on page 28.
4. Disconnect the rear system fan cable from the system fan 3 connector on the system board. See “System board components” on page 48.

5. The rear system fan is attached to the chassis by four rubber mounts. Remove the rear system fan by cutting the rubber mounts and pulling the rear system fan out of the chassis.

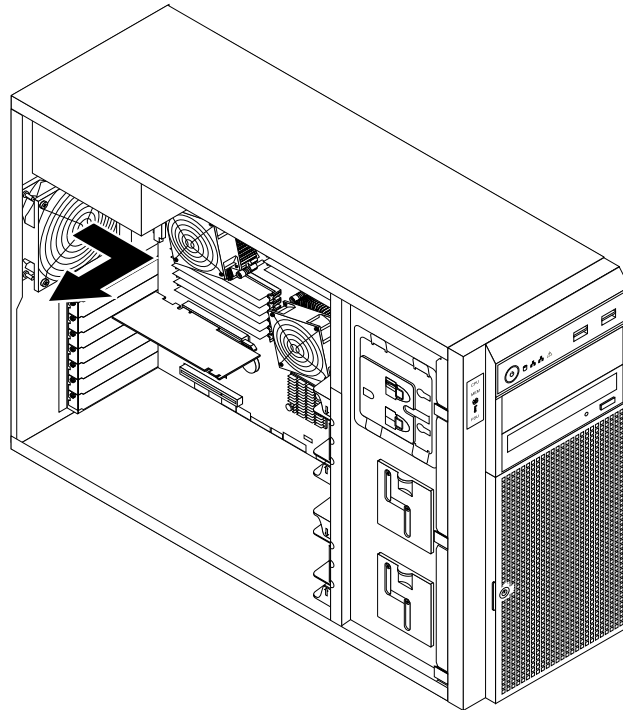

*Figure 126. Removing the rear system fan*

6. Touch the static-protective package that contains the new rear system fan to any unpainted surface on the outside of the server. Then, remove the new rear system fan from the package.

7. Position the new rear system fan, which has four new rubber mounts attached, on the chassis so that the four new rubber mounts are aligned with the corresponding holes in the chassis. Push the rubber mounts through the holes, and then pull on the tips of the rubber mounts from the other side of the chassis until the rear system fan is secured in place.

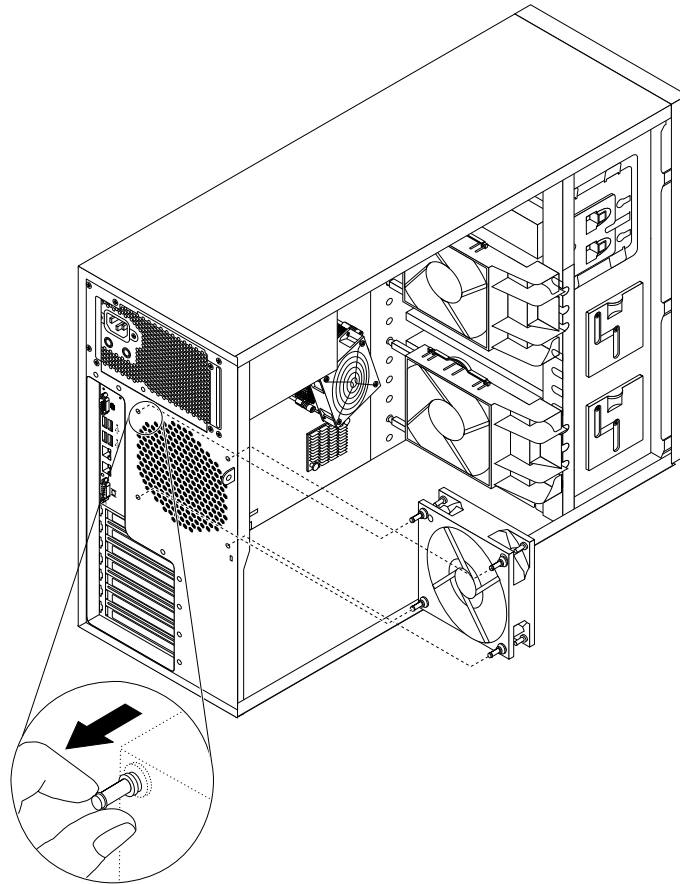


Figure 127. Installing the rear system fan

8. Connect the new rear system fan cable to the system fan 3 connector on the system board. See “System board components” on page 48.
9. If you are instructed to return the old rear system fan, follow all packaging instructions and use any packaging materials that are supplied to you for shipping.

**What to do next:**

- To work with another piece of hardware, go to the appropriate section.
- To complete the replacement, go to “Completing the parts replacement” on page 200.


## Replacing the heat sink and fan assembly 1

**Attention:** Do not open your server or attempt any repair before reading and understanding “Safety information” on page iii and “Guidelines” on page 83.

This topic provides instructions on how to replace the heat sink and fan assembly 1.



**CAUTION:**  
**Hazardous moving parts. Keep fingers and other body parts away.**

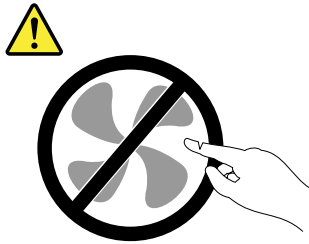

**CAUTION:**



**The heat sink and fan assembly might be very hot. Turn off the server and wait three to five minutes to let the server cool before removing the server cover.**

Before you begin, print all the related instructions or ensure that you can view the PDF version on another computer for reference.

**Notes:**

- Depending on the model, your server might look slightly different from the illustrations in this topic.
- Use any documentation that comes with the new heat sink and fan assembly and follow those instructions in addition to the instructions in this topic.

To replace the heat sink and fan assembly 1, do the following:

1. Remove all media from the drives and turn off all attached devices and the server. Then, disconnect all power cords from electrical outlets and disconnect all cables that are connected to the server.
2. Remove the server cover. See “Removing the server cover” on page 85.
3. Locate the heat sink and fan assembly 1. See “Server components” on page 28.
4. Lay the server on its side for easier operation. If necessary, remove any installed PCI Express card that might impede your access to the heat sink and fan assembly 1. See “Removing the Ethernet card” on page 103.
5. Disconnect the heat sink and fan assembly 1 cable from the microprocessor 1 fan connector on the system board. See “System board components” on page 48.

6. Remove the four screws that secure the heat sink and fan assembly 1 to the system board. It is recommended that you carefully remove the four screws from the system board using the following method to avoid any possible damage to the system board.
  - a. Partially remove screw **1**, then completely remove screw **3**, and then return to screw **1** and completely remove it.
  - b. Partially remove screw **2**, then completely remove screw **4**, and then return to screw **2** and completely remove it.

**Note:** The four screws are integrated parts of the heat sink and fan assembly 1. Do not try to remove the four screws from the heat sink and fan assembly 1.

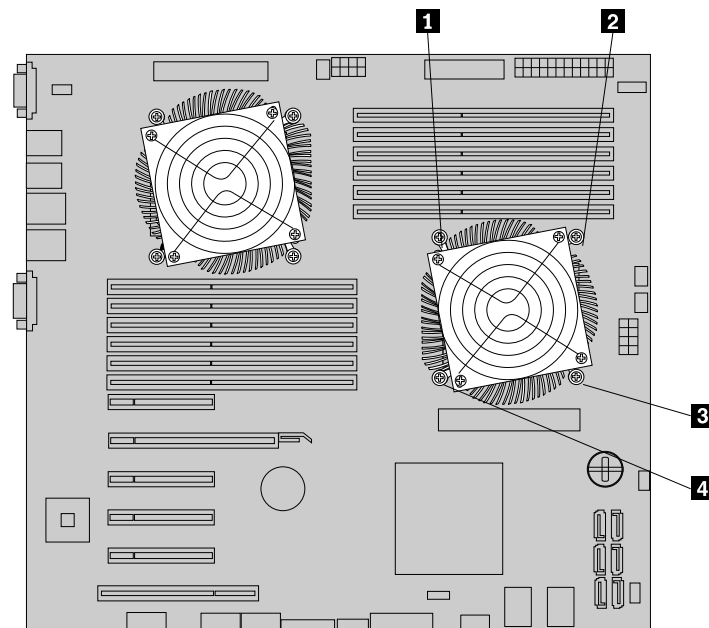


Figure 128. Removing the screws that secure the heat sink and fan assembly 1

7. Gently twist the heat sink and fan assembly 1 to free it from the microprocessor 1, and then lift the heat sink and fan assembly 1 off the system board.
8. Lay aside the old heat sink and fan assembly 1. Touch the static-protective package that contains the new heat sink and fan assembly 1 to any unpainted surface on the outside of the server. Then, remove the new heat sink and fan assembly 1 from the package.

**Notes:**

- When handling the heat sink and fan assembly 1, do not touch the thermal grease on the bottom of it.
  - Before installing the new heat sink and fan assembly 1, use the cleaning pad that comes with the new heat sink and fan assembly 1 to wipe the thermal grease from the top of the microprocessor 1. Dispose of the cleaning pad after all of the thermal grease is removed from the microprocessor 1.
9. Place the new heat sink and fan assembly 1 on the system board so that the four screws on the new heat sink and fan assembly 1 are aligned with the corresponding mounting studs on the system board. Note the orientation of the new heat sink and fan assembly 1 and ensure that you properly place it so that you can easily connect the heat sink and fan assembly 1 cable to the microprocessor 1 fan connector on the system board. See “System board components” on page 48.

10. Install the four screws to secure the new heat sink and fan assembly 1 on the system board. It is recommended that you carefully install the four screws using the following method to avoid any possible damage to the system board.
  - a. Partially tighten screw **1**, then firmly tighten screw **3**, and then return to screw **1** and firmly tighten it. Do not over-tighten the screws.
  - b. Partially tighten screw **2**, then firmly tighten screw **4**, and then return to screw **2** and firmly tighten it. Do not over-tighten the screws.

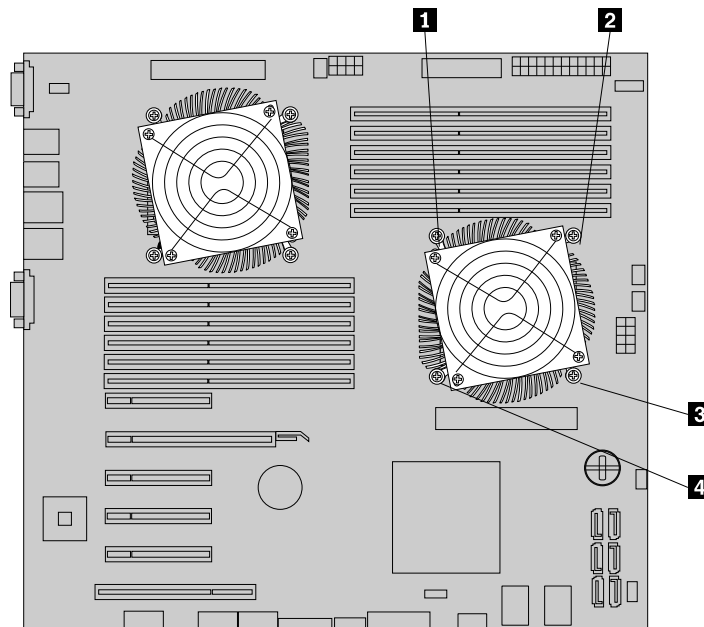


Figure 129. Installing the screws to secure the heat sink and fan assembly 1

11. Connect the heat sink and fan assembly 1 cable to the microprocessor 1 fan connector on the system board. See “System board components” on page 48.

**Note:** If the heat sink and fan assembly 1 cable is long, loosely wrap it.

12. If you are instructed to return the old heat sink and fan assembly 1, follow all packaging instructions and use any packaging materials that are supplied to you for shipping.

#### What to do next:

- To work with another piece of hardware, go to the appropriate section.
- To complete the replacement, go to “Completing the parts replacement” on page 200.

## Replacing the system board battery

**Attention:** Do not open your server or attempt any repair before reading and understanding “Safety information” on page iii and “Guidelines” on page 83.

This topic provides instructions on how to replace the system board battery.

Your server has a special type of memory that maintains the date, time, and configuration information for built-in features. The system board battery keeps the information active when you turn off the server. The system board battery normally requires no charging nor maintenance throughout its life; however, no battery

lasts forever. If the system board battery fails, the date, time, and configuration information, including passwords, are lost and an error message is displayed when you turn on the server.



**Danger of explosion if battery is incorrectly replaced.**

**When replacing the lithium coin cell battery, use only the same or an equivalent type that is recommended by the manufacturer. The battery contains lithium and can explode if not properly used, handled, or disposed of.**

**Do not:**

- **Throw or immerse into water**
- **Heat to more than 100°C (212°F)**
- **Repair or disassemble**

**Dispose of the battery as required by local ordinances or regulations.**

**The following statement applies to users in the state of California, U.S.A.**

**California Perchlorate Information:**

**Products containing manganese dioxide lithium coin cell batteries may contain perchlorate.**

**Perchlorate Material - special handling may apply, See <http://www.dtsc.ca.gov/hazardouswaste/perchlorate>**

Before you begin, print all the related instructions or ensure that you can view the PDF version on another computer for reference.

To replace the system board battery, do the following:

**Note:** After you replace the system board battery, you must reset passwords, reset system date and time, and reconfigure the server.

1. Remove all media from the drives and turn off all attached devices and the server. Then, disconnect all power cords from electrical outlets and disconnect all cables that are connected to the server.
2. Remove the server cover. See “Removing the server cover” on page 85.
3. Lay the server on its side for easier operation.
4. Locate the system board battery. See “Server components” on page 28.
5. Remove any installed PCI Express card (such as the Ethernet card) that impedes your access to the system board battery. See “Removing the Ethernet card” on page 103.

6. Remove the old system board battery.

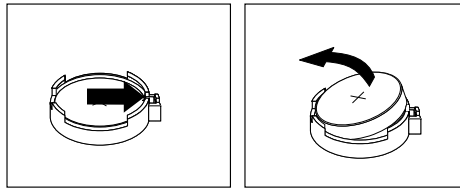


Figure 130. Removing the system board battery

7. Install a new system board battery.

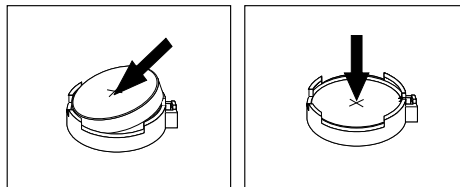


Figure 131. Installing the system board battery

8. Reinstall the PCI Express card (such as the Ethernet card) that has been removed. See “Installing the Ethernet card” on page 100.
9. Dispose of the old system board battery as required by local ordinances or regulations.

#### What to do next:

- To work with another piece of hardware, go to the appropriate section.
- To complete the replacement, go to “Completing the parts replacement” on page 200. After you replace the system board battery, you must reset passwords, reset system date and time, and reconfigure the server. See Chapter 5 “Configuring the server” on page 61.

## Replacing the system board


**Attention:** Do not open your server or attempt any repair before reading and understanding “Safety information” on page iii and “Guidelines” on page 83.

This topic provides instructions on how to replace the system board.

**Note:** This procedure must be performed only by trained service personnel of Lenovo.

#### CAUTION:

**Hazardous moving parts. Keep fingers and other body parts away.**

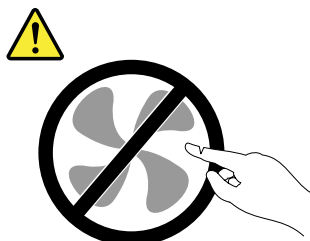

**CAUTION:**



**The heat sinks and microprocessors might be very hot. Turn off the server and wait three to five minutes to let the server cool before removing the server cover.**

Before you begin, print all the related instructions or ensure that you can view the PDF version on another computer for reference.

**Note:** Depending on the model, your server might look slightly different from the illustrations in this topic.

To replace the system board, do the following:

1. Remove all media from the drives and turn off all attached devices and the server. Then, disconnect all power cords from electrical outlets and disconnect all cables that are connected to the server.
2. Remove the server cover. See “Removing the server cover” on page 85.
3. Lay the server on its side for easier operation.
4. Record the component locations, cable connections, and cable routing in the server.
5. Remove all memory modules. See “Removing a memory module” on page 99.
6. Remove all PCI Express cards, including the Ethernet cards and RAID card. See “Removing the Ethernet card” on page 103 and “Removing the RAID card” on page 106.
7. Remove the TPM if one is installed. See “Removing the ThinkServer Trusted Platform Module” on page 120.
8. Remove the TR 100 or TR 300 Key if one is installed. See “Removing the TR 100 or TR 300 Key” on page 114.
9. Remove the TMM Premium if one is installed. See “Removing the TMM Premium” on page 117.
10. Remove the system board battery. See “Replacing the system board battery” on page 191.
11. Remove the front system fans. See “Replacing the front system fan 1” on page 183.
12. Remove the heat sink and fan assemblies. See “Replacing the heat sink and fan assembly 1” on page 188.

13. Disconnect all cables from the system board. Then, remove the ten screws that secure the system board following the recommended numerical sequence as shown.


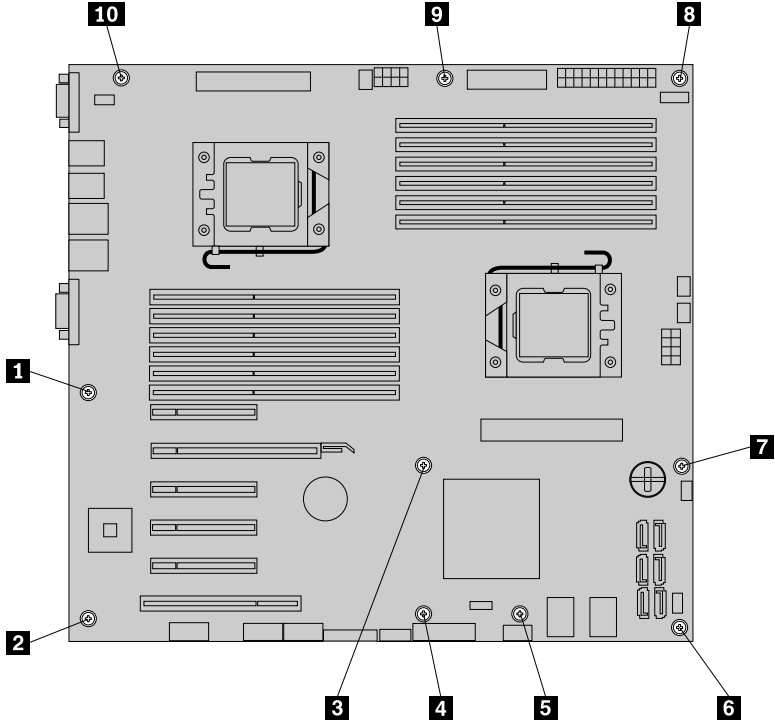


Figure 132. Removing the screws that secure the system board

14. Gently lift each edge of the system board a little bit upward so that the system board is released from the mounting studs on the chassis. Then, move the system board to the front of the server and then carefully pivot the system board upward to remove it out of the chassis.

**Note:** Carefully handle the system board by its edges.

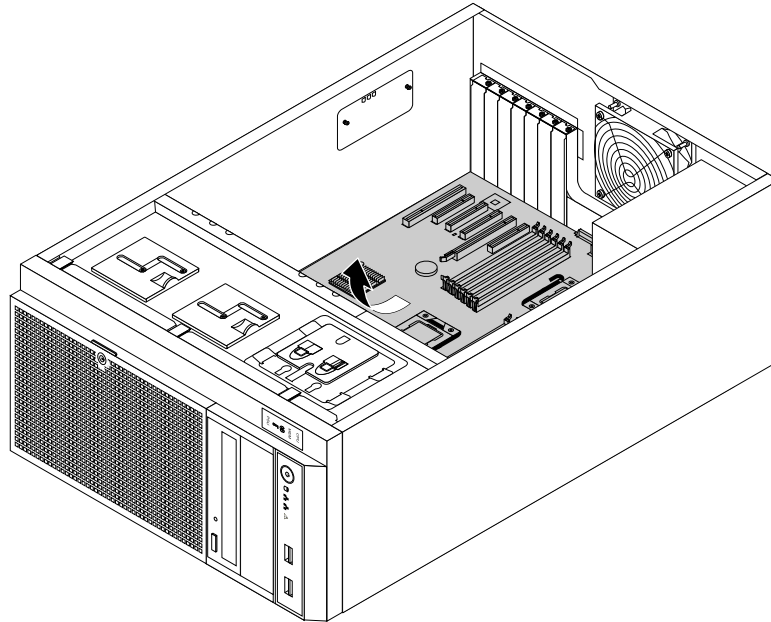

*Figure 133. Removing the system board*

15. Place the old system board on a clean, flat, and static-protective surface. Touch the static-protective package that contains the new system board to any unpainted surface on the outside of the server. Then, take the new system board out of the package.



16. Install the new system board into the chassis as shown. Ensure that the rear connectors on the new system board are inserted into the corresponding holes in the rear panel and the ten screw holes in the new system board are aligned with the corresponding mounting studs on the chassis.

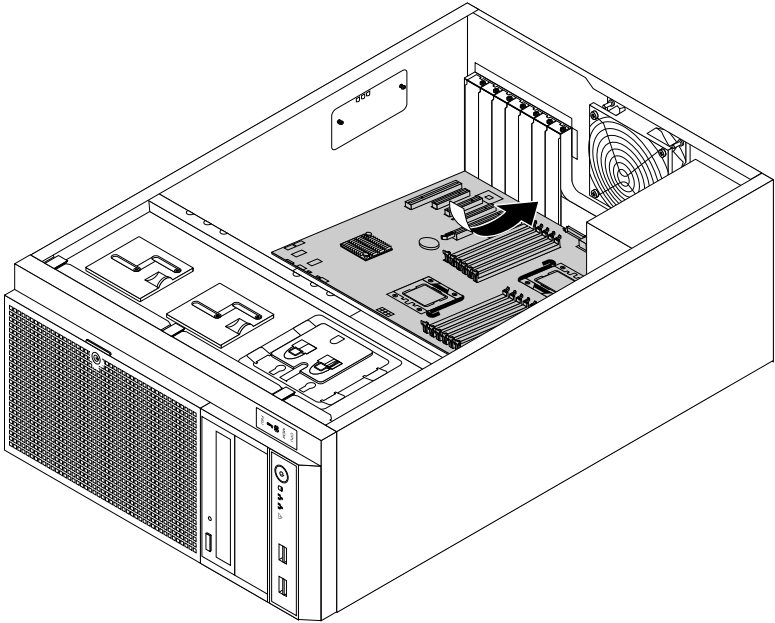


Figure 134. Installing the system board

17. Install the ten screws following the recommended numerical sequence as shown to secure the new system board on the chassis.

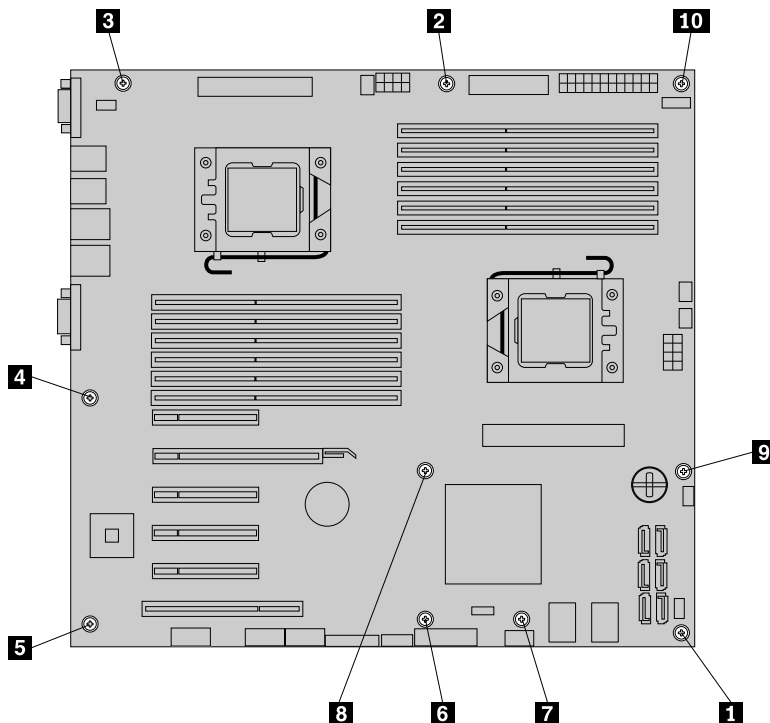


Figure 135. Installing the screws to secure the system board

18. Remove the microprocessors from the old system board and install them on the new system board. See “Installing or replacing the microprocessor” on page 157.
19. The old system board must be returned with two microprocessor socket covers to protect the pins on the microprocessor sockets during shipping and handling. Use the microprocessor socket covers removed from the new system board.

To install a microprocessor socket cover on the old system board, do the following:

- a. Ensure that the small handle and the microprocessor retainer are in the fully open position. See “Installing the second microprocessor” on page 157.

**Note:** Do not drop anything onto the microprocessor socket while it is exposed. The socket pins must be kept as clean as possible.

- b. Position the microprocessor socket cover above the microprocessor socket so that the small triangle **1** on the socket cover faces the small triangle **2** on the microprocessor retainer. Then, carefully press the socket cover straight down into the socket until it snaps into position.

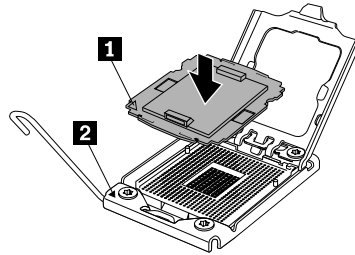


Figure 136. Installing the microprocessor socket cover

- c. Gently close the microprocessor retainer, press down the small handle, and then push the small handle inward to lock the retainer into position.

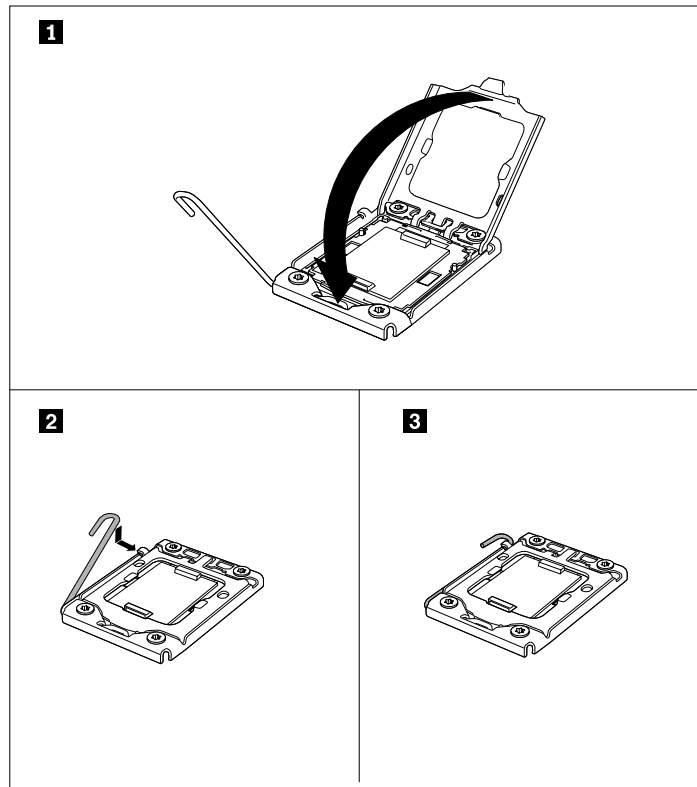


Figure 137. Securing the microprocessor retainer

20. Install all parts that you have removed and connect all cables to the new system board. Refer to the information that you have recorded and the related topics in Chapter 6 “Installing, removing, or replacing hardware” on page 83.
21. If you are instructed to return the old system board, follow all packaging instructions and use any packaging materials that are supplied to you for shipping.

### What to do next:

- To work with another piece of hardware, go to the appropriate section.
- To complete the replacement, go to “Completing the parts replacement” on page 200.
- After a system board is replaced, do the following:
  1. Start the Setup Utility program by pressing the F1 key, and then check the BIOS and BMC version.
  2. Go to <http://www.lenovo.com/drivers> and follow the instructions on the Web page to download the latest version of firmware. Then, install the firmware to your server.
  3. Update the machine type, model number, and serial number of the system board. Either you will be prompted to do this while upgrading the BIOS, or you can locate the files for updating the VPD within the DOS BIOS package. For some servers, the VPD utility is available for download at: <http://www.lenovo.com/drivers>.

**Note:** If you want to use the Firmware Updater program, ensure that it is the latest version. To get the latest version of the Firmware Updater program, go to <http://www.lenovo.com/drivers>, locate different versions of the program, and then identify the latest version by comparing readme files. If the latest version of the Firmware Updater program does not contain the latest version of the driver you need, download that driver separately from the Web page and install it individually to your server.

---

## Completing the parts replacement

This topic provides instructions to help you complete the parts replacement and turn on your server.

To complete the parts replacement, properly route the cables inside the server, reinstall the server cover, reconnect all the external cables. For some devices, update the firmware and run the Setup Utility program to do further setup.

## Reinstalling the server cover and reconnecting cables

<p><b>Attention:</b> Do not open your server or attempt any repair before reading and understanding “Safety information” on page iii and “Guidelines” on page 83.</p>
-----------------------------------------------------------------------------------------------------------------------------------------------------------------------

This topic provides instructions on how to reinstall the server cover and reconnect cables to your server.

**Attention:** For proper cooling and airflow, reinstall the server cover before turning on the server. Operating the server for extended periods of time (more than 30 minutes) with the server cover removed might damage server components.

Before you begin, print all the related instructions or ensure that you can view the PDF version on another computer for reference.

**Note:** Depending on the model, your server might look slightly different from the illustrations in this topic.

To reinstall the server cover and reconnect cables to your server, do the following:

1. Ensure that all components have been reassembled correctly and that no tools or loose screws are left inside your server.
2. Ensure that all internal cables are routed correctly and secured by any cable clips or ties in the server. Keep cables clear of the hinges and sides of the server chassis to avoid interference with reinstalling the server cover.
3. If you have removed the front bezel, reinstall it. See “Removing and reinstalling the front bezel” on page 87.

4. Position the server cover on the chassis so that the rail on the bottom of the server cover engages the bottom rail on the chassis. Then, align the four tabs **1** on the server cover with the corresponding holes in the top edge of the chassis. Pivot the server cover to close it.

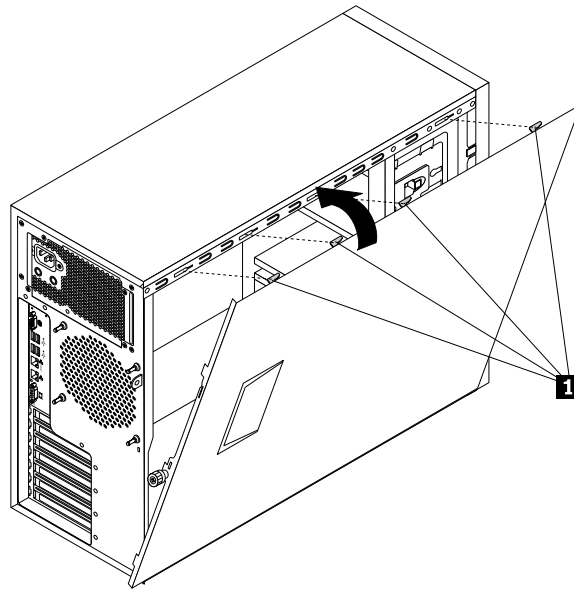


Figure 138. Closing the server cover

5. Slide the server cover to the front of the chassis until it snaps into position.

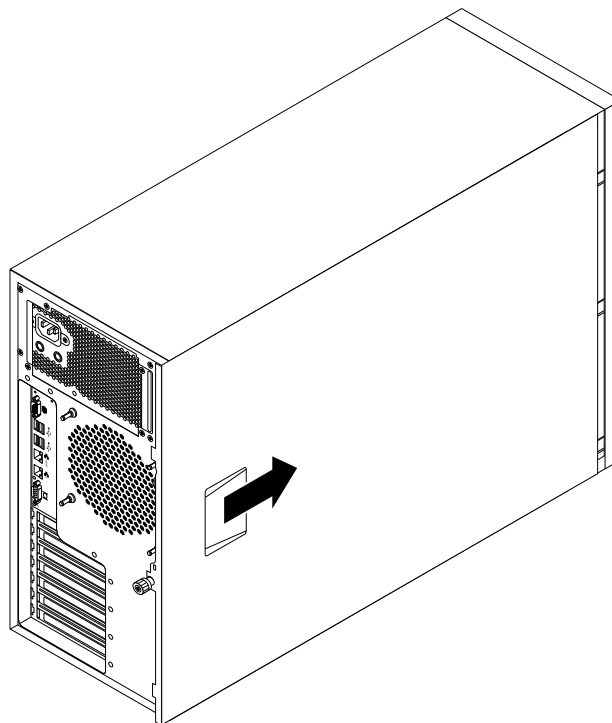


Figure 139. Installing the server cover

6. Tighten the thumbscrew on the server cover to secure the server cover in place.

**Note:** For safety consideration, ensure that you use a tool, for example a screwdriver, to tighten the thumbscrew and always ensure that the thumbscrew is securely installed. Also, do not over-tighten the thumbscrew.

7. Lock the server cover and server front door to ensure the security. See “Server locks” on page 25.

8. Reconnect external cables and power cords to the server. See “Rear view of the server” on page 21 to identify the connectors on the rear panel of the server.

**Attention:** To avoid component damage, connect the power cords last.

**Note:** In most areas of the world, Lenovo requires the return of the defective CRU. Information about this will come with the CRU or will come a few days after the CRU arrives.

## Updating the server configuration

When you turn on the server for the first time after you install, remove, or replace a device, you might need to update the server configuration.

Some optional devices have device drivers that you must install. For information about installing device drivers, use the documentation that comes with each optional device. To obtain the supported device drivers for your server from the Lenovo Support Web site, go to <http://www.lenovo.com/support>. Click **Download & Drivers → ThinkServer** and follow the instructions on the Web page to find and download the device drivers you need.

Refer to the following information resources to update the server configuration:

- To update the BIOS configuration, see “Using the Setup Utility program” on page 61.
- To update the RAID configuration, see “Configuring RAID” on page 72.
- To use the ThinkServer EasyStartup program, see “Using the ThinkServer EasyStartup program” on page 69.
- To update your system firmware, see “Updating the firmware” on page 80.

---

## Chapter 7. Troubleshooting and diagnostics

This chapter provides information about basic troubleshooting and diagnostic methods to help you solve problems that might occur in the server.

If you cannot diagnose and correct a problem by using the information in this chapter, see Chapter 8 “Getting information, help, and service” on page 209 for additional troubleshooting resources.

---

### Troubleshooting procedure

Use the following information as a general procedure for diagnosing and troubleshooting problems you experience with your server:

1. Verify that the power cords and the cables for all attached devices are connected correctly and securely.
2. Verify that the server and all attached devices that require ac power are connected to properly grounded, functioning electrical outlets.
3. Verify that all installed hardware and attached devices are enabled in the BIOS settings of your server. For more information about accessing and changing the BIOS settings, see “Using the Setup Utility program” on page 61.
4. View the status and diagnostic LEDs to identify the system and device status and diagnose problems. See “Viewing the status and diagnostic LEDs” on page 203.
5. If the server is not working after you have added new software, installed a new optional device, or replaced a piece of hardware, remove or reinstall the software or device to see if the problem could be solved.
6. View the SEL to diagnose problems. See “Viewing the system event log” on page 204.
7. Turn on the server and press Esc as soon as you see the logo screen to view any diagnostic messages.
8. Refer to “Basic troubleshooting tables” on page 204 and follow the instructions for the type of problem you are experiencing. If the basic troubleshooting information does not help you resolve a problem, continue with the next step.
9. Try using a previous server configuration to see if a recent change to hardware or software settings has caused a problem. Before restoring your previous configuration, capture your current configuration in case the older configuration settings do not solve the problem or have adverse effect.
10. Use an antivirus program to see if your server has been infected by a virus. If the program detects a virus, remove the virus.
11. If none of these actions solve the problem, seek technical assistance. See Chapter 8 “Getting information, help, and service” on page 209.

---

### Viewing the status and diagnostic LEDs

Your server has status and diagnostic LEDs on the front panel, the DIT panel (varies by model), the rear panel (Ethernet status LEDs), the system board, the hot-swap hard disk drives (if supported), and the optical drives. The various LEDs help you easily identify the system and device status and diagnose problems. For information about the LEDs, refer to the related topics in “Locations” on page 13.

---

### Using a diagnostic program

The ThinkServer Diagnostic Tool program is available for you to diagnose server problems.

To use a diagnostic program, do the following:

1. Go to <http://www.lenovo.com/drivers> and follow the instructions on the Web page to locate a diagnostic program.
2. Download and unzip the diagnostic program package to get the diagnostic program package folder.
3. Open the diagnostic program package folder and run the QTW.exe file.
4. Select the language when prompted. Then, click **Continue**.
5. Read the End-User License Agreement (EULA) terms carefully and click **Accept** to start the program.
6. Follow the instructions on the screen to use the diagnostic program.

For detailed information about using a diagnostic program, refer to the user guide of the diagnostic program, which is available for download at:  
<http://www.lenovo.com/drivers>

---

## Viewing the system event log

The system event log (SEL) contains information about all the POST and system management interrupt (SMI) events. You can view the SEL to diagnose system problems.

The TMM implements the SEL as specified in the IPMI 2.0 specification. The SEL is accessible regardless of the system power state through the TMM in-band and out-of-band interfaces.

For more information about viewing the SEL, refer to the *ThinkServer Management Module User Guide* on the documentation DVD that comes with your server.

---

## Basic troubleshooting tables

Use the basic troubleshooting information to find solutions to problems that have definite symptoms.

### ThinkServer EasyStartup program problems

Follow the suggested actions for the corresponding symptom in the order in which they are listed until the problem is solved. If none of these actions solve the problem, see “Troubleshooting procedure” on page 203 for the subsequent steps you should check after using the information in this topic. If the problem still cannot be solved, seek technical assistance. See Chapter 8 “Getting information, help, and service” on page 209.

**Note:** If you are instructed to remove, install, or replace any CRUs, refer to the related procedure in Chapter 6 “Installing, removing, or replacing hardware” on page 83.

Symptom	Action
The <i>ThinkServer EasyStartup</i> DVD does not start.	<ol style="list-style-type: none"> <li>1. Ensure that the server supports the ThinkServer EasyStartup program and has a bootable DVD drive.</li> <li>2. Ensure that you have set the optical drive with the <i>ThinkServer EasyStartup</i> DVD as the first startup device.</li> <li>3. Verify if the optical drive or the disc has problems. See “Optical drive problems” on page 205.</li> </ol>
The operating system installation program continuously loops.	Make more space available on the hard disk drive.
The ThinkServer EasyStartup program cannot start the operating system media.	<ol style="list-style-type: none"> <li>1. Ensure that the operating system media is supported by the ThinkServer EasyStartup program version you are using. For a list of supported operating systems, refer to the user guide and compatibility notes for the ThinkServer EasyStartup program</li> </ol>



Symptom	Action
	through the program main interface. See “Starting the ThinkServer EasyStartup program” on page 69. 2. Verify if the optical drive or the disc has problems. See “Optical drive problems” on page 205.

## Optical drive problems

Follow the suggested actions for the corresponding symptom in the order in which they are listed until the problem is solved. If none of these actions solve the problem, see “Troubleshooting procedure” on page 203 for the subsequent steps you should check after using the information in this topic. If the problem still cannot be solved, seek technical assistance. See Chapter 8 “Getting information, help, and service” on page 209.

### Notes:

1. If you are instructed to remove, install, or replace any CRUs, refer to the related procedure in Chapter 6 “Installing, removing, or replacing hardware” on page 83.
2. If an action step is preceded by “(Trained service technician only),” this action step is reserved for a trained service technician and must be performed only by a trained service technician.

Symptom	Action
The optical drive is not recognized.	<ol style="list-style-type: none"> <li>1. Ensure that:               <ul style="list-style-type: none"> <li>• The signal cable and connector are not damaged and the connector pins are not bent.</li> <li>• The optical drive is securely connected to the correct SATA connector on the system board and the SATA connector is enabled in the Setup Utility program. See “Using the Setup Utility program” on page 61.</li> <li>• All cables and jumpers (if any) are installed correctly.</li> <li>• The correct device driver is installed for the optical drive.</li> </ul> </li> <li>2. Run any optical drive diagnostic programs if you have.</li> <li>3. Reinstall the optical drive and reconnect cables.</li> <li>4. Replace the signal cable for the optical drive.</li> <li>5. Replace the optical drive.</li> <li>6. (Trained service technician only) Replace the system board.</li> </ol>
A disc is not working correctly.	<ol style="list-style-type: none"> <li>1. Ensure that the disc is in the optical drive with the shiny side facing down.</li> <li>2. Ensure that the disc surface is clean and not scratched.</li> <li>3. Check the disc or package for regional coding. You might need to purchase a disc with coding for the region where you are using the product.</li> <li>4. Restart the disc player program.</li> <li>5. Restart the server.</li> <li>6. Run any optical drive diagnostic programs if you have.</li> <li>7. Reinstall the optical drive and reconnect cables.</li> </ol>

Symptom	Action
	8. Replace the signal cable for the optical drive. 9. Replace the optical drive.

## Hard disk drive problems

Follow the suggested actions for the corresponding symptom in the order in which they are listed until the problem is solved. If none of these actions solve the problem, see “Troubleshooting procedure” on page 203 for the subsequent steps you should check after using the information in this topic. If the problem still cannot be solved, seek technical assistance. See Chapter 8 “Getting information, help, and service” on page 209.

### Notes:

1. If you are instructed to remove, install, or replace any CRUs, refer to the related procedure in Chapter 6 “Installing, removing, or replacing hardware” on page 83.
2. If the server model comes with hot-swap hard disk drives, the status LEDs on each hot-swap hard disk drive help you easily identify a problem. See “Hot-swap hard disk drive status LEDs” on page 33.

Symptom	Action
A newly installed non-hot-swap hard disk drive is not recognized.	<ol style="list-style-type: none"> <li>1. Ensure that:               <ul style="list-style-type: none"> <li>• The signal cable and connector are not damaged.</li> <li>• The non-hot-swap hard disk drive is securely connected to the correct SATA connector on the system board and the SATA connector is enabled in the Setup Utility program. See “Using the Setup Utility program” on page 61.</li> <li>• All cables and jumpers (if any) are installed correctly.</li> </ul> </li> <li>2. If you have any diagnostic programs, run the diagnostic programs to test the hard disk drive.</li> <li>3. Reinstall the non-hot-swap hard disk drive and reconnect cables.</li> <li>4. Replace the signal cable for the non-hot-swap hard disk drive.</li> <li>5. Replace the non-hot-swap hard disk drive.</li> </ol>
A newly installed hot-swap hard disk drive is not recognized.	<ol style="list-style-type: none"> <li>1. Ensure that the drive is installed into the correct drive bay.</li> <li>2. Restart the server.</li> <li>3. Remove the drive from the bay, wait 45 seconds, and reinsert the drive into the bay, making sure that the drive connects to the hot-swap hard-disk-drive backplane.</li> <li>4. If you have any diagnostic programs, run the diagnostic programs to test the hard disk drive.</li> <li>5. Ensure that the backplane is correctly seated. When it is correctly seated, the drive assemblies correctly connect to the backplane without bowing or causing movement of the backplane.</li> <li>6. Ensure that the cable connection is correct. See “Connecting the cables” on page 43.</li> <li>7. Reconnect the backplane power cable and repeat step 1 through step 4.</li> </ol>

Symptom	Action
	<ol style="list-style-type: none"> <li>8. Reconnect the backplane signal cable and repeat step 1 through step 4.</li> <li>9. If you suspect a problem with the backplane signal cable or the backplane:               <ol style="list-style-type: none"> <li>a. Replace the affected backplane signal cable.</li> <li>b. Replace the affected backplane.</li> </ol> </li> </ol>
Multiple hard disk drives fail.	<ol style="list-style-type: none"> <li>1. If you have any diagnostic programs, run the diagnostic programs to test the hard disk drives.</li> <li>2. Ensure that the cable connection is correct. See “Connecting the cables” on page 43.</li> <li>3. Reconnect the power cable.</li> <li>4. Reconnect the signal cable.</li> <li>5. Replace the affected signal cables.</li> <li>6. For hot-swap hard disk drives, if you suspect a problem with the backplane, replace the affected backplane.</li> </ol>

## Memory module problems

Follow the suggested actions for the corresponding symptom in the order in which they are listed until the problem is solved. If none of these actions solve the problem, see “Troubleshooting procedure” on page 203 for the subsequent steps you should check after using the information in this topic. If the problem still cannot be solved, seek technical assistance. See Chapter 8 “Getting information, help, and service” on page 209.

### Notes:

1. If you are instructed to remove, install, or replace any CRUs, refer to the related procedure in Chapter 6 “Installing, removing, or replacing hardware” on page 83.
2. If an action step is preceded by “(Trained service technician only),” this action step is reserved for a trained service technician and must be performed only by a trained service technician.

Symptom	Action
The amount of system memory that is displayed is less than the total capacity of the installed physical memory modules and you suspect a memory module problem.	<ol style="list-style-type: none"> <li>1. Ensure that:           <ul style="list-style-type: none"> <li>• All memory modules are the correct type supported by the server. See “Features” on page 7.</li> <li>• You follow the memory module installation rules. See “Memory module installation rules” on page 93.</li> <li>• All memory modules are seated correctly and securely.</li> <li>• The system firmware is up-to-date.</li> </ul> </li> <li>2. If you have any diagnostic programs, run the diagnostic programs to test the memory modules.</li> <li>3. Reinstall the memory modules.</li> <li>4. Replace the suspect memory modules.</li> <li>5. (Trained service technician only) Replace the system board.</li> </ol>

## Keyboard, mouse, or USB device problems

Follow the suggested actions for the corresponding symptom in the order in which they are listed until the problem is solved. If none of these actions solve the problem, see “Troubleshooting procedure” on page 203 for the subsequent steps you should check after using the information in this topic.

Symptom	Action
All or some keys on the keyboard do not work.	<ol style="list-style-type: none"> <li>1. Ensure that: <ul style="list-style-type: none"> <li>• The USB keyboard cable is securely connected to a USB connector on the server. If the USB keyboard is connected to a USB hub, disconnect the keyboard from the hub and connect it directly to the server.</li> <li>• No keys are stuck.</li> <li>• The USB controller is enabled in the Setup Utility program. See “Using the Setup Utility program” on page 61.</li> </ul> </li> <li>2. Restart the server.</li> <li>3. Replace the keyboard.</li> </ol>
The mouse or pointing device does not work.	<ol style="list-style-type: none"> <li>1. Ensure that: <ul style="list-style-type: none"> <li>• The mouse or pointing device cable is securely connected to the server. If the USB mouse or pointing device is connected to a USB hub, disconnect the mouse or pointing device from the hub and connect it directly to the server.</li> <li>• The mouse or pointing device is clean and no dust accumulates.</li> <li>• The device drivers are installed correctly.</li> <li>• The USB controller is enabled in the Setup Utility program. See “Using the Setup Utility program” on page 61.</li> </ul> </li> <li>2. Restart the server.</li> <li>3. Replace the mouse or pointing device.</li> </ol>
A USB device does not work.	<ol style="list-style-type: none"> <li>1. Ensure that: <ul style="list-style-type: none"> <li>• The USB cable is securely connected to the server. If the USB device is connected to a USB hub, disconnect the device from the hub and connect it directly to the server.</li> <li>• The device drivers are installed correctly.</li> <li>• The USB controller is enabled in the Setup Utility program. See “Using the Setup Utility program” on page 61.</li> </ul> </li> <li>2. Restart the server.</li> <li>3. Replace the USB device.</li> </ol>

---

## Chapter 8. Getting information, help, and service

This chapter contains information about help, service, and technical assistance for products manufactured by Lenovo and where to go for additional information about Lenovo and Lenovo products.

---

### Information resources

You can use the information in this topic to access useful resources relating to your needs when using the product.

### Using the documentation

Information about your Lenovo system and installed software, if any, or optional devices is available in the documentation that comes with the product. The documentation can include printed documents, online documents, readme files, and help files. Most of the documentation for your server is on the documentation DVD provided with your server. Refer to the troubleshooting information in your server *User Guide and Hardware Maintenance Manual* for instructions on how to diagnose problems and do basic troubleshooting. The troubleshooting and diagnostics information might tell you that you need additional or updated device drivers or other software. Lenovo maintains pages on the World Wide Web where you can get the latest technical information and download documentation or device drivers and updates. To access the Lenovo Support Web site, go to:

<http://www.lenovo.com/support>

For more information about your server documentation, see “Server documentation” on page 2.

If you suspect a software problem, refer to the documentation, including readme files and online help, that comes with the operating system or software program.

### ThinkServer Web site

The ThinkServer Web site provides up-to-date information and services to help you buy, use, upgrade, and maintain your server. You also can do the following by visiting the ThinkServer Web site at:

<http://www.lenovo.com/thinkserver>

- Shop for servers as well as upgrades and accessories for your server.
- Purchase additional services and software.
- Purchase upgrades and extended hardware repair services.
- Access the Lenovo Limited Warranty (LLW).
- Access the online manuals for your products.
- Access troubleshooting and support information for your server model and other supported products.
- Download the latest device drivers and software updates for your server model.
- Find the service and support phone numbers for your country or region.
- Find a Service Provider located near you.

### Lenovo Support Web site

Technical support information is available on the Lenovo Support Web site at:

<http://www.lenovo.com/support>

This Web site is updated with the latest support information such as the following:

- Drivers and software
  - Diagnostic solutions
  - Product and service warranty
  - Product and parts details
  - User guides and manuals
  - Knowledge base and frequently asked questions
- 

## Help and service

This topic contains information about obtaining help and service.

### Before you call

Before you call, do the following to try to solve the problem by yourself:

- Check all cables to ensure that they are connected.
- Check the power switches to ensure that the system and optional devices are turned on.
- Use the troubleshooting information in your system documentation on the documentation DVD that comes with your product.
- Check for the updated information, new device drivers, and hints and tips on the Lenovo Support Web site at:  
<http://www.lenovo.com/support>

If possible, be at your product when you call. Have the following information available:

- Machine type and model
- Serial numbers of your Lenovo hardware products
- Description of the problem
- Exact wording of any error messages
- Hardware and software configuration information

### Calling for service

During the warranty period, you can get help and information by telephone through the Customer Support Center.

The following services are available during the warranty period:

- **Problem determination** - Trained service personnel are available to assist you with determining a hardware problem and deciding what action is necessary to fix the problem.
- **Hardware repair** - If the problem is caused by hardware under warranty, trained service personnel are available to provide the applicable level of service.
- **Engineering Change management** - There might be changes that are required after a product has been sold. Lenovo or your reseller will make selected Engineering Changes (ECs) that apply to your hardware available.

The warranty does not cover the following:

- Replacement or use of parts not manufactured for or by Lenovo or non-warranted Lenovo parts
- Identification of software problem sources
- Configuration of the UEFI BIOS as part of an installation or upgrade
- Changes, modifications, or upgrades to device drivers
- Installation and maintenance of network operating systems (NOS)
- Installation and maintenance of application programs

For the warranty type and duration for your product, refer to the *Safety, Warranty, and Support Information* on the documentation DVD that comes with your server. You must retain your proof of purchase to obtain warranty service.

For warranty service, consult the worldwide Lenovo Support telephone list. Telephone numbers are subject to change without notice. The most up-to-date telephone list for Lenovo Support is always available on the Web site at <http://www.lenovo.com/support/phone>. If the telephone number for your country or region is not listed, contact your Lenovo reseller or Lenovo marketing representative.

## Using other services

If you travel with a Lenovo notebook computer or relocate your computer to a country where your desktop, notebook, or server machine type is sold, your computer might be eligible for International Warranty Service, which automatically entitles you to obtain warranty service throughout the warranty period. Service will be performed by service providers authorized to perform warranty service.

Service methods and procedures vary by country, and some services might not be available in all countries. International Warranty Service is delivered through the method of service (such as depot, carry-in, or on-site service) that is provided in the servicing country. Service centers in certain countries might not be able to service all models of a particular machine type. In some countries, fees and restrictions might apply at the time of service.

To determine whether your computer is eligible for International Warranty Service and to view a list of countries where service is available, go to <http://www.lenovo.com/support>, click **Warranty**, and follow the instructions on the screen.

For technical assistance with the installation of or questions related to Service Packs for your installed Windows product, refer to the Microsoft Product Support Services Web site at <http://support.microsoft.com/directory> or you can contact the Customer Support Center. Some fees might apply.

## Purchasing additional services

During and after the warranty period, you can purchase additional services, such as support for hardware, operating systems, and application programs; network setup and configuration services; upgraded or extended hardware repair services; and custom installation services. Service availability and service names might vary by country or region. For more information about these services, go to the Lenovo Web site at: <http://www.lenovo.com>





---

## Appendix A. Notices

Lenovo may not offer the products, services, or features discussed in this document in all countries. Consult your local Lenovo representative for information on the products and services currently available in your area. Any reference to a Lenovo product, program, or service is not intended to state or imply that only that Lenovo product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any Lenovo intellectual property right may be used instead. However, it is the user's responsibility to evaluate and verify the operation of any other product, program, or service.

Lenovo may have patents or pending patent applications covering subject matter described in this document. The furnishing of this document does not give you any license to these patents. You can send license inquiries, in writing, to:

*Lenovo (United States), Inc.  
1009 Think Place - Building One  
Morrisville, NC 27560  
U.S.A.  
Attention: Lenovo Director of Licensing*

LENOVO PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some jurisdictions do not allow disclaimer of express or implied warranties in certain transactions, therefore, this statement may not apply to you.

This information could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in new editions of the publication. Lenovo may make improvements and/or changes in the product(s) and/or the program(s) described in this publication at any time without notice.

The products described in this document are not intended for use in implantation or other life support applications where malfunction may result in injury or death to persons. The information contained in this document does not affect or change Lenovo product specifications or warranties. Nothing in this document shall operate as an express or implied license or indemnity under the intellectual property rights of Lenovo or third parties. All information contained in this document was obtained in specific environments and is presented as an illustration. The result obtained in other operating environments may vary.

Lenovo may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you.

Any references in this publication to non-Lenovo Web sites are provided for convenience only and do not in any manner serve as an endorsement of those Web sites. The materials at those Web sites are not part of the materials for this Lenovo product, and use of those Web sites is at your own risk.

Any performance data contained herein was determined in a controlled environment. Therefore, the result obtained in other operating environments may vary significantly. Some measurements may have been made on development-level systems and there is no guarantee that these measurements will be the same on generally available systems. Furthermore, some measurements may have been estimated through extrapolation. Actual results may vary. Users of this document should verify the applicable data for their specific environment.

---

## Trademarks

Lenovo, the Lenovo logo, and ThinkServer are trademarks of Lenovo in the United States, other countries, or both.

Intel, Intel Core, and Intel Xeon are trademarks of Intel Corporation in the United States, other countries, or both.

Linux is a registered trademark of Linus Torvalds.

Microsoft and Windows are trademarks of the Microsoft group of companies.

Other company, product, or service names may be trademarks or service marks of others.

---

## Important notes

Processor speed indicates the internal clock speed of the microprocessor; other factors also affect application performance.

CD or DVD drive speed is the variable read rate. Actual speeds vary and are often less than the possible maximum.

When referring to processor storage, real and virtual storage, or channel volume, KB stands for 1 024 bytes, MB stands for 1 048 576 bytes, and GB stands for 1 073 741 824 bytes.

When referring to hard disk drive capacity or communications volume, MB stands for 1 000 000 bytes, and GB stands for 1 000 000 000 bytes. Total user-accessible capacity can vary depending on operating environments.

Maximum internal hard disk drive capacities assume the replacement of any standard hard disk drives and population of all hard disk drive bays with the largest currently supported drives that are available from Lenovo.

Maximum memory might require replacement of the standard memory with an optional memory module.

Lenovo makes no representations or warranties with respect to non-Lenovo products. Support (if any) for the non-Lenovo products is provided by the third party, not Lenovo.

Some software might differ from its retail version (if available) and might not include user manuals or all program functionality.

---

## Particulate contamination

**Attention:** Airborne particulates (including metal flakes or particles) and reactive gases acting alone or in combination with other environmental factors such as humidity or temperature might pose a risk to the server that is described in this document. Risks that are posed by the presence of excessive particulate levels or concentrations of harmful gases include damage that might cause the server to malfunction or cease functioning altogether. This specification sets forth limits for particulates and gases that are intended to avoid such damage. The limits must not be viewed or used as definitive limits, because numerous other factors, such as temperature or moisture content of the air, can influence the impact of particulates or environmental corrosives and gaseous contaminant transfer. In the absence of specific limits that are set forth in this document, you must implement practices that maintain particulate and gas levels that are consistent with the protection of human health and safety. If Lenovo determines that the levels of particulates or gases in your environment have caused damage to the server, Lenovo may condition provision of repair

or replacement of servers or parts on implementation of appropriate remedial measures to mitigate such environmental contamination. Implementation of such remedial measures is a customer responsibility.

Table 15. Limits for particulates and gases

Contaminant	Limits
Particulate	<ul style="list-style-type: none"> <li>The room air must be continuously filtered with 40% atmospheric dust spot efficiency (MERV 9) according to ASHRAE Standard 52.2<sup>1</sup>.</li> <li>Air that enters a data center must be filtered to 99.97% efficiency or greater, using high-efficiency particulate air (HEPA) filters that meet MIL-STD-282.</li> <li>The deliquescent relative humidity of the particulate contamination must be more than 60%<sup>2</sup>.</li> <li>The room must be free of conductive contamination such as zinc whiskers.</li> </ul>
Gaseous	<ul style="list-style-type: none"> <li>Copper: Class G1 as per ANSI/ISA 71.04-1985<sup>3</sup></li> <li>Silver: Corrosion rate of less than 300 Å in 30 days</li> </ul>

<sup>1</sup> ASHRAE 52.2-2008 - *Method of Testing General Ventilation Air-Cleaning Devices for Removal Efficiency by Particle Size*. Atlanta: American Society of Heating, Refrigerating and Air-Conditioning Engineers, Inc.

<sup>2</sup> The deliquescent relative humidity of particulate contamination is the relative humidity at which the dust absorbs enough water to become wet and promote ionic conduction.

<sup>3</sup> ANSI/ISA-71.04-1985. *Environmental conditions for process measurement and control systems: Airborne contaminants*. Instrument Society of America, Research Triangle Park, North Carolina, U.S.A.

## Polyvinyl Chloride (PVC) cable and cord notice

**WARNING:** Handling the cord on this product or cords associated with accessories sold with this product will expose you to lead, a chemical known to the State of California to cause cancer, and birth defects or other reproductive harm. **Wash hands after handling.**

## Recycling information

Lenovo encourages owners of information technology (IT) equipment to responsibly recycle their equipment when it is no longer needed. Lenovo offers a variety of programs and services to assist equipment owners in recycling their IT products. For information on recycling Lenovo products, go to: <http://www.lenovo.com/recycling>

## Battery return program

This product may contain a lithium or lithium ion battery. Consult your user manual or service manual for specific battery information. The battery must be recycled or disposed of properly. Recycling facilities may not be available in your area. For information on disposal or batteries outside the United States, go to <http://www.lenovo.com/recycling> or contact your local waste disposal facility.


## Battery recycling information for the United States and Canada



US & Canada Only

## Battery recycling information for the European Union

EU

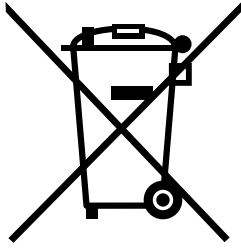

**Notice:** This mark applies only to countries within the European Union (EU).

Batteries or packaging for batteries are labeled in accordance with European Directive 2006/66/EC concerning batteries and accumulators and waste batteries and accumulators. The Directive determines the framework for the return and recycling of used batteries and accumulators as applicable throughout the European Union. This label is applied to various batteries to indicate that the battery is not to be thrown away, but rather reclaimed upon end of life per this Directive.

Les batteries ou emballages pour batteries sont étiquetés conformément aux directives européennes 2006/66/EC, norme relative aux batteries et accumulateurs en usage et aux batteries et accumulateurs usés. Les directives déterminent la marche à suivre en vigueur dans l'Union Européenne pour le retour et le recyclage des batteries et accumulateurs usés. Cette étiquette est appliquée sur diverses batteries pour indiquer que la batterie ne doit pas être mise au rebut mais plutôt récupérée en fin de cycle de vie selon cette norme.

In accordance with the European Directive 2006/66/EC, batteries and accumulators are labeled to indicate that they are to be collected separately and recycled at end of life. The label on the battery may also include a chemical symbol for the metal concerned in the battery (Pb for lead, Hg for mercury, and Cd for cadmium). Users of batteries and accumulators must not dispose of batteries and accumulators as unsorted municipal waste, but use the collection framework available to customers for the return, recycling, and treatment of batteries and accumulators. Customer participation is important to minimize any potential effects of batteries and accumulators on the environment and human health due to the potential presence of hazardous substances. For proper collection and treatment, go to:  
<http://www.lenovo.com/recycling>

## Requirements for Batteries Containing Perchlorate

The following statement applies to users in the state of California, U.S.A.


California Perchlorate Information:

Products containing CR (manganese dioxide) lithium coin cell batteries may contain perchlorate.

Perchlorate Material - special handling may apply, See  
<http://www.dtsc.ca.gov/hazardouswaste/perchlorate>

---

## Important WEEE information

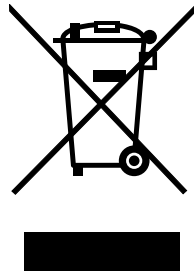

The WEEE marking on Lenovo products applies to countries with WEEE and e-waste regulations (for example, European Directive 2002/96/EC, India E-Waste Management & Handling Rules, 2011). Appliances are labeled in accordance with local regulations concerning waste electrical and electronic equipment (WEEE). These regulations determine the framework for the return and recycling of used appliances as applicable within each geography. This label is applied to various products to indicate that the product is not to be thrown away, but rather put in the established collection systems for reclaiming these end of life products.

Users of electrical and electronic equipment (EEE) with the WEEE marking must not dispose of end of life EEE as unsorted municipal waste, but use the collection framework available to them for the return, recycle, and recovery of WEEE and to minimize any potential effects of EEE on the environment and human health due to the presence of hazardous substances. For additional WEEE information go to: <http://www.lenovo.com/recycling>

---

## Restriction of Hazardous Substances Directive (RoHS)

This topic provides statements about the Restriction of Hazardous Substances Directive (RoHS).

### European Union RoHS

Lenovo products sold in the European Union, on or after 3 January 2013 meet the requirements of Directive 2011/65/EU on the restriction of the use of certain hazardous substances in electrical and electronic equipment (“RoHS recast” or “RoHS 2”).

For more information about Lenovo progress on RoHS, go to: [http://www.lenovo.com/social\\_responsibility/us/en/RoHS\\_Communication.pdf](http://www.lenovo.com/social_responsibility/us/en/RoHS_Communication.pdf)

---

## German Ordinance for Work gloss statement

The product is not suitable for use with visual display work place devices according to clause 2 of the German Ordinance for Work with Visual Display Units.

Das Produkt ist nicht für den Einsatz an Bildschirmarbeitsplätzen im Sinne § 2 der Bildschirmarbeitsverordnung geeignet.

---

## Export classification notice

This product is subject to the United States Export Administration Regulations (EAR) and has an Export Classification Control Number (ECCN) of 4A994.b. It can be re-exported except to any of the embargoed countries in the EAR E1 country list.

---

## Electronic emission notices

The following information refers to the Lenovo ThinkServer machine types 70B4, 70B5, 70B6, and 70B7.

### Federal Communications Commission (FCC) Statement

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Properly shielded and grounded cables and connectors must be used in order to meet FCC emission limits. Lenovo is not responsible for any radio or television interference caused by using other than specified or recommended cables and connectors or by unauthorized changes or modifications to this equipment. Unauthorized changes or modifications could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### Industry Canada Class A emission compliance statement

This Class A digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

### United Kingdom telecommunications safety requirement

Notice to Customers

This apparatus is approved under approval number NS/G/1234/J/100003 for indirect connection to public telecommunication systems in the United Kingdom.

### European Union - Compliance to the Electromagnetic Compatibility Directive

This product is in conformity with the protection requirements of EU Council Directive 2004/108/EC on the approximation of the laws of the Member States relating to electromagnetic compatibility. Lenovo cannot accept responsibility for any failure to satisfy the protection requirements resulting from a non-recommended modification of the product, including the installation of option cards from other manufacturers.

This product has been tested and found to comply with the limits for Class A Information Technology Equipment according to European Standard EN 55022. The limits for Class A equipment were derived for commercial and industrial environments to provide reasonable protection against interference with licensed communication equipment.

Lenovo, Einsteinova 21, 851 01 Bratislava, Slovakia



**Warning:** This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

### **German Class A compliance statement**

#### **Deutschsprachiger EU Hinweis:**

#### **Hinweis für Geräte der Klasse A EU-Richtlinie zur Elektromagnetischen Verträglichkeit**

Dieses Produkt entspricht den Schutzanforderungen der EU-Richtlinie 2004/108/EG (früher 89/336/EWG) zur Angleichung der Rechtsvorschriften über die elektromagnetische Verträglichkeit in den EU-Mitgliedsstaaten und hält die Grenzwerte der EN 55022 Klasse A ein.

Um dieses sicherzustellen, sind die Geräte wie in den Handbüchern beschrieben zu installieren und zu betreiben. Des Weiteren dürfen auch nur von der Lenovo empfohlene Kabel angeschlossen werden. Lenovo übernimmt keine Verantwortung für die Einhaltung der Schutzanforderungen, wenn das Produkt ohne Zustimmung der Lenovo verändert bzw. wenn Erweiterungskomponenten von Fremdherstellern ohne Empfehlung der Lenovo gesteckt/eingebaut werden.

#### **Deutschland:**

#### **Einhaltung des Gesetzes über die elektromagnetische Verträglichkeit von Betriebsmitteln**

Dieses Produkt entspricht dem „Gesetz über die elektromagnetische Verträglichkeit von Betriebsmitteln“ EMVG (früher „Gesetz über die elektromagnetische Verträglichkeit von Geräten“). Dies ist die Umsetzung der EU-Richtlinie 2004/108/EG (früher 89/336/EWG) in der Bundesrepublik Deutschland.

#### **Zulassungsbescheinigung laut dem Deutschen Gesetz über die elektromagnetische Verträglichkeit von Betriebsmitteln, EMVG vom 20. Juli 2007 (früher Gesetz über die elektromagnetische Verträglichkeit von Geräten), bzw. der EMV EG Richtlinie 2004/108/EC (früher 89/336/EWG), für Geräte der Klasse A.**

Dieses Gerät ist berechtigt, in Übereinstimmung mit dem Deutschen EMVG das EG-Konformitätszeichen - CE - zu führen. Verantwortlich für die Konformitätserklärung nach Paragraf 5 des EMVG ist die Lenovo (Deutschland) GmbH, Gropiusplatz 10, D-70563 Stuttgart.

Informationen in Hinsicht EMVG Paragraf 4 Abs. (1) 4:

#### **Das Gerät erfüllt die Schutzanforderungen nach EN 55024 und EN 55022 Klasse A.**

Nach der EN 55022: „Dies ist eine Einrichtung der Klasse A. Diese Einrichtung kann im Wohnbereich Funkstörungen verursachen; in diesem Fall kann vom Betreiber verlangt werden, angemessene Maßnahmen durchzuführen und dafür aufzukommen.“

Nach dem EMVG: „Geräte dürfen an Orten, für die sie nicht ausreichend entstört sind, nur mit besonderer Genehmigung des Bundesministers für Post und Telekommunikation oder des Bundesamtes für Post und Telekommunikation betrieben werden. Die Genehmigung wird erteilt, wenn keine elektromagnetischen Störungen zu erwarten sind.“ (Auszug aus dem EMVG, Paragraph 3, Abs. 4). Dieses Genehmigungsverfahren ist nach Paragraph 9 EMVG in Verbindung mit der entsprechenden Kostenverordnung (Amtsblatt 14/93) kostenpflichtig.

Anmerkung: Um die Einhaltung des EMVG sicherzustellen sind die Geräte, wie in den Handbüchern angegeben, zu installieren und zu betreiben.

---

### **Eurasian compliance mark**



---

## ENERGY STAR model information



ENERGY STAR® is a joint program of the U.S. Environmental Protection Agency and the U.S. Department of Energy aimed at saving money and protecting the environment through energy efficient products and practices.

Lenovo is proud to offer our customers products with an ENERGY STAR compliant designation. Some models of the following machine types have been designed and tested to conform to the ENERGY STAR program requirement for computer servers at the time of manufacture: 70B6 and 70B7.

For more information about ENERGY STAR ratings for Lenovo servers, go to <http://www.lenovo.com>.

By using ENERGY STAR compliant products and taking advantage of the power-management features of your server, you reduce the consumption of electricity. Reduced electrical consumption contributes to potential financial savings, a cleaner environment, and the reduction of greenhouse gas emissions.

For more information about ENERGY STAR, go to:  
<http://www.energystar.gov>

Lenovo encourages you to make efficient use of energy an integral part of your day-to-day operations. To help in this endeavor, set the following power-management features to take effect when your servers have been used:

- Processor- or core-reduced power states
- Variable speed fan control based on power or thermal readings
- Low power memory states
- Liquid cooling capability



---

# Index

- 2.5-inch hot-swap hard-disk-drive backplane
  - locations 42
- 3.5-inch hot-swap hard-disk-drive backplane
  - locations 40

## A

- about RAID 72
- Advanced menu
  - Setup Utility program 62
- advanced SATA/SAS hardware RAID
  - configuring 79
- ambient temperature limit
  - LED 21

## B

- BIOS and TMM update
  - software 13
- Boot Manager menu
  - Setup Utility program 64
- Boot Options menu
  - Setup Utility program 64

## C

- cables
  - connecting 43
- configuring
  - Ethernet controllers 80
  - server 61
- configuring RAID
  - advanced SATA/SAS hardware RAID 79
  - ThinkServer RAID 100 or RAID 300 74
  - using the ThinkServer EasyStartup program 73
- configuring the server 61
- connect
  - external tape drive 157
- connecting
  - cables 43
- considerations, password 65
- consistency check
  - running 78
- contamination, particulate and gaseous 214
- creating, adding, or deleting
  - RAID array 76
- CRU
  - completing the replacement 200
- CRU identification 32

## D

- devices, handling static-sensitive 84
- diagnostic program
  - troubleshooting and diagnostics 203

- Diagnostic program
  - software 13
- DIMM
  - installation rules 93
  - installing 98
  - removing 99
- documentation
  - using 209

## E

- EasyUpdate Firmware Updater program
  - using 80
- error LEDs
  - microprocessor fan 58
  - system fan 58
- Ethernet card
  - installing 100
  - removing 103
- Ethernet connectivity
  - features 9
- Ethernet controllers
  - configuring 80
- Ethernet status
  - LED 24
- exiting
  - Setup Utility program 67
- Expander card
  - locations 38
- expansion slots
  - features 9
- export classification notice 217
- external drives
  - features 9
- external tape drive
  - connect 157

## F

- fans
  - features 8
- features 7
  - ThinkServer EasyStartup program 69
- firmware
  - updating 80
- flashing
  - the BIOS 67
- front bezel
  - reinstalling 87
  - removing 87
- front panel
  - LED 17
  - locations 17
- front panel board assembly
  - replacing 180

- front system fan
  - replacing 183
- front view of the server
  - locations 15

## G

- gaseous contamination 214
- German gloss statement 217
- getting help 209
- getting information 209
- getting service 209
- guidelines 83

## H

- hard disk drive status
  - LED 18
- hardware
  - installing 83
  - removing 83
  - replacing 83
- heat sink and fan assembly 1
  - replacing 188
- help, getting 209
- hot-spare drive
  - setting 77
- hot-swap hard disk drive
  - installing 130
  - replacing 130
- hot-swap hard disk drive status
  - LED 33
- hot-swap hard disk drive status LEDs
  - locations 33
- hot-swap hard-disk-drive backplane
  - locations 39
  - replacing 172
- hot-swap redundant power supply
  - installing 165
  - replacing 165
- hot-swap redundant power supply status
  - LED 23

## I

- IDM
  - installing 122
  - removing 124
- information, getting 209
- initializing
  - virtual drive 77
- Input/Output (I/O)
  - features 9
- install
  - internal RDX drive 153
- installation rules
  - DIMM 93
  - memory module 93
- installing 107
  - DIMM 98

- Ethernet card 100
- hardware 83
- hot-swap hard disk drive 130
- hot-swap redundant power supply 165
- IDM 122
- memory module 98
- microprocessor 157
- non-hot-swap hard disk drive 135
- optical drive 126
- RAID card 105
- server cover 200
- solid-state drive 143–144
- tape drive 152
- TMM Premium 116
- TPM 119
- TR 100 or TR 300 Key 113
- TR 700 Battery 110
- installing and using
  - MegaRAID Storage Manager program 79
- intelligent diagnostics module
  - locations 19
- intelligent diagnostics module panel
  - LED 19
  - locations 19
- interface
  - LSI Software RAID Configuration Utility program 74
  - Setup Utility program 62
- internal drives
  - features 8
- internal RDX drive
  - install 153
  - replace 153

## L

- LED
  - ambient temperature limit 21
  - Ethernet status 24
  - front panel 17
  - hard disk drive status 18
  - hot-swap hard disk drive status 33
  - hot-swap redundant power supply status 23
  - intelligent diagnostics module panel 19
  - memory module status 20
  - microprocessor status 20
  - NIC status 18
  - optical drive status 16
  - power status 17
  - power supply error 21
    - LED 21
  - system board 56
  - system fan error 21
  - system status 18
  - ThinkServer Management Module status 57
- Lenovo ThinkServer EasyManage
  - software 13
- Lenovo ThinkServer EasyManage program
  - using 80
- locations 13
- LSI Software RAID Configuration Utility program

- interface 74
- starting 74

## M

- machine type and model label
  - locations 13
- Main menu
  - Setup Utility program 62
- MegaRAID Storage Manager program
  - installing and using 79
- memory
  - features 8
- memory module
  - installation rules 93
  - installing 98
  - removing 99
- memory module installation
  - guidelines 93
- memory module status
  - LED 20
- microprocessor
  - features 8
  - installing 157
  - replacing 161
- microprocessor fan error LEDs
  - LED 58
- microprocessor status
  - LED 20

## N

- NIC status
  - LED 18
- non-hot-swap hard disk drive
  - installing 135
  - removing 139
- non-hot-swap power supply assembly
  - replacing 170

## O

- optical drive
  - installing 126
  - replacing 126
- optical drive status
  - LED 16
- option
  - completing the replacement 200

## P

- particulate contamination 214
- parts replacement, completing 200
- password
  - considerations 65
  - setting, changing, deleting 65
  - Setup Utility program 65
- PCI card bracket assembly
  - reinstalling 89

- removing 89
- PCI Express solid-state drive
  - replacing 169
- physical drive
  - rebuilding 77
- power distribution board and cage assembly
  - replacing 177
- power status
  - LED 17
- power supply
  - features 8
- precautions
  - guidelines 83

## R

- RAID
  - configuring 72
  - introduction 72
- RAID array
  - creating, adding, or deleting 76
- RAID array status 74
- RAID card
  - installing 105
  - locations 35
  - removing 106
- RAID configuration utilities
  - software 13
- rear system fan
  - replacing 185
- rear view of the server
  - locations 21
- rebuilding
  - physical drive 77
- recovering
  - the BIOS 68
- reinstalling
  - front bezel 87
  - PCI card bracket assembly 89
- reliability, availability, and serviceability
  - features 10
- remote management
  - software 13
- removing
  - DIMM 99
  - Ethernet card 103
  - front bezel 87
  - hardware 83
  - IDM 124
  - memory module 99
  - non-hot-swap hard disk drive 139
  - PCI card bracket assembly 89
  - RAID card 106
  - server cover 85
  - TMM Premium 117
  - TPM 120
  - TR 100 or TR 300 Key 114
  - TR 500 Key on the RAID card 108
  - TR 700 Battery 111
- replace

- internal RDX drive 153
- replacing
  - front panel board assembly 180
  - front system fan 183
  - hardware 83
  - heat sink and fan assembly 1 188
  - hot-swap hard disk drive 130
  - hot-swap hard-disk-drive backplane 172
  - hot-swap redundant power supply 165
  - microprocessor 161
  - non-hot-swap power supply assembly 170
  - optical drive 126
  - PCI Express solid-state drive 169
  - power distribution board and cage assembly 177
  - rear system fan 185
  - solid-state drive 143, 149
  - system board 193
  - system board battery 191
  - tape drive 152
- road map
  - server setup 5
- running
  - consistency check 78

## S

- Save & Exit menu
  - Setup Utility program 64
- security
  - front door lock 28
  - integrated cable lock 27
  - padlock 26
- Security menu
  - Setup Utility program 63
- serial number label
  - locations 13
- server components
  - locations 28
- server configuration
  - updating 202
- server cover
  - installing 200
  - removing 85
- server documentation 2
- server locks
  - locations 25
- Server Management menu
  - Setup Utility program 63
- server package 7
- server setup
  - road map 5
- service, getting 209
- setting
  - hot-spare drive 77
- setting, changing, deleting
  - password 65
- Setup Utility program
  - exiting 67
  - interface 62
  - password 65

- starting 61
  - TPM 66
  - using 61
- software 12
- solid-state drive
  - installing 143–144
  - replacing 143, 149
- specifications 12
- starting
  - LSI Software RAID Configuration Utility program 74
  - Setup Utility program 61
  - ThinkServer EasyStartup program 69
- startup device
  - selecting 66
  - Setup Utility program 66
- static-sensitive devices
  - guidelines 84
- static-sensitive devices, handling 84
- system board 48
  - LED 56
  - replacing 193
- system board battery
  - replacing 191
- system board components
  - locations 48
- system board jumpers and switches
  - locations 52
- system board LEDs
  - locations 56
- system date
  - setting 64
- system event log
  - troubleshooting and diagnostics 204
- system fan error
  - LED 21
- system fan error LEDs
  - LED 58
- system reliability
  - guidelines 85
- system status
  - LED 18
- system time
  - setting 64

## T

- tape drive
  - installing 152
  - replacing 152
- the BIOS
  - flashing 67
  - recovering 68
  - updating 67
  - updating or recovering 67
- ThinkServer EasyStartup
  - software 12
- ThinkServer EasyStartup program
  - features 69
  - starting 69
  - using 69

- Windows operating system 71
- ThinkServer EasyUpdate Firmware Updater software 12
- ThinkServer Management Module status LED 57
- ThinkServer RAID 100 or RAID 300 configuring 74
- ThinkServer Web address 1
- TMM Premium
  - installing 116
  - removing 117
- TPM
  - installing 119
  - removing 120
  - Setup Utility program 66
- TR 100 or TR 300 Key
  - installing 113
  - removing 114
- TR 500 Key
  - installing 107
- TR 500 Key on the RAID card
  - removing 108
- TR 700 Battery
  - installing 110
  - removing 111
- troubleshooting and diagnostics
  - diagnostic program 203
  - hard disk drive problems 206
  - keyboard, mouse, or USB device problems 208
  - memory module problems 207
  - optical drive problems 205
  - status and diagnostic LEDs 203
  - system event log 204
  - ThinkServer EasyStartup program problems 204
  - troubleshooting procedure 203
- turning off the server 59
- turning on the server 59
- TÜV gloss statement 217

- viewing information
  - Setup Utility program 61
- virtual drive
  - initializing 77

## W

- Web site
  - compatible options 93
- working inside the server with the power on guidelines 85

## U

- updating
  - firmware 80
  - server configuration 202
  - the BIOS 67
- updating or recovering
  - the BIOS 67
- using
  - documentation 209
  - EasyUpdate Firmware Updater program 80
  - Lenovo ThinkServer EasyManage program 80
  - passwords 65
  - Setup Utility program 61
  - ThinkServer EasyStartup program 69

## V

- video subsystem
  - features 9





***lenovo***<sup>®</sup>