

## Product Limited Warranty

Labelmate USA warrants to the original end-user customer that Labelmate USA products will be free from defects in materials and workmanship for the duration described herein below. Labelmate USA's Limited Warranty covers only those defects that arise as a result of normal use of the products and does not cover any other problems, including those that arise as a result of: (i) improper maintenance or modification; (ii) parts or supplies not provided or supported by Labelmate USA; (iii) operation outside the products' specifications; or (iv) unauthorized repair, modification or misuse. Use of any unauthorized accessory or attachment will void coverage.

The Warranty period for all products commences the date of shipment from Labelmate USA and accrues to the original end-user customer. Warranty coverage is non-transferable and terminates immediately upon rental, resale or any other change in ownership. Original purchase documentation should be retained for Warranty coverage verification.

In the event Labelmate USA substantiates, during the applicable Warranty period, a defect in any product which is covered by Labelmate USA's Warranty, Labelmate USA shall repair or replace the product, at Labelmate USA's option. Labelmate USA retains sole discretion to determine whether or not a product is defective. In no event shall Labelmate USA have any obligation to repair or replace until the customer returns the defective product to Labelmate USA. The customer assumes any and all responsibility and liability associated with transportation of products for service under this Warranty.

WARRANTY PERIOD	PRODUCTS COVERED
5-Years	"CAT" and "Mini CAT" Label Rewinders "UCAT" Label Unwinders
3-Years	Label Counters ( <i>Excluding Counter Displays and Encoders</i> ) Label Dispensers ( <i>Excluding Counter Displays</i> ) Label Slitters ( <i>Mechanical Parts Only - excluding Counter Displays</i> ) Reel-to-Reel Machines ( <i>Excluding Counter Displays and Encoders</i> ) Print Mechanisms ( <i>Excluding Counter Displays and Encoders</i> ) Bottle Label Applicators ( <i>Excluding Polyurethane Rollers</i> ) Quick-Chucks
1-Year	Power Supplies, AC/DC Adaptors and Transformers Counter Displays Encoders Any other products or parts not specified herein
180-Days	Out-of-Warranty Repairs

In the event your product requires service or you have questions regarding Warranty coverage, please call toll-free (877) 833-7149 inside the United States, or +1 (702) 435-8535 outside the United States.

LABELMATE MAKES NO OTHER WARRANTY OF ANY KIND, WHETHER EXPRESS OR IMPLIED WARRANTIES OR CONDITIONS OF MERCHANTABILITY, SATISFACTORY QUALITY, AND/OR FITNESS FOR A PARTICULAR PURPOSE. NO OTHER PERSON, AGENT, DEALER OR RESELLER IS AUTHORIZED TO GIVE ANY WARRANTIES ON BEHALF OF LABELMATE. ANY OBLIGATION TO WARRANTY OTHER THAN THAT SPECIFICALLY ADDRESSED HEREIN IS EXPRESSLY DISCLAIMED.

**LABELMATE USA LLC**

12A Sunset Way, Henderson, NV 89014 USA

(702) 435-8535 FAX (702) 435-8536

Toll-Free (877) 833-7149 in USA!

support@labelmateusa.com

www.labelmateusa.com



**LABELMATE USA LLC**

**LD-100-RS**

*Label Dispensers*

**LD-100-RS**



- *Switched HI-LOW Speed*
- *Adjustable Label Sensor*
- *For Opaque Labels*

**Remove all parts from shipping container and verify contents.**

**Package Contents**

- LD-100-RS Label Dispenser
- AC-DC Adapter (Power Supply Module)
- User Manual (this document)

**IMPORTANT NOTES:**

The LD-100-RS is for opaque labels only. Keep the Stripper Bar and Web Guide Rods clean. Use isopropyl alcohol or "Goo-Gone"™ to clean adhesive residue from parts. Adhesive buildup can cause malfunction and damage to your Unit. Do not use any chemicals on the Sensor or the Sensor Eye. Use only a cloth or paper towel moistened with water.

*Retain the Shipping Container and Packaging for Storage and Transport.*

- **KEEP MANUAL IN A SAFE PLACE FOR FUTURE REFERENCE** •

## WARNING

This product is for indoor use only.  
Not for use in wet locations.  
Unplug unit before removing waste  
material or performing any cleaning or  
maintenance services.



### SET-UP AND USE (Refer to Figures 1 - 5 Next Page)

1. Make sure the Power Switch is in the center "OFF" position.
2. Set your Label Dispenser in place and plug the cord from the Power Supply Module into the Power Input Jack on the rear of the Unit.
3. Connect the Power Supply Module to a suitable AC power source.
4. Place your roll of labels onto the white Supply Shaft "A" and slide the white plastic Guide Rings "B" to the width of your label web and tighten the thumb screws. The Label Web can be adjusted from side to side as required to ensure that the labels line-up with the reflective Sensor "J".
5. Thread the label web under Guide Rod "C" and then between the Stripper Bar "E" and Guide Rod "D" as illustrated on the diagram label on the unit.
6. Pull the label web UNDER the Stripper Bar "E" and over Guide Rod "F". Slide the Aluminum Guide Ring "G" into position to maintain the web alignment, and tighten the thumb-screw.
7. Loosen the white plastic Key "I" in the Take-up Shaft by pulling it out as shown in [Figure 2](#), and insert the leading edge of the liner into the slot between the Key and the Shaft "H" as shown in [Figure 3](#).
8. Pinch the liner tightly between the Shaft and the Key by lifting and pressing the Key forward firmly as shown in [Figure 4](#).
9. Rotate the angle of the Sensor "J" by turning the black knob so that the Sensor is pointing up at the bottom of the Stripper Bar "E". Place the Power Switch in the "LOW" position. Slowly rotate the Sensor down until the label begins to advance. Continue to rotate the Sensor slowly until the desired label length is protruding as shown in [Figure 5](#).
10. Use the "HIGH" or "LOW" Switch settings to select the desired speed.
11. **IMPORTANT – Lift labels UP when removing them from the Dispenser. Do not pull them to the side.**
12. To remove the waste liner that accumulates on the Take-up Shaft "H", release the plastic Key "I" by pulling it out away from the machine, and then slide the roll of waste liner off the Shaft.
13. If excess dust or dirt accumulates on the Label Sensor Eye the Dispenser may not sense labels correctly. Use a cloth or paper towel dampened with water to gently clean the Label Sensor. **Do not use any chemicals on the sensor.**

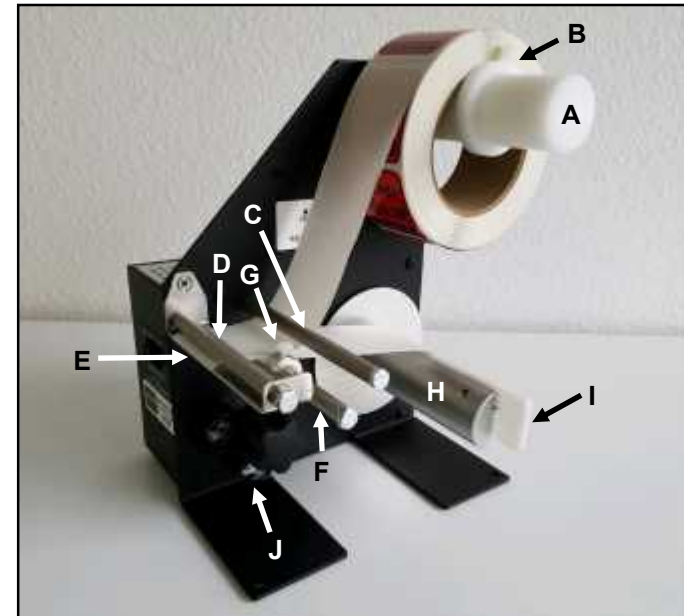


FIGURE 1

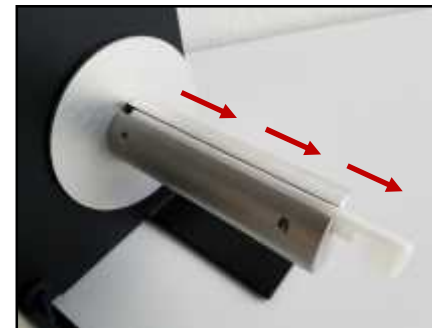


FIGURE 2



FIGURE 3

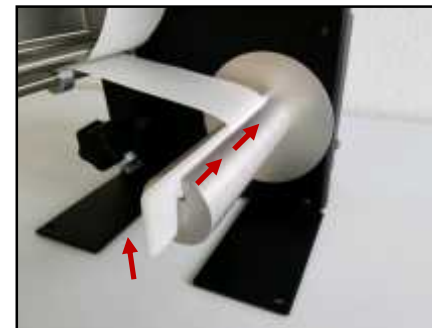


FIGURE 4

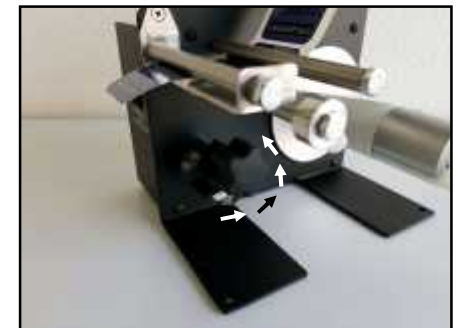


FIGURE 5