

## HUCK GUN – 3585

Huck gun for the hydraulic installation of large diameter lockbolts 15.9 & 19.1 mm (5/8' & 3/4')


Offering durable construction, advanced hydraulics, and safe, ergonomic design; the 3585 installation tool is easy to hold and efficient to use. An improved piston and cylinder design promote longer life. In addition, the nose adaptor can be removed through the back of the tool for ease of repair.





HG-3585 Specifications	
Length x Width x Height (not including hose, cord or nose assembly)	21.9 x 4.8 x 1.65cm
Weight	8.62 Kg
Power Source	Huck Powering hydraulic power source
Hose Kit	Genuine Huck hose kit only @ 10,000psi (689.5 working pressure)
Max operating temp	57.7 degrees
Max Flow rate	2 gpm (7.5 i/m)
Max Pull / return pressure	7,400 psi (510 Bar) / 2,200 psi (152 Bar)
Stroke	4.6 cm
Pull Capacity	203kN @ 510 Bar (45,668lbs @ 7,400psi)
Nose Assembly	Huck Bolt C50L 15.9 & 19.1 mm (5/8' & 3/4')


# Safety Instructions

## GLOSSARY OF TERMS AND SYMBOLS:

 Product complies with requirements set forth by the relevant European directives.


 Read manual prior to using this equipment.


 Eye protection is required while using this equipment.

 Hearing protection is required while using this equipment.

Notes: are reminders of required procedures.

***Bold, Italic type, and underline***: emphasize a specific instruction.

 **WARNINGS: Must be understood to avoid severe personal injury.**

 **CAUTIONS: Show conditions that will damage equipment or structure.**

### I. GENERAL SAFETY RULES:

1. A half hour long hands-on training session with qualified personnel is recommended before using Huck equipment.
2. Huck equipment must be maintained in a safe working condition at all times. Tools and hoses should be inspected at the beginning of each shift/day for damage or wear. Any repair should be done by a qualified repairman trained on Huck procedures.
3. For multiple hazards, read and understand the safety instructions before installing, operating, repairing, maintaining, changing accessories on, or working near the assembly power tool. Failure to do so can result in serious bodily injury.
4. Only qualified and trained operators should install, adjust or use the assembly power tool.
5. Do not modify this assembly power tool. This can reduce effectiveness of safety measures and increase operator risk.
6. Do not discard safety instructions; give them to the operator.
7. Do not use assembly power tool if it has been damaged.
8. Tools shall be inspected periodically to verify all ratings and markings required, and listed in the manual, are legibly marked on the tool. The employer/operator shall contact the manufacturer to obtain replacement marking labels when necessary. Refer to assembly drawing and parts list for replacement.
9. Tool is only to be used as stated in this manual. Any other use is prohibited.
10. Read MSDS Specifications before servicing the tool. MSDS specifications are available from the product manufacturer or your Huck representative.
11. Only genuine Huck parts shall be used for replacements or spares. Use of any other parts can result in tooling damage or personal injury.
12. Never remove any safety guards or pintail deflectors.
13. Never install a fastener in free air. Personal injury from fastener ejecting may occur.
14. Where applicable, always clear spent pintail out of nose

- assembly before installing the next fastener.
15. Check clearance between trigger and work piece to ensure there is no pinch point when tool is activated. Remote triggers are available for hydraulic tooling if pinch point is unavoidable.
  16. Do not abuse tool by dropping or using it as a hammer. Never use hydraulic or air lines as a handle or to bend or pry the tool. Reasonable care of installation tools by operators is an important factor in maintaining tool efficiency, eliminating downtime, and preventing an accident which may cause severe personal injury.
  17. Never place hands between nose assembly and work piece. Keep hands clear from front of tool.
  18. Tools with ejector rods should never be cycled with out nose assembly installed.
  19. When two piece lock bolts are being used always make sure the collar orientation is correct. See fastener data sheet for correct positioning.

### II. PROJECTILE HAZARDS:

1. Risk of whipping compressed air hose if tool is pneudraulic or pneumatic.
2. Disconnect the assembly power tool from energy source when changing inserted tools or accessories.
3. Be aware that failure of the workpiece, accessories, or the inserted tool itself can generate high velocity projectiles.
4. Always wear impact resistant eye protection during tool operation. The grade of protection required should be assessed for each use.
5. The risk of others should also be assessed at this time.
6. Ensure that the workpiece is securely fixed.
7. Check that the means of protection from ejection of fastener or pintail is in place and operative.
8. There is possibility of forcible ejection of pintails or spent mandrels from front of tool.

### III. OPERATING HAZARDS:

1. Use of tool can expose the operator's hands to hazards including: crushing, impacts, cuts, abrasions and heat. Wear suitable gloves to protect hands.
2. Operators and maintenance personnel shall be physically able to handle the bulk, weight and power of the tool.
3. Hold the tool correctly and be ready to counteract normal or sudden movements with both hands available.
4. Maintain a balanced body position and secure footing.
5. Release trigger or stop start device in case of interruption of energy supply.
6. Use only fluids and lubricants recommended by the manufacturer.
7. Avoid unsuitable postures, as it is likely for these not to allow counteracting of normal or unexpected tool movement.
8. If the assembly power tool is fixed to a suspension device, make sure that fixation is secure.
9. Beware of the risk of crushing or pinching if nose equipment is not fitted.

Continued on next page...

## Safety Instructions (continued)

### IV. REPETITIVE MOTION HAZARDS:

1. When using assembly power tool, the operator can experience discomfort in the hands, arms, shoulders, neck or other parts of the body.
2. When using tool, the operator should adopt a comfortable posture while maintaining a secure footing and avoid awkward or off balanced postures.
3. The operator should change posture during extended tasks to help avoid discomfort and fatigue.
4. If the operator experiences symptoms such as persistent or recurring discomfort, pain, throbbing, aching, tingling, numbness, burning sensations or stiffness, these warnings should not be ignored. The operator should tell the employer and consult a qualified health professional.

### V. ACCESSORIES HAZARDS:

1. Disconnect tool from energy supply before changing inserted tool or accessory.
2. Use only sizes and types of accessories and consumables that are recommended. Do not use other types or sizes of accessories or consumables.

### VI. WORKPLACE HAZARDS:

1. Be aware of slippery surfaces caused by use of the tool and of trip hazards caused by the air line or hydraulic hose.
2. Proceed with caution while in unfamiliar surroundings; there could be hidden hazards such as electricity or other utility lines.
3. The assembly power tool is not intended for use in potentially explosive environments.
4. Tool is not insulated against contact with electrical power.
5. Ensure there are no electrical cables, gas pipes, etc., which can cause a hazard if damaged by use of the tool.

### VII. NOISE HAZARDS:

1. Exposure to high noise levels can cause permanent, disabling hearing loss and other problems such as tinnitus, therefore risk assessment and the implementation of proper controls is essential.
2. Appropriate controls to reduce the risk may include actions such as damping materials to prevent workpiece from 'ringing'.
3. Use hearing protection in accordance with employer's

instructions and as required by occupational health and safety regulations.

4. Operate and maintain tool as recommended in the instruction handbook to prevent an unnecessary increase in the noise level.
5. Select, maintain and replace the consumable / inserted tool as recommended to prevent an unnecessary increase in noise.
6. If the power tool has a silencer, always ensure that it is in place and in good working order when the tool is being operated.

### VIII. VIBRATION HAZARDS:

1. Exposure to vibration can cause disabling damage to the nerves and blood supply to the hands and arms.
2. Wear warm clothing when working in cold conditions and keep hands warm and dry.
3. If numbness, tingling, pain or whitening of the skin in the fingers or hands, stop using the tool, tell your employer and consult a physician.
4. Support the weight of the tool in a stand, tensioner or balancer in order to have a lighter grip on the tool.

### X. HYDRAULIC TOOL SAFETY INSTRUCTIONS:



#### WARNINGS:

**Do not exceed maximum pull or return settings on tool.**

**Be sure all hose connections are tight. All tool hoses must be connected.**

1. Carry out a daily check for damaged or worn hoses or hydraulic connections and replace if necessary.
2. Wipe all couplers clean before connecting. Failure to do so can result in damage to the quick couplers and cause overheating.
3. Ensure that couplings are clean and correctly engaged before operation.
4. Use only clean oil and filling equipment.
5. Power units require a free flow of air for cooling purposes and should therefore be positioned in a well ventilated area free from hazardous fumes.
6. Do not inspect or clean the tool while the hydraulic power source is connected. Accidental engagement of the tool can cause serious injury.
7. Be sure all hose connections are tight.
8. Wipe all couplers clean before connecting. Failure to do so can result in damage to the quick couplers and cause overheating.

## Preparation for Use



### WARNINGS:

Read entire manual before using tool.

Before using HUCK equipment, a 30-minute training session with qualified personnel is recommended.

When operating HUCK equipment, always wear approved eye and hearing protection.

Ensure adequate clearance for operator's hands before proceeding.

Only HUCK Powerig® Hydraulic Units should be used to power HUCK tools. Hydraulic units that deliver high PULL and RETURN pressures *must be equipped with relief valves; units not equipped with relief valves are not recommended and MAY BE DANGEROUS.*

Set PULL and RETURN pressures as specified in **SPECIFICATIONS**. Failure to properly set pressures may result in serious personal injury. Use Pressure Gauge T-124833CE as indicated in its instruction manual.

Connect tool hoses to the Powerig *before* connecting tool switch-control cord to the Powerig. Serious personal injury may occur if not connected in this order and disconnected in the reverse order.



### CAUTIONS:

Do not use TEFLON® tape on pipe threads. Tape can shred, resulting in malfunctions.

Keep disconnected hoses and couplers and hydraulic fluid free of foreign matter. Contaminated fluid can cause valve failures.

Do not abuse this tool by dropping it, using it as a hammer, or otherwise causing unnecessary wear and tear. Never carry the tool by attached hoses.

### GENERAL PRECAUTIONS

During disassembly and assembly, take the following precautions to avoid damaging tool or components:

- Use materials such as brass, aluminum, or wood, to protect tool when applying pressure.
- Apply continuous steady pressure, rather than sharp blows, to disassemble or assemble components. An arbor press provides steady pressure to press a component in or out.
- Never force a component if it "hangs up" due to misalignment. Reverse the procedure to correct misalignment and start over.
- Smear LUBRIPLATE® 130-AA (HUCK P/N **502723**) or equivalent on O-rings and mating surfaces to ease assembly and prevent damage to O-rings.
- Coat Parker Threadmate, Loctite 567, or Slic-tite stick to male pipe threads per manufacturer's instructions.

### DISASSEMBLY AND ASSEMBLY TOOLS

Working on these tools requires the use of standard hand tools, such as wrenches, drifts, copper and lead hammers, screwdrivers, socket screw hexagon keys, and long forceps (tweezers). HUCK also recommends having access to an arbor press and vise with soft jaws. For specially-designed tools for working on this tool, see **KITS & ACCESSORIES**.

### POWER SOURCE CONNECTIONS

Use a HUCK Powerig® Hydraulic unit, or equivalent, that has been suitably prepared for operation.

- Turn off the Powerig; disconnect its power supply.
- Apply Parker Threadmate, Loctite 567, or Slic-tite stick to male pipe threads per manufacturer's instructions, and then connect the hoses to the Powerig.
- Connect the tool control switch cord to Powerig.
- Connect the Powerig to the power supply and turn it on. Press and hold the tool trigger for 30 seconds; then press trigger a few times to cycle the tool and circulate the hydraulic fluid. Observe the action of the tool and check for leaks. Turn off the Powerig.
- Disconnect tool's control switch cord from the Powerig; disconnect the Powerig from the power supply. Select a nose assembly for the fastener to be installed and attach it to the tool.
- Reconnect the Powerig to the power supply and the tool's switch control cord to the Powerig.
- Check the operation of nose assembly; install fasteners in a test plate of correct thickness with proper size holes. Inspect installed fasteners.

**NOTE: If fasteners do not pass inspection, see TROUBLESHOOTING to investigate possible causes.**


### Hydraulic Couplings



Use a fine India stone to remove any nicks or burrs from these areas to prevent damage to O-ring of Female Connector.

# Operating Instructions

FOR SAFE OPERATION, THIS SECTION MUST BE READ AND UNDERSTOOD.

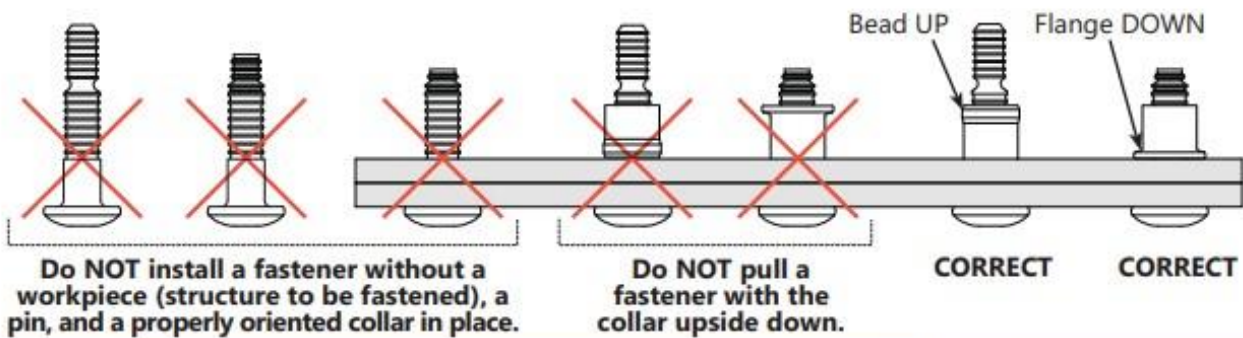

Do NOT install a fastener without a workpiece (structure to be fastened), a pin, and a properly oriented collar in place.

Do NOT pull a fastener with the collar upside down.

CORRECT

CORRECT



## WARNINGS:

To avoid severe personal injury, wear approved eye and ear protection.

Be sure of adequate clearance for operator's hands before proceeding with fastener installation.

If the tool comes with a pintail deflector or bottle, make sure it is attached to the tool and directed away from all personnel.

Do NOT attempt to install a pin without placing the fastener and collar in the work piece (structure to be fastened).

Do NOT attempt to install a pin without a properly oriented collar in place. The collar flange must be against work piece.

If these safety measures are not followed, the fastener could eject with great velocity and cause severe personal injury.

This condition can cause pin to eject with great velocity and force if the pintail breaks off or teeth/grooves strip. This may cause severe personal injury.

To avoid pinch point, never place hand between nose assembly and work piece.

Only use compatible equipment with this tool.



**CAUTIONS:** Remove excess gap from between the sheets. This permits enough pintail to emerge from collar for ALL jaw teeth to engage with pintail. If ALL teeth do not engage properly, jaws will be damaged.

Note: In certain situations, it may be permissible to use a BobTail tool and fastener without a collar to remove sheet gap prior to full installation with a collar. Consult qualified Huck engineering personnel before attempting this operation.

This section details installing HuckBolt® fasteners. Review all CAUTIONS and WARNINGS prior to installing these fasteners. If the tool malfunctions, consult **TROUBLESHOOTING** prior to attempting any repairs. Prior to starting these procedures, check the tool components drawing to verify the proper orientation of the flats on the dump valve; they should face the rear of the tool.

## To install a HuckBolt® Fastener:

1. Place a fastener in the workpiece and place the collar over the fastener.

**NOTE:** The beveled end of the collar **must** be towards the nose assembly and tool.

2. Hold the fastener and push the nose assembly onto the fastener that is protruding through the collar until the nose anvil touches the collar.

**NOTE:** The tool and nose assembly must be at right angles (90°) to the workpiece.

3. Press and hold the trigger to start installation cycle.
4. Release the trigger when forward motion of nose assembly anvil stops and pintail breaks off.

The pressure is re-directed; the piston moves forward; and the tool is pushed off the fastener and ejects the pintail. The tool and nose assembly are ready for the next installation cycle.

## Maintenance



### CAUTIONS:

Replace all seals, wipers, O-rings and Back-up rings when the tool is disassembled for any reason, and at regular intervals, depending on severity and length of use.

Do not use TEFLON® tape on pipe threads. Tape can shred, resulting in malfunctions. Apply Parker Threadmate, Loctite 567, or Slic-tite stick to male pipe threads per manufacturer's instructions.

### GENERAL

The operating efficiency of a tool is directly related to the performance of the entire system. Regular inspection and the immediate correction of minor problems will keep the tool operating efficiently, and prevent downtime. A schedule of preventive maintenance of the tool, nose assembly, hoses, trigger and control cord, and Powerig® hydraulic power source will ensure the tool's proper operation, extend its life, and reduce the risk of personal injury to those who operate it. **NOTE:** HUCK tools should be serviced only by personnel who are thoroughly familiar with its operation. Consult MSDS before servicing tool.

Service the tool in a clean, well-lighted area. Take special care to prevent contamination of pneumatic and hydraulic systems. Keep separated parts away from dirty work surfaces. Carefully handle all parts. Before reassembly, examine them for damage and wear. Disassemble and assemble tool components in a straight line. Do NOT bend, cock, twist, or apply undue force. Keep any relevant hand tools and HUCK Spare Parts Service Kits available. They include important consumable parts. Other components, as experience dictates, should also be available.

### DAILY

If a Filter-Regulator-Lubricator unit is not being used, uncouple the air disconnects and add a few drops of hydraulic fluid to the air inlet of the tool. **NOTE:** If the tool is in continuous use, add a few drops of oil in every 2–3 hours. Before connecting an air hose to the tool, bleed the

air lines to clear dirt or water. Verify that hoses, fittings, couplings, and electrical connections are secure and free of leaks; tighten or replace if necessary. Check tools and nose assemblies for damage and air or hydraulic leaks; tighten, repair, or replace if necessary. Inspect the tool, hoses, and Powerig during operation to detect abnormal heating, leaks, or vibration. Clean nose assemblies in mineral spirits to clear jaws and rinse metal chips and dirt. For a more thorough cleaning, disassemble the nose assembly. Use a dull-pointed "pick" to remove embedded particles from the pull grooves of the jaws. Clean all parts of any assembly, and UNITIZED™ Jaws, in mineral spirits or isopropyl alcohol only. Do not let the jaws come in contact with other solvents. Do not soak jaws; dry them immediately after cleaning. Dry other parts before re-assembling.

### WEEKLY

Disassemble, clean, and reassemble nose assemblies in accordance with applicable instructions. Check the tool and all connecting parts for damage and fluid/air leaks; tighten or replace if necessary. Inspect the cylinder bore, piston and rod/extension, and dump valve for scored surfaces, excessive wear, and damage; replace as necessary.

### STICKERS

Stickers on the tool display safety and pressure-settings information, and must always be legible. For more information on sticker locations and part numbers, see STICKER LOCATIONS.

### SPARE PARTS SERVICE KITS


HUCK Spare Parts Service Kits contain replacements or perishable tool parts. HUCK recommends having the appropriate kit accessible. For more information, see KITS AND ACCESSORIES.

### FLUID MAINTENANCE

See SPECIFICATIONS for information on approved fluid types. Dispose of fluid in accordance with local environmental regulations. Recycle steel, aluminum, and plastic parts in accordance with local lawful and safe practices.

# 3585 Components Drawing

Figure 3

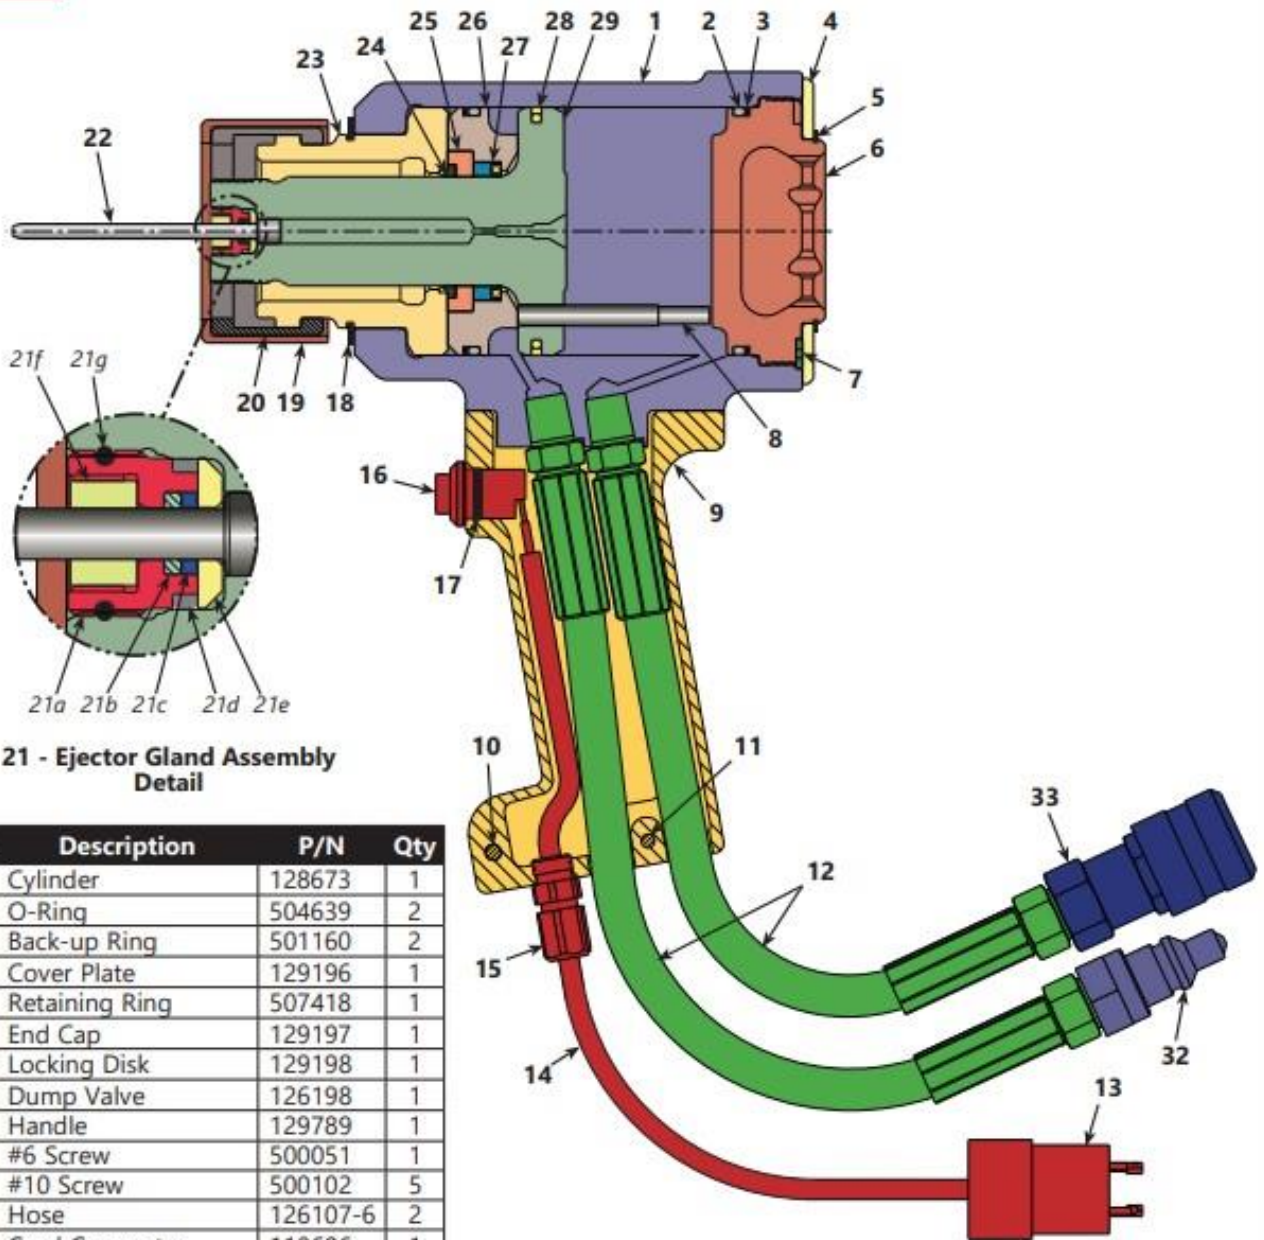

21 - Ejector Gland Assembly Detail

Item	Description	P/N	Qty
1	Cylinder	128673	1
2	O-Ring	504639	2
3	Back-up Ring	501160	2
4	Cover Plate	129196	1
5	Retaining Ring	507418	1
6	End Cap	129197	1
7	Locking Disk	129198	1
8	Dump Valve	126198	1
9	Handle	129789	1
10	#6 Screw	500051	1
11	#10 Screw	500102	5
12	Hose	126107-6	2
13	Cord Connector	110686	1
14	Control Cord	128705	1
15	Strain Relief	505344	1
16	Trigger Switch Assy	120361	1
17	Set Screw	501731	1
18	Retaining Ring	501030	1
19	Sleeve	100248	1
20	Split Ring	100247	1
21	Ejector Gland Assy	120653	1
21a	Gland	122047	1
21b	Back-up Ring	501080	1
21c	QUAD Ring	501411	1
21d	O-Ring	500779	1
21e	Ejector Washer	120652	1
21f	Ejector Rod Wiper	122742	1
21g	O-Ring	500779	1

Item	Description	P/N	Qty
22	Pintail Ejector	128742	1
23	Nose Adapter	128675	1
24	Wiper Seal	506001	1
25	Wiper Housing	125683	1
26	Front Gland	128674	1
27	Polyseal	507417	1
28	GLYD Ring®	509156	1
29	Piston	128703	1
30	HUCK Sticker	590247	1
31	Caution Sticker	590189-2	1
32	Male Connector	110438	1
33	Female Connector	110439	1

## Kits and Accessories

The following product-specific Spare Parts Service Kits contain various perishable parts. The types and quantities of spare parts that should be available vary with the application and tools in use. Keep the appropriate kit and accessories on-hand when preparing, using, and performing maintenance on this tool.

### KITS

Service Kits

3585KIT  
3585PTKIT

Pressure Gauge

T-124833CE

Piston Assembly Tool Kit

123110-12

Contains:

GLYD Ring® insertion tool 121694-2628

Piston Assembly Tool 123111-7

Spacer 123112-7

### ACCESSORIES

Ejector Gland Wrench 122048

End Cap Hex Wrench 126981

Remote Trigger (all models) 123381

## Troubleshooting

Always check the simplest possible cause (such as a loose or disconnected trigger line) of a malfunction first. Then proceed logically, eliminating other possible causes until the cause is discovered. Where possible, substitute known good parts for suspected defective parts. Use this Troubleshooting information to aid in locating and correcting trouble.

### 1. Tool fails to operate when trigger is pressed.

- Inoperative Powerig® Hydraulic Unit. See applicable instruction manual.
- Loose air or electric connections.
- Damaged trigger assembly.
- Loose or faulty hydraulic hose couplings.
- Dump valve not installed in tool.

### 2. Tool operates in reverse.

- Reversed hydraulic hose connections between hydraulic unit and tool.

### 3. Tool leaks hydraulic fluid.

- Defective tool O-rings or loose hose connections at tool.

### 4. Hydraulic couplers leak fluid.

- Damaged or worn O-rings in coupler body. See Coupler 110440.

### 5. Hydraulic fluid overheats.

- Hydraulic unit not operating properly.
- Dump valve installed incorrectly.
- Powerig Hydraulic Unit running in reverse (918: 918-5). See unit's manual.

### 6. Tool operates erratically and fails to properly install fastener.

- Low or erratic hydraulic pressure; air in system.
- Damaged or worn piston O-ring in tool.
- Dump valve installed incorrectly.
- Excessive wear on sliding surfaces of tool parts.
- Excessive wear of dump valve in tool.

### 7. Pull grooves on fastener pintail stripped during PULL stroke.

- Operator not sliding anvil completely onto fastener pintail.
- Incorrect fastener grip.
- Worn or damaged jaw segments.
- Metal particles in jaw segments pull grooves.
- Excessive sheet gap.

### 8. Collar of HuckBolt® Fastener not completely swaged.

- Improper tool operation. See Trouble 6.
- Scored anvil.

### 9. Shear collar on HUCK Blind Fastener not driven.

- Improper tool operation.
- Worn or damaged driving anvil in nose assembly.

### 10. Tool "hangs-up" on swaged collar of HuckBolt Fastener.

- Improper tool operation. See Trouble 6.
- RETURN pressure too low.
- Nose assembly not installed correctly.

### 11. Pintail of fastener fails to break.

- Improper tool operation. See Trouble 6.
- Pull grooves on fastener are stripped. See Trouble 7.
- PULL pressure too low.
- Worn dump valve.